


自动变速器指示器

电路图 - 自动变速器指示器 -/带转速表

电路图 - 自动变速器指示器 -/带转速表


NJEL0159

EL-AT/IND-01

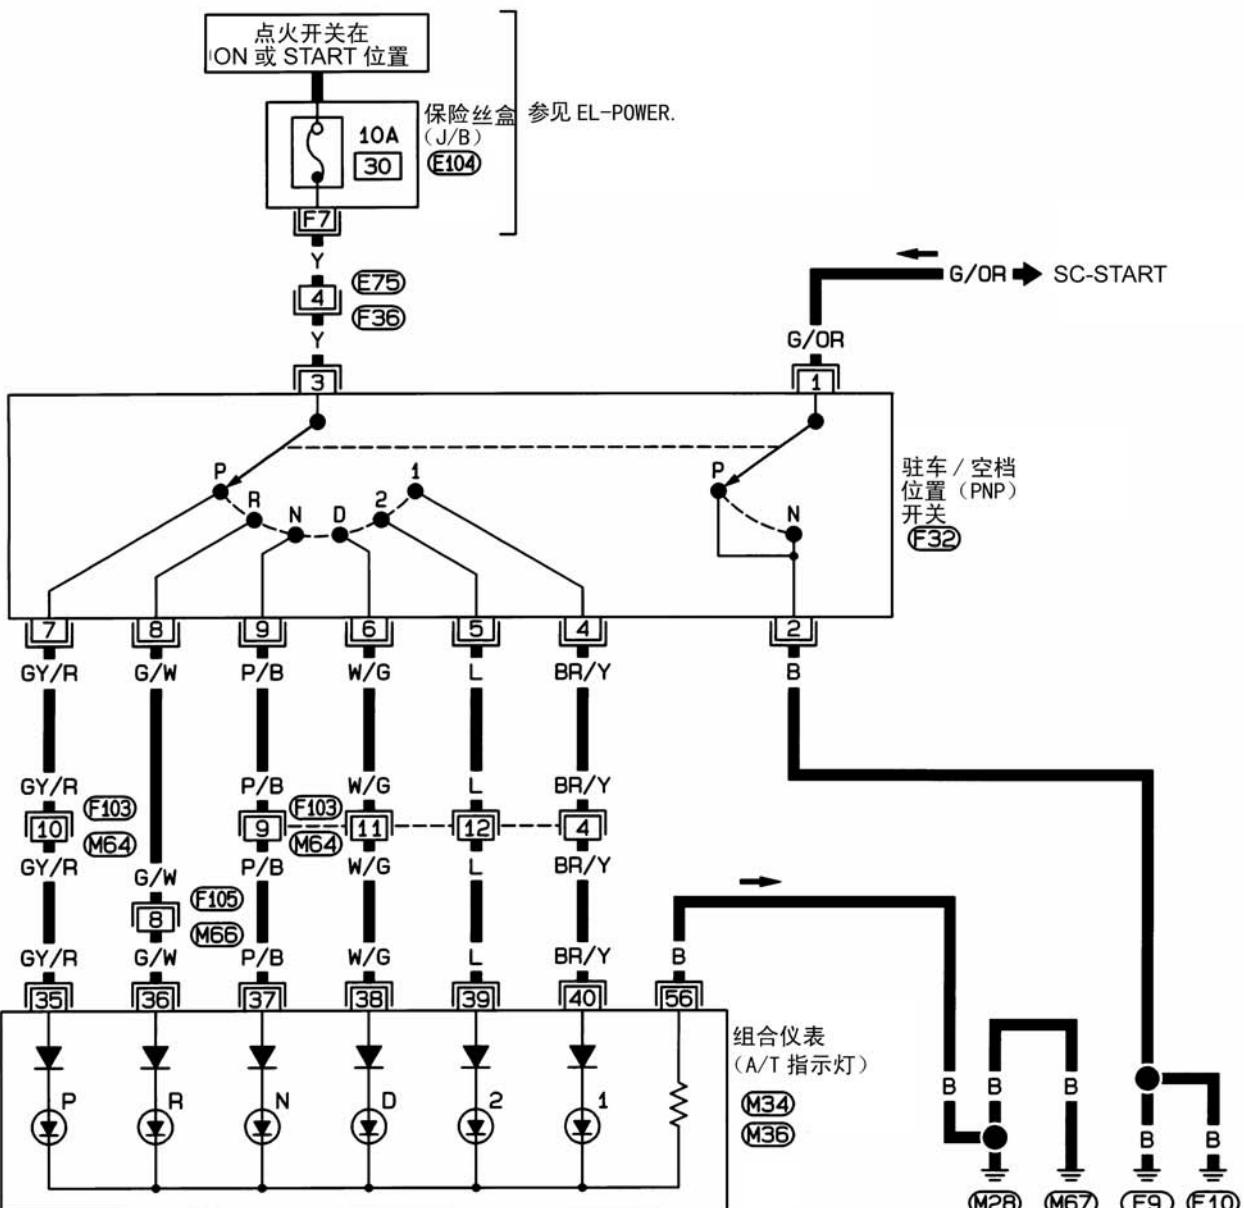

25 26 27 28 29	—	30 31 32 33	(M34)	45 46 47 48 49 50	—	51 52 53 54 55	(M36)
34 35 36 37 38 39 40 41 42 43 44	BR	56 57 58 59 60 61 62 63 64 65 66 67 68	BR				

 参见以下内容:
(E104) - 保险丝盒 -
接线盒 (J/B)



HEL890A

自动变速器指示器

电路图 - 自动变速器指示器 -/不带转速表

电路图 - 自动变速器指示器 -/不带转速表

NJEL0326 GI

EL-AT/IND-02

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS


BT

HA

SC

EL

IDX


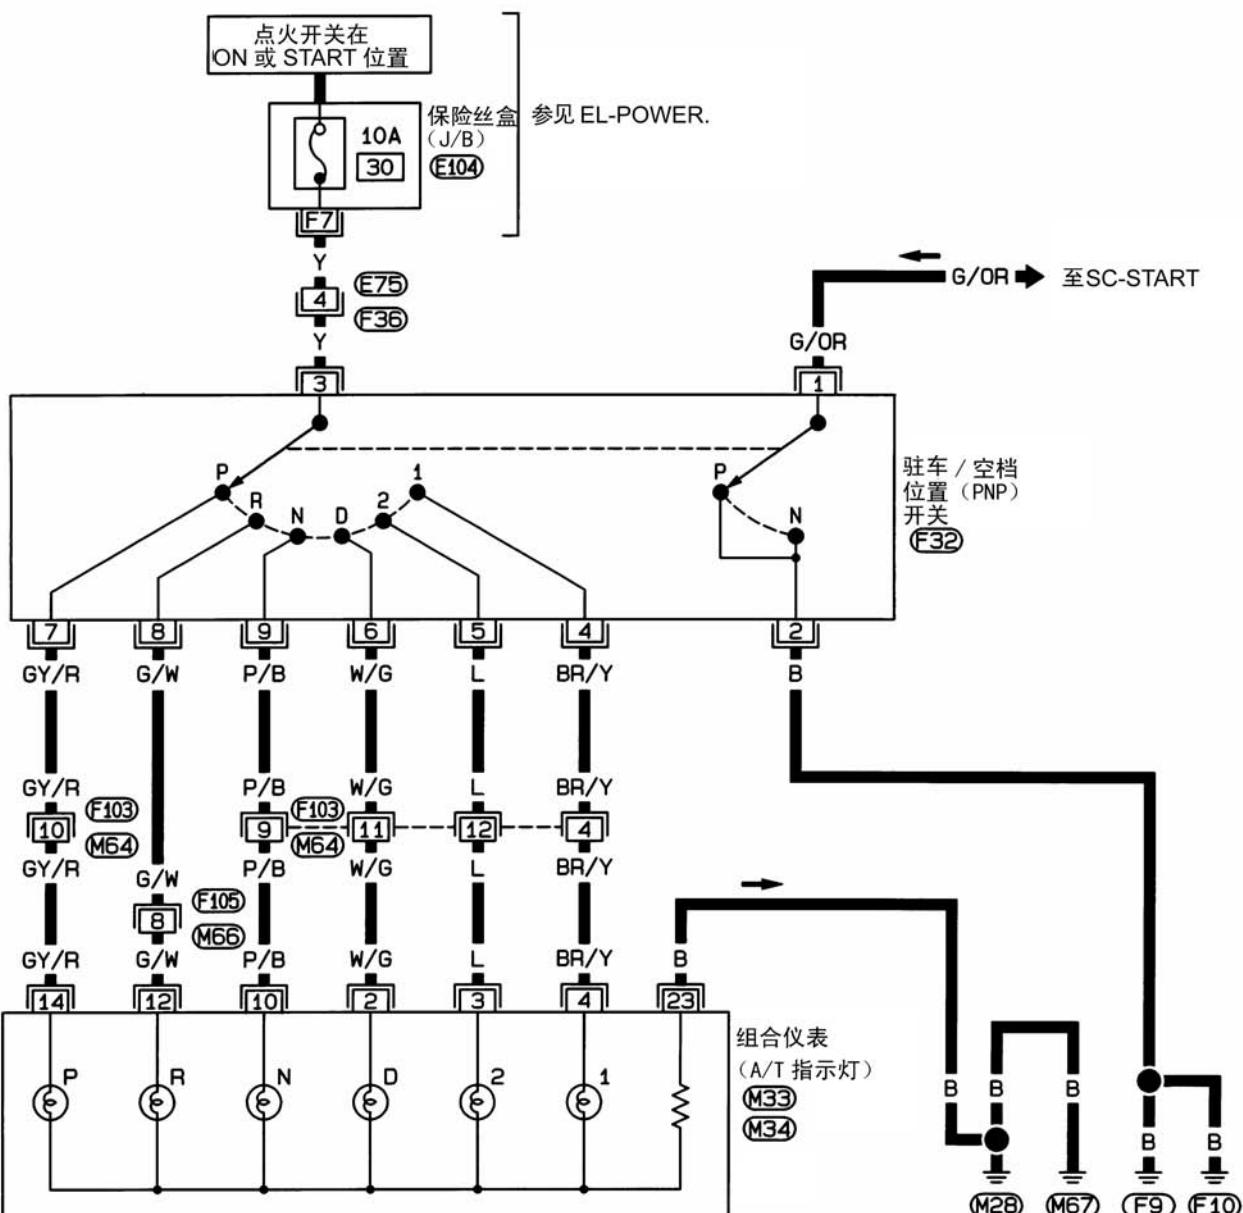


参见以下内容:

(E104) - 保险丝盒 -
接线盒 (J/B)

1	2	3	4	5	6	7	8	9	M33
10	11	12	13	14	15	16	17	18	19 20 W

21	22	23	24	25	26	27	28	29	M34
30	31	32	33	34	35	36	37	38	39 40 BR

  

HEL891A