


连接器定位图

驾驶员电动座椅线束

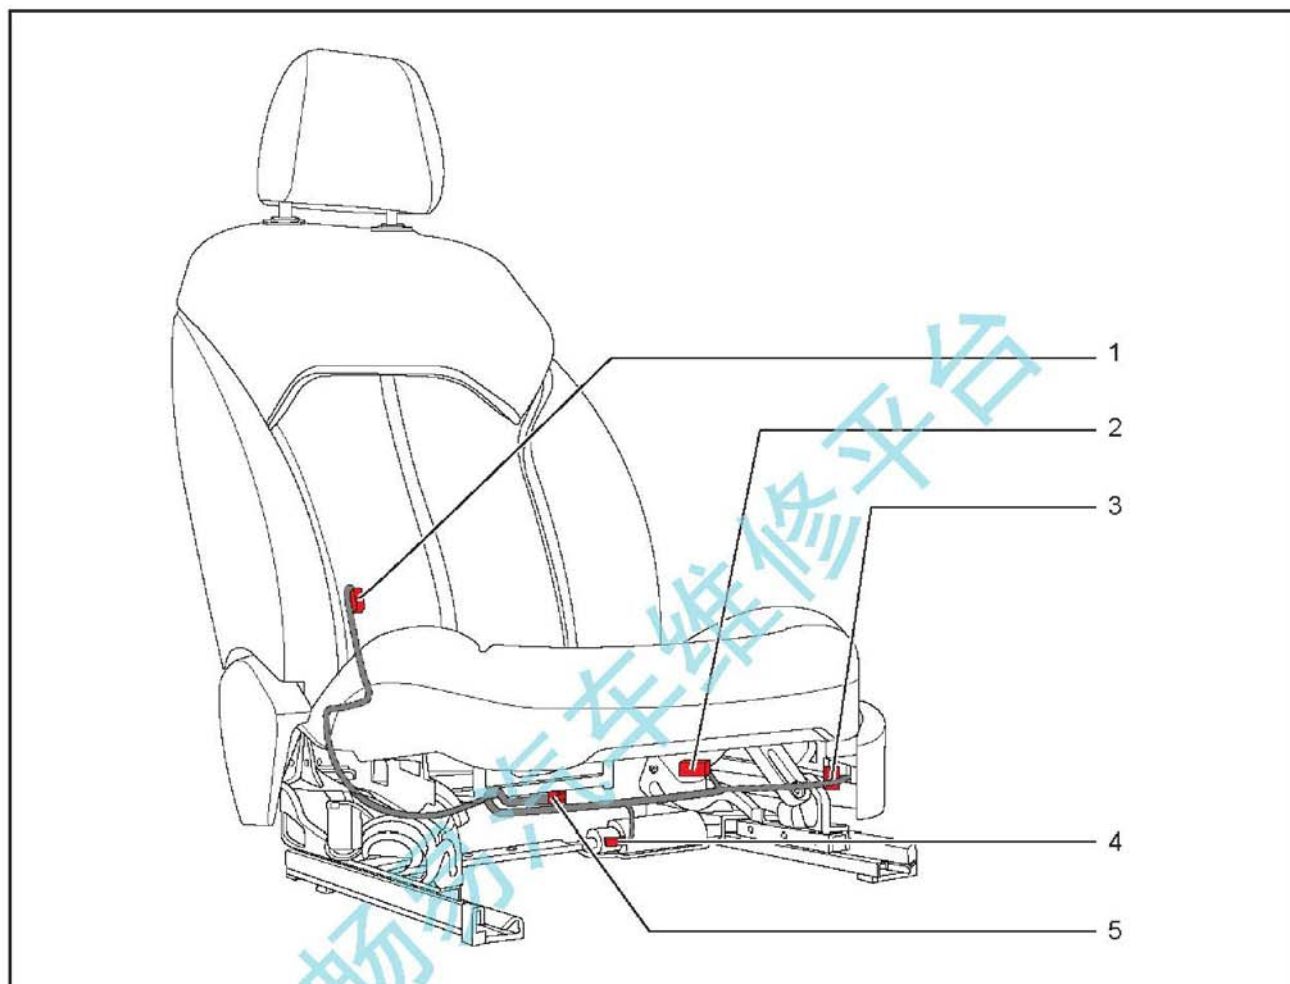

1 DS004 驾驶员座椅靠背调节电机
Driver Seat Recline Motor

2 DS002 驾驶员座椅高低调节电机
Driver Seat Up/Down Motor

3 DS003 驾驶员座椅调节开关
Driver Seat Adjust SW

4 DS001 驾驶员座椅前后调节电机
Driver Seat Horizend Motor

5 DS005 驾驶员座椅与车身线束对接
Inline-DS-toFA