


连接器定位图

16.仪表线束-仪表板右侧(1)

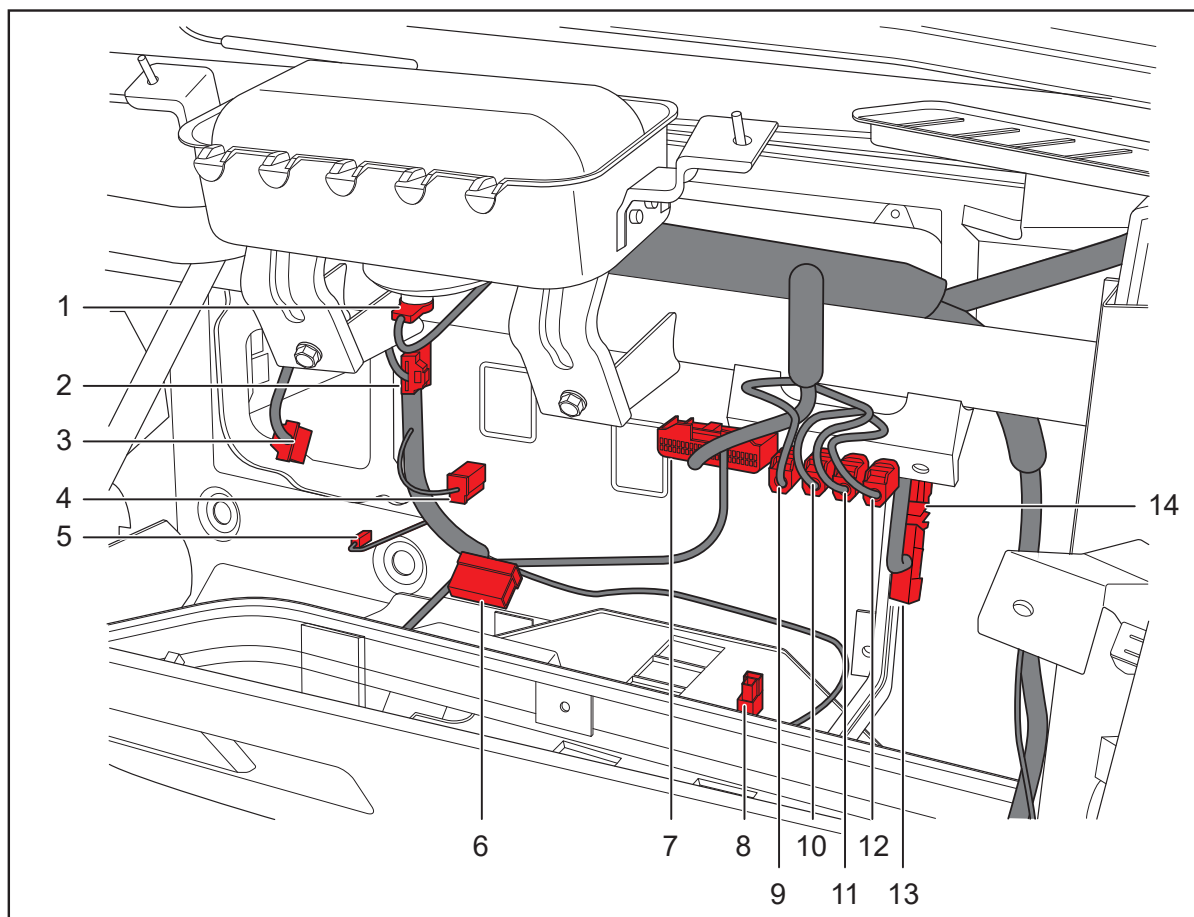

- | | |
|---------|---------------------------------------|
| 1 FA012 | 副驾驶安全气囊
Passenger Airbag |
| 2 FA048 | 新鲜/循环空气电机
Fresh Air Recycle Motor |
| 3 FA065 | 右侧温度风门电机
Temperature Flap Motor RH |
| 4 FA033 | 鼓风机调速模块
Power Controller |

- | | |
|---------|-------------------------------|
| 5 FA064 | 蒸发器温度传感器
Evaporator Sensor |
| 6 FA036 | 手套箱灯
Glovebox Lamp |
| 7 FA027 | 通讯模块
T-Box:Main |
| 8 FA051 | 鼓风机
Blower |