
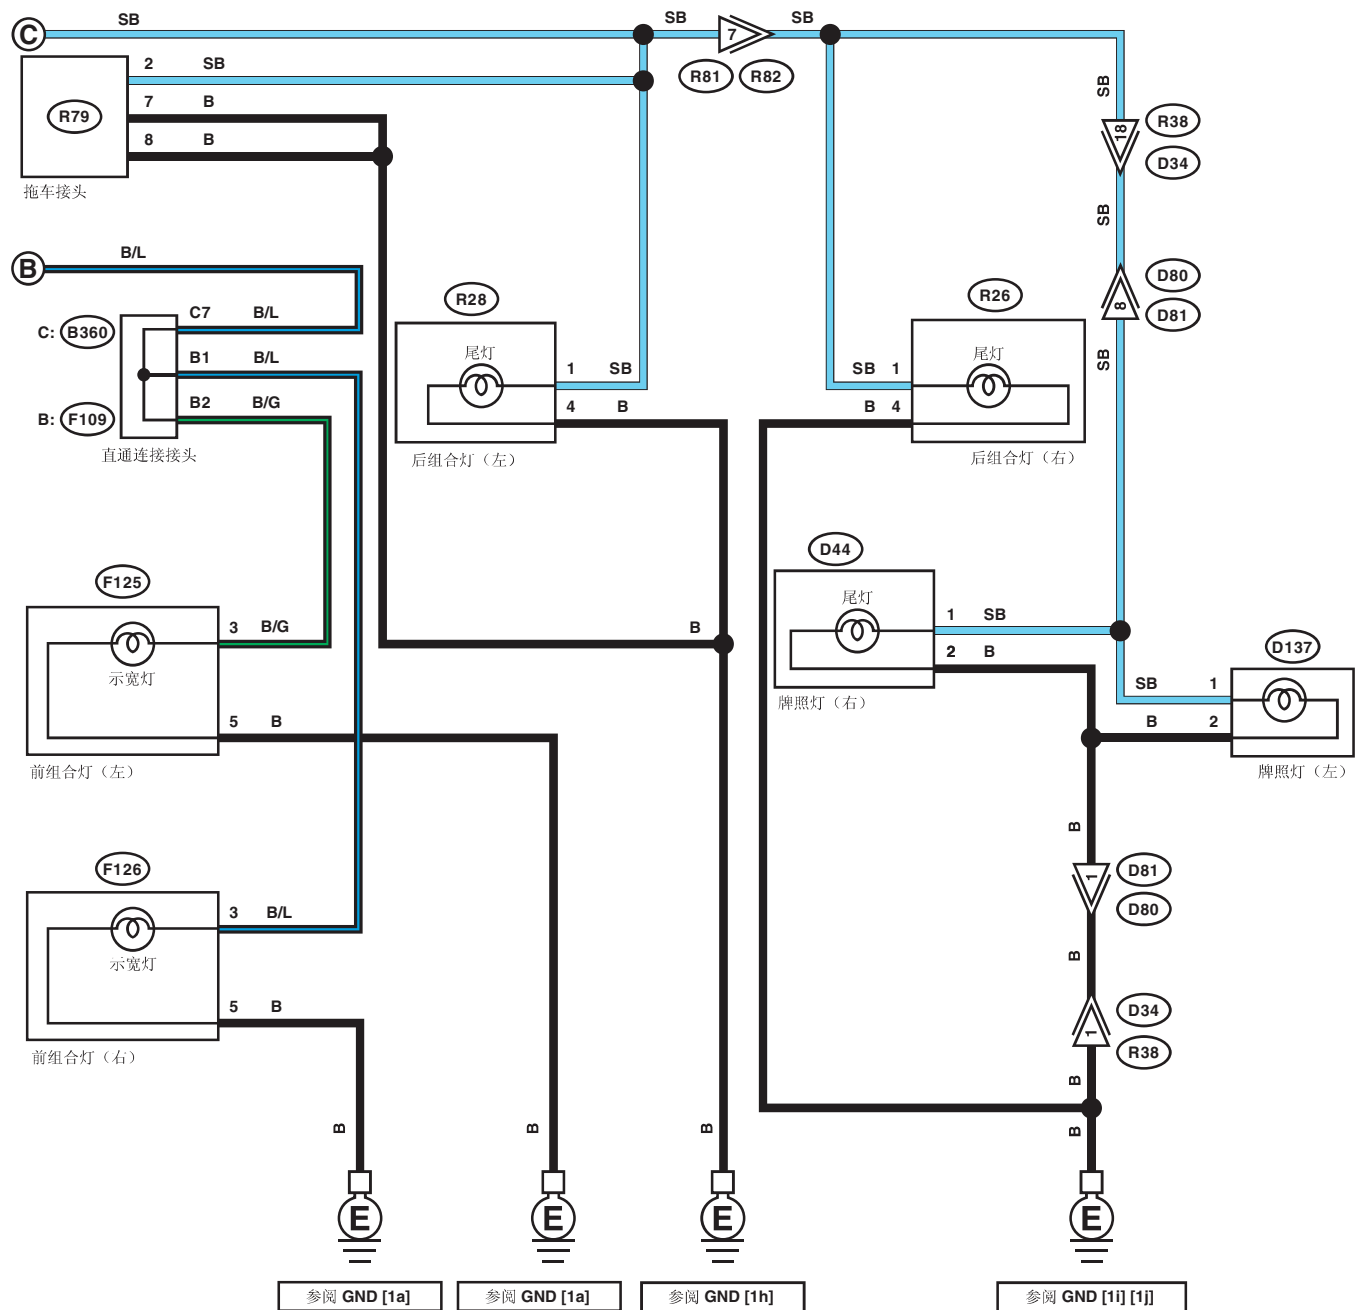



2b**2b**

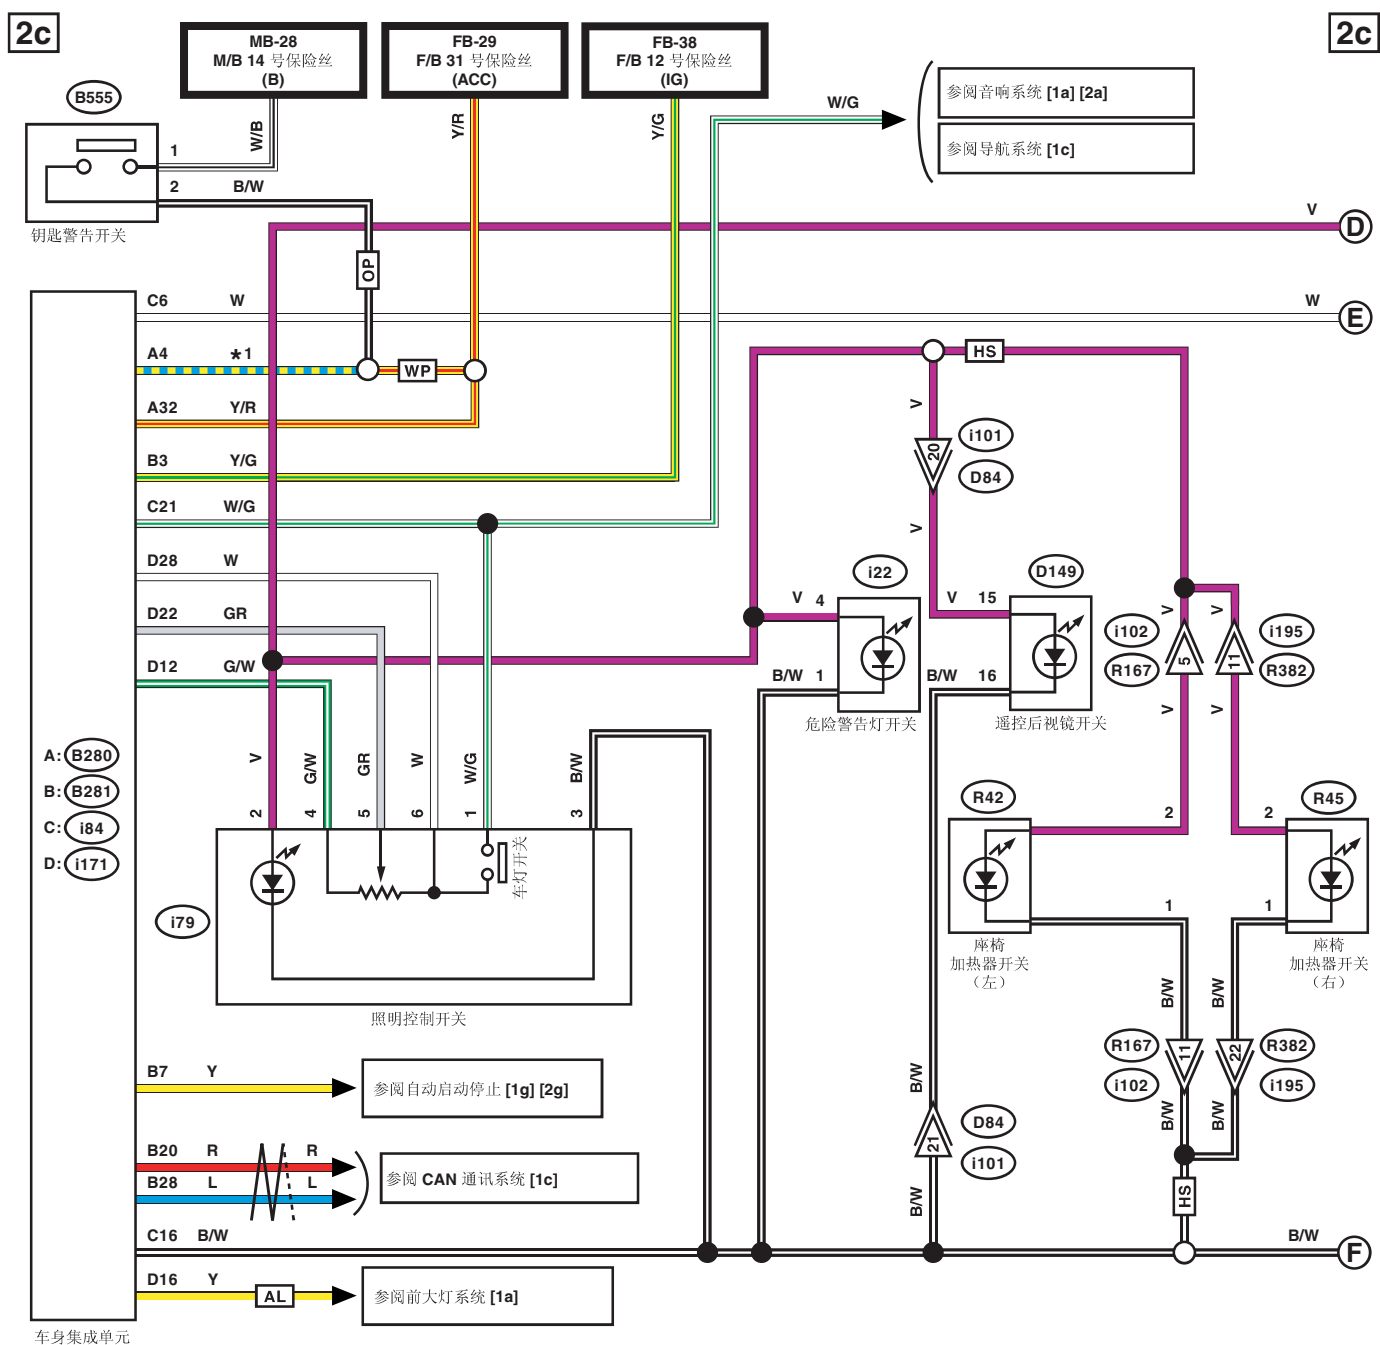

★1：不需要按钮启动：B/W
需要按钮启动：Y/R


2d

2d

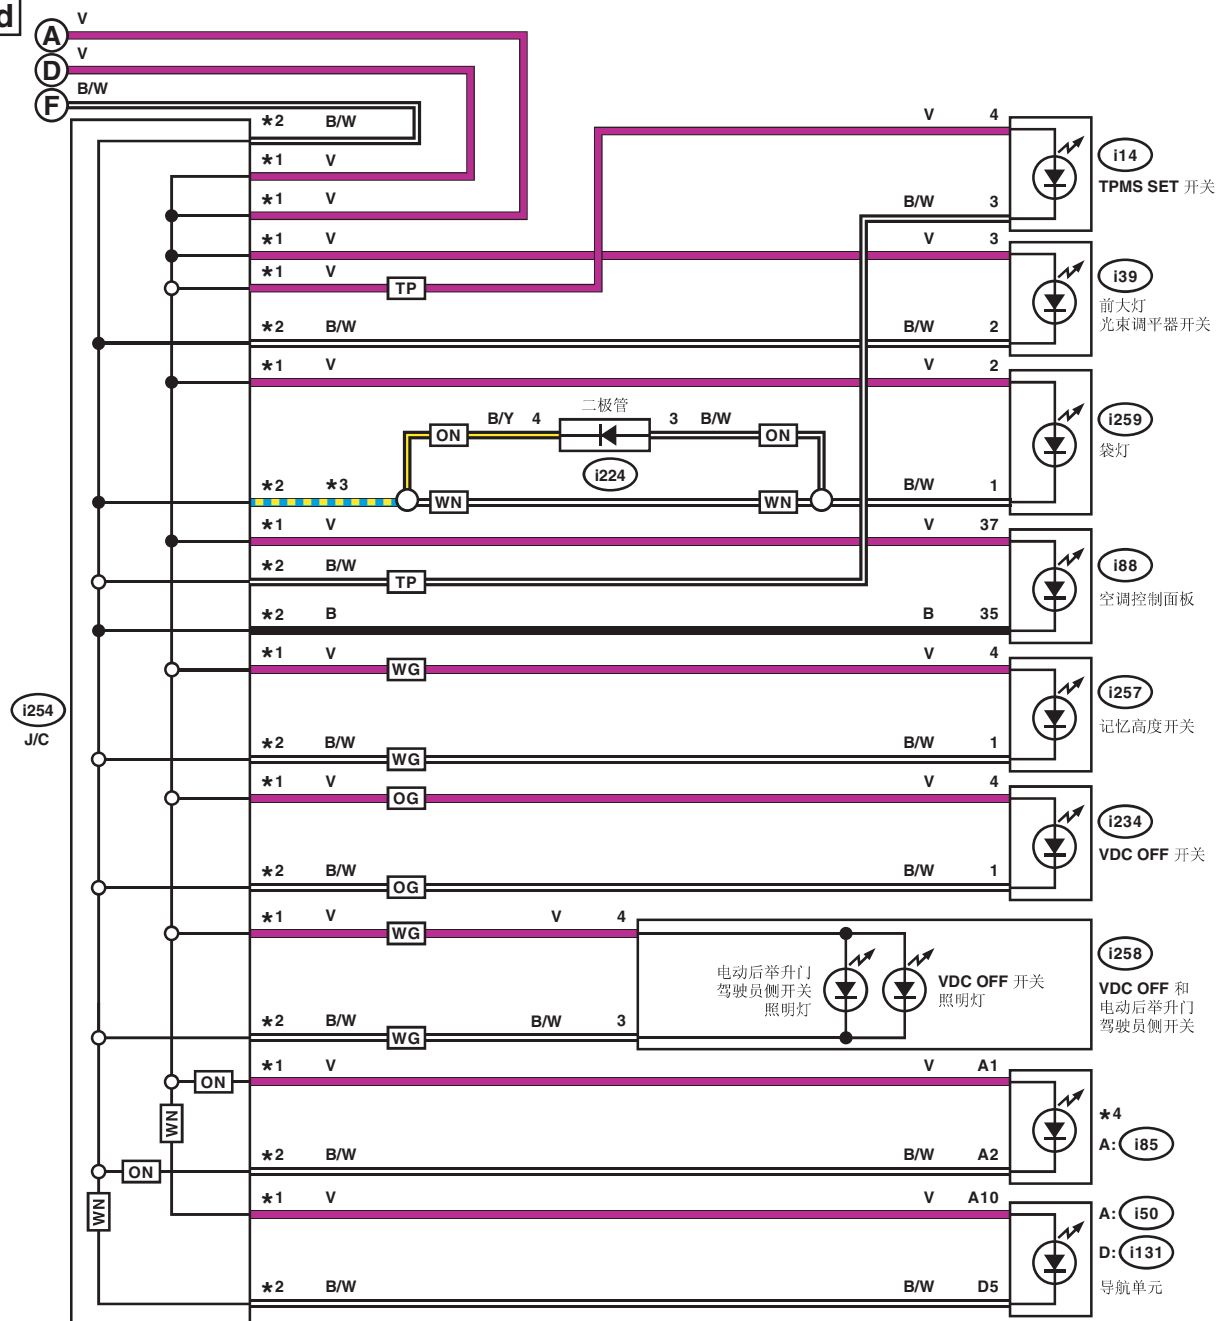

2e

2e

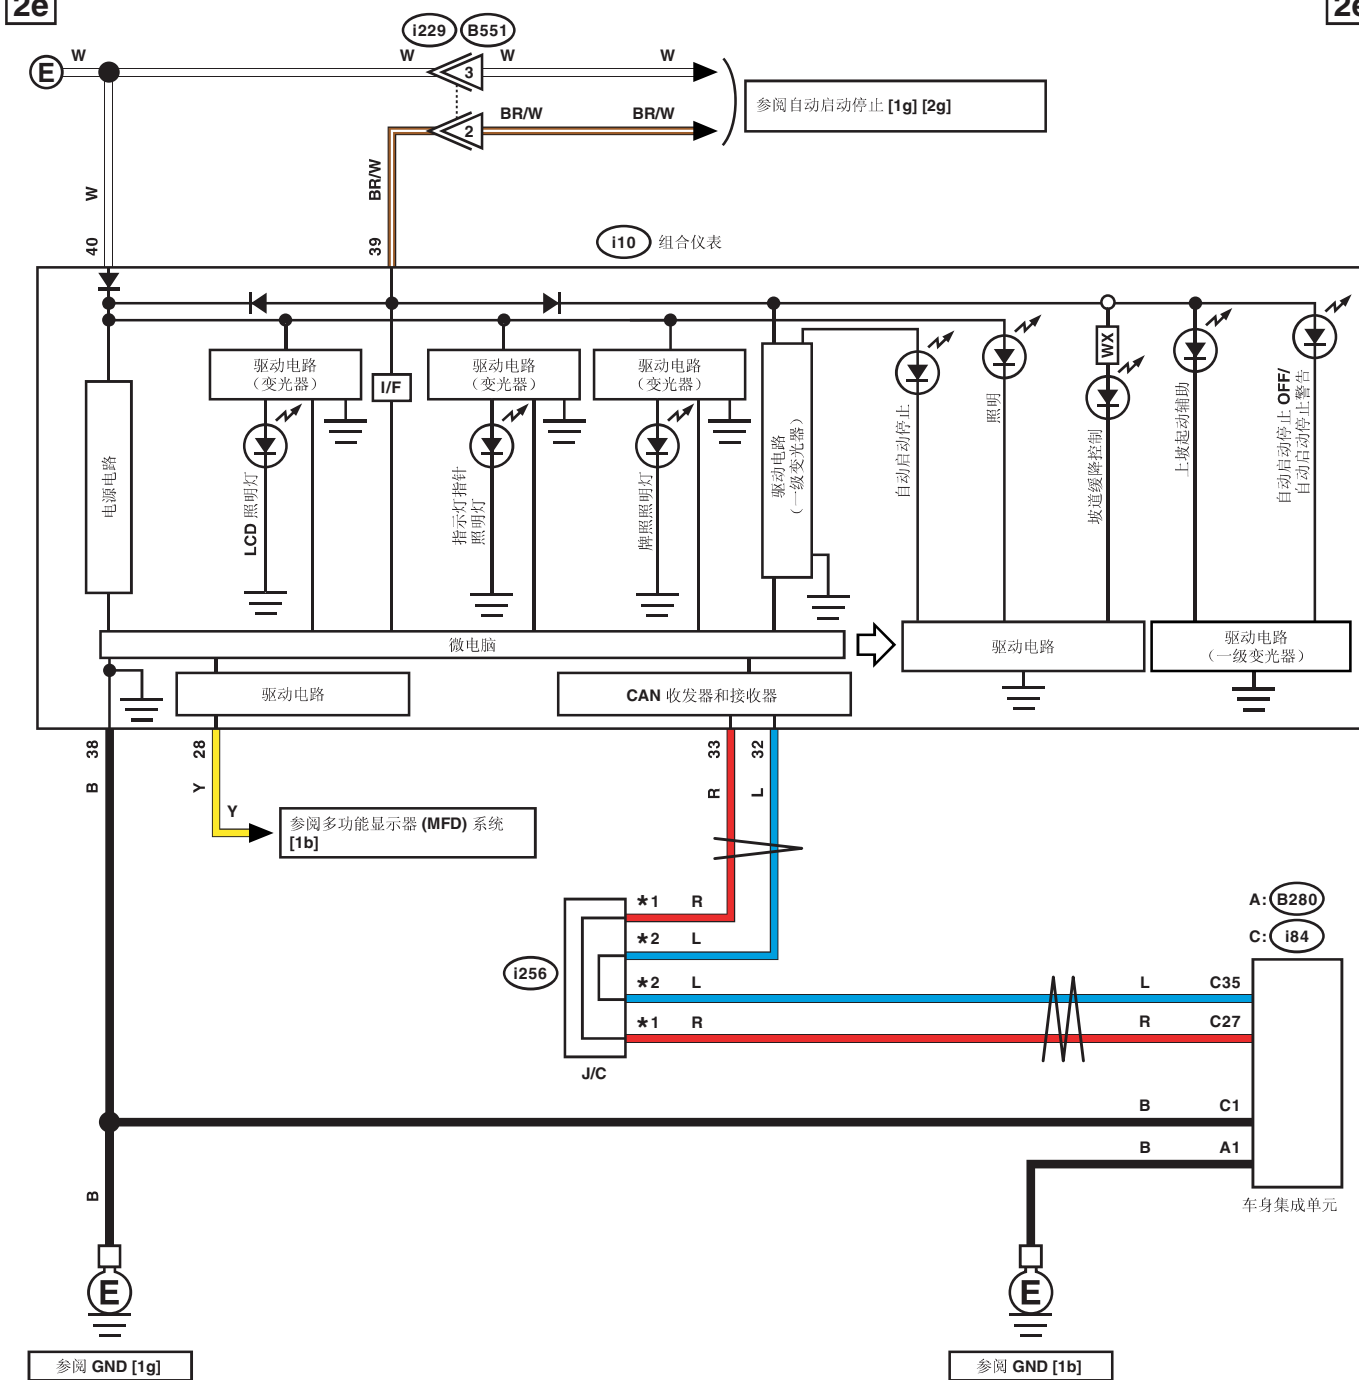


WX : 带 X 模式

*1 : 端子编号可选排列 1、2、3、6、7 和 8

*2 : 端子编号可选排列 4、5、9、10、11 和 12

WI-43366

接头清单

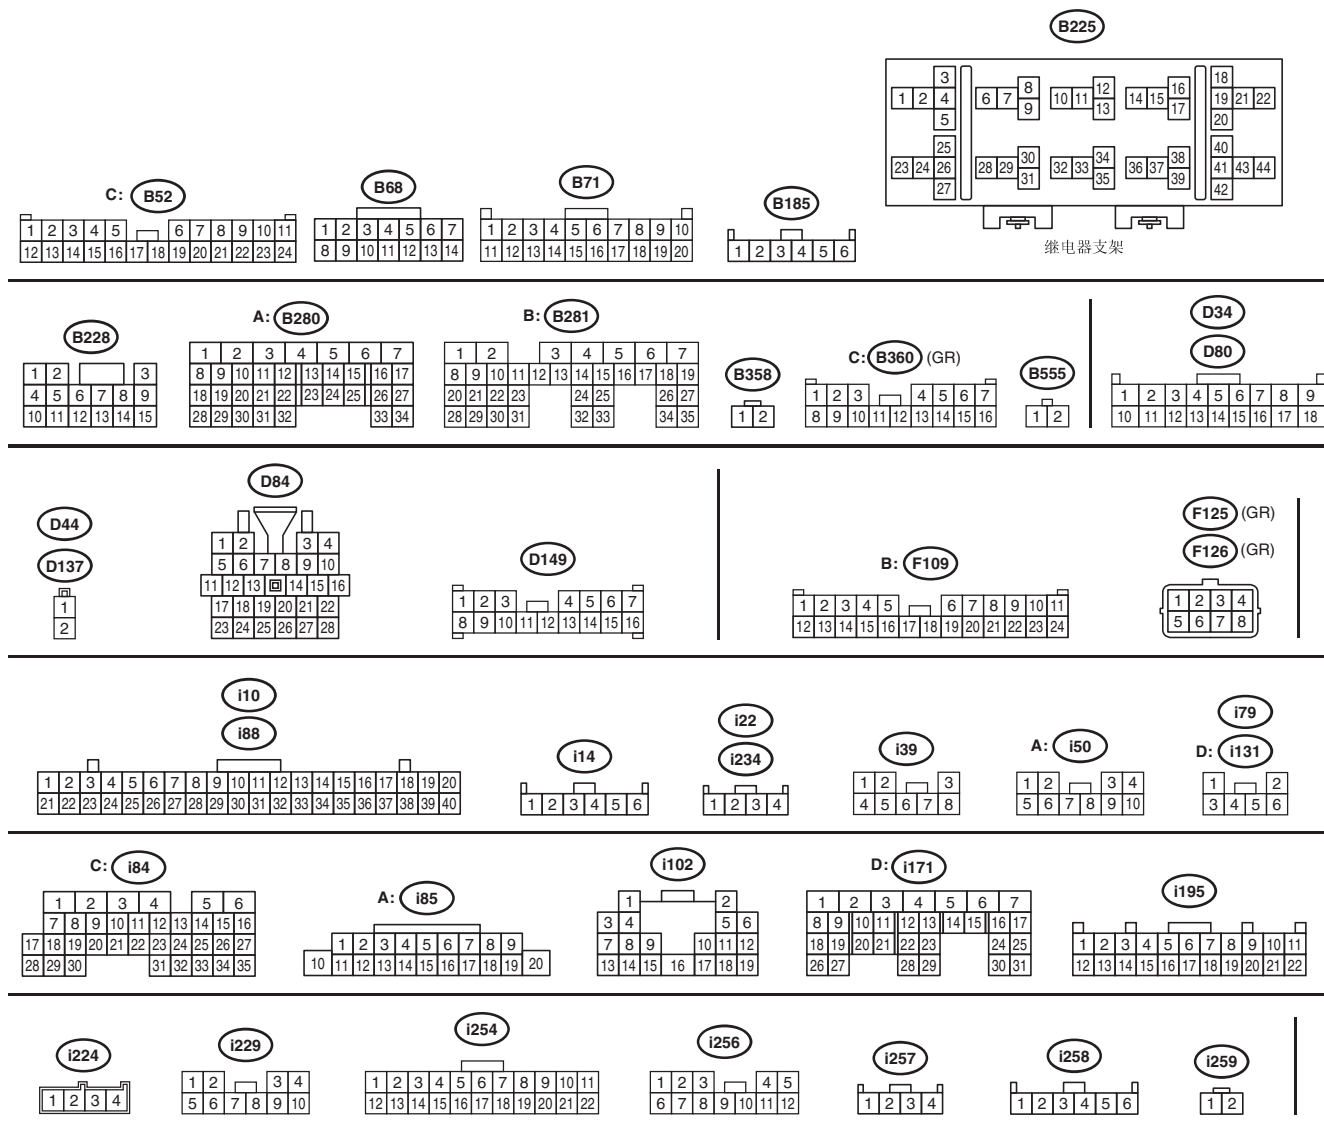

接头清单

