



Group 33 Starting system

Starting system 4-Cyl. Turbo 1:2

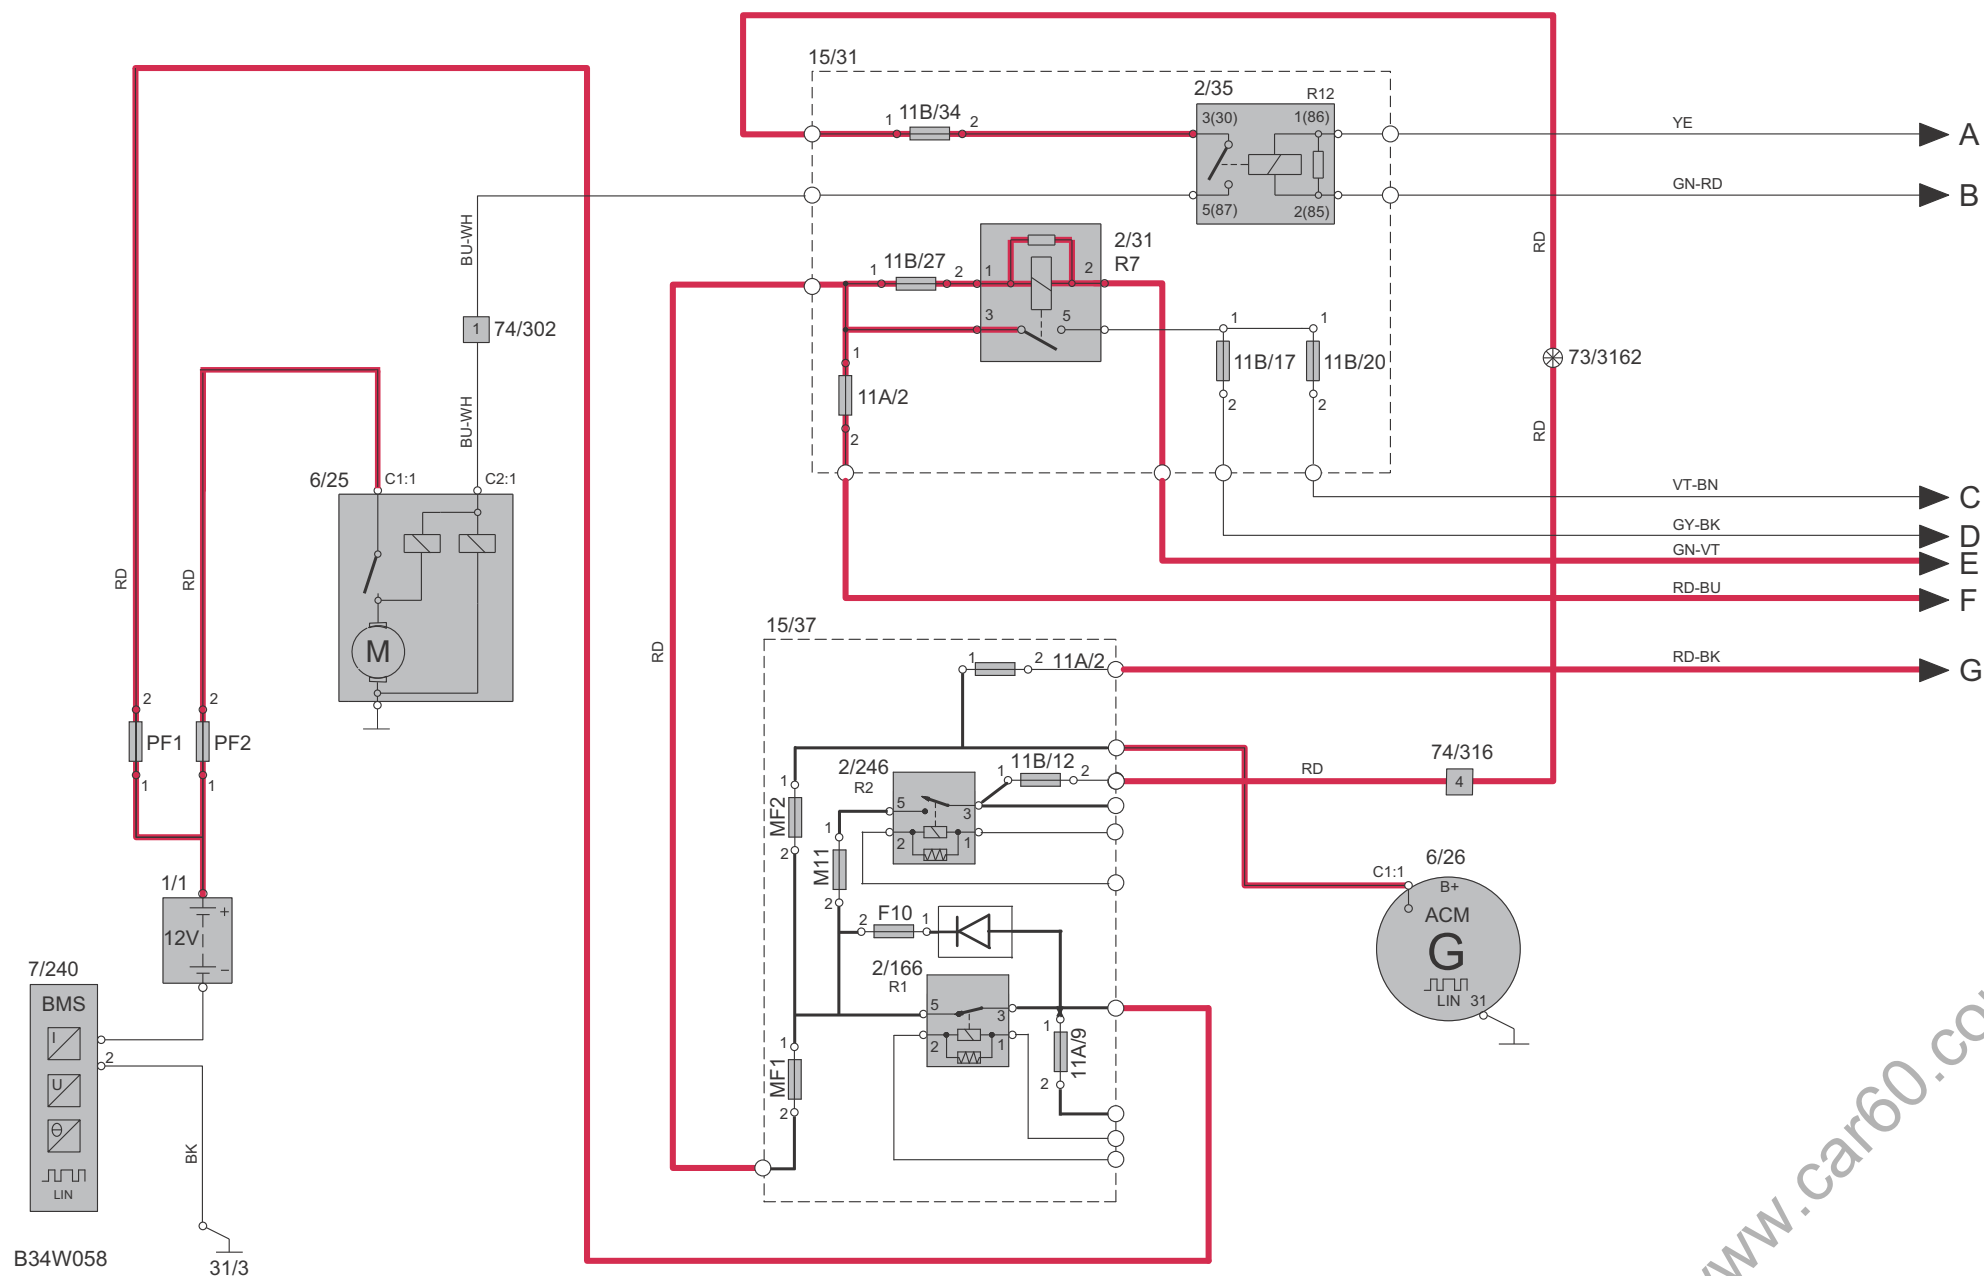

Group 33 Starting system


Starting system 4-Cyl. Turbo 2:2

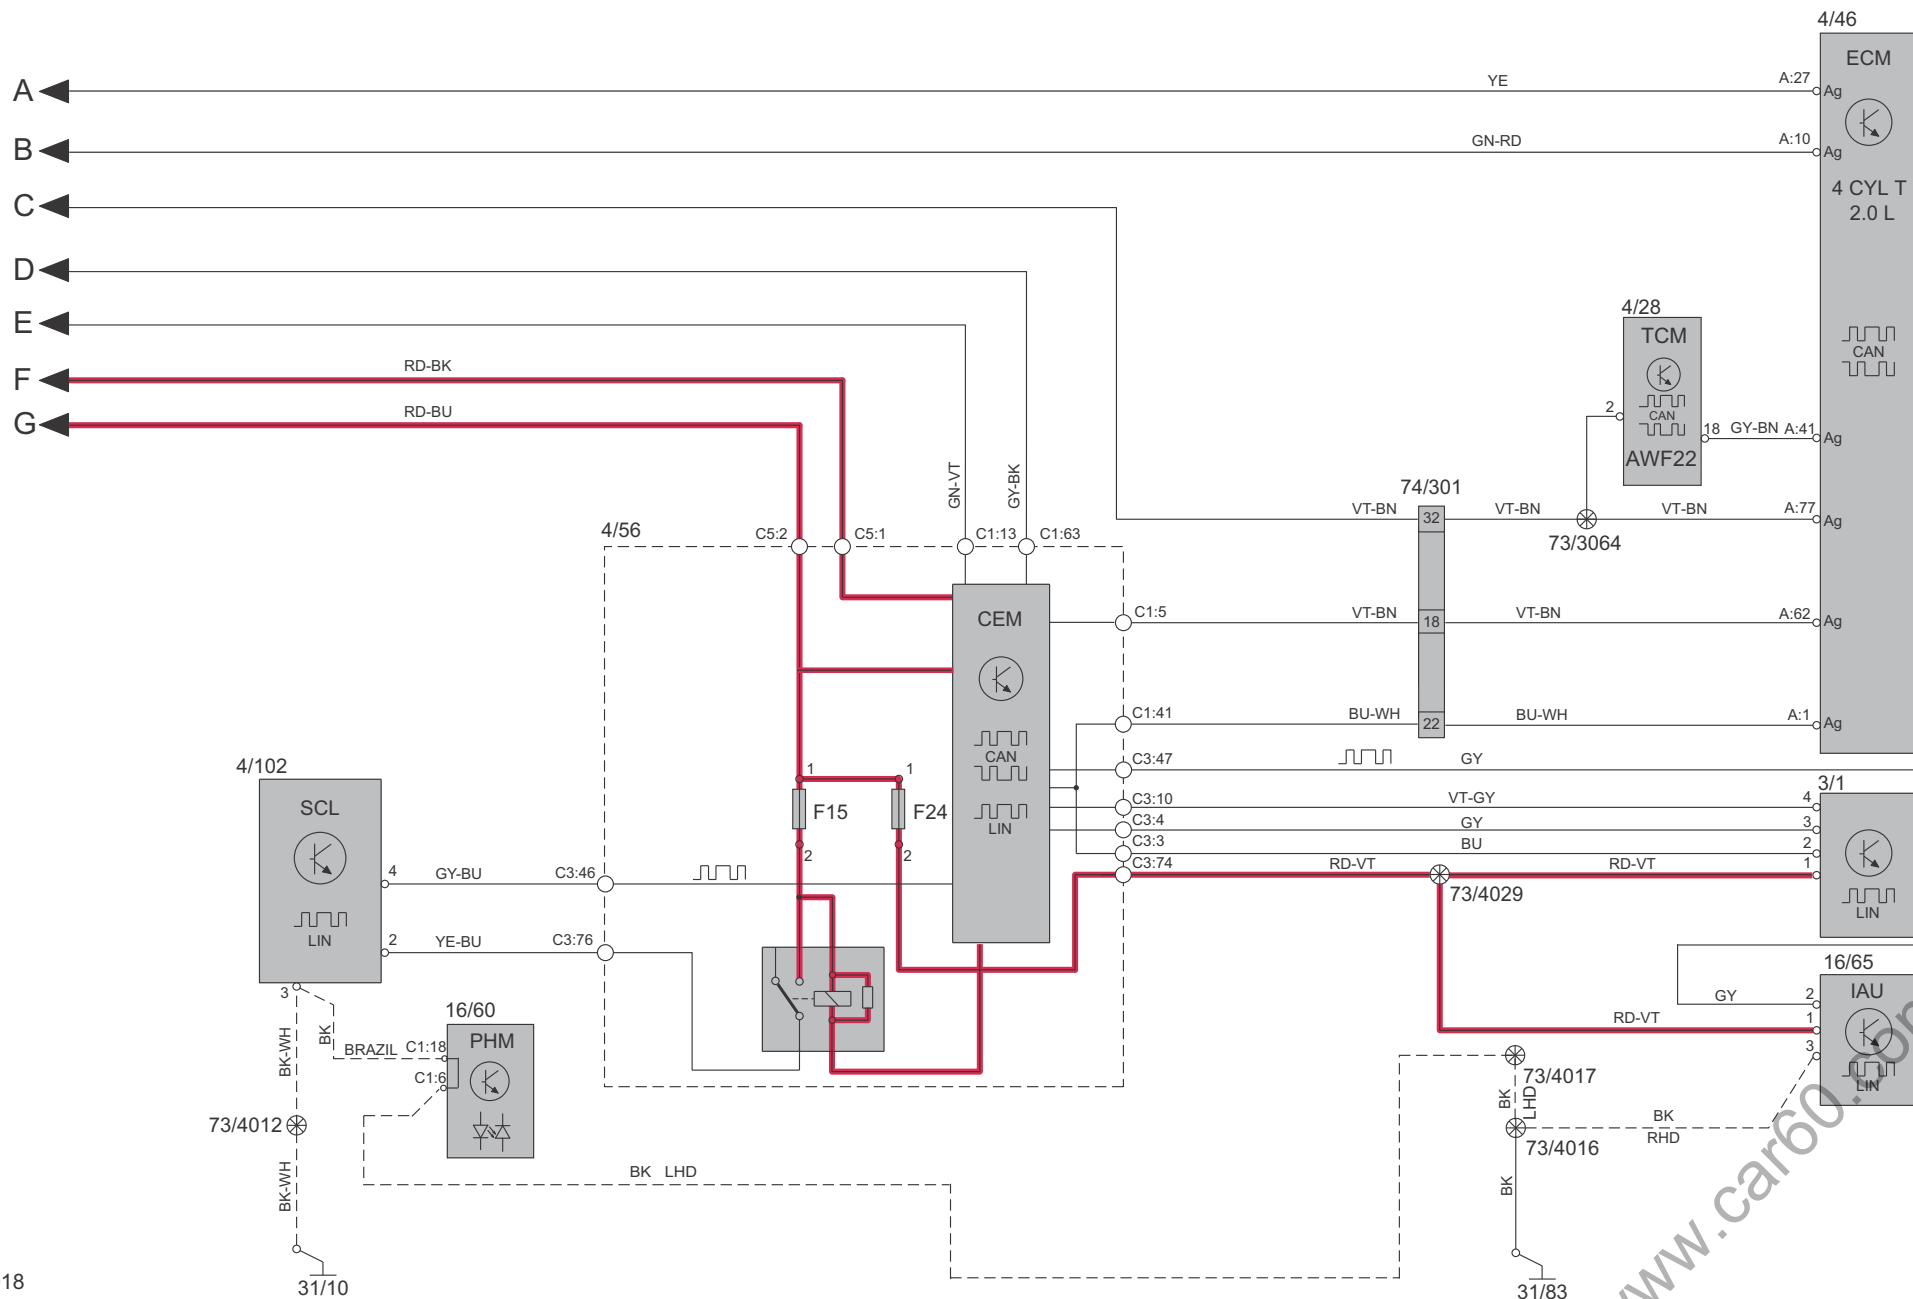

B34W018


Group 33 Starting system

Starting system 4-Cyl. Diesel 1:2

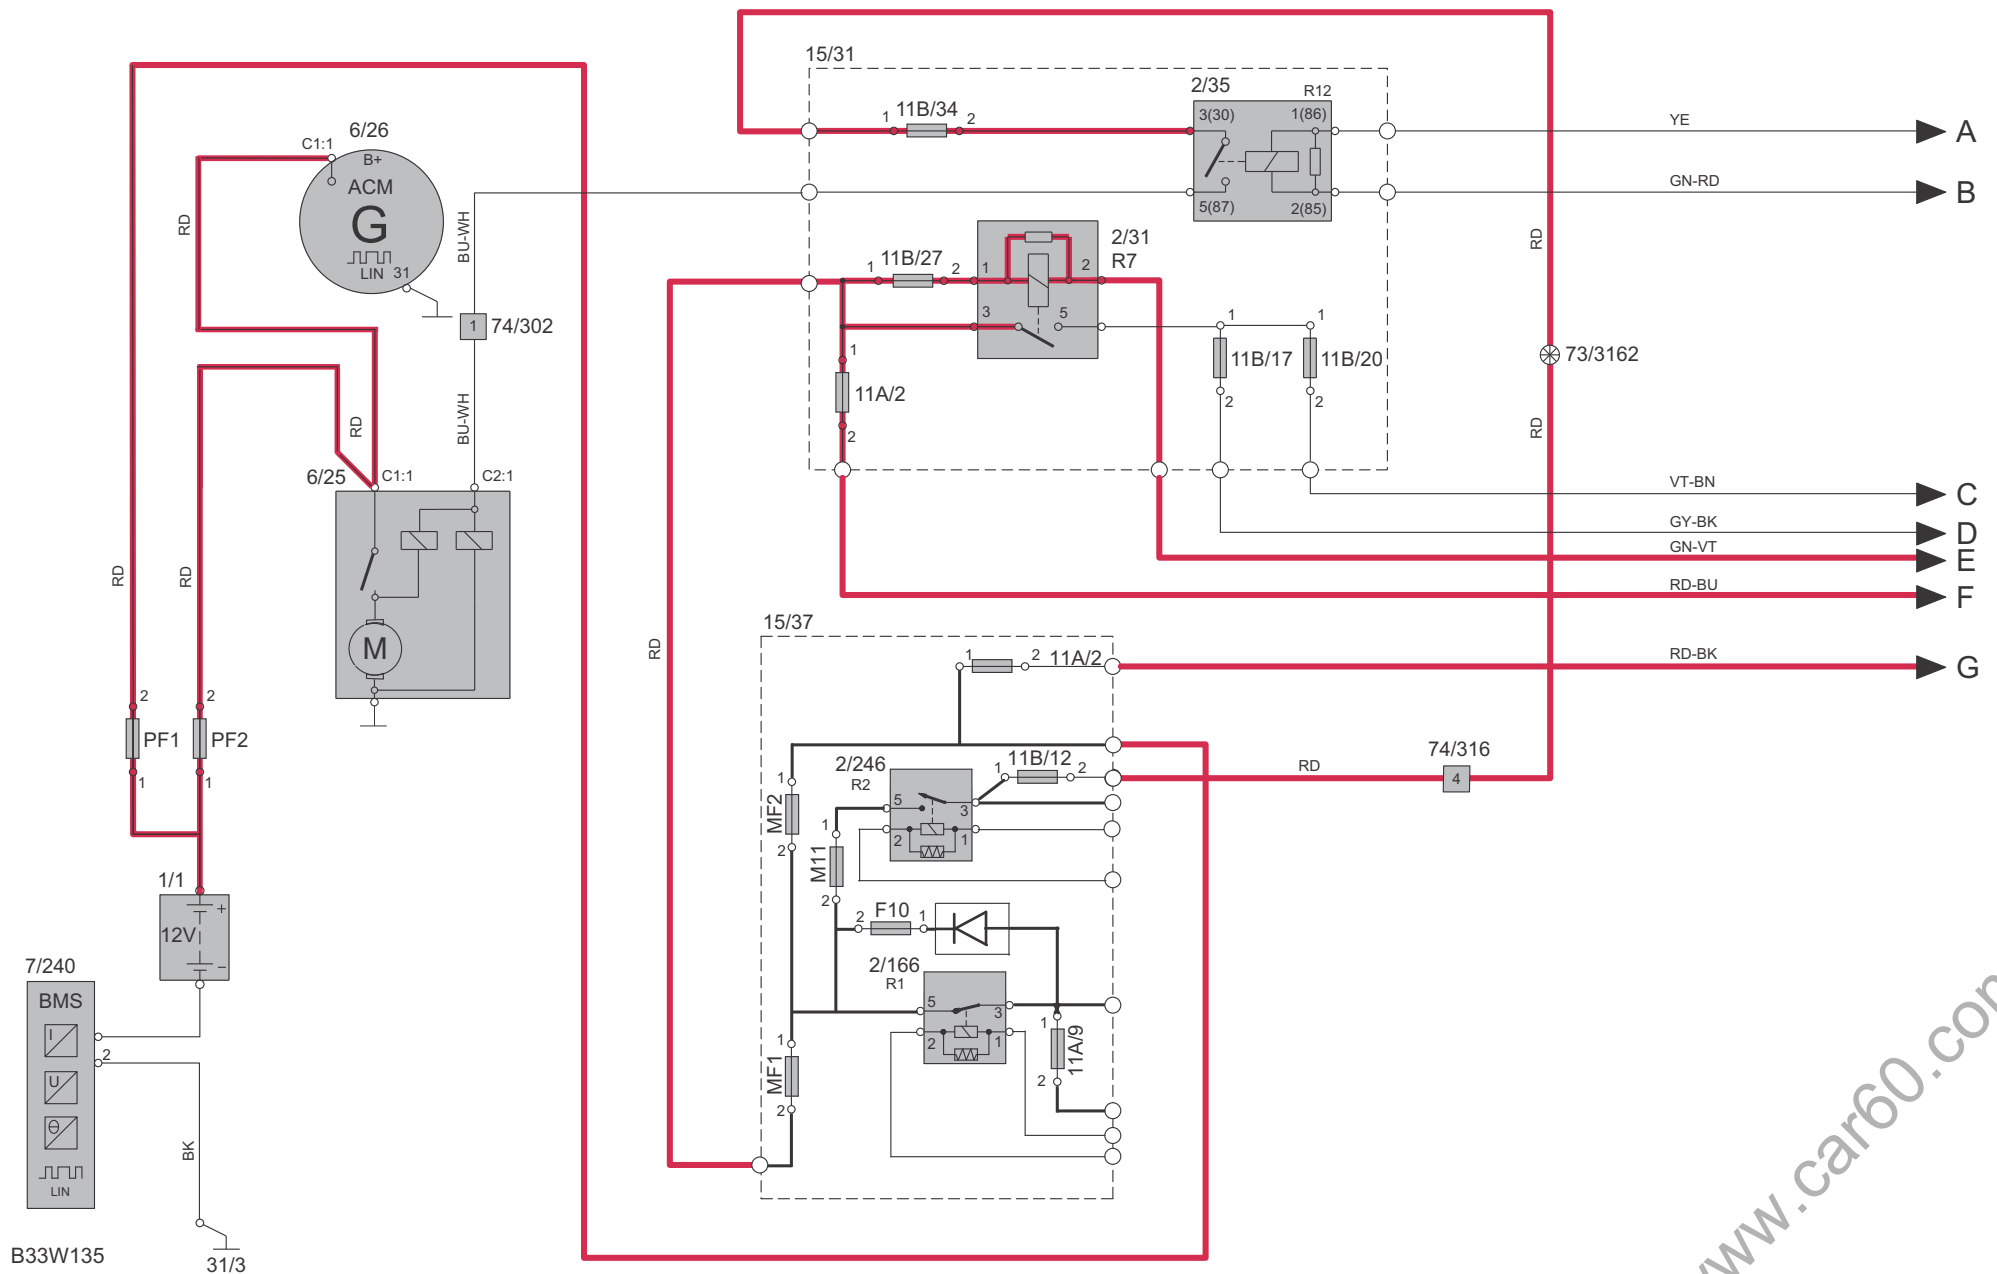

Group 33 Starting system


Starting system 4-Cyl. Diesel 2:2

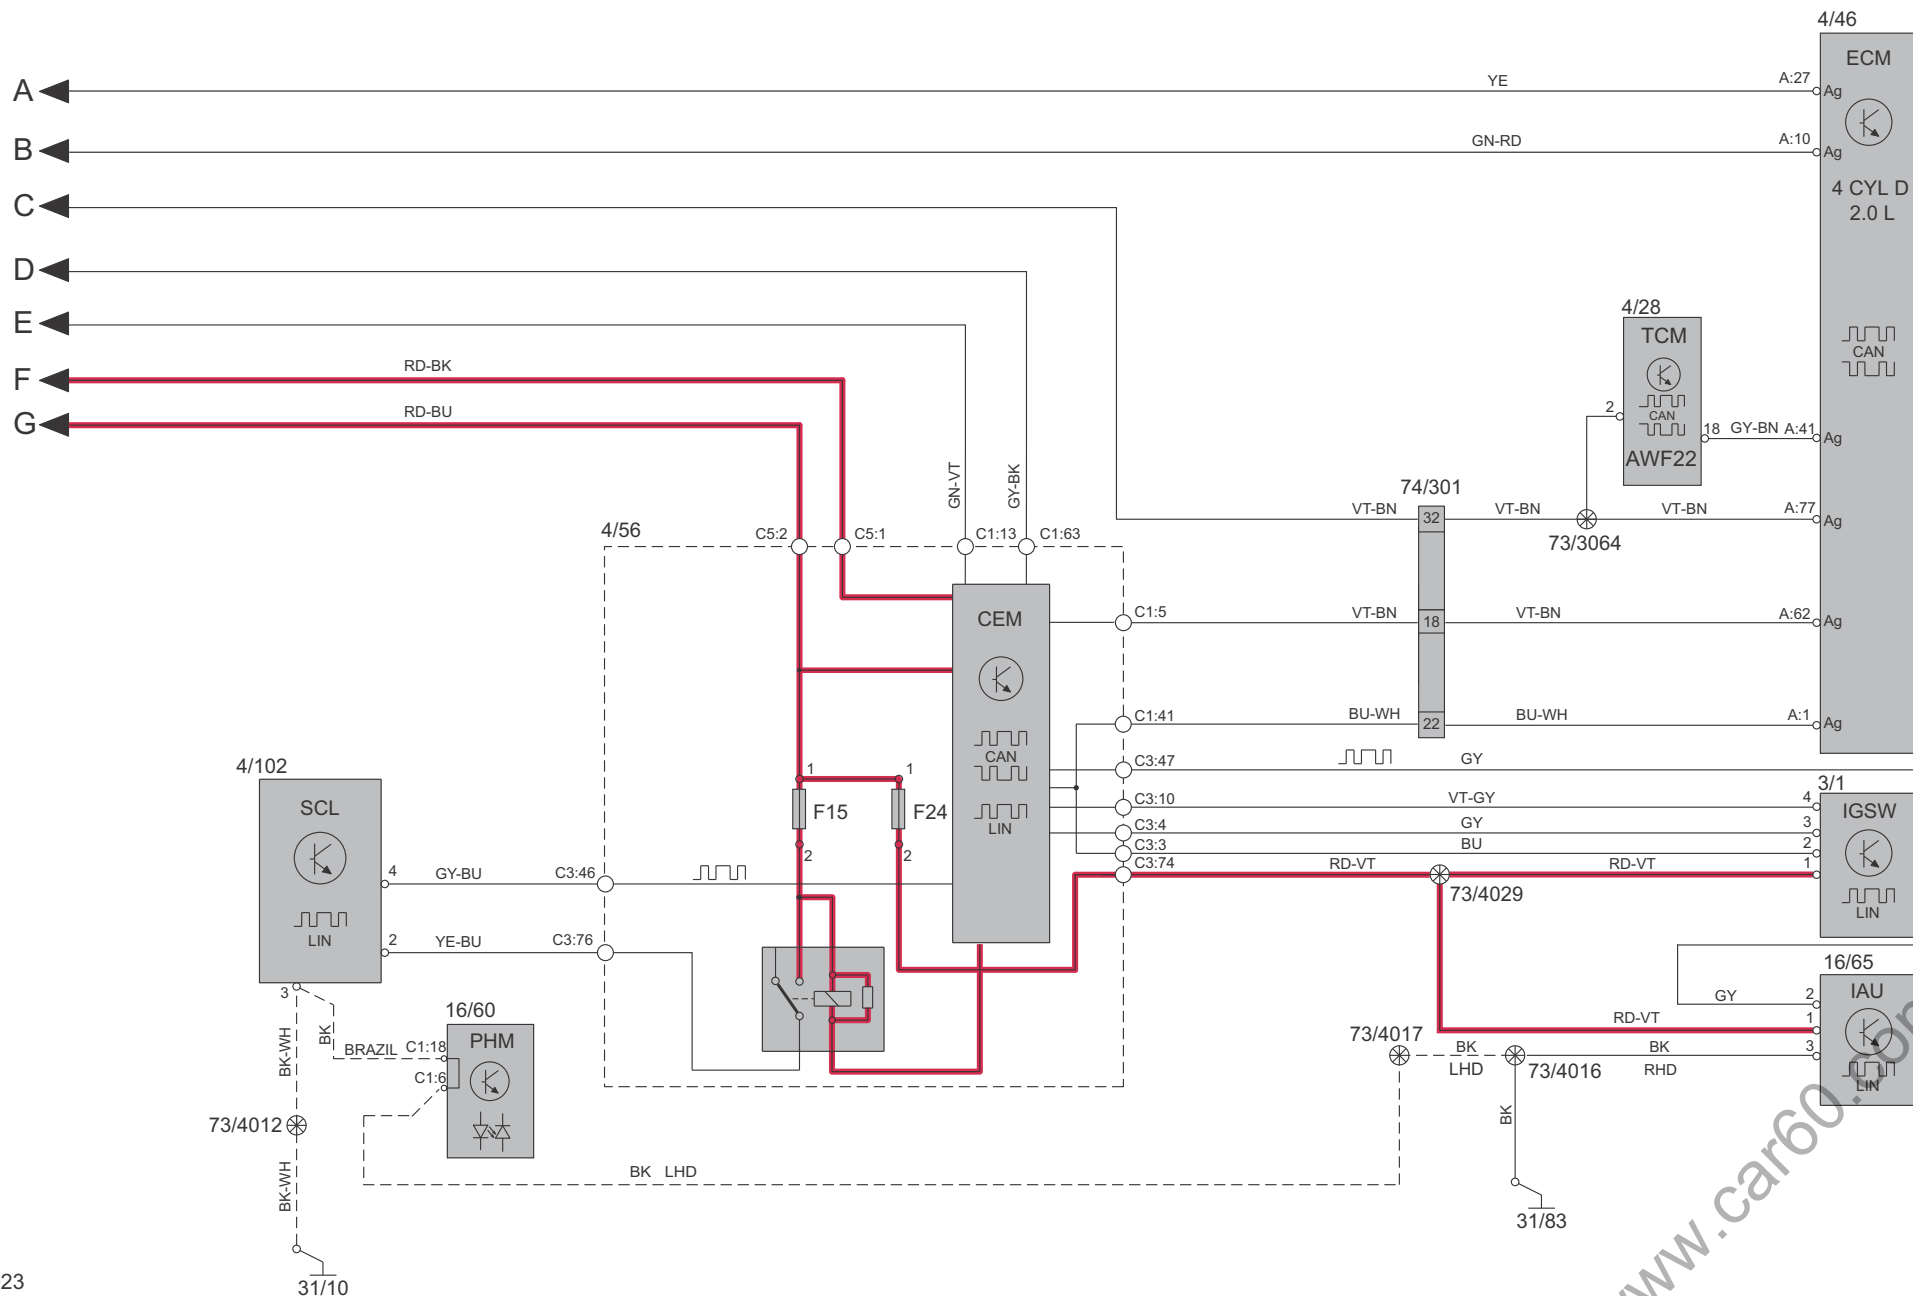

B34W023


Group 33 Starting system

Starting system 6-Cyl.

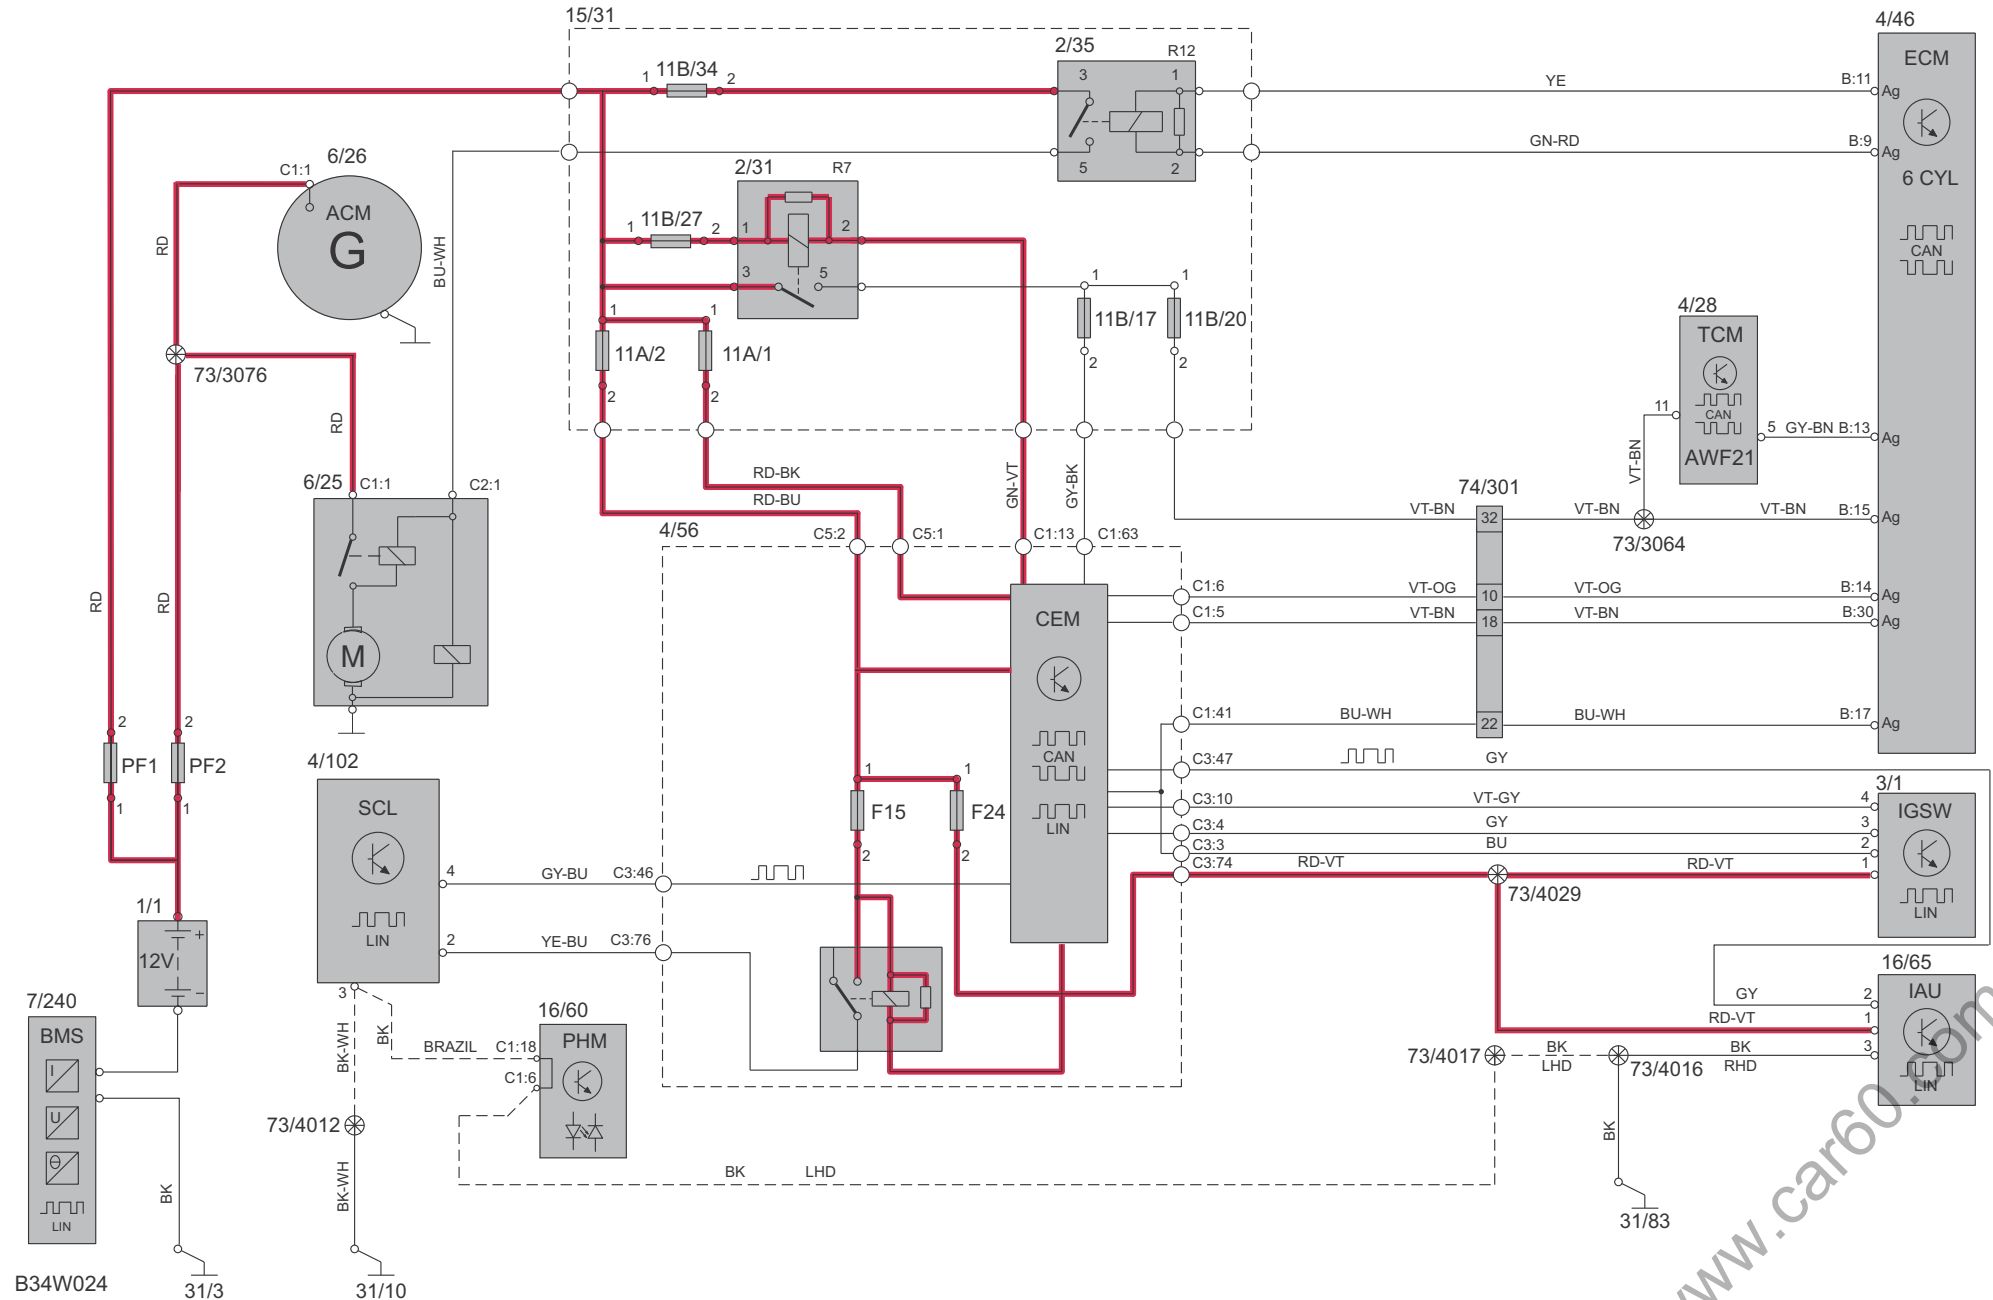


Group 33 Starting system

Starting system 5-Cyl. With Start/Stop 1:2

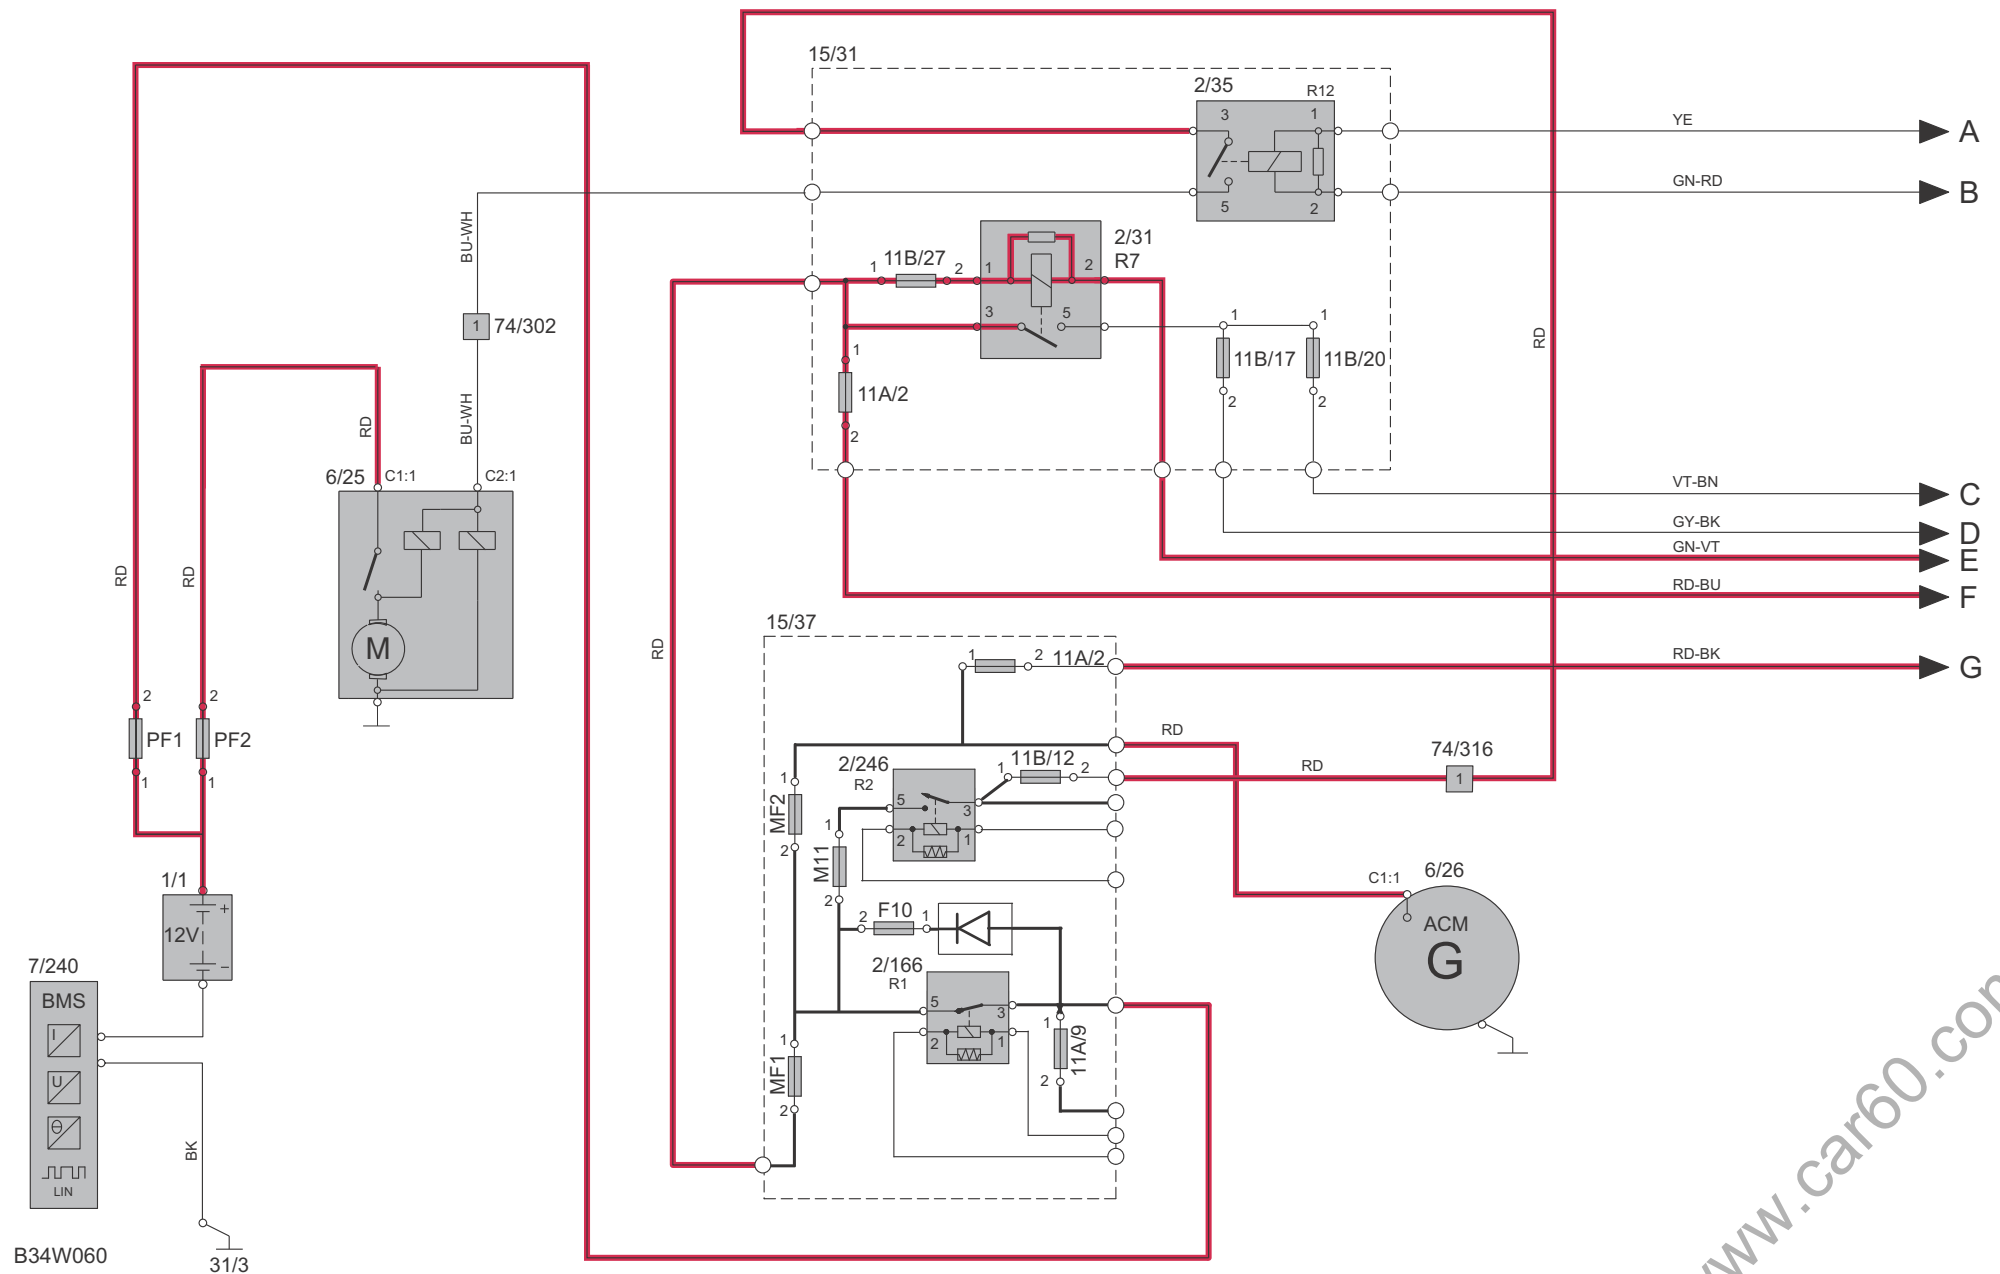

Starting system 5-Cyl. With Start/Stop 2:2

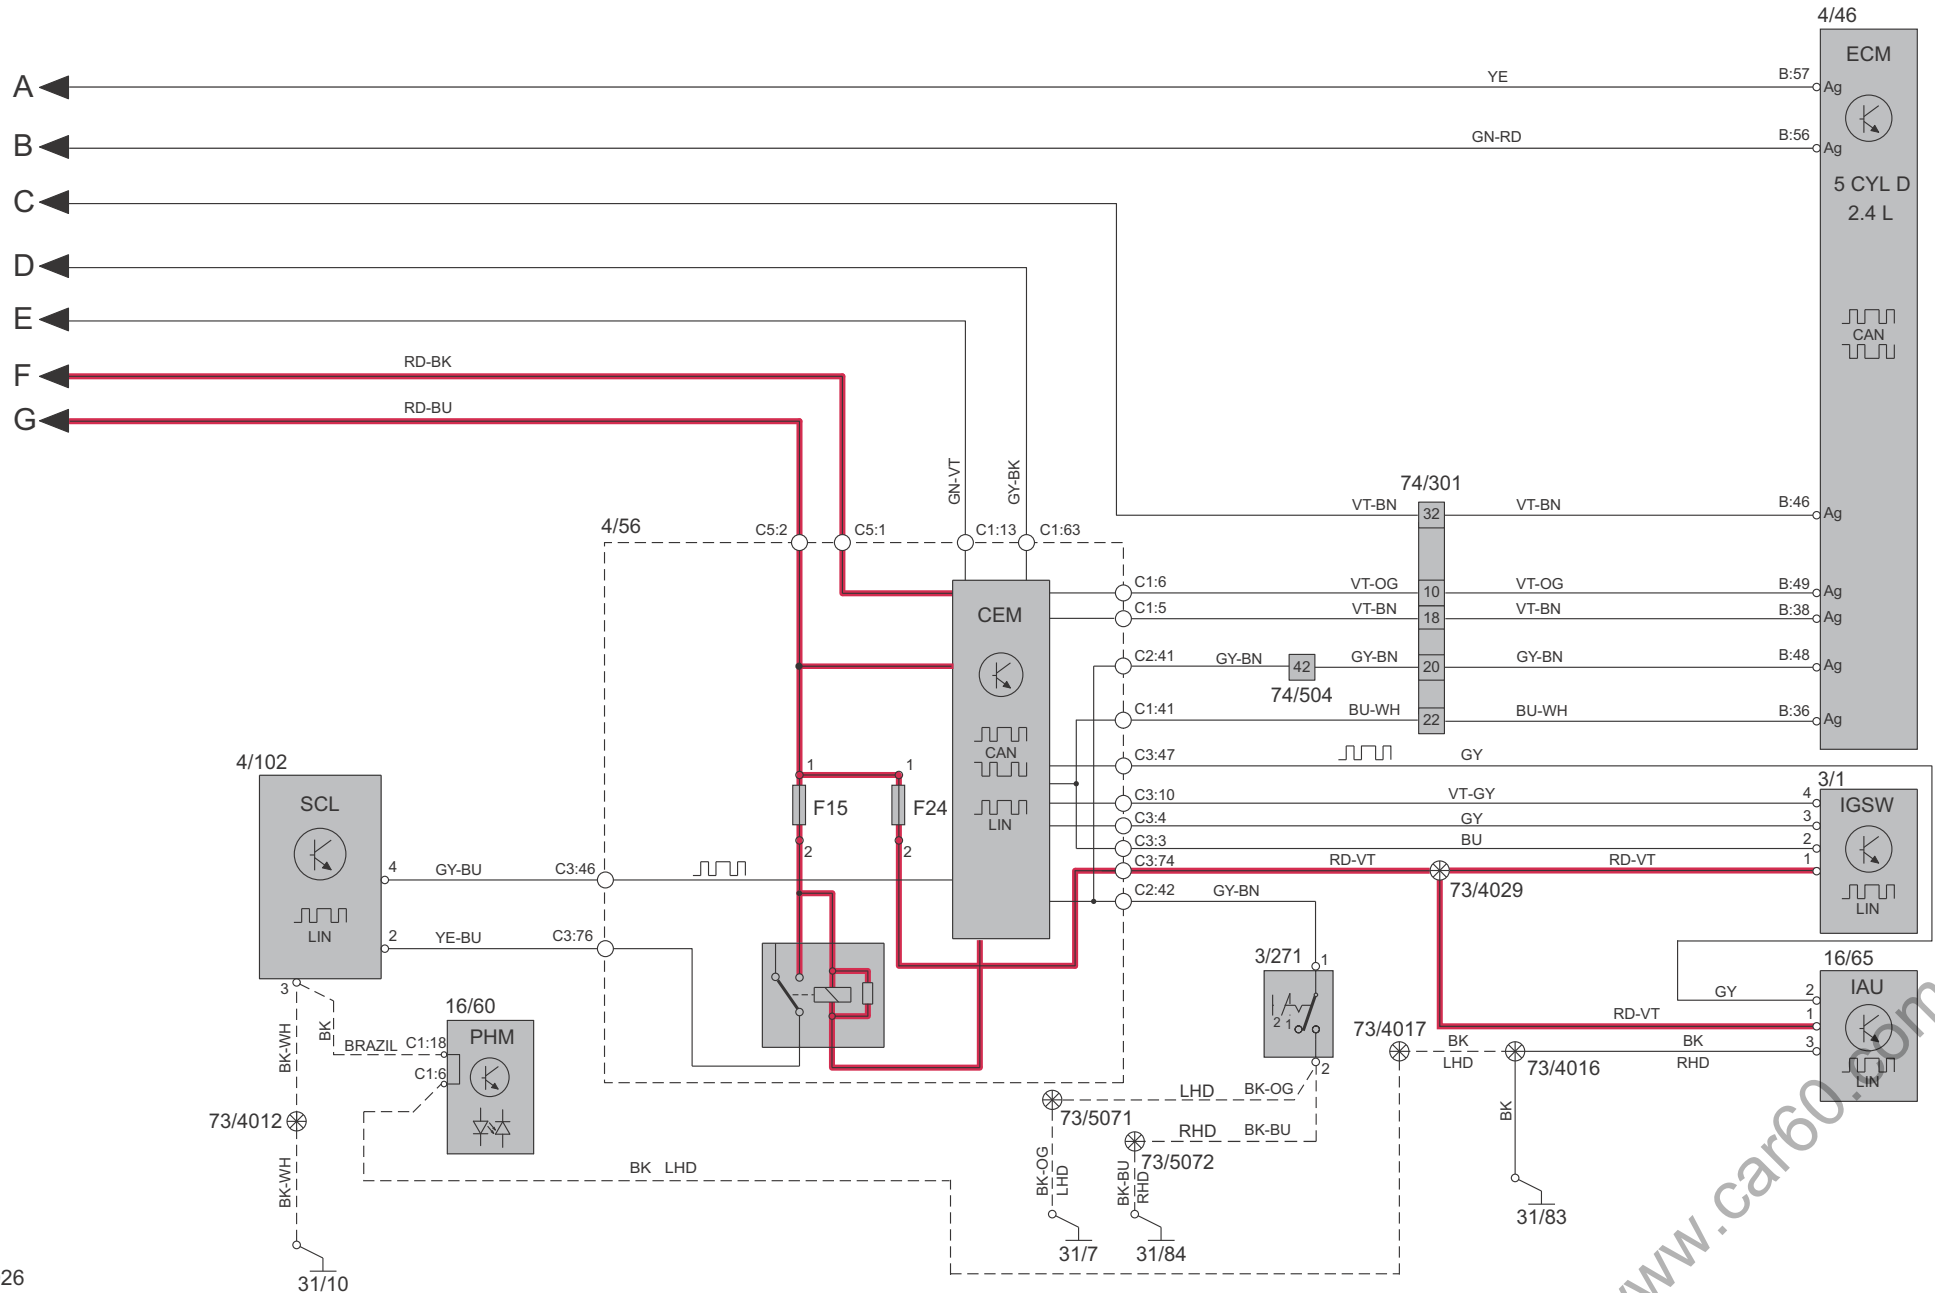

Group 33 Starting system Starting system 5-Cyl. Without Start/Stop

