



9 线束安装位置


9.1 顶棚线束

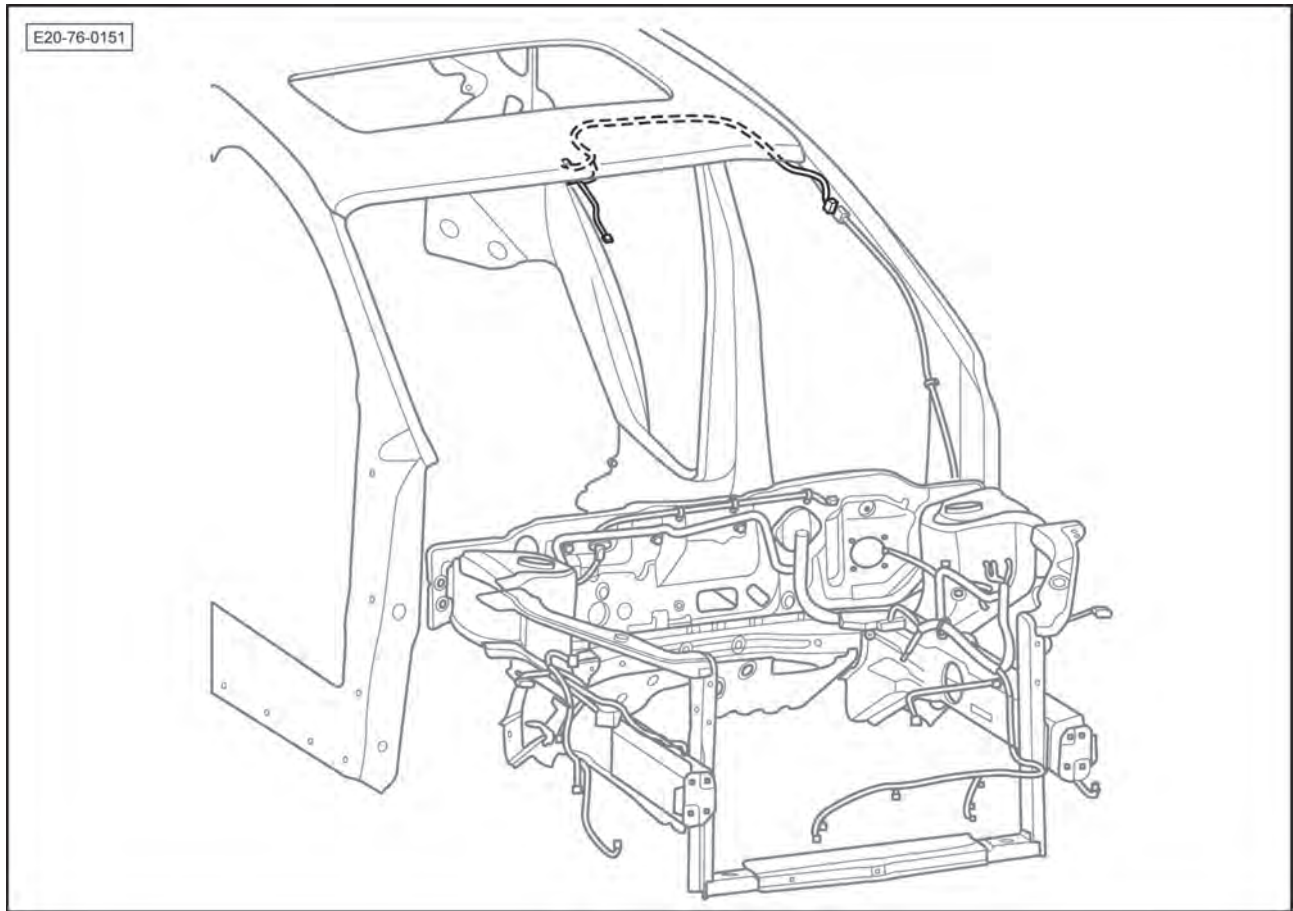


9.2 室内地板线束

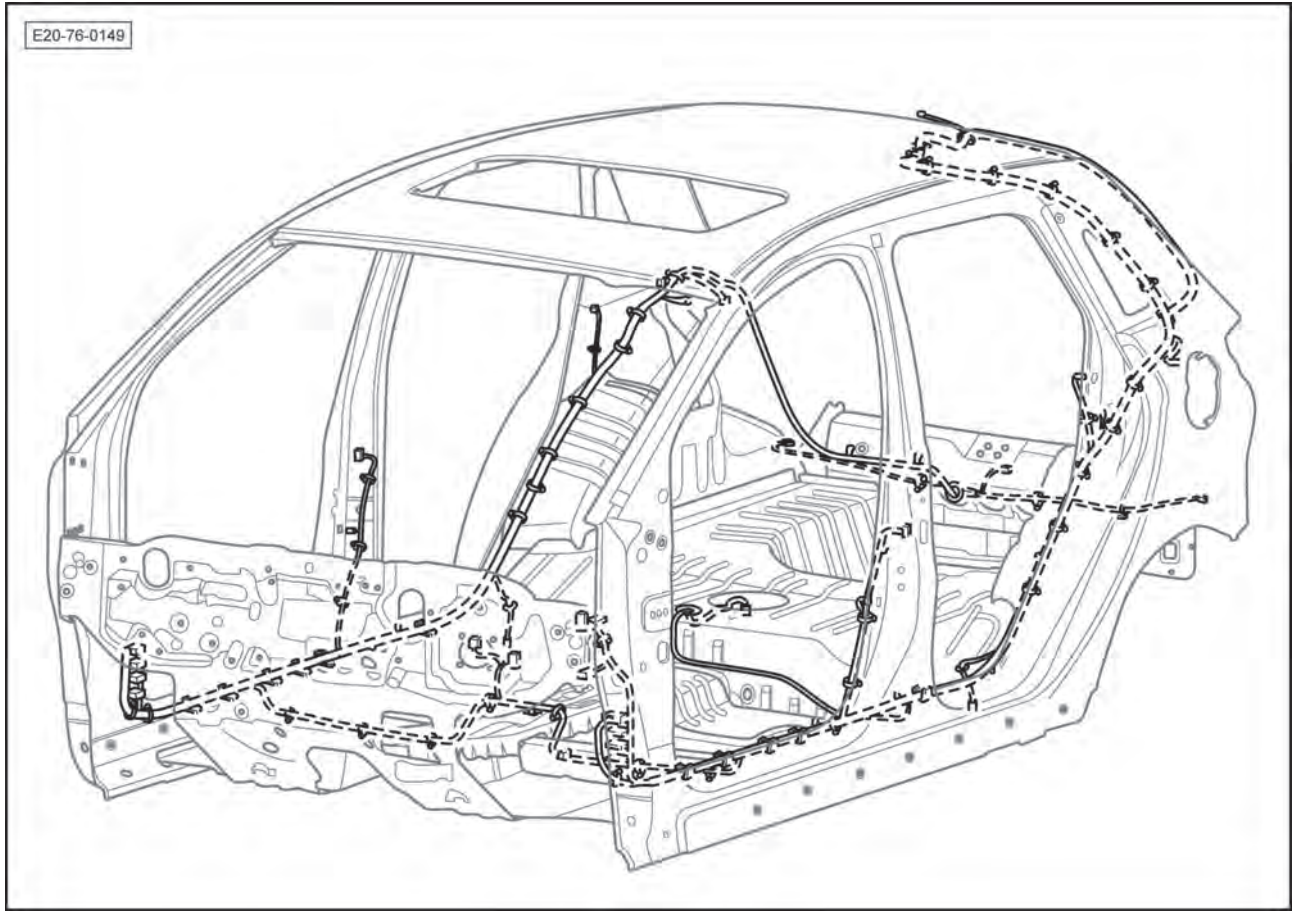


9.3 蓄电池负极线束

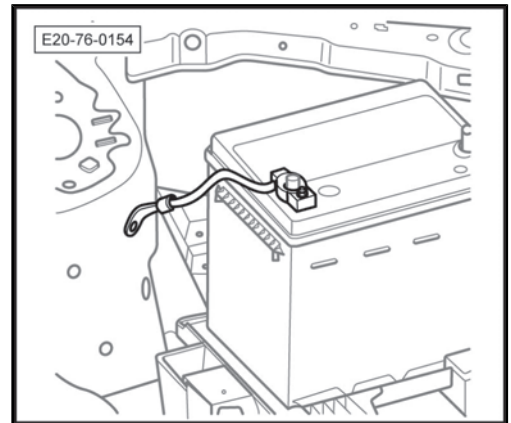


9.4 背门线束

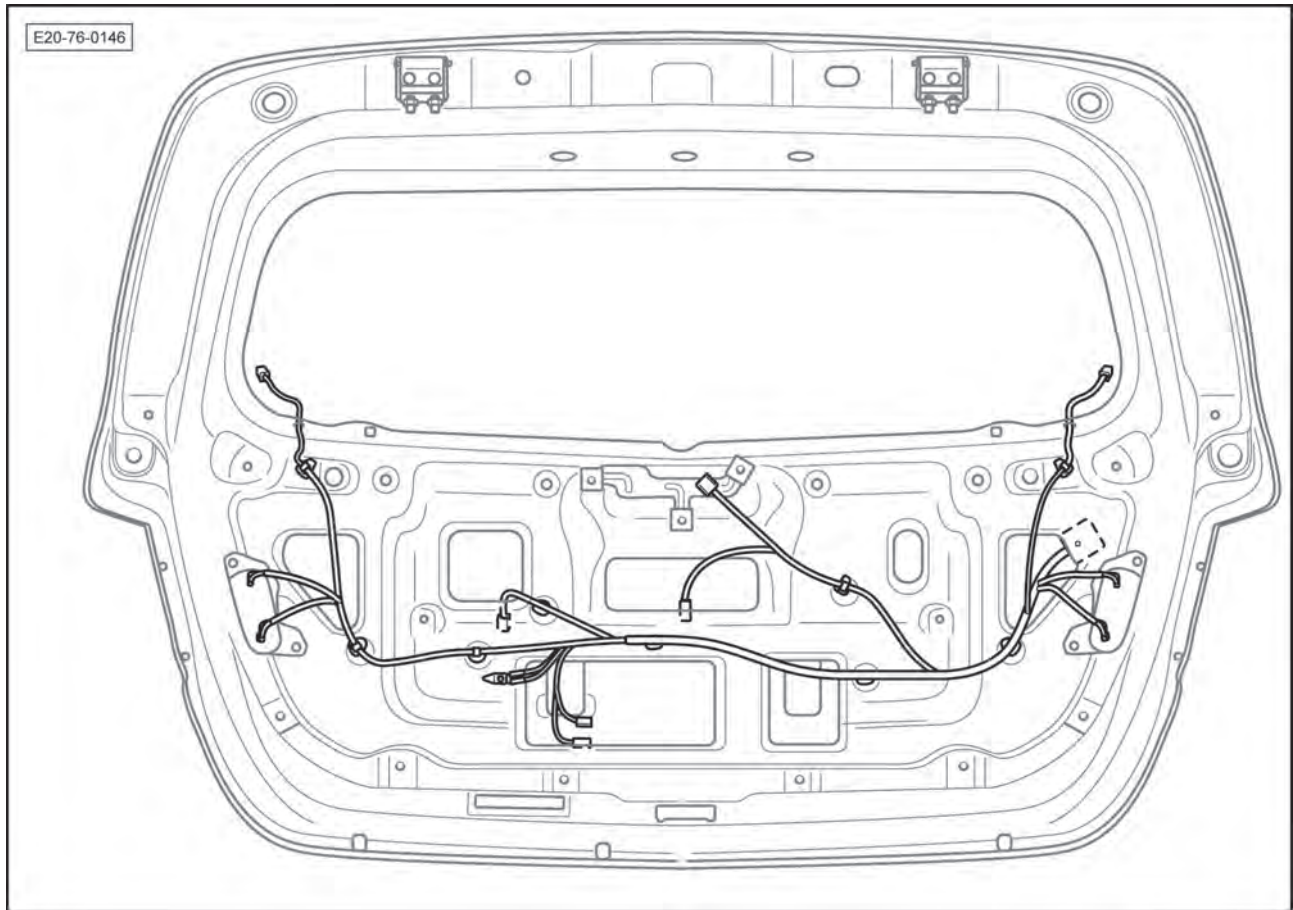


9.5 起动机线束

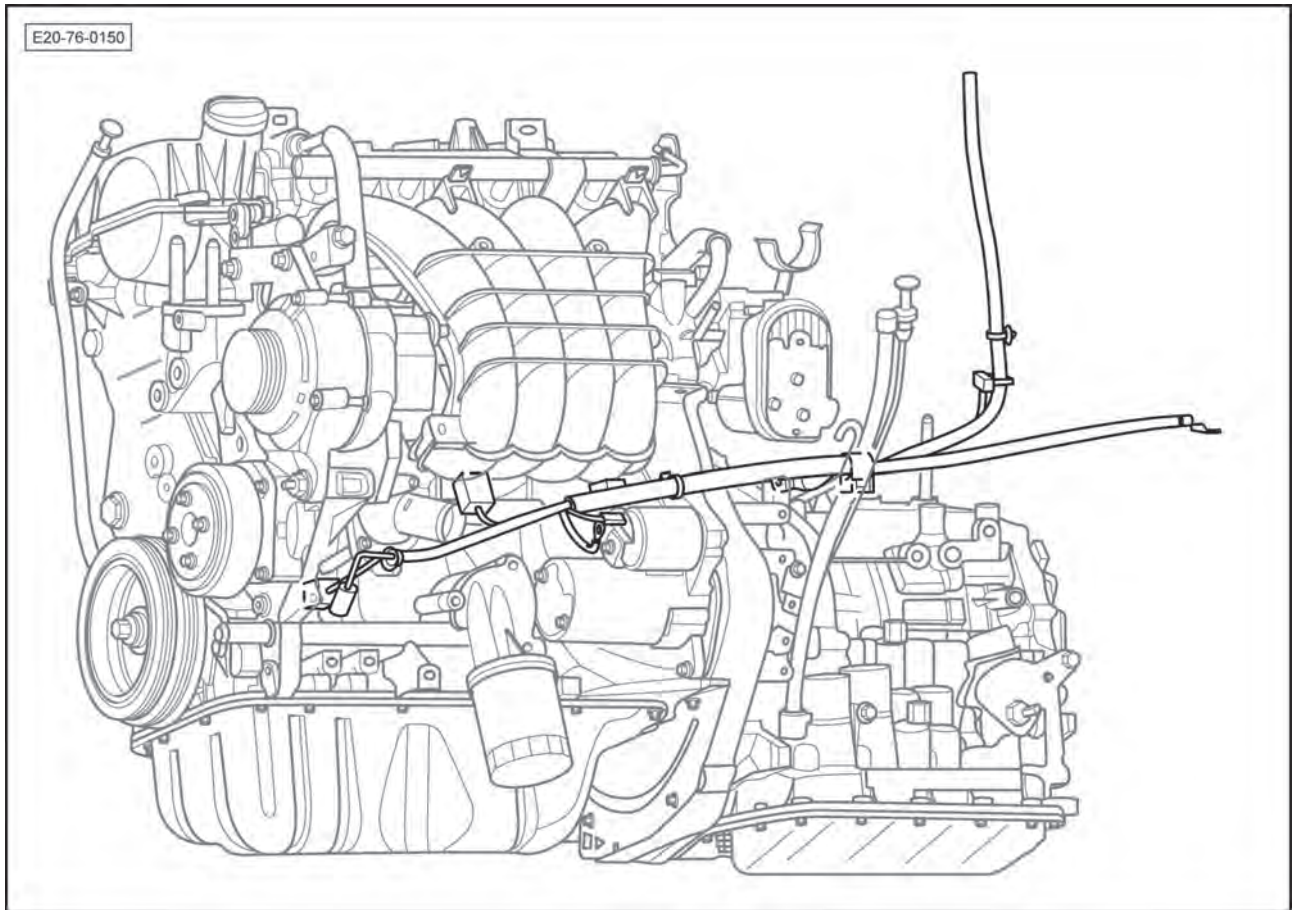


9.6 发动机搭铁线

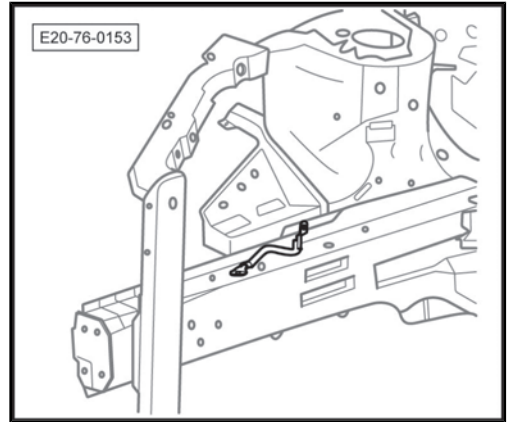


9.7 发动机线束

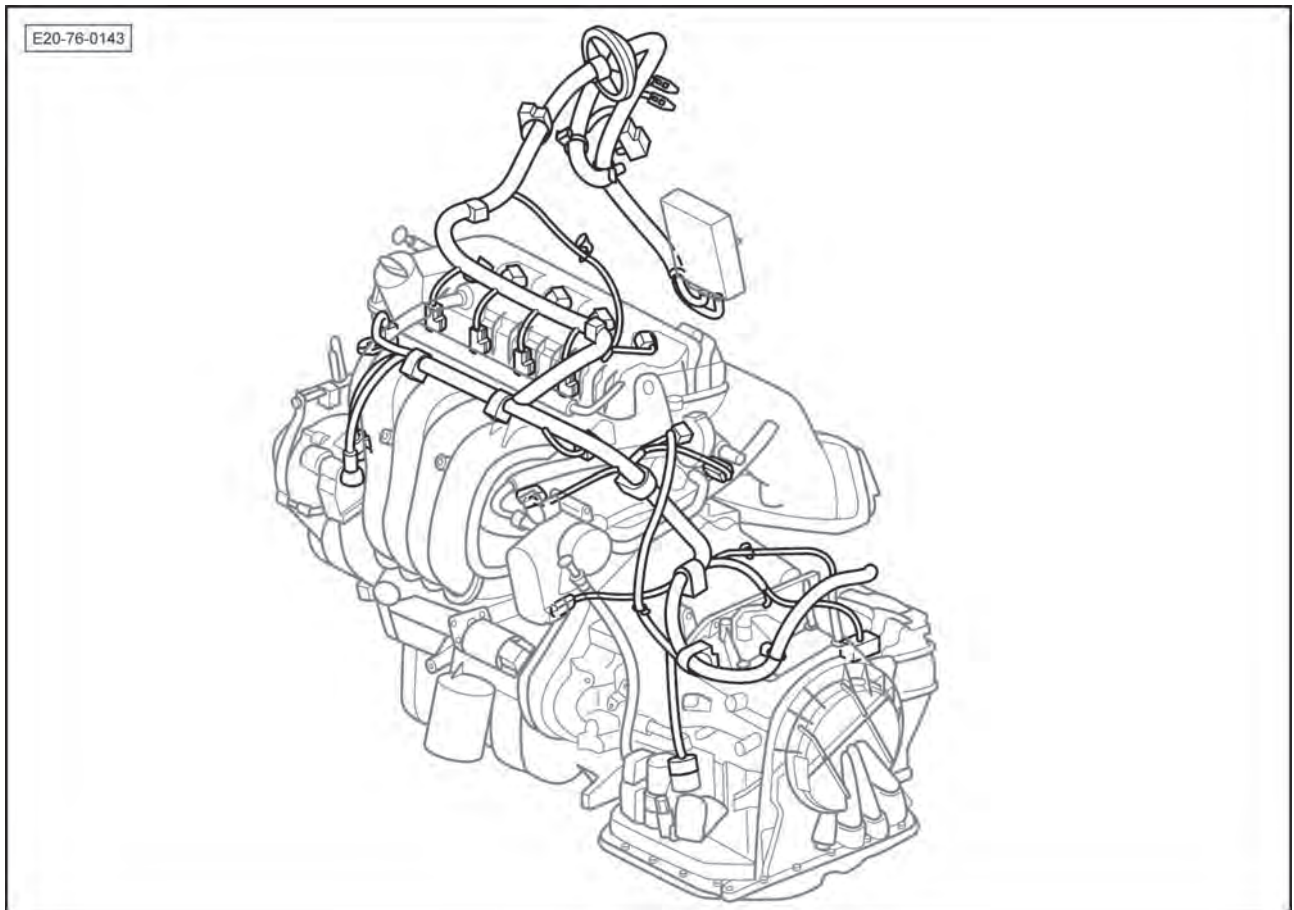


9.8 前舱线束

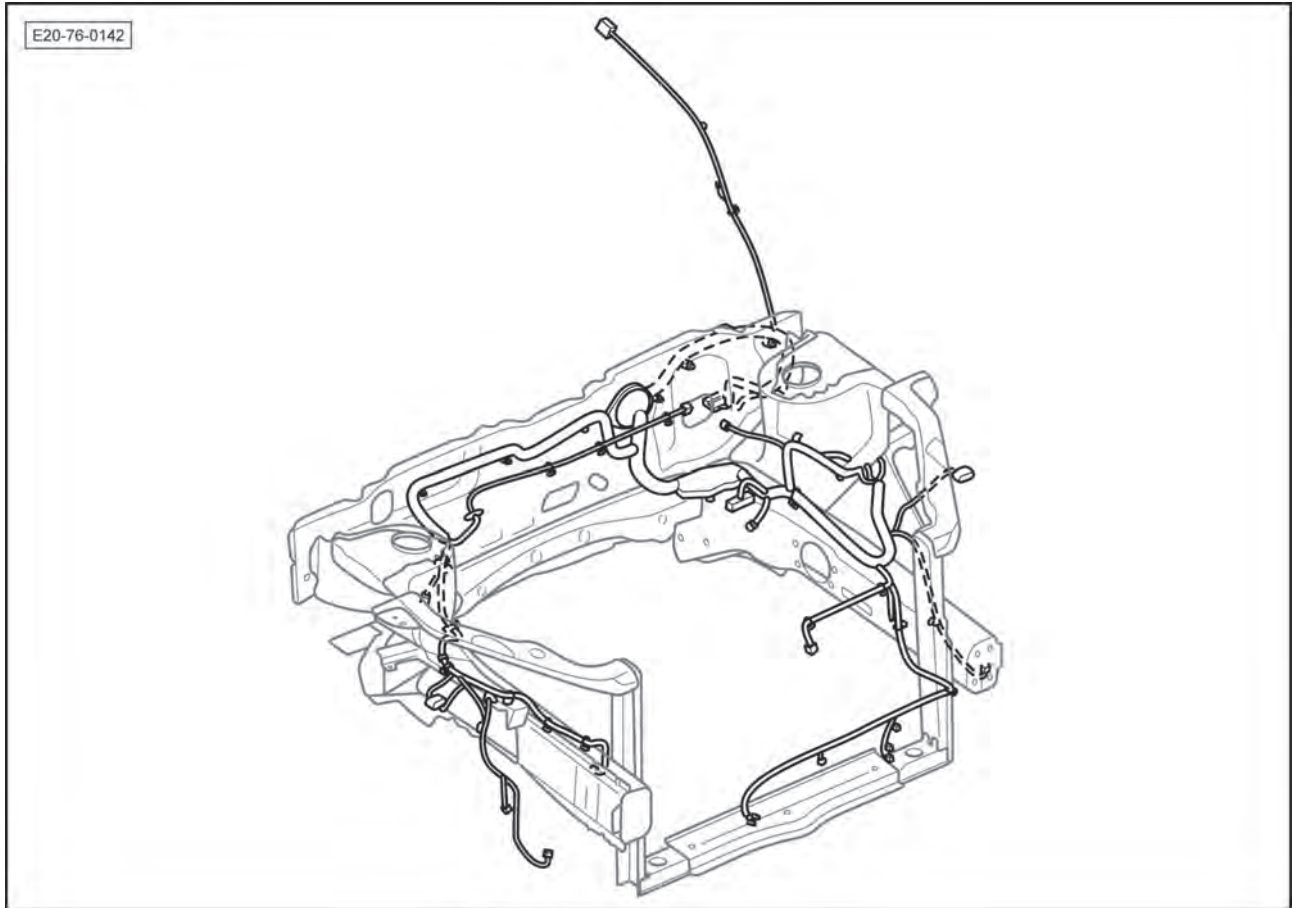


9.9 仪表板线束

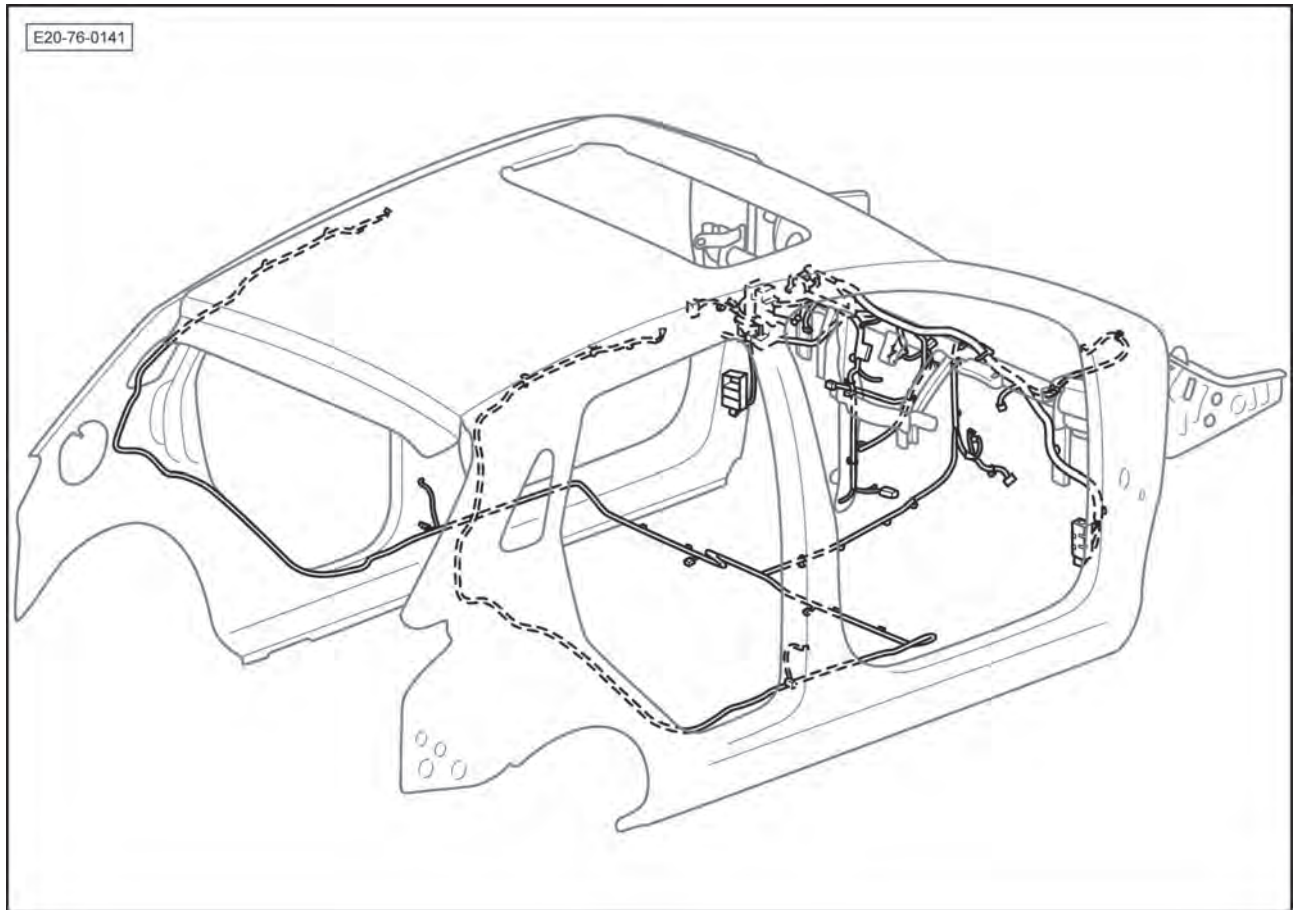


9.10 左前门线束

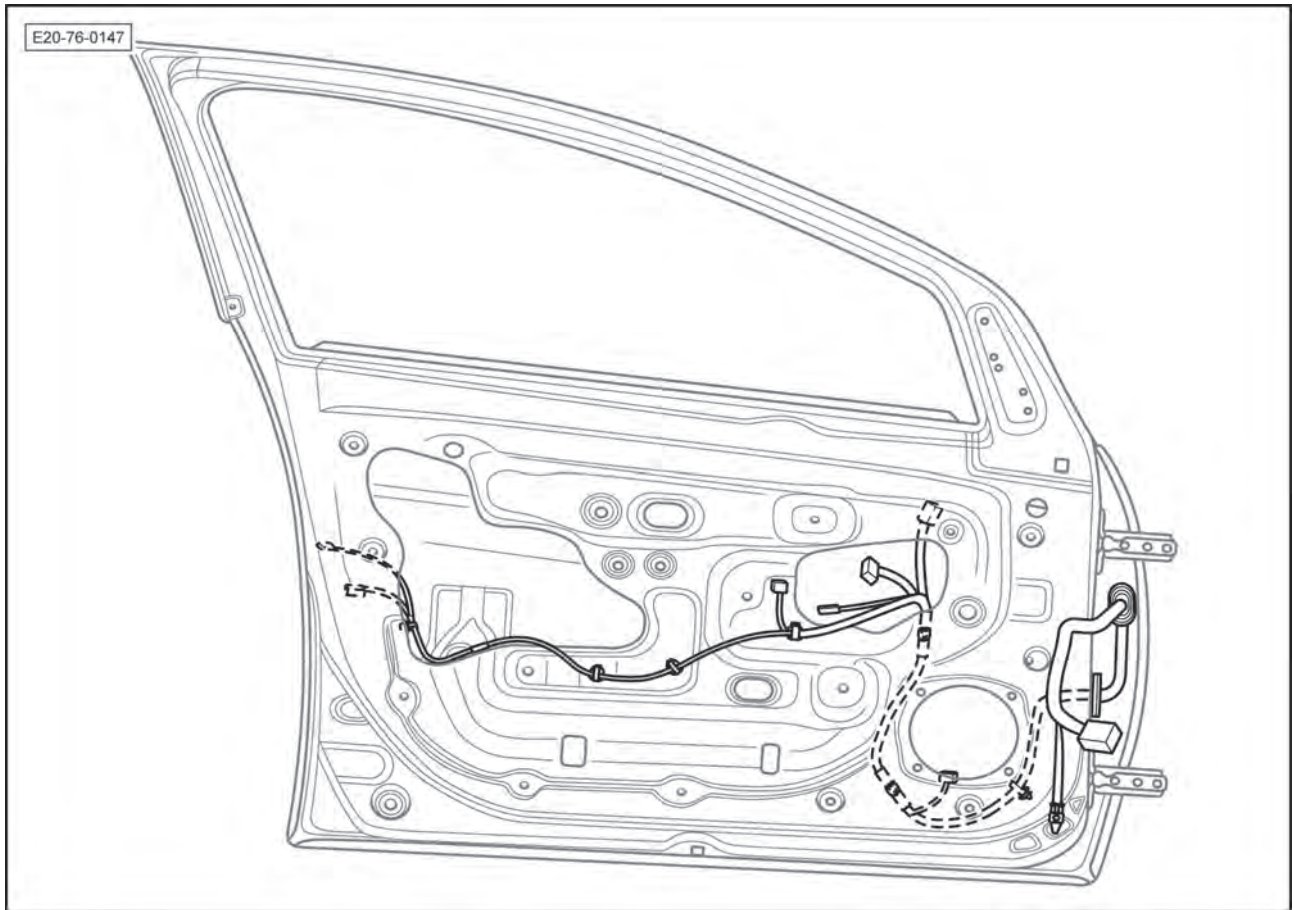

9.11 右前门线束

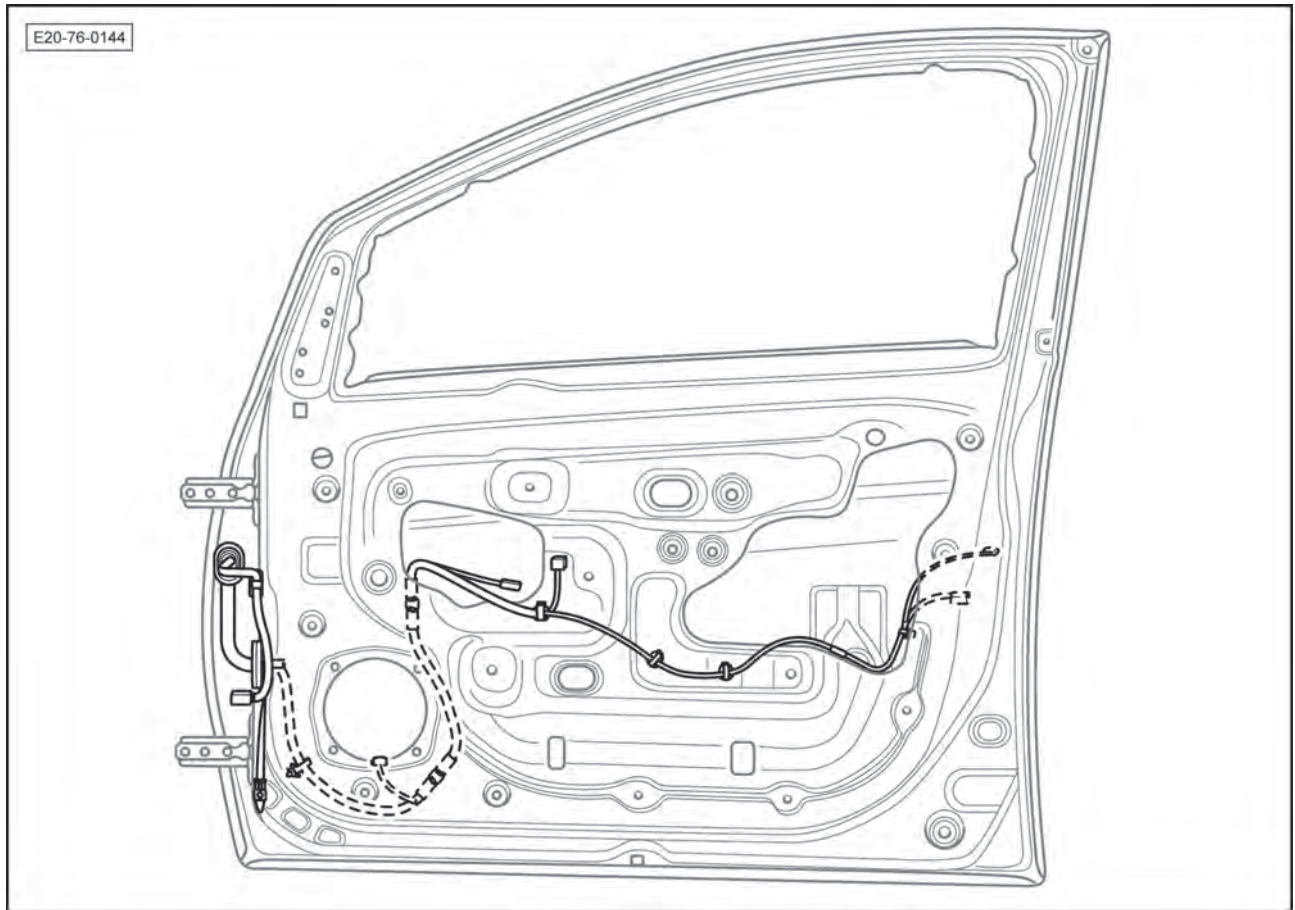

9.12 左后门线束

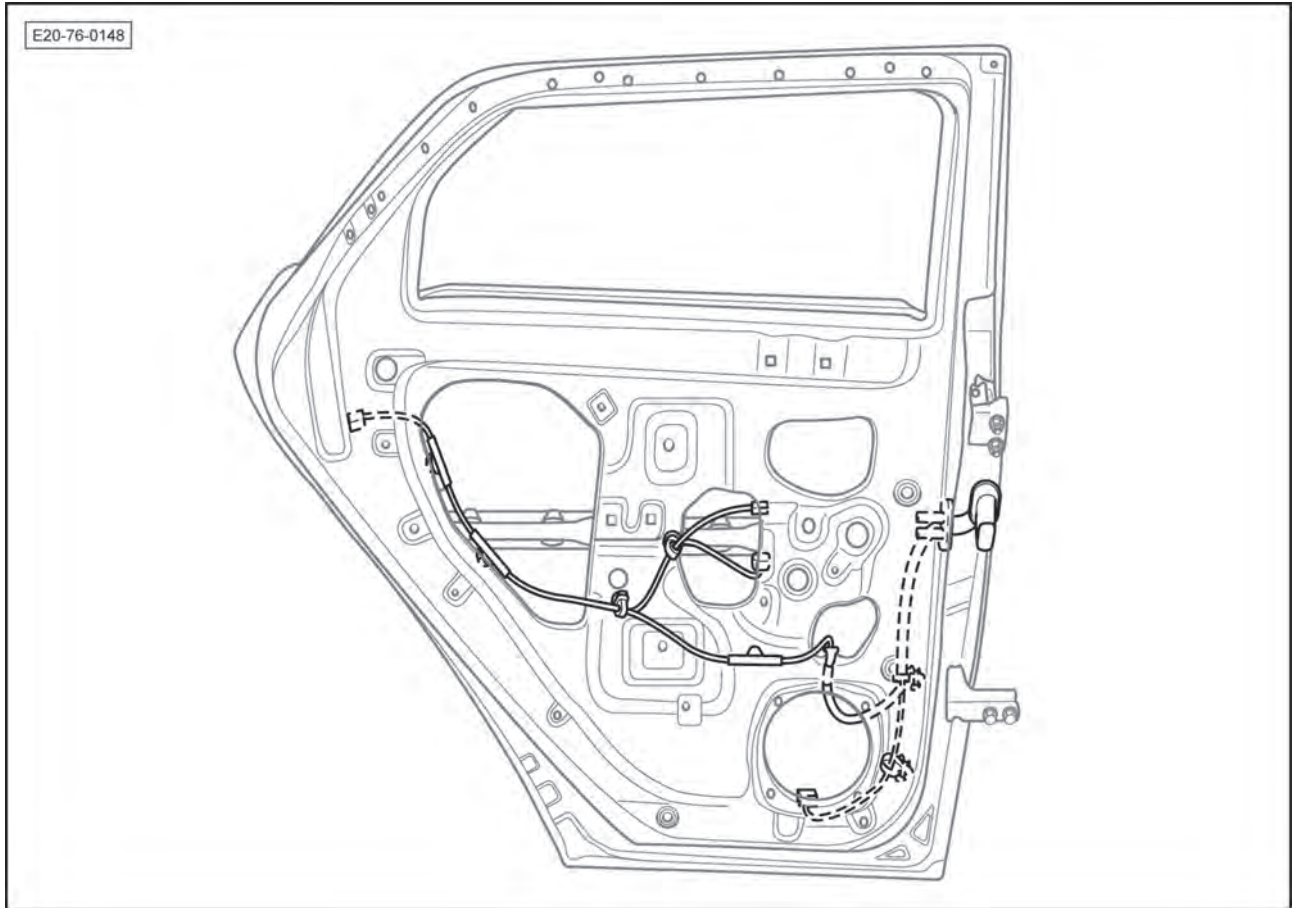

9.13 右后门线束

