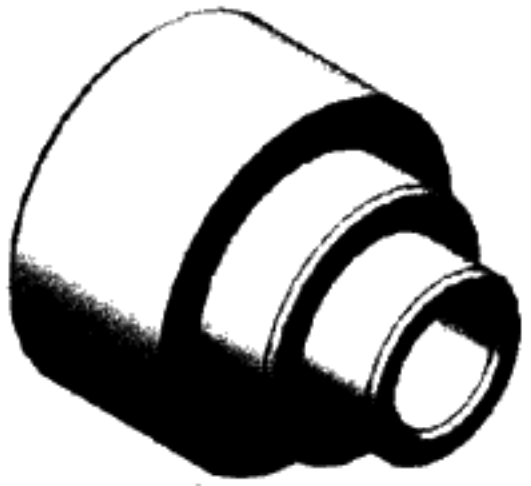
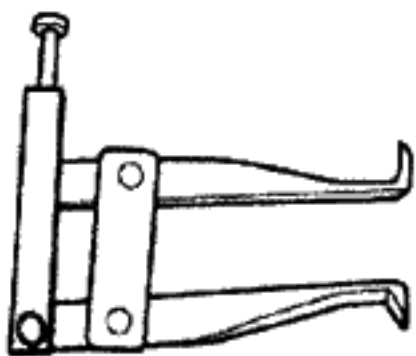
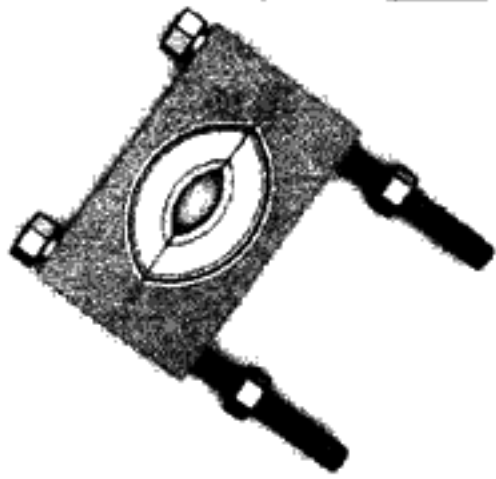
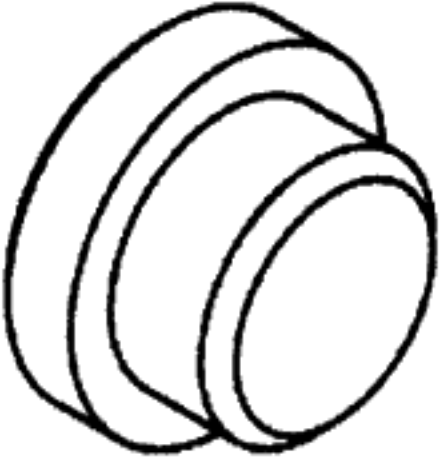


17.1.8 专用工具和设备

17.1.8.1 专用工具

	PT-0069 发动机平衡架
	PT-0329 差速器油封安装工具
	PT-0103 油封拆卸器
	PT-0073 惯性锤
	PT-0077 自锁销拆卸工具(大)

 PT-0074	PT-0074 两爪拉码
	PT-0092 卡盘
	PT-0331 中间轴右轴承外圈安 装工具
	PT-0076 输入轴油封安装工具
	PT-0334 输入轴及中间轴轴座

	PT-0330 压筒
	PT-0142 垫块
	PT-0333 固定工具
	PT-0111 压筒
	PT-0082 压筒

	PT-0332 差速器左/右轴承安装 工具
---	-----------------------------