 


主线束 (9)

CV10-9

M32-A 危险警告灯开关 (音响)
- 6母/ N/A (KET_090111_06F)

 

- | | | | |
|--------|-----------------|--------|-----------|
| 1. - | - | 4. B | 搭铁 (GM01) |
| 2. R/O | 照明灯 (+) | 5. L/O | 照明灯 (-) |
| 3. Y | BCM (危险警告灯开关信号) | 6. - | - |

M32-N 危险警告灯开关 (导航)
- 6母/ N/A (KET_090111_06F)


 
- | | | | |
|------|-----------------|--------|---------|
| 1. - | - | 4. - | - |
| 2. Y | BCM (危险警告灯开关信号) | 5. L/O | 照明灯 (-) |
| 3. B | 搭铁 (GM01) | 6. R/O | 照明灯 (+) |

M38 电控转向柱锁 (配备智能钥匙)
- 6母/白色 (KET_090111_06F_W)

 

- | | | | |
|--------|--------------------|-------|--------------------|
| 1. - | - | 4. G | 智能钥匙控制模块 (启动) |
| 2. L/B | 智能钥匙控制模块 (ESCL_搭铁) | 5. Br | 智能钥匙控制模块 (ESCL_开锁) |
| 3. R/O | 智能钥匙控制模块 (ESCL_B+) | 6. P | 智能钥匙控制模块 (ESCL_通信) |

M39-N 里程表行车电脑开关 (未配备高级仪表盘)
- 2母/白色 (KET_090111_02F-W_SPK)


- | | | | |
|------|-----------|------|--------------|
| 1. B | 搭铁 (GM01) | 2. Y | 仪表盘 (行车电脑开关) |
|------|-----------|------|--------------|

M39-S 行车电脑开关 (配备高级仪表盘)
- 6母/黑色 (AMP_MQS_06F_B)


- | | | | |
|--------|--------------|--------|-----------|
| 1. L/O | 照明灯 (-) | 4. - | - |
| 2. L | 仪表盘 (行车电脑开关) | 5. B | 搭铁 (GM01) |
| 3. Y | 仪表盘 (重置开关) | 6. R/O | 照明灯 (+) |

M40 点烟器
- 3母/白色 (KET_090111_03F_W)


- | | | | |
|--------|-----------|------|-------------------|
| 1. B | 搭铁 (GM02) | 3. G | 智能接线盒 (保险丝-电源插座1) |
| 2. R/O | 照明灯 (+) | | |