 


后保险杠线束(1)


CV61-1

R21-CL 后左驻车辅助传感器(中央)
- 6母/黑色(KUM_TWP_06F_B)




- | | | | |
|--------|----------|------|--------------------|
| 1. L/B | LIN:BCM | 4. B | 搭铁(GM03) |
| 2. - | - | 5. - | - |
| 3. B | 搭铁(GM03) | 6. R | 智能接线盒
(保险丝-模块2) |

 R21-R 后右驻车辅助传感器
- 6母/黑色(KUM_TWP_06F_B)



- | | | | |
|--------|----------|------|--------------------|
| 1. L/B | LIN:BCM | 4. B | 搭铁(GM03) |
| 2. B | 搭铁(GM03) | 5. - | - |
| 3. B | 搭铁(GM03) | 6. R | 智能接线盒
(保险丝-模块2) |

 R21-CR 后右驻车辅助传感器(中央)
- 6母/黑色(KUM_TWP_06F_B)




- | | | | |
|--------|----------|------|--------------------|
| 1. L/B | LIN:BCM | 4. B | 搭铁(GM03) |
| 2. B | 搭铁(GM03) | 5. - | - |
| 3. - | - | 6. R | 智能接线盒
(保险丝-模块2) |

R22 智能钥匙保险杠天线
- 2母/黑色(AMP_EJWP_02F_B)



- | | | | |
|-------|-----------|------|-----------|
| 1. Br | 智能接线盒(电源) | 2. W | 智能接线盒(搭铁) |
|-------|-----------|------|-----------|

 R21-L 后左驻车辅助传感器
- 6母/黑色(KUM_TWP_06F_B)



- | | | | |
|--------|---------|------|--------------------|
| 1. L/B | LIN:BCM | 4. B | 搭铁(GM03) |
| 2. - | - | 5. - | - |
| 3. - | - | 6. R | 智能接线盒
(保险丝-模块2) |