



部件索引(1)

CI-1

	名称		部件编号	电路图页码
	中文	英文		
A	安全带提示垫	Seat Belt Reminder Mat	F45	(SD569-3)
	ATM变速杆位置指示灯	ATM Lever Indicator	F46	(SD450-2)
	ATM电磁阀	ATM Solenoid	C104	(SD450-1)
	AUX & USB接口	AUX & USB Jack	M16 / M17	(SD961-3) / (SD969-3)
B	爆震传感器	Knock Sensor	C123	(SD313-8) / (SD313-16)
	变速器档位开关	Transaxle Range Switch	C101	(SD360-1) / (SD360-3) / (SD450-1)
	玻璃天线	Glass Antenna	F43	(SD969-1) / (SD969-2)
C	车顶控制台灯	Overhead Console Lamp	R01	(SD929-1)
	车身控制模块	BCM	M02-A / M02-B / M02-C	(SD952-1) / (SD952-2)
D	大灯(右)	Head Lamp RH	E06	(SD921-2) / (SD921-3) / (SD925-4) / (SD928-3)
	大灯(左)	Head Lamp LH	E05	(SD921-2) / (SD921-3) / (SD925-3) / (SD928-2)
	大灯喷水器电机	Head Lamp Washer Motor	E36	(SD923-1)
	大灯喷水器继电器	Head Lamp Washer Relay	E46	(SD923-1)
	大灯清洗液量传感器	Head Lamp Washer Level Sensor	E27	(SD940-2) / (SD940-7)
	大灯水平调整开关	Head Lamp Leveling Device Switch	M20	(SD922-1)
	大灯水平调整执行器(右)	Head Lamp Leveling Device Actuator RH	E10	(SD922-1)
	大灯水平调整执行器(左)	Head Lamp Leveling Device Actuator LH	E09	(SD922-1)
	倒车灯开关	Back-Up Lamp Switch	C137	(SD926-1)
	低频扬声器	Woofer Speaker	F04	(SD961-4) / (SD961-5) / (SD969-4) / (SD969-5)
	点火开关	Ignition Switch	M18	(SD110-7)
	点火开关照明灯&钥匙插入开关	Ignition Key ILL. & Door Warning Switch	M22	(SD952-1)
	点火锁止开关(M/T)	Ignition Lock Switch (M/T)	E24	(SD360-2) / (SD954-4)
	点火线圈#1	Ignition Coil #1	C118-1	(SD313-6) / (SD313-14)
	点火线圈#2	Ignition Coil #2	C118-2	(SD313-6) / (SD313-14)
	点火线圈#3	Ignition Coil #3	C118-3	(SD313-6) / (SD313-14)
	点火线圈#4	Ignition Coil #4	C118-4	(SD313-6) / (SD313-14)
	点烟器&电源插座	Cigarette Lighter & Power Outlet	M41	(SD945-1) / (SD945-2)
	电动门窗主开关	Power Window Main Switch	D02	(SD824-1) / (SD824-4) / (SD824-3)
	电动室外后视镜开关	Power Outside Mirror Switch	D05	(SD876-1)