



部件索引(7)

CI-7

	名称		部件编号	电路图页码
	中文	英文		
S	室内灯	Room Lamp	R02	(SD929-1)
	室外温度传感器	Ambient Temperature Sensor	E51	(SD971-3) / (SD971-6)
	手驻车制动开关	Hand Parking Brake Switch	F38	(SD587-1) / (SD588-1)
	梳妆灯(右)	Vanity Lamp RH	R08	(SD929-1)
	梳妆灯(左)	Vanity Lamp LH	R07	(SD929-1)
	梳妆灯开关(右)	Vanity Lamp Switch RH	R10	(SD929-1)
	梳妆灯开关(左)	Vanity Lamp Switch LH	R09	(SD929-1)
	数字时钟(配备音响)	Digital Clock (With Audio)	M23	(SD813-1) / (SD925-2) / (SD945-2)
T	通风模式执行器	Mode Actuator	M31	(SD971-2) / (SD971-6)
	凸轮轴位置传感器#1(进气)	Camshaft Position Sensor #1 (Intake)	C113-1	(SD313-4) / (SD313-12)
	凸轮轴位置传感器#2(排气)	Camshaft Position Sensor #2 (Exhaust)	C113-2	(SD313-4) / (SD313-12)
W	外部蜂鸣器	External Buzzer	E29	(SD954-4)
X	行车电脑开关(右)(下-右)	Trip Switch RH (Down - Right)	M80-DR	(SD940-4) / (SD940-9)
	行李箱灯	Trunk Room Lamp	F40	(SD812-1) / (SD929-1)
	行李箱盖继电器	Trunk Lid Relay	M39	(SD812-1)
	行李箱盖锁	Trunk Lid Latch	F42	(SD812-1) / (SD929-1)
	蓄电池传感器	Battery Sensor	C144	(SD313-3) / (SD313-11) / (SD373-1) / (SD373-2)
	巡航远程控制开关(上-右)	Cruise Remote Control Switch (Up - Right)	M80-UR	(SD940-4) / (SD940-9)
Y	氧传感器(上)	Oxygen Sensor (Up)	C116-1	(SD313-5) / (SD313-13)
	氧传感器(下)	Oxygen Sensor (Down)	C116-2	(SD313-5) / (SD313-13)
	仪表板开关	Crash Pad Switch	M24	(SD688-2) / (SD940-5) / (SD940-10) / (SD941-1)
	仪表盘	Instrument Cluster	M08	(SD940-1) / (SD940-2) / (SD940-3) / (SD940-4) / (SD940-5) / (SD940-6) / (SD940-7) / (SD940-8) / (SD940-9) / (SD940-10)
	移动远程信息处理系统模块	MTS Module	M09 / M09-G	(SD955-1) / (SD955-2)
	音频/视频&导航控制器	A/V & Navigation Head Unit	M07-A / M07-B / M07-C	(SD969-1) / (SD969-2) / (SD969-3)
	音响	Audio	M06-A / M06-B / M06-C	(SD961-1) / (SD961-2) / (SD961-3)
	音响远程控制开关(左)(上-左)	Audio Remote Control Switch Lh (Up - Left)	M80-UL	(SD961-1) / (SD969-1)
	雨传感器	Rain Sensor	R04	(SD981-1) / (SD981-2)
	雨继电器继电器	Rain Relay	E37	(SD981-1)