



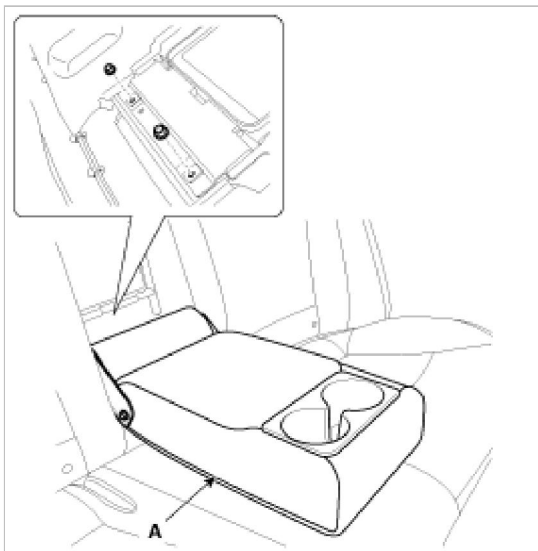

2. Installation is the reverse of removal.

Body (Interior and Exterior) > Seat Belt > Components and Components Location

Components

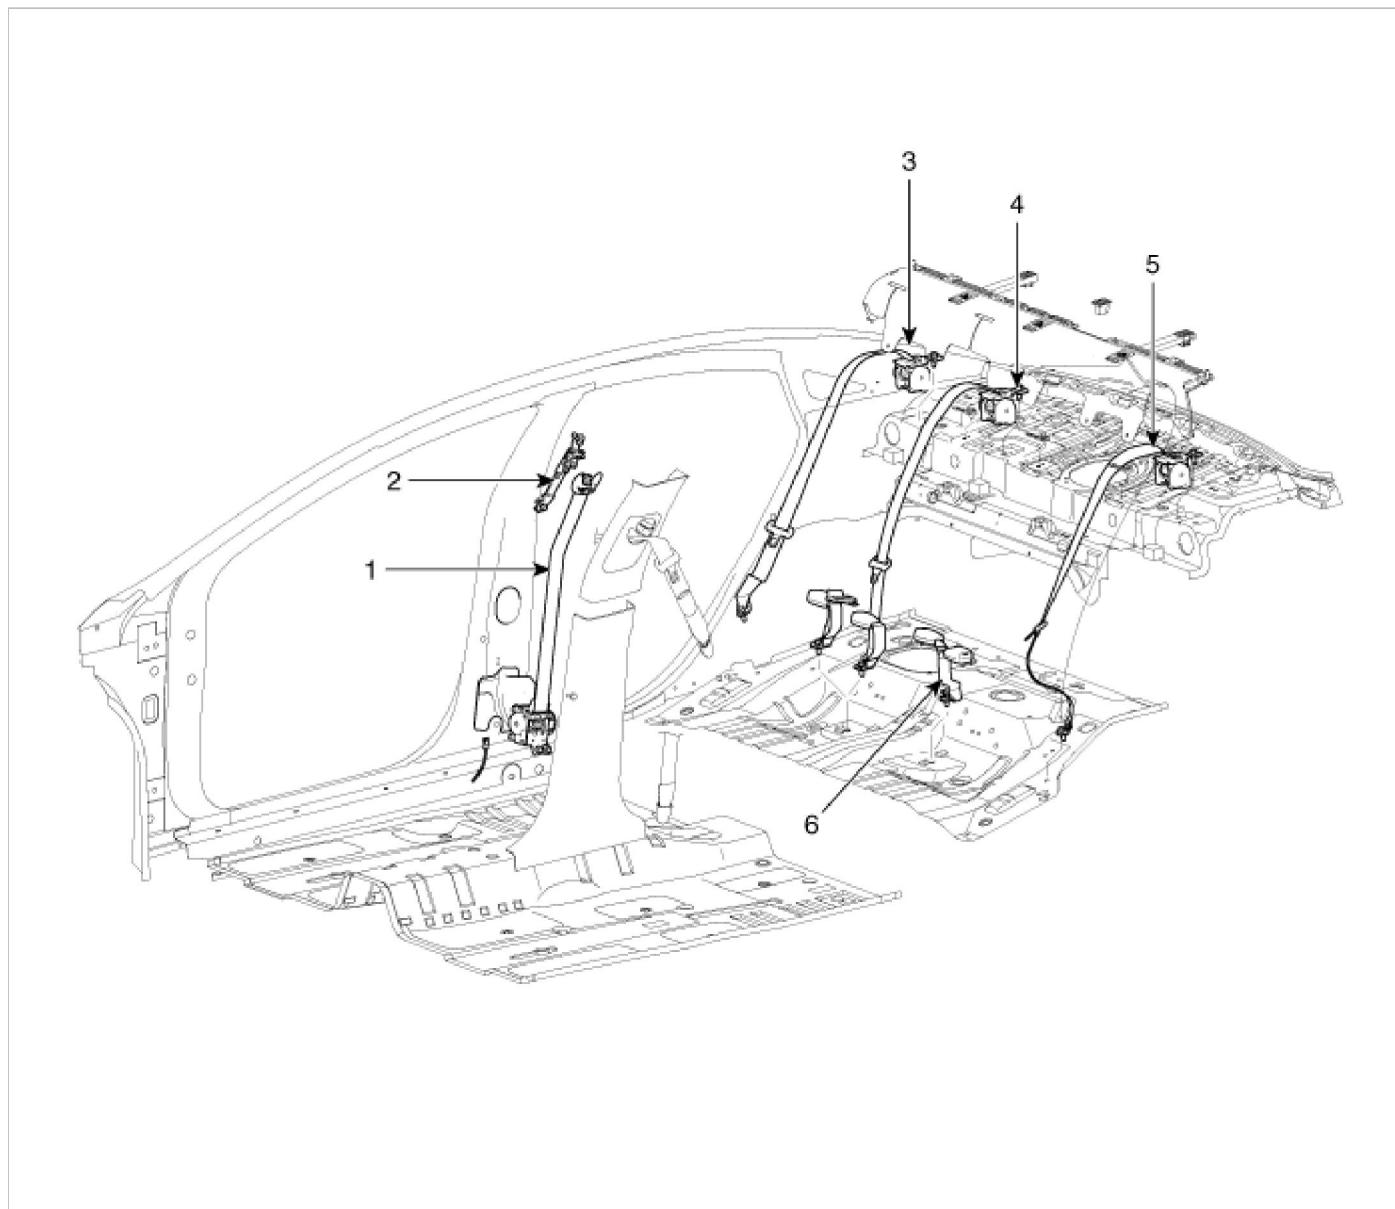

1. Front seat belt

4. Rear center seat belt

- 2. Height adjuster
- 3. Rear seat belt (RH)

- 5. Rear seat belt (LH)
- 6. Rear center seat belt buckle

Body (Interior and Exterior) > Seat Belt > Front Seat Belt > Repair procedures


Replacement

Front Seat Belt Replacement


CAUTION

- When installing the belt, make sure not to damaged the pretensioner.


1. Remove the following items first :
 - A. Front seat assembly
(Refer to the BD group - "Front Seat")
 - B. Front and rear door scuff trim
(Refer to the BD group - "Interior Trim")
2. Using a screwdriver or remover, remove the seat belt lower anchor (A).

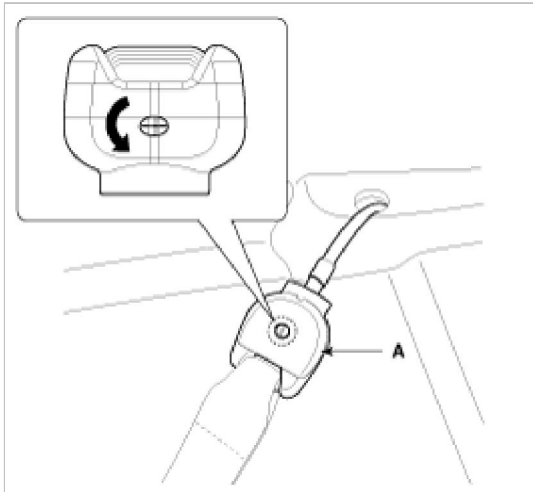

3. Remove the center pillar lower trim (A).

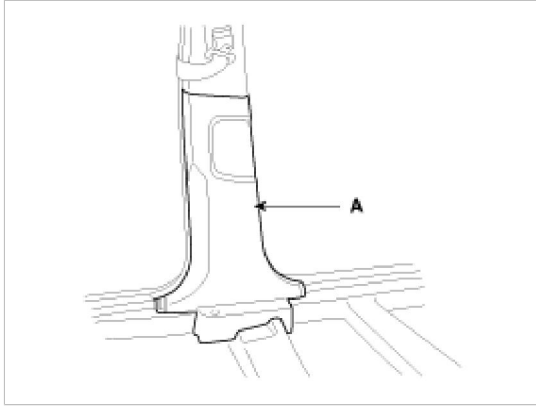


4. After loosening the mounting screws, then remove the center pillar upper trim (A) .

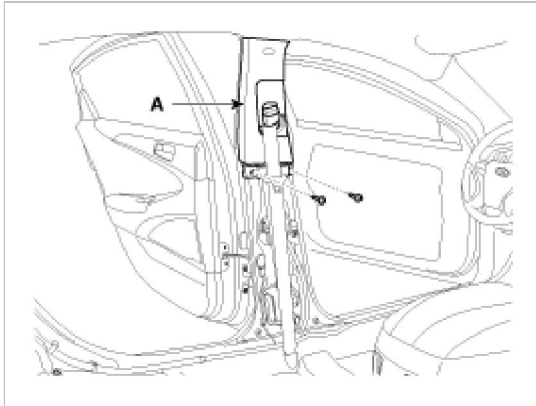

5. After loosening the mounting bolt, then remove the upper anchor (A).

Tightening torque :


39.2 ~ 53.9 N.m (4.0 ~ 5.5 kgf.m, 28.9 ~ 39.8 lb-ft)

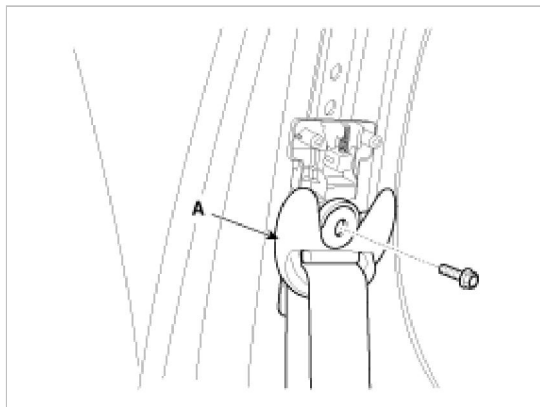

6. After disconnecting the pretensioner connector lock pin, remove the SIS connector (B), loosen the mounting bolt, then remove the pretensioner (A).

Tightening torque :

39.2 ~ 53.9 N.m (4.0 ~ 5.5 kgf.m, 28.9 ~ 39.8 lb-ft)

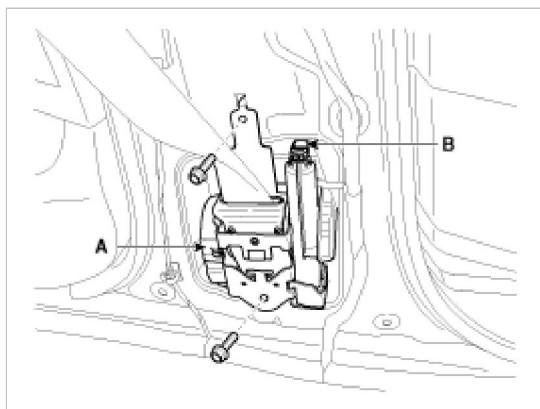

7. Installation is the reverse of removal.

Height Adjust Replacement

1. Remove the following items first :
 - A. Front seat assembly
(Refer to the BD group - "Front Seat")
 - B. Front and rear door scuff trim

(Refer to the BD group - "Interior Trim")

C. Front seat belt anchor

D. Center pillar lower trim

(Refer to the BD group - "Interior Trim")

E. Center pillar upper trim


(Refer to the BD group - "Interior Trim")

F. Front seat belt upper anchor

2. After loosening the bolts, then remove the height adjuster (A).

Tightening torque :

39.2 ~ 53.9 N.m (4.0 ~ 5.5kgf.m, 28.9 ~ 39.8 lb-ft)

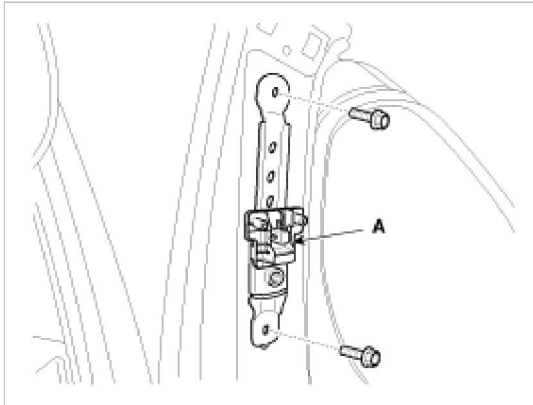

3. Installation is the reverse of removal.

NOTE

- Replace any damaged clips.
- Make sure the height adjust properly.

Front Seat Belt Buckle Replacement


1. Remove the front seat.

(Refer to the BD group - "Front Seat")

2. After loosening the mounting bolt, then remove the front seat belt buckle (A).

Tightening torque :

39.2 ~ 53.9 N.m (4.0 ~ 5.5 kgf.m, 28.9 ~ 39.8 lb-ft)

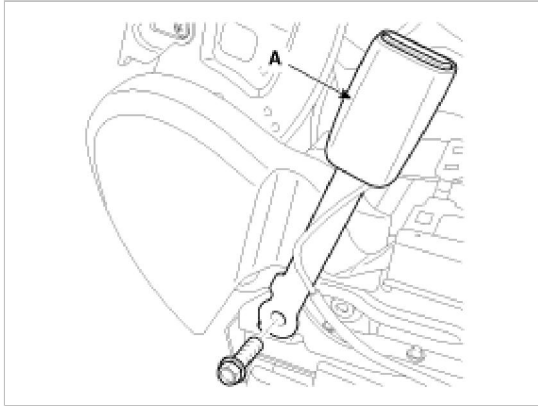

3. Installation is the reverse of removal.

Body (Interior and Exterior) > Seat Belt > Rear Seat Belt > Repair procedures

Replacement

Rear Seat Belt Replacement

CAUTION


- When installing the belt, make sure not to damaged the retractor.

1. Remove the following items first.
 - A. Rear seat assembly
(Refer to the BD group - "Rear Seat")
 - B. Rear Piller trim
(Refer to the BD group - "Interior Trim")
2. After loosening the mounting bolt, then remove the rear seat belt lower anchor (A).

[LH,RH]

Tightening torque :


39.2 ~ 53.9 N.m (4.0 ~ 5.5 kgf.m, 28.8 ~ 39.8 lb-ft)

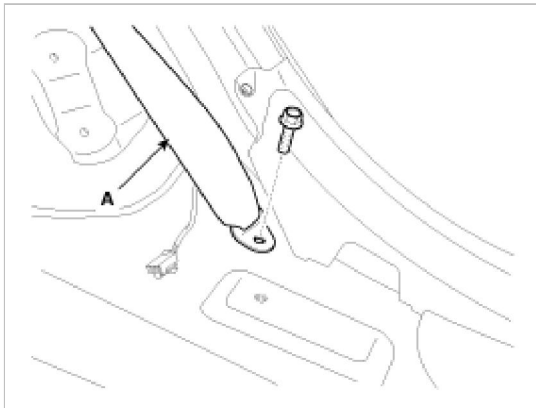


[Center]

Tightening torque :

39.2 ~ 53.9 N.m (4.0 ~ 5.5 kgf.m, 28.8 ~ 39.8 lb-ft)

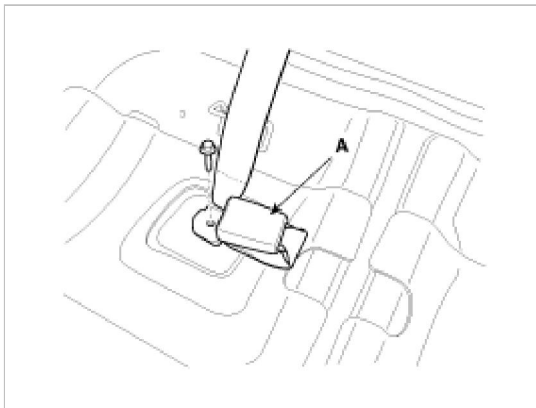

3. After loosening the mounting screws, then remove the package tray trim (A).

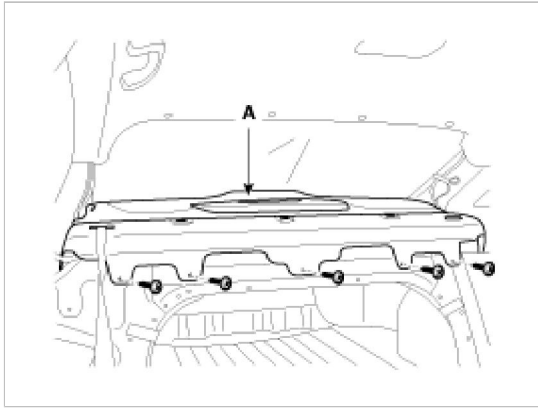


4. After loosening the rear seat belt retractor (B) mounting bolt, then remove the rear seat belt (A).

[LH,RH]

Tightening torque :


39.2 ~ 53.9 N.m (4.0 ~ 5.5 kgf.m, 28.8 ~ 39.8 lb-ft)

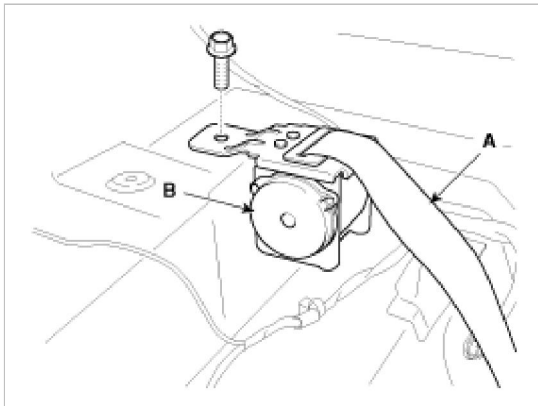

[Center]

Tightening torque :

39.2 ~ 53.9 N.m (4.0 ~ 5.5 kgf.m, 28.8 ~ 39.8 lb-ft)

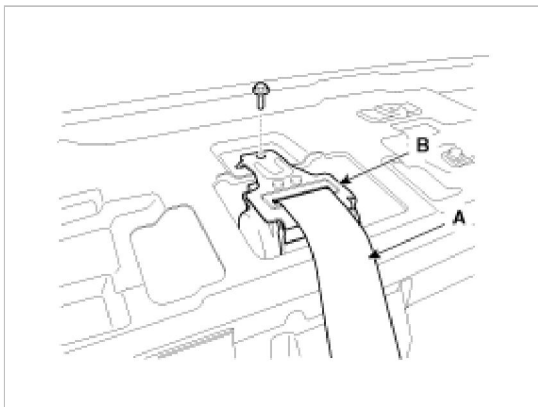

5. Installation is the reverse of removal.

NOTE


- Replace any damaged clips.

Rear Seat Belt Buckle Replacement

1. Remove the rear seat cushion assembly.
(Refer to Rear Seat - "Rear Seat Assembly")
2. Loosen the mounting bolt, and then remove the rear seat belt buckle (A).


Tightening torque :

39.2 ~ 53.9 N.m (4.0 ~ 5.5 kgf.m, 28.8 ~ 39.8 lb-ft)

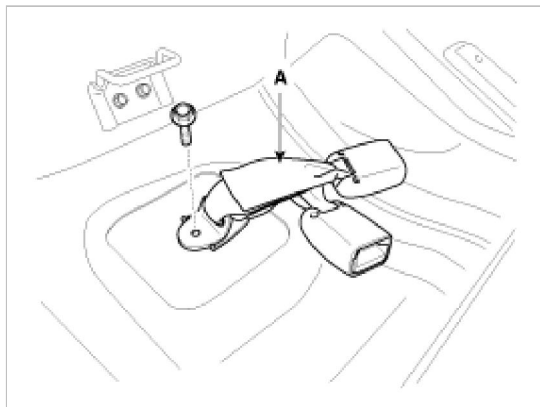

Tightening torque :

39.2 ~ 53.9 N.m (4.0 ~ 5.5 kgf.m, 28.8 ~ 39.8 lb-ft)

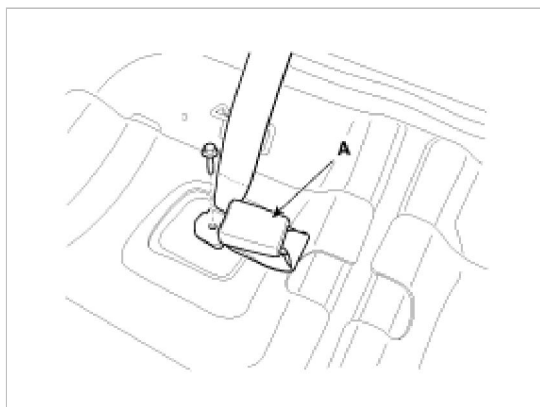

3. Installation is the reverse of removal.