



部件索引(8)

CI-8

	英文名称	中文名称	部件编号	电路图页码
S	Start Motor	起动机	E81 /E84 /E87	(SD360-1) /(SD360-2) /(SD360-3) /(SD360-4) /(SD360-5) /(SD360-6)
	Start Relay	起动机继电器	E52	(SD360-1) /(SD360-2) /(SD360-3) /(SD360-4) /(SD360-5) /(SD360-6)
	Start Solenoid	起动机电磁开关	E82 /E85 /E88	(SD360-1) /(SD360-2) /(SD360-3) /(SD360-4) /(SD360-5) /(SD360-6)
	Start Stop Button Switch (With Smart Key)	起动停止按钮开关(配备智能钥匙)	M40	(SD954-3)
	Stop Lamp Switch	制动灯开关	E25	(SD927-1)
	Stop Signal Electronic Module	制动信号电控模块	M12	(SD927-1)
	Sunroof Motor	天窗电机	R13	(SD816-2)
T	Sunroof Switch	天窗开关	R14	(SD816-2)
	TCM (DCT)	TCM(DCT)	C300-TA /C300-TB	(SD450-5) /(SD450-6) /(SD450-7)
	Tire Pressure Monitoring Module	轮胎压力监测模块	M23	(SD956-1)
	Transaxle Range Switch	变速器档位开关	C101 /C201 /C301	(SD450-1) /(SD450-3) /(SD450-5)
	Trip/Cruise Remote Control Switch (RIGHT)	行车电脑/巡航远程控制开关(右)	M71-R	(SD940-3) /(SD940-7)
	Trunk Lid Handle Switch (W/O Rear View Camera)	行李箱盖手柄开关(未配备后摄像头)	F34	(SD812-1)
	Trunk Lid Motor	行李箱盖电机	F33	(SD812-1) /(SD929-3)
V	Trunk Room Lamp	行李箱灯	F32	(SD812-1) /(SD929-3)
	Vacuum Pump	真空泵	C316	(SD588-2) /(SD588-6)
	Vacuum Switch	真空开关	E41	(SD588-2) /(SD588-6)
W	Variable Intake Solenoid Valve	可变进气电磁阀	C134 /C234	(SD313-4) /(SD313-11)
	Washer Level Sensor	喷水器液量传感器	E34	(SD940-2) /(SD940-6)
	Washer Motor	喷水器电机	E32	(SD981-1)
	Wiper Motor	雨刮器电机	E33	(SD981-2)
	Woofer Speaker (JBL)	低频扬声器(JBL)	F05	(SD969-4)
	Woofer Speaker (MOBIS)	低频扬声器(MOBIS)	F06	(SD969-5)