
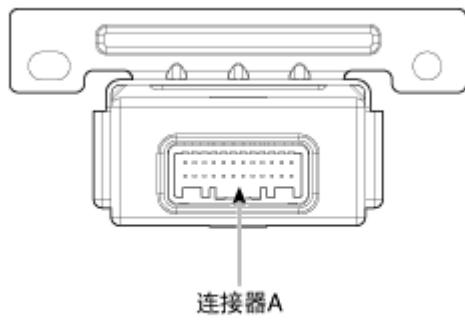


## 部件

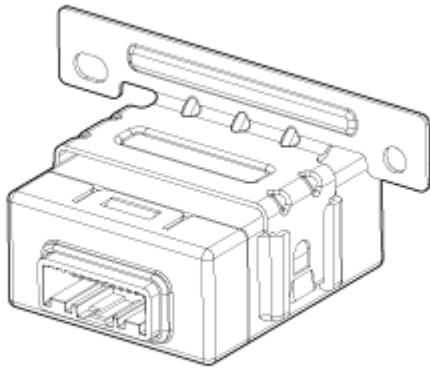

连接器A	编号	说明	编号	说明
	1	前传感器(B+)	13	点火开关1
	2	-	14	-
	3	SPAS开关	15	-
	4	PAS开关	16	SPAS指示灯
	5	后传感器(B+)	17	PAS指示灯
	6	-	18	-
	7	前/后传感器信号(LIN)	19	底盘CAN(高电位)
	8	侧面碰撞传感器信号(LIN)	20	底盘CAN(低电位)
	9	-	21	-
	10	-	22	-
	11	-	23	前传感器(搭铁)
	12	后传感器(搭铁)	24	搭铁