

部件索引(4)

CI-4

	英文名称	中文名称	部件编号	电路图页码
F	Front Vanity Lamp Switch LH/RH	前左/右化妆灯开关	R04-L / R04-R	(SD929-1)
	Front Wheel Speed Sensor LH/RH	前左/右轮速传感器	E21 / E22	(SD588-2) / (SD588-6)
	Fuel Control Module	燃油控制模块	F25	(SD313-6) / (SD313-21) / (SD940-1) / (SD940-5)
	Fuel Filler Actuator	燃油加油口门执行器	F24	(SD812-1)
	Fuel Filler Door & Trunk Lid Switch	燃油加油口门&行李箱盖开关	M68	(SD588-2) / (SD588-6) / (SD812-1)
	Fuel Pressure Control Valve	燃油压力控制阀	C344	(SD313-23)
	Fuel Pressure Regulator Valve	燃油压力调节阀	C138	(SD313-7)
	Fuel Pressure Sensor	燃油压力传感器	F10	(SD313-6) / (SD313-21)
G	Fuel Sender & Fuel Pump Motor	燃油传感器&燃油泵电机	F26	(SD313-11) / (SD940-1) / (SD940-5)
	Glass Antenna	玻璃天线	F35	(SD961-1) / (SD969-1)
	Glass Antenna (Radio)	玻璃天线(收音机)	ANT-R	(SD961-1) / (SD969-1)
	Glove Box Lamp	手套箱灯	M27	(SD929-2)
H	Glove Box Lamp Switch	手套箱灯开关	M28	(SD929-2)
	H/Lamp (Hi) Relay	大灯(远光)继电器	E50	(SD921-2) / (SD951-2)
	H/Lamp Washer Relay	大灯喷水器继电器	E49	(SD923-1)
	Head Lamp Leveling Device Actuator LH	左大灯水平调整执行器	E09	(SD922-1) / (SD922-2)
	Head Lamp Leveling Device Actuator RH	右大灯水平调整执行器	E10	(SD922-1) / (SD922-2)
	Head Lamp LH/RH (W/O HID)	左/右大灯(未配备HID)	E05 / E06	(SD921-3) / (SD925-2) / (SD925-3) / (SD928-2) / (SD951-3)
	Head Lamp LH/RH (With HID)	左/右大灯(配备HID)	E07 / E08	(SD921-2) / (SD921-4) / (SD925-2) / (SD925-3) / (SD928-2) / (SD951-2)
	Head Lamp Washer Pump	大灯喷水器	E35	(SD923-1)
	High-Mounted Stop Lamp	高架制动灯	F29	(SD927-2)
	Hood Switch	发动机罩开关	E84	(SD814-1)
	Horn (High/Low)	喇叭(高音/低音)	E62 / E63	(SD968-1)
	Horn Switch	喇叭开关	M72	(SD968-1)
I	ICM Relay Box	ICM继电器盒	M13-A / M13-B	(SD814-1) / (SD878-1) / (SD924-2)
	Ignition Coil #1	点火线圈#1	C118-1 / C218-1 / C318-1	(SD313-5) / (SD313-13) / (SD313-20)
	Ignition Coil #2	点火线圈#2	C118-2 / C218-2 / C318-2	(SD313-5) / (SD313-13) / (SD313-20)
	Ignition Coil #3	点火线圈#3	C118-3 / C218-3 / C318-3	(SD313-5) / (SD313-13) / (SD313-20)
	Ignition Coil #4	点火线圈#4	C118-4 / C218-4 / C318-4	(SD313-5) / (SD313-13) / (SD313-20)
	Ignition Key ILL. & Door Warning Switch	点火开关照明灯&钥匙插入开关	M20	(SD952-1) / (SD954-1)
	Ignition Switch (W/O Smart Key)	点火开关(未配备智能钥匙)	M39	(SD110-12)
	Immobilizer Module	钥匙防盗模块	M18	(SD954-1)
	Injector #1	喷油嘴#1	C124-1 / C224-1 / C324-1	(SD313-7) / (SD313-11) / (SD313-22)
	Injector #2	喷油嘴#2	C124-2 / C224-2 / C324-2	(SD313-7) / (SD313-11) / (SD313-22)
	Injector #3	喷油嘴#3	C124-3 / C224-3 / C324-3	(SD313-7) / (SD313-11) / (SD313-22)
	Injector #4	喷油嘴#4	C124-4 / C224-4 / C324-4	(SD313-7) / (SD313-11) / (SD313-22)
	Instrument Cluster	仪表盘	M05	(SD940-1) / (SD940-2) / (SD940-3) / (SD940-4) / (SD940-5) / (SD940-6) / (SD940-7) / (SD940-8)
	Intake Actuator	内外气选择执行器	M41	(SD971-3)