
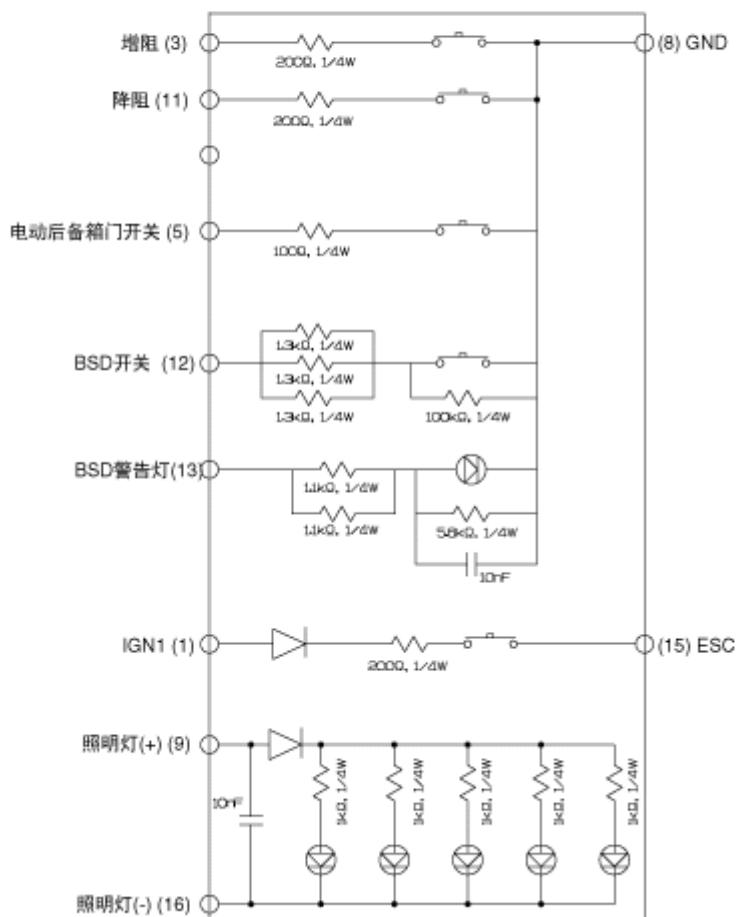
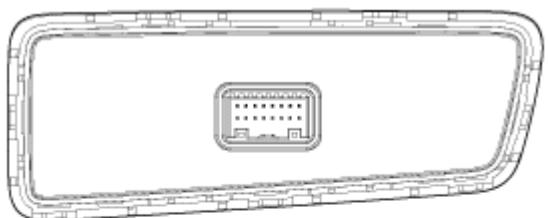


部件

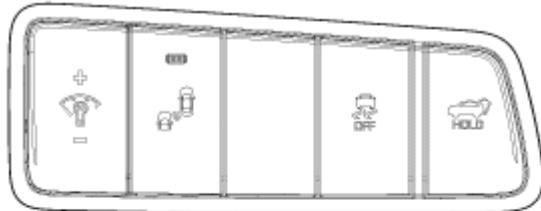

连接器

端子	说明
1	IGN1
2	-
3	增阻
4	-
5	电动后备箱门开关
6	-
7	-
8	GND
9	照明灯(+)
10	-
11	降阻
12	BSD开关
13	BSD警告灯
14	-
15	ESC
16	照明灯(-)