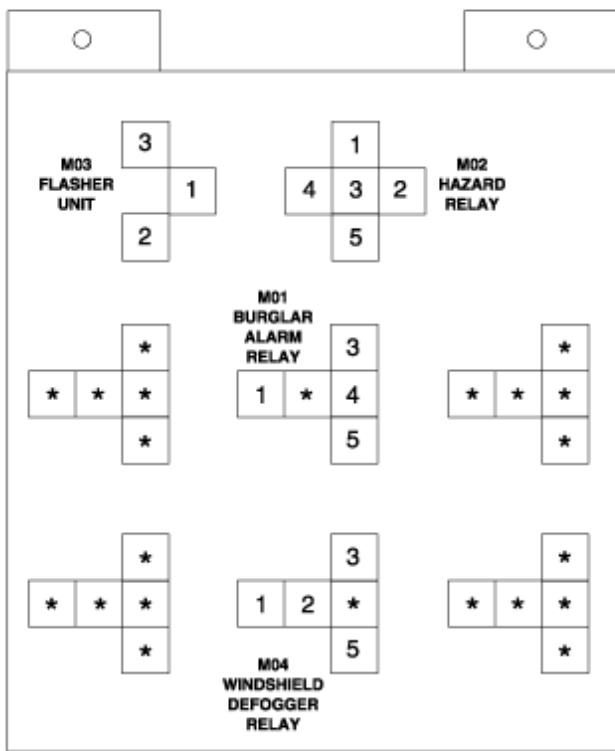
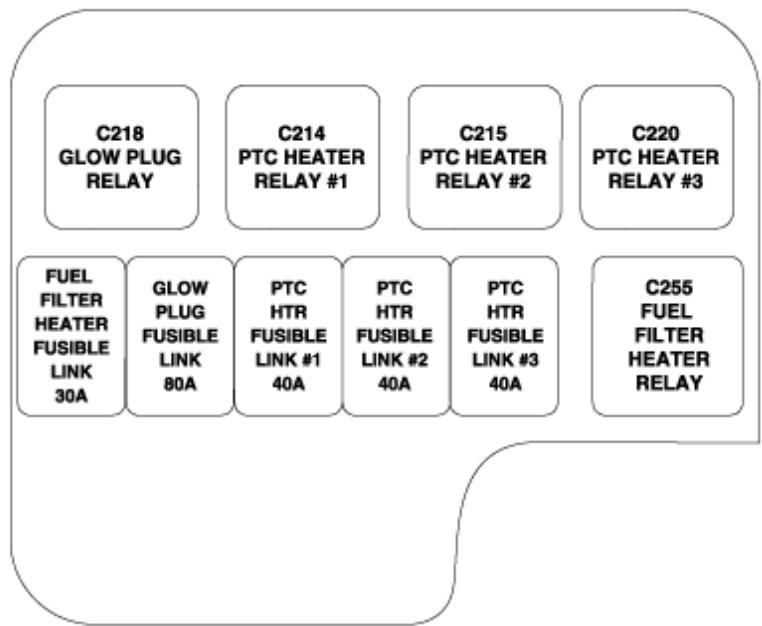


I/P RELAY BOX**FUSIBLE BOX (DIESEL)**

※ USE THE DESIGNATED FUSE ONLY