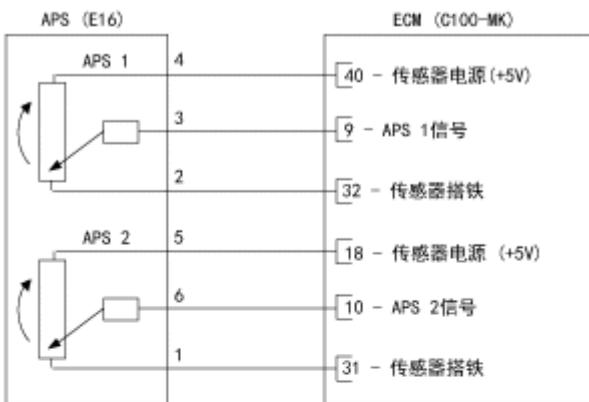


## 电路图

[M/T]

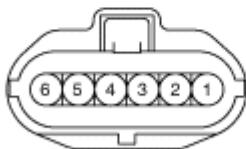
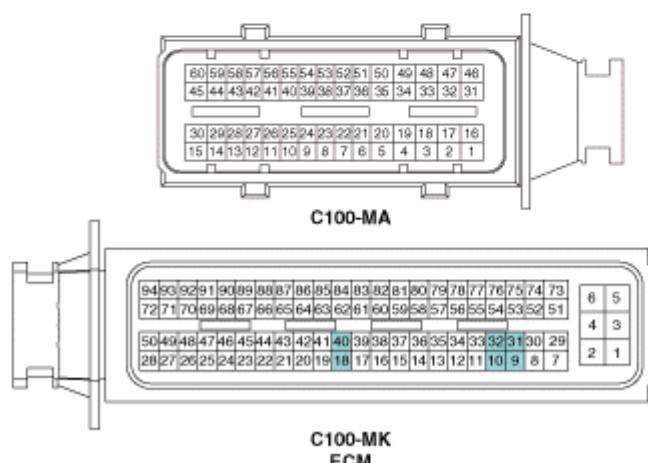
## [电路图]



## [连接信息]

端子	连接到	功能
1	ECM C100-MK (31)	传感器搭铁
2	ECM C100-MK (32)	传感器搭铁
3	ECM C100-MK (9)	APS 1信号
4	ECM C100-MK (40)	传感器电源 (+5V)
5	ECM C100-MK (18)	传感器电源 (+5V)
6	ECM C100-MK (10)	APS 2信号

## [线束连接器]

E16  
APS

[A/T]