


Body Electrical System > Fuel Filler Door > Components and Components Location

Component Location

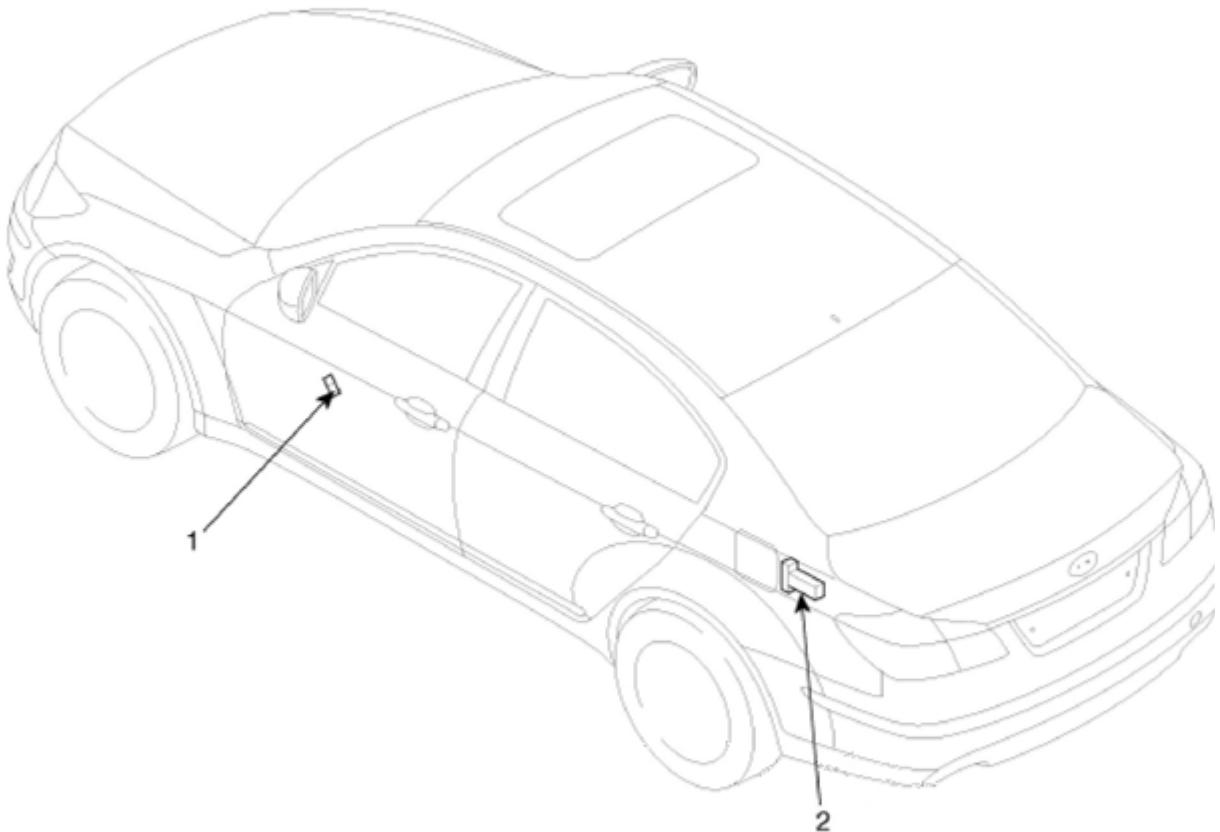

1. Fuel filler door open switch

2. Fuel filler door release actuator

Body Electrical System > Fuel Filler Door > Fuel Filler Door Release Actuator > Repair procedures


Inspection

1. Remove the trunk room left trim.
2. Open the fuel filler door and remove the housing.


NOTE

Do not reuse the fuel filler door housing.

3. Remove the connector and bolts (2EA).

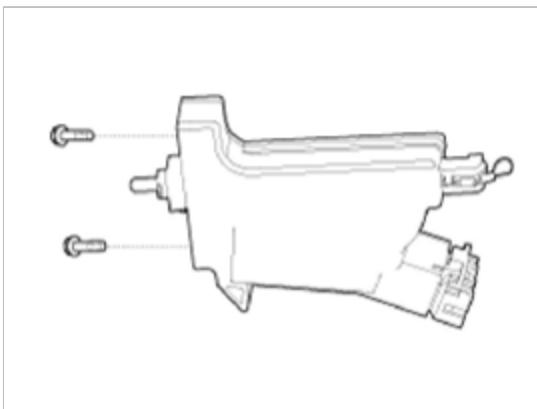

4. Check for continuity between terminal No.1 and No.2. If there is no continuity replace the fuel filler door opener.

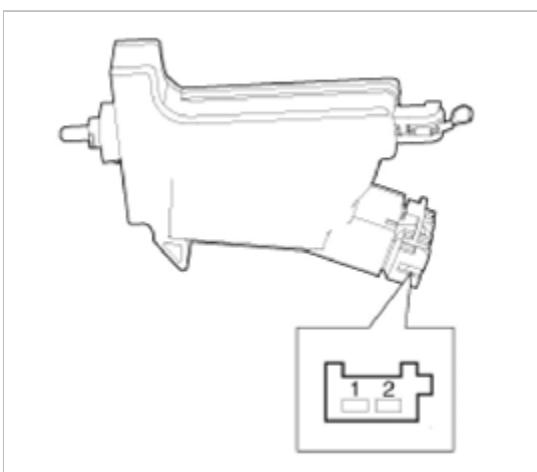

Body Electrical System > Fuel Filler Door > Fuel Filler Door Open Switch > Repair procedures

Inspection

1. Remove the front door trim panel. (Refer to the Body group-front door)
2. Check the switch for continuity between the No. 1 and No. 8 terminals.
3. If the continuity is not as specified, replace the switch.