


- 4母/灰色(SUM_060WP_04F_Gr_Code2



- | | | | |
|-------|--------------|------|---------------|
| 1. L | ECM(发动机机油温度) | 3. | ECM(传感器电源): |
| 2. Br | ECM(传感器搭铁) | P | [左舵] |
| | | G | [右舵] |
| | | 4. Y | ECM(机油压力开关信号) |

- 2母/黑色(HSM_050WP_2F_B)

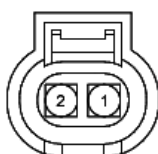

- | | | | |
|------|-------------------------|--------|-----------|
| 1. P | 金属芯块
(PCB #2保险丝-F64) | 2. L/O | ECM(双级油泵) |
|------|-------------------------|--------|-----------|

- 2母/黑色(AMP_EJWP_02F_B)



- | | | | |
|--------|-------------------------|------|---------------|
| 1. G/B | 金属芯块
(PCB #1保險絲-F46) | 2. O | ECM(VIS #1控制) |
|--------|-------------------------|------|---------------|

- 2母/黑色(AMP_EJWP_02F_B)



- | | | | |
|------|-------------------------|------|---------------|
| 1. G | 金属芯块
(PCB #1保险丝-F46) | 2. L | ECM(VIS #2控制) |
|------|-------------------------|------|---------------|

- 2母/黑色(MLX_090CIGAR_02F_B)



- | | | | |
|------|-----------|------|-------------------------|
| 1. B | 搭铁(GC102) | 2. R | 金属芯块
(PCB #1保险丝-F50) |
|------|-----------|------|-------------------------|

- 2母/黑色(AMP_JPT_02F_B_1)



- | | | | |
|-------|-------------|------|-------------------------|
| 1. Br | ECM(PCSM控制) | 2. G | 金属芯块
(PCB #1保险丝-F46) |
|-------|-------------|------|-------------------------|