 
 
 
 


## 后保险杠线束

后保险杠线束 (1)		CV61-1	
<b>R21-CL</b>	后左驻车辅助传感器(中央) - 6 母 / 黑色 (KUM_TWP_06F_B)		
			
1. G	智能接线盒(IPS控制模块)	4. B	搭铁(GF04)
2. -	-	5. -	-
3. B/O	搭铁(GF04)	6. P	智能接线盒(保险丝- F5)
<b>R21-CR</b>	后右驻车辅助传感器(中央) - 6 母 / 黑色 (KUM_TWP_06F_B)		
			
1. G	智能接线盒(IPS控制模块)	4. B	搭铁(GF04)
2. B/O	搭铁(GF04)	5. -	-
3. -	-	6. P	智能接线盒(保险丝- F5)
<b>R21-L</b>	后左驻车辅助传感器 - 6 母 / 黑色 (KUM_TWP_06F_B)		
			
1. G	智能接线盒(IPS控制模块)	4. B	搭铁(GF04)
2. -	-	5. -	-
3. -	-	6. P	智能接线盒(保险丝- F5)
<b>R21-R</b>	后右驻车辅助传感器 - 6 母 / 黑色 (KUM_TWP_06F_B)		
			
1. G	智能接线盒(IPS控制模块)	4. B	搭铁(GF04)
2. Br/B	搭铁(GF04)	5. -	-
3. B/O	搭铁(GF04)	6. P	智能接线盒(保险丝- F5)
<b>R23</b>	智能钥匙保险杠天线 - 2 母 / 黑色 (AMP_EJWP_02F_B)		
			
1. O	智能钥匙控制模块 (智能钥匙保险杠天线-电源)	2. L	智能钥匙控制模块 (智能钥匙保险杠天线-搭铁)
<b>R24</b>	轮胎压力监测模块 - 6 母 / 黑色 (AMP_MQSWP_06F_B_1)		
			
1. P/B	智能接线盒(保险丝- F6)	4. R/B	智能接线盒(暗电流自动切断 驱动器保险丝- F16)
2. Br	C-CAN (低电位)	5. W	C-CAN (高电位)
3. -	-	6. B	搭铁(GF04)