

前线束(13)

CV20-13

交流发电机延伸线束(G6DJ)

E80 电控空调压缩机
- 2母/黑色(KUM_NMWP_02F_B)



1. B 空调控制模块(ECV (-)) 2. R 空调控制模块(ECV (+))

 
E81 交流发电机
- 4母/黑色(SUM_TSWP_04F_B)



1. G 发动机室接线盒
(保险丝-B/UP LAMP) 3. W L-智能接线盒(左)
(保险丝-F35)
2. Gr ECM (COM) 4. L ECM (FR)


前保险杠线束

E91 前视摄像头
- 6母/灰色(KET_040WP_06F_GR)




1. W/O 环车鸟瞰监测模块(电源) 4. B/O 环车鸟瞰监测模块(搭铁)
2. - 5. -
3. G 环车鸟瞰监测模块(视频-输入) 6. W 环车鸟瞰监测模块(视频-搭铁)

 E92-CL 前左驻车辅助传感器(中央)
- 6母/黑色(KUM_025WP_06F_B_025WP.RH)




1. - - 4. B 搭铁(GF03)
2. B/O LID 2 (GF03) 5. L/B BCM (LIN)
3. B/O LID 3 (GF03) 6. P 智能接线盒(左)(保险丝-F38)

 E92-CR 前右驻车辅助传感器(中央)
- 6母/黑色(KUM_025WP_06F_B_025WP.RH)



1. B/O LID 1 (GF03) 4. B 搭铁(GF03)
2. - 5. L/B BCM (LIN)
3. B/O LID 3 (GF03) 6. P 智能接线盒(左)(保险丝-F38)

 E92-L 前左驻车辅助传感器
- 6母/黑色(KUM_025WP_06F_B_025WP.RH)



1. - - 4. B 搭铁(GF03)
2. - 5. L/B BCM (LIN)
3. B/O LID 3 (GF03) 6. P 智能接线盒(左)(保险丝-F38)