

Position	Key	Terminal	Ignition switch (B)						Key warning switch (A)	
			5	6	4	1	2	3	5	6
LOCK	Key out (Off) removal									
		Key in (On) insert	○	○						
		ON	○	○	○	○	○	○	○	○
START			○		○	○		○		

## Body Electrical System > Back view camera System > Description and Operation

### Description


Back view camera will activate when the backup light is ON with the ignition switch ON and the shift lever in the R position. This system is a supplemental system that shows behind the vehicle through the AV monitor while backing-up.

#### WARNING

This system is a supplementary function only. It is the responsibility of the driver to always check the inside/ outside rearview mirror and the area behind the vehicle before and during backing up because there are blind spots that can't be seen through the camera.

## Body Electrical System > Back view camera System > Components and Components Location




### Component Location

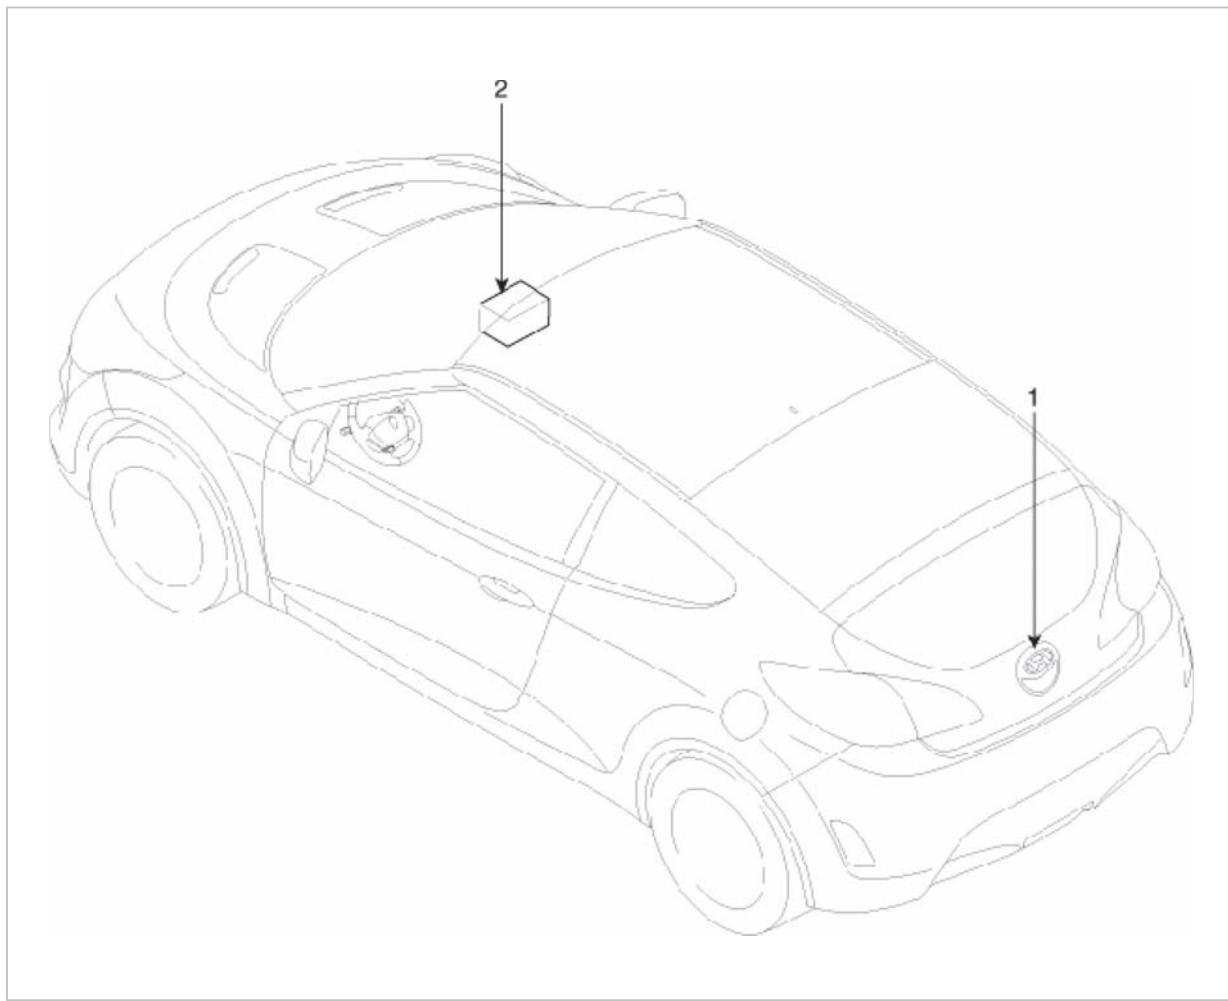

- 1. Back view camera
- 2. LCD monitor

### Body Electrical System > Back view camera System > Schematic Diagrams

Circuit Diagram

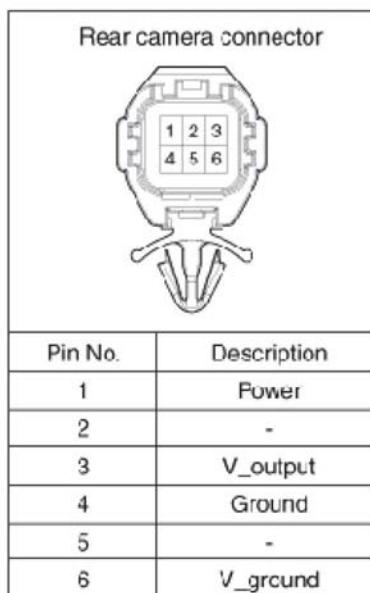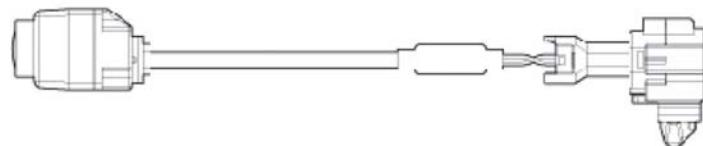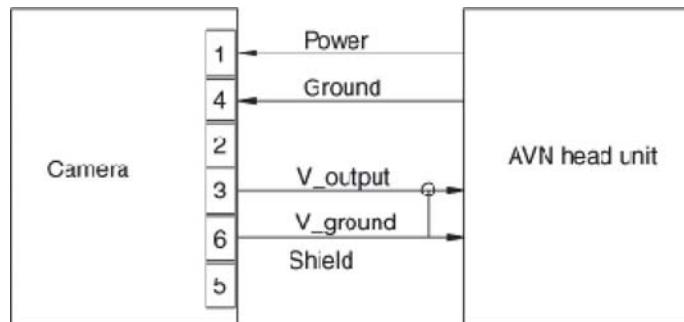


## Body Electrical System > Back view camera System > Repair procedures

### Removal

#### Back View Camera

1. Disconnect the negative(-) battery terminal.
2. Remove the tailgate outside handle assembly.  
(Refer to the BD group - "Tailgate")
3. Disconnect the rear view camera connector (A) after loosening 2 screws.

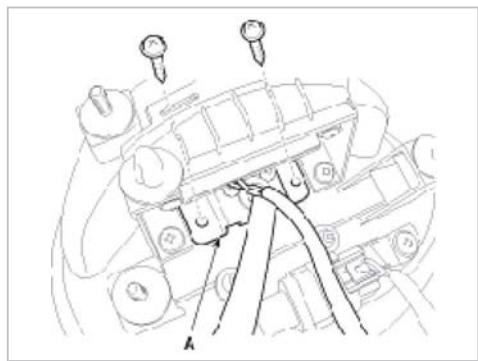

### Installation

1. Install the tailgate outside handle assembly with the rear view camera.
2. Install the tailgate outside handle assembly.