

前线束 (G4FD-DCT : GAMMA 1.6L GDI-DCT) (8)

CV22-8

EGGD18-4 点火线圈#4

- 2母/黑色 (MLX_090C1GAR_02F_B)



- | | | | |
|------|-------------|------|------------------|
| 1. G | ECM (气缸4控制) | 2. 0 | 智能接线盒 (保险丝- F37) |
|------|-------------|------|------------------|

EGGD19 电容器

- 2母/黑色 (MLX_090C1GAR_02F_B)



- | | | | |
|------|-------------|------|------------------|
| 1. B | 搭铁 (GGGD09) | 2. 0 | 智能接线盒 (保险丝- F37) |
|------|-------------|------|------------------|

EGGD20 ETC电机&节气门位置传感器

- 6母/黑色 (KET_09011WP_06F_B_1)



- | | | | |
|------|-----------------|---------|----------------|
| 1. 0 | ECM (ETC电机 (-)) | 4. B | ECM (TPS. 2信号) |
| 2. R | ECM (ETC电机 (+)) | 5. Br/B | ECM (TPS电源) |
| 3. W | ECM (TPS搭铁) | 6. Gr | ECM (TPS. 1信号) |

EGGD21 净化控制电磁阀


- 2母/黑色 (PKD_2.8WP_02F_B)



- | | | |
|--------|------------------------------|---------------|
| 1. G/0 | 发动机室保险丝&继电器盒 (保险丝- F212. B/0 | ECM (PCSV 控制) |
|--------|------------------------------|---------------|

EGGD22 加速踏板位置传感器

- 6母/黑色 (AMP_MTI1_06F_B)

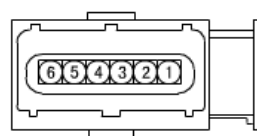

- | | | | |
|--------|----------------|--------|----------------|
| 1. P | ECM (APS. 2信号) | 4. G | ECM (APS. 1信号) |
| 2. G/W | ECM (APS. 2电源) | 5. W | ECM (APS. 1搭铁) |
| 3. P | ECM (APS. 1电源) | 6. Y/0 | ECM (APS. 2搭铁) |

EGGD23 爆震传感器

- 2母/黑色 (AMP_2.8WP_02F_B)



- | | | | |
|------|-------------|------|-------------|
| 1. G | ECM (传感器搭铁) | 2. W | ECM (传感器信号) |
|------|-------------|------|-------------|