

前线束 (G4FD : GAMMA 1.6L GDI) (6)

CV21-6

EGGG18-1 点火线圈 #1

- 2母/黑色 (MLX_090C1GAR_02F_B)



1. Gr ECM (气缸1控制) 2. 0 智能接线盒 (保险丝- F37)

EGGG18-2 点火线圈 #2

- 2母/黑色 (MLX_090C1GAR_02F_B)



1. R ECM (气缸2控制) 2. 0 智能接线盒 (保险丝- F37)

EGGG18-3 点火线圈 #3

- 2母/黑色 (MLX_090C1GAR_02F_B)



1. W ECM (气缸3控制) 2. 0 智能接线盒 (保险丝- F37)

EGGG18-4 点火线圈 #4 (G4FD - GDI)

- 2母/黑色 (MLX_090C1GAR_02F_B)



1. G ECM (气缸4控制) 2. 0 智能接线盒 (保险丝- F37)

EGGG19 电容器

- 2母/黑色 (MLX_090C1GAR_02F_B)



1. B Ground (GGGG09) 2. 0 智能接线盒 (保险丝- F37)

EGGG20 ETC电机&节气门位置传感器

- 6母/黑色 (KET_09011WP_06F_B_1)


1. 0 ECM (ETC电机 (-)) 4. B ECM (TPS. 2信号)
2. R ECM (ETC电机 (+)) 5. Br/B ECM (TPS电源)
3. Br ECM (TPS搭铁) 6. Gr ECM (TPS. 1信号)