


# Interior Trim

## Specifications

### Fastener Tightening Specifications

Application	Specification	
	Metric	English
Assist Handle Screws	6.5 Nm	58 lb in
Body Side Trim Panel Screws	1.9 Nm	17 lb in
Cargo Tiedown Hook Bolts (Blazer)	35 Nm	26 lb ft
Coat Hook Screws	1.9 Nm	17 lb in
Overhead Console to Roof Screws	1.9 Nm	17 lb in
Rear Seat Belt Lower Anchor Nuts	55 Nm	41 lb ft
Seat Belt Anchor Bolts	55 Nm	41 lb ft
Sunshade Retainer Screws	1.1 Nm	10 lb in
Sunshade Screws	1.1 Nm	10 lb in

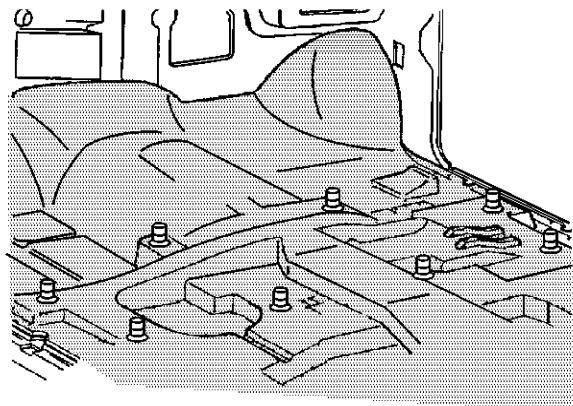


## Repair Instructions

### Mat/Carpet Replacement - Front Floor (Crewcab)

#### Removal Procedure

- Remove the front seat. Refer to "Seat Replacement - Bucket".
- Remove the rear seat.
- Remove the jack cover from the vehicle.
- Remove the jack from the vehicle.
- Remove the door sill trim plates. Refer to "Door Sill Plate Replacement (Crewcab)" "Door Sill Plate Replacement (Blazer)".
- Remove the floor console or cup holder (if equipped). Refer to "Console Replacement - Front Floor (Full Length (Manual Trans))" "Console Replacement - Front Floor (Full Length (Auto Trans))".
- Remove the body side trim panels. Refer to "Trim Panel Replacement - Body Side".
- Remove the body hinge trim panels. Refer to "Trim Panel Replacement - Left Hinge Pillar" and "Trim Panel Replacement - Right Hinge Pillar".

#### Installation Procedure

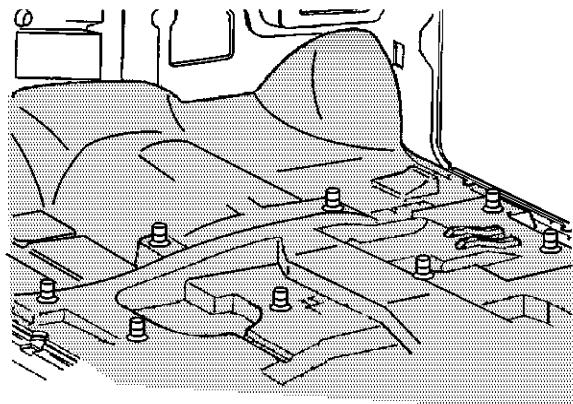

Install the carpet or mat to the vehicle.

- Install the body hinge trim panels. Refer to "Trim Panel Replacement - Left Hinge Pillar" and "Trim Panel Replacement - Right Hinge Pillar".
- Install the body side trim panels. Refer to "Trim Panel Replacement - Body Side".
- Install the floor console or cup holder if equipped. Refer to "Console Replacement - Front Floor (Full Length (Manual Trans))" "Console Replacement - Front Floor (Full Length (Auto Trans))".
- Install the door sill trim plates. Refer to "Door Sill Plate Replacement (Crewcab)" "Door Sill Plate Replacement (Blazer)".
- Install the jack to the vehicle.


- Install the jack cover to the vehicle.
- Install the front seats. Refer to "Seat Replacement - Bucket" .
- Install the rear seat.

## Repair Instructions

### Mat/Carpet Replacement - Front Floor (Blazer)


#### Removal Procedure

- Remove the front seats. Refer to "Seat Replacement - Bucket" in Seats.
- Remove the rear seats. Refer to "Seat Replacement - Rear (Blazer)" "Seat Replacement - Rear (Crewcab)" in Seats.
- Remove the rear seat belt buckles from the floor. Refer to "Seat Belt Buckle Replacement - Rear (Blazer)" "Seat Belt Buckle Replacement - Rear (Crewcab)" in Seat Belts.
- Remove the door sill trim plates. Refer to "Door Sill Plate Replacement (Crewcab)" "Door Sill Plate Replacement (Blazer)" .
- Remove the front side door lock pillar garnish moldings. Refer to "Garnish Molding Replacement - Side Door Lock Pillar" .
- Remove the C-pillar lower trim panels. Refer to "Trim Replacement - Third Pillar (Crewcab)" "Trim Replacement - Third Pillar (Blazer)" .
- Remove the body side trim panels as necessary. Refer to "Trim Panel Replacement - Body Side" .
- Remove the floor console, if equipped. Refer to the appropriate procedure "Console Replacement - Front Floor (Full Length (Manual Trans))" "Console Replacement - Front Floor (Full Length (Auto Trans))" in Instrument Panel, Gauges, and Console.
- Remove the body hinge pillar trim panels. Refer to "Trim Panel Replacement - Left Hinge Pillar" and "Trim Panel Replacement - Right Hinge Pillar" .

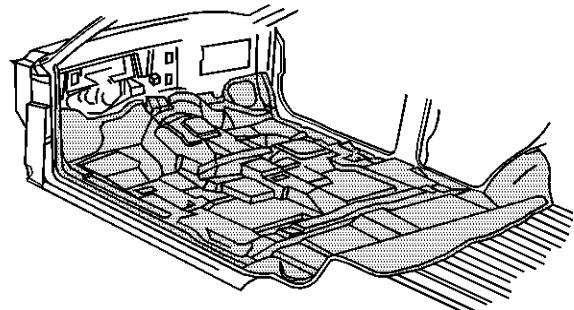

Remove the carpet or mat from the vehicle.


#### Installation Procedure

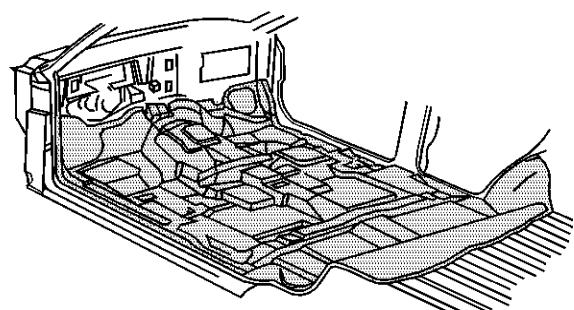

Install the carpet or the mat to the vehicle.

- Install the body hinge trim panels. Refer to "Trim Panel Replacement - Left Hinge Pillar" and "Trim Panel Replacement - Right Hinge Pillar" .
- Install the floor console or cup holder, if equipped. Refer to "Console Replacement - Front Floor (Full Length (Manual Trans))" "Console Replacement - Front Floor (Full Length (Auto Trans))" .
- Install the body side trim panels as necessary. Refer to "Trim Panel Replacement - Body Side" .
- Install the C-pillar lower trim panels. Refer to "Trim Replacement - Third Pillar (Crewcab)" "Trim Replacement - Third Pillar (Blazer)" .

- Install the front side door lock pillar garnish moldings. Refer to "Garnish Molding Replacement - Side Door Lock Pillar".
- Install the door sill trim plates. Refer to "Door Sill Plate Replacement (Crewcab)" "Door Sill Plate Replacement (Blazer)".
- Install the rear seat belt buckles to the floor. Refer to "Seat Belt Buckle Replacement - Rear (Blazer)" "Seat Belt Buckle Replacement - Rear (Crewcab)" in Seat Belts.
- Install the rear seats. Refer to "Seat Replacement - Rear (Blazer)" "Seat Replacement - Rear (Crewcab)" in Seats.
- Install the front seats. Refer to "Seat Replacement - Bucket" in Seats.

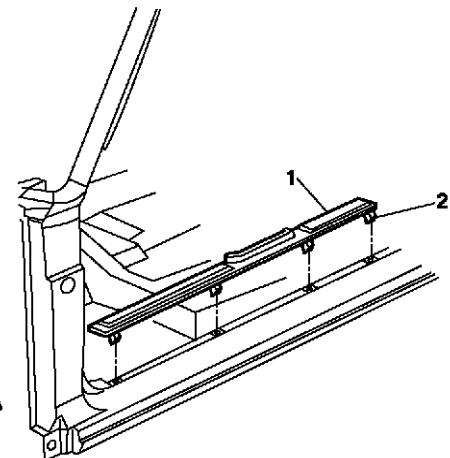


## Repair Instructions

### Door Sill Plate Replacement (Crewcab)

#### Tools Required

[J 38778](#) Door Trim Pad Clip Remover

#### Removal Procedure

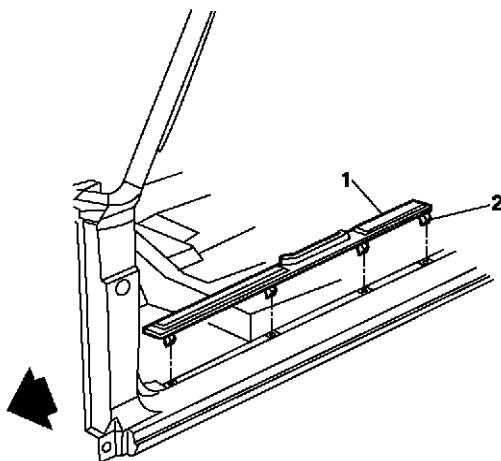

Use the [J 38778](#) to loosen the sill plate (1) from the 4 retaining clips (2).

- Remove the sill plate from the vehicle

#### Installation Procedure

Install the door sill trim plate (1) onto the vehicle.

- Align the retaining clips (2) and press firmly into place.


## Repair Instructions

### Door Sill Plate Replacement (Blazer)

#### Tools Required

[J 38778](#) Door Trim Pad Clip Remover



#### Removal Procedure

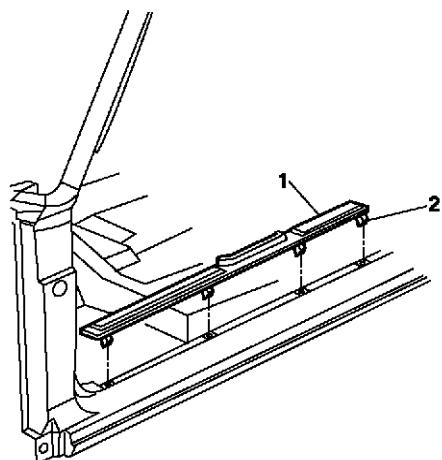

Use the [J 38778](#) to loosen the sill plate (1) from the 4 retaining clips (2).

- Remove the sill plate from the vehicle.

#### Installation Procedure

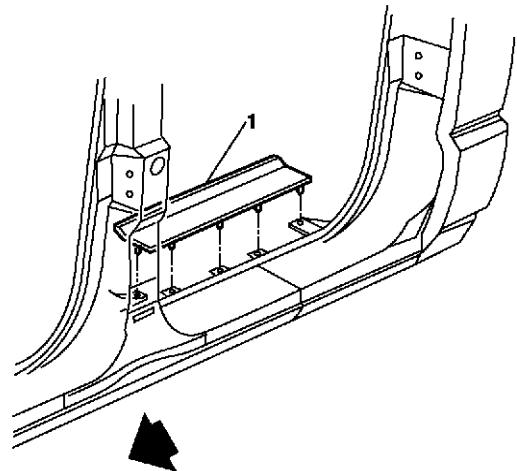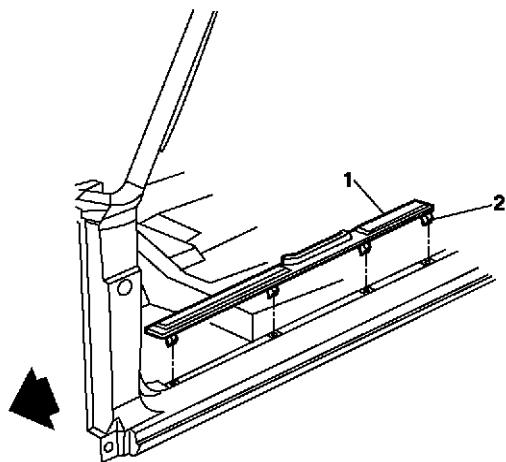

Install the door sill trim plate (1) onto the vehicle.

- Align the retaining clips (2) and press firmly into place.


## Repair Instructions

### Door Sill Plate Replacement - Rear (Crewcab)

#### Tools Required

[J 38778](#) Door Trim Pad Clip Remover

#### Removal Procedure

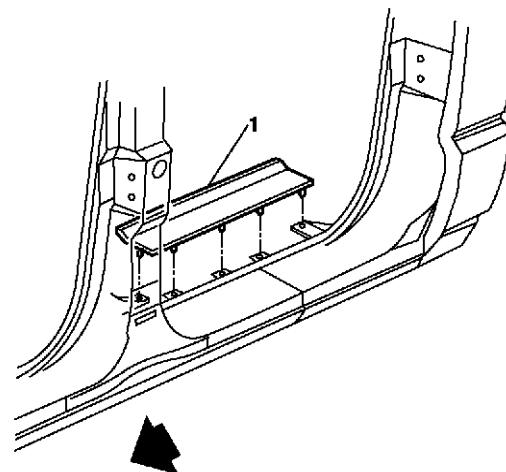

Use the [J 38778](#) to loosen the sill plate (1) from the retaining clips.

- Remove the sill plate from the vehicle.

#### Installation Procedure

Install the door sill trim plate (1) onto the vehicle.

- Align the retaining clips and press firmly into place.


## Repair Instructions

### Door Sill Plate Replacement - Rear (Blazer)

#### Tools Required

[J 38778](#) Door Trim Pad Clip Remover


#### Removal Procedure

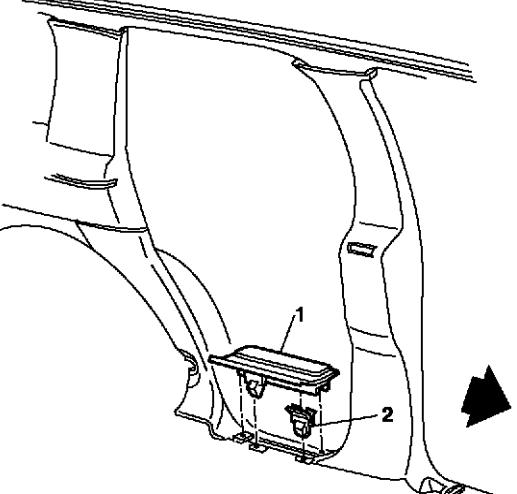

Use the [J 38778](#) to loosen the sill plate (1) from the retaining clips (2).

- Remove the sill plate from the vehicle.

#### Installation Procedure

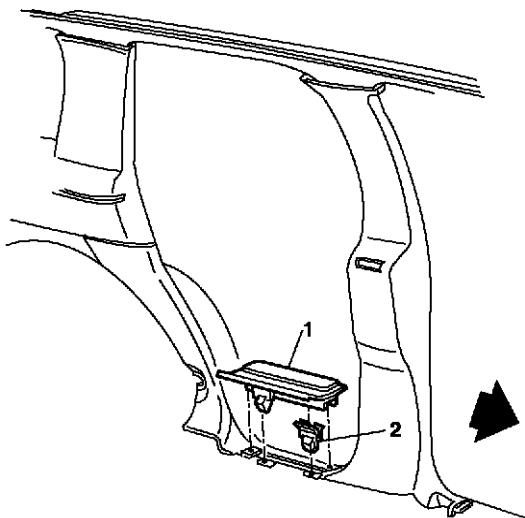

Install the door sill trim plate (1) onto the vehicle.

- Align the retaining clips (2) and press firmly into place.


## Repair Instructions

### Door Sill Plate Replacement - Lift Gate

#### Tools Required


[J38778](#) Door Trim Pad Clip Remover

#### Removal Procedure

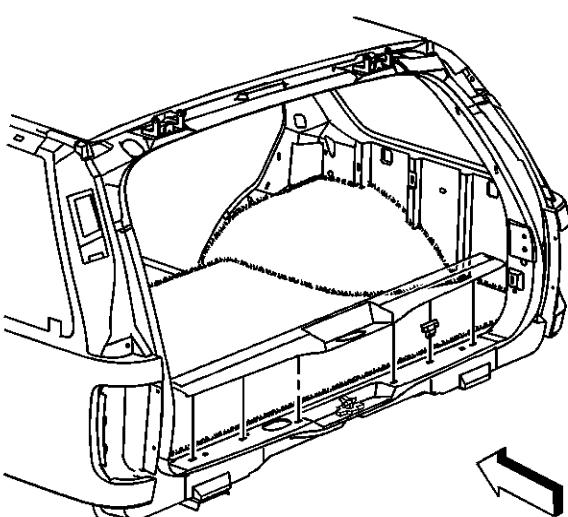

Use the [J38778](#) in order to remove the door sill trim plate from the vehicle.

#### Installation Procedure

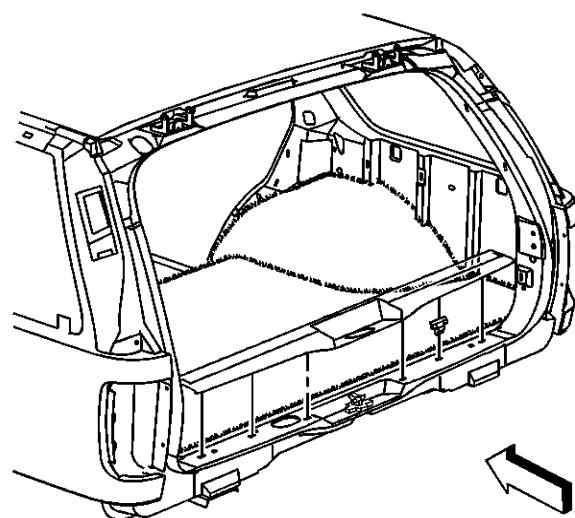


Install the door sill trim plate to the vehicle. Align the retainers along the door sill and press into place.

## Repair Instructions

### Carpet Replacement - Rear (Blazer)



#### Removal Procedure

- Remove the rear seat floor filler trim panels. Refer to "Seat Back Filler Panel Replacement - Rear" in Seats.
- Remove the body side trim panels, as necessary. Refer to "Trim Panel Replacement - Body Side" .
- Remove the jack from the vehicle.
- Remove the liftgate door sill trim plate. Refer to "Door Sill Plate Replacement - Lift Gate" .
- 

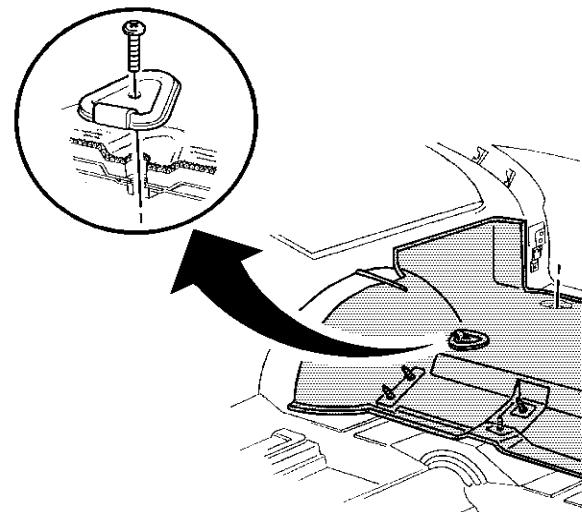


Remove the bolts that retain the cargo tie down hooks to the floor.

- Remove the cargo tie down hooks.

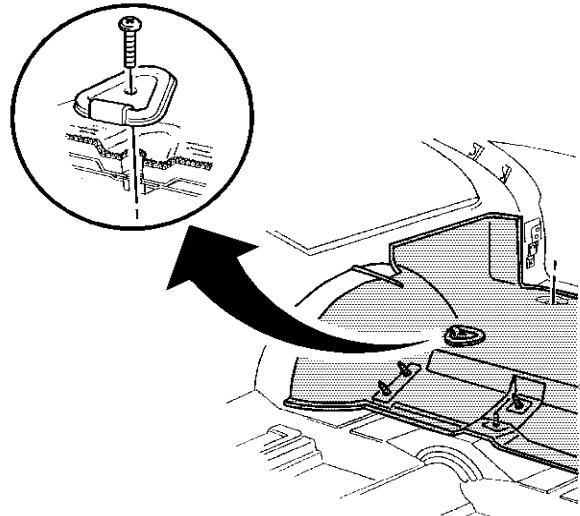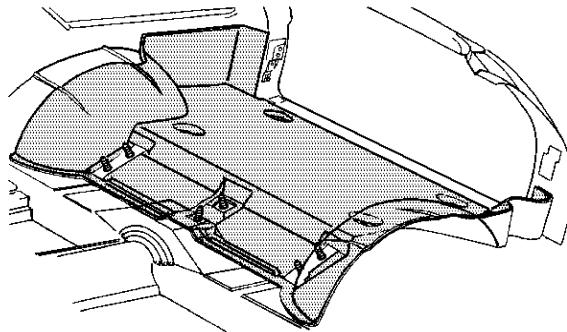

Remove the rear carpet or the mat from the vehicle.

#### Installation Procedure

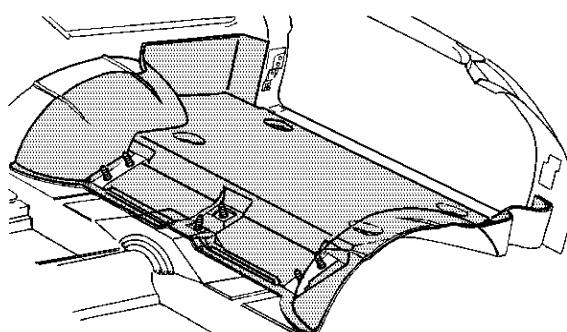

Install the cargo tie down hooks.

- **Notice:** Refer to Fastener Notice in Cautions and Notices.

Install the bolts that retain the cargo tie down hooks to the floor.

**Tighten:** Tighten the bolts to 35 Nm (26 lb ft).

- Install the liftgate door sill trim plate. Refer to "**Door Sill Plate Replacement - Lift Gate**".
- Install the jack to the vehicle.
- Install the body side trim panels, as necessary. Refer to "**Trim Panel Replacement - Body Side**".
- Install the rear seat floor filler trim panels. Refer to "**Seat Back Filler Panel Replacement - Rear**" in Seats.

## Repair Instructions

### Assist Handle Replacement


Install the rear carpet or the mat to the vehicle.

### Removal Procedure

## Repair Instructions

### Coat Hook Replacement (Crewcab)


#### Removal Procedure

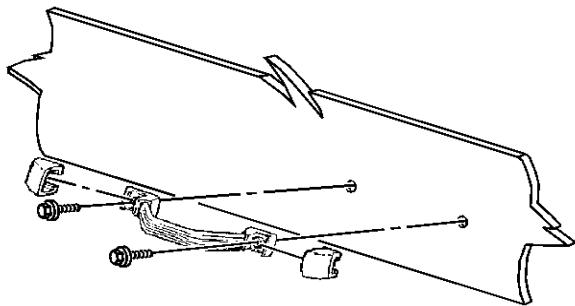

Carefully insert a flat-bladed tool between the cover and the handle in order to remove the assist handle covers (front shown, rear similar).

- Remove the screws that retain the assist handle to the headliner.
- Remove the assist handle from the vehicle.

#### Installation Procedure

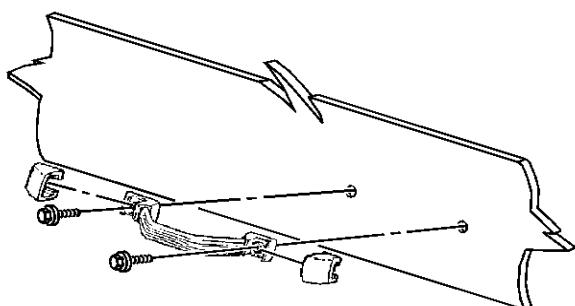


Install the assist handle to the vehicle.

- **Notice:** Refer to Fastener Notice in Cautions and Notices.

Install the screws that retain the assist handle to the headliner.

**Tighten:** Tighten the screws to 6.5 Nm (58 lb in).


- Install the assist handle covers. Position the covers and snap into place (front shown, rear similar).

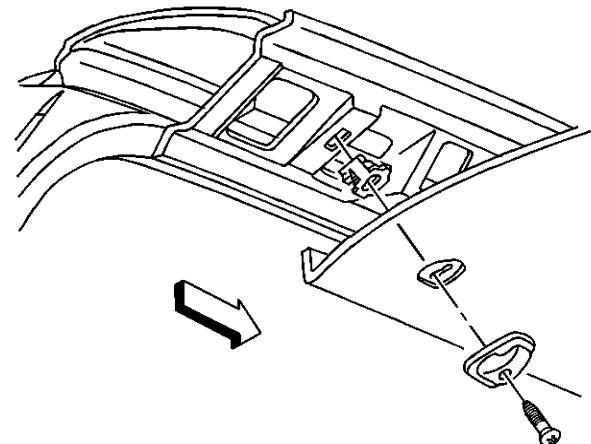

Remove the screw that retains the coat hook to the vehicle.

- Remove the coat hook from the vehicle.

#### Installation Procedure

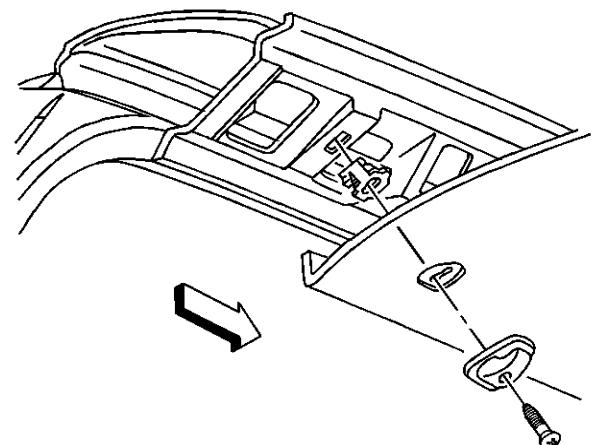

Install the coat hook to the vehicle.

- **Notice:** Refer to Fastener Notice in Cautions and Notices.


Install the coat hook screw.

**Tighten:** Tighten the coat hook screw to 1.9 Nm (17 lb in).

## Repair Instructions

### Coat Hook Replacement (Blazer)


#### Removal Procedure

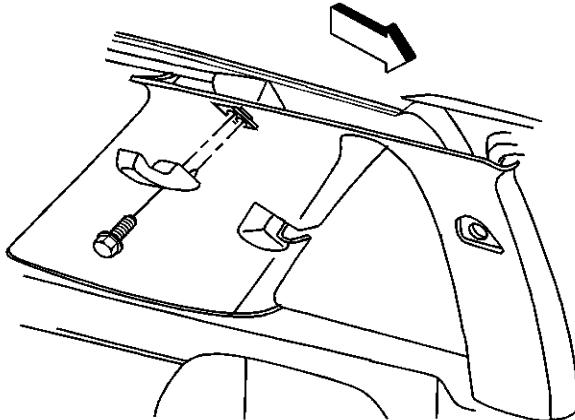

Remove the screw that retains the coat hook to the vehicle.

- Remove the coat hook from the vehicle.

#### Installation Procedure

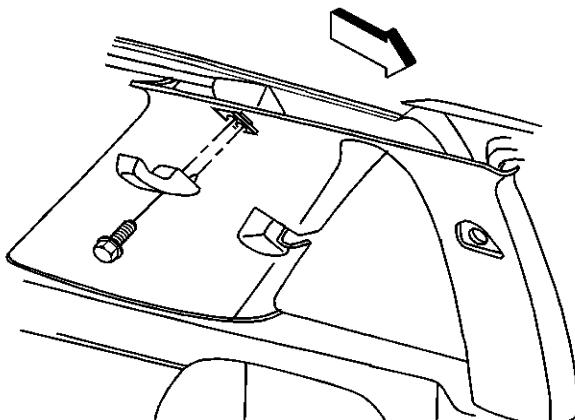

Install the coat hook to the vehicle.

- Notice:** Refer to Fastener Notice in Cautions and Notices.

Install the coat hook screw.


**Tighten:** Tighten the coat hook screw to 1.9 Nm (17 lb in).

## Repair Instructions

### Console Replacement - Overhead (Full Length)

#### Removal Procedure


- Remove the overhead lamp lens on the overhead console.

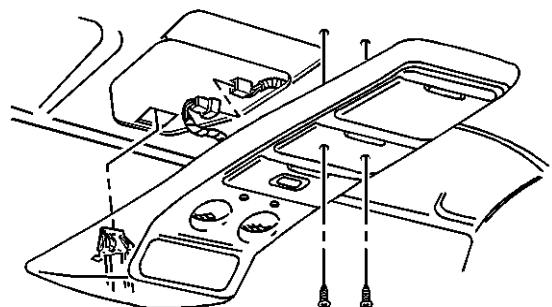

Remove the three overhead console roof screws. One screw is located towards the front of the console and the other two are located behind the dome lamp lens.

- Disconnect the electrical connectors.
- Remove the console.

#### Installation Procedure

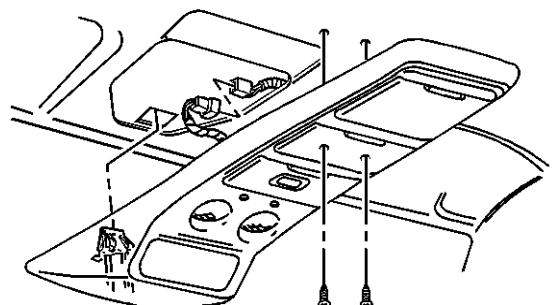

Install the console to the roof.

- Connect the electrical connectors.
- **Notice:** Refer to Fastener Notice in Cautions and Notices.


Install the overhead console screws.

**Tighten:** Tighten the overhead console screws to 1.9 Nm (17 lb in).

## Repair Instructions


### Sunshade Replacement

#### Removal Procedure

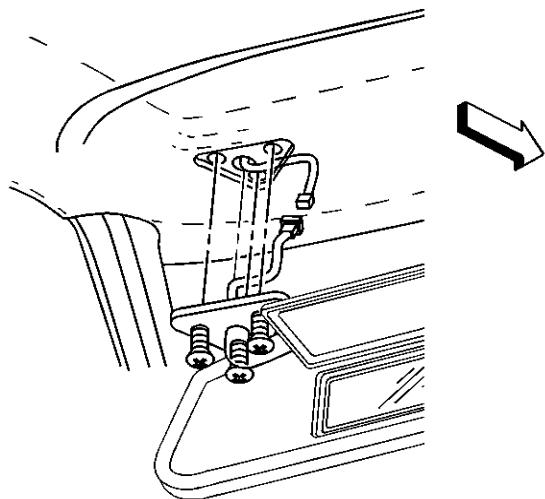


Remove the screws that retain the sunshade to the roof.

- Disconnect the electrical connections, if equipped.

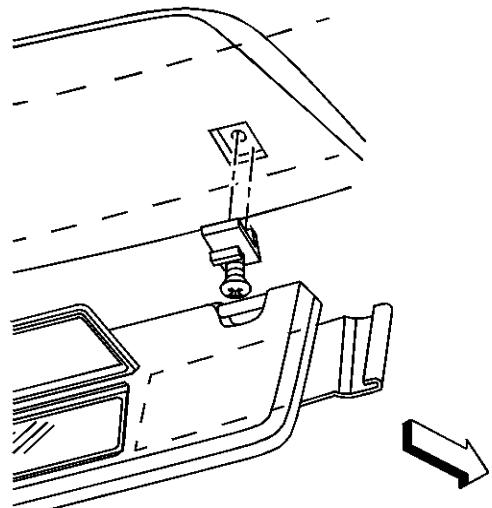


Remove the screw that retains the sunshade retainer to the roof.

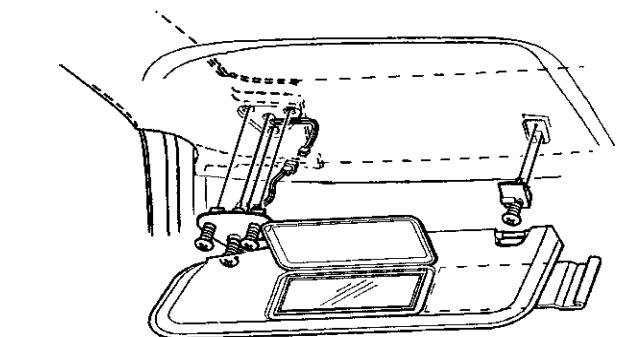


Remove the sunshade from the vehicle.

#### Installation Procedure

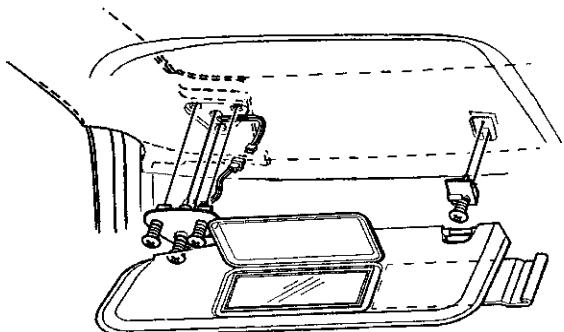


Install the sunshade to the roof.

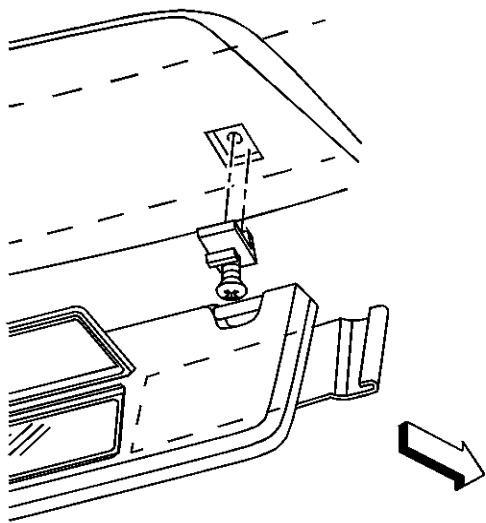

**Notice:** Refer to Fastener Notice in Cautions and Notices.

Install the sunshade retainer and the sunshade retainer screws.

**Tighten:** Tighten the screws to 1.1 Nm (10 lb in).

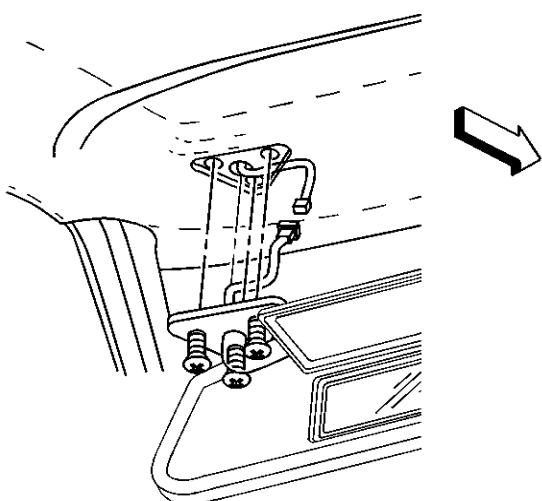

Connect the electrical connections, if equipped.

▪ Install the screws that retains the sunshade to the roof.


**Tighten:** Tighten the screws to 1.1 Nm (10 lb in).

## Repair Instructions

### Garnish Molding Replacement - Side Door Lock Pillar


#### Removal Procedure

- Remove the front and rear door sill trim plates. Refer to "Door Sill Plate Replacement (Crewcab)" "Door Sill Plate Replacement (Blazer)" .
- Remove the upper and lower front seat belt anchor bolts.

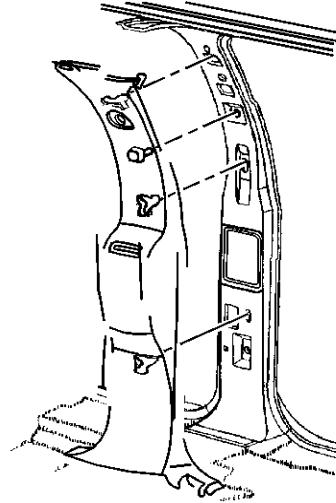

Remove the front side door lock pillar garnish molding from the vehicle. Feed the seat belt through the garnish molding.

#### Installation Procedure

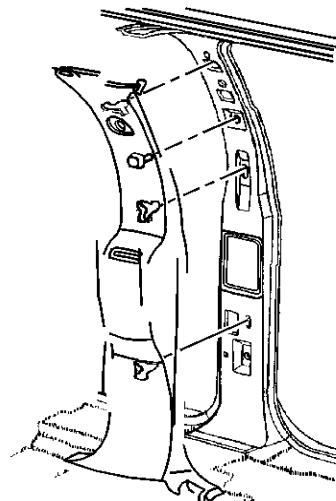

Install the front side door lock pillar garnish molding to the vehicle. Feed the seat belt through the garnish molding.

- **Notice:** Refer to Fastener Notice in Cautions and Notices.

Install the upper and the lower front seat belt anchor bolts.

**Tighten:** Tighten the screws to 55 Nm (41 lb ft).

- Install the front and the rear door sill trim plates. Refer to "Door Sill Plate Replacement (Crewcab)" "Door Sill Plate Replacement (Blazer)".


## Repair Instructions

### Garnish Molding Replacement - Windshield Pillar

#### Tools Required


[J38778](#) Door Trim Pad Clip Remover

#### Removal Procedure

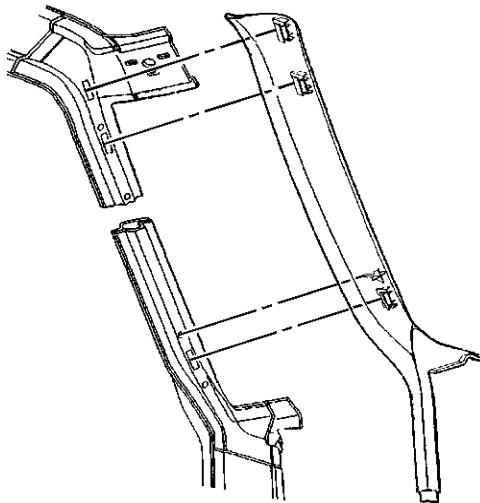

Use the [J38778](#) in order to remove the windshield garnish molding from the windshield pillar. Pull the molding away from the pillar and then up.

#### Installation Procedure

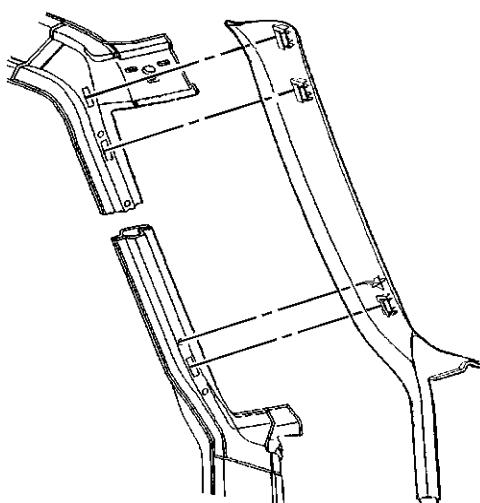

Install the windshield molding to the windshield pillar. Align the retainer clips with the slots and press the molding into place.


## Repair Instructions

### Garnish Molding Replacement - Rear Upper

#### Tools Required

[J38778](#) Door Trim Pad Clip Remover

#### Removal Procedure

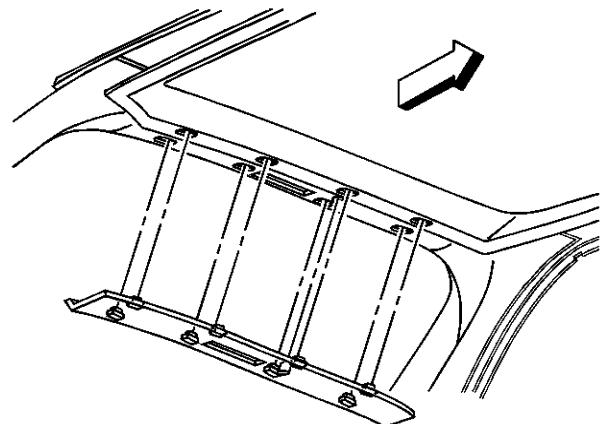


Use the [J38778](#) in order to remove the rear header garnish molding.

Insert the [J38778](#) and work along the front edge of the trim panel from one end to the other.

- Remove the cargo lamp from the roof rear header garnish molding. Refer to "Cargo Lamp Replacement" in Lighting Systems.

#### Installation Procedure

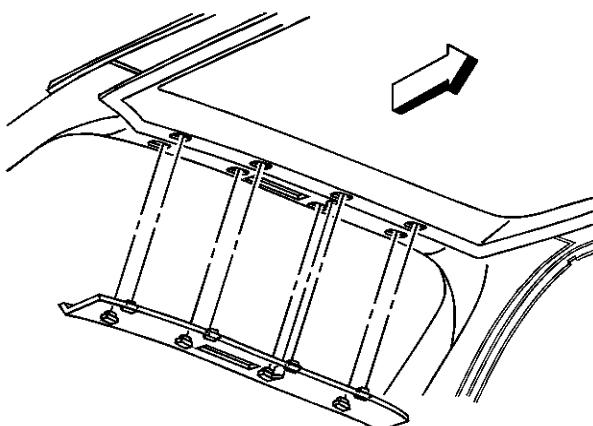


Install the cargo lamp from the roof to the rear header garnish molding. Refer to **"Cargo Lamp Replacement"** in Lighting Systems.

- install the roof rear header garnish molding to the vehicle. Align the molding and press into place.

## Repair Instructions

### Carpet Replacement - Rear Panel


#### Removal Procedure

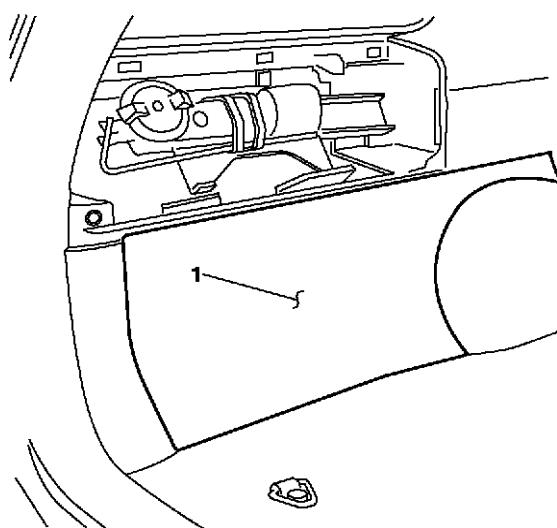

Remove the rear window garnish molding.

- Remove the jack storage cover.
- Using a flat bladed tool, gently pry the carpet (1) away from the rear panel.

#### Installation Procedure

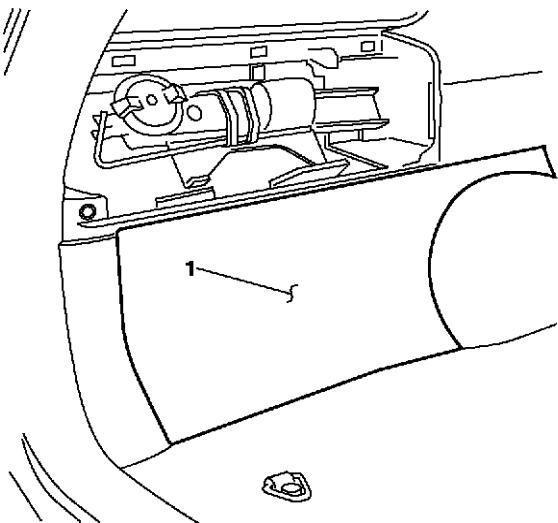


Apply spray trim adhesive to the back side of the carpet (1).

- Install the rear inner panel carpet to the vehicle.
- Install the jack storage cover.
- Install the rear window garnish molding.

## Repair Instructions

### Trim Replacement - Third Pillar (Crewcab)

#### Removal Procedure

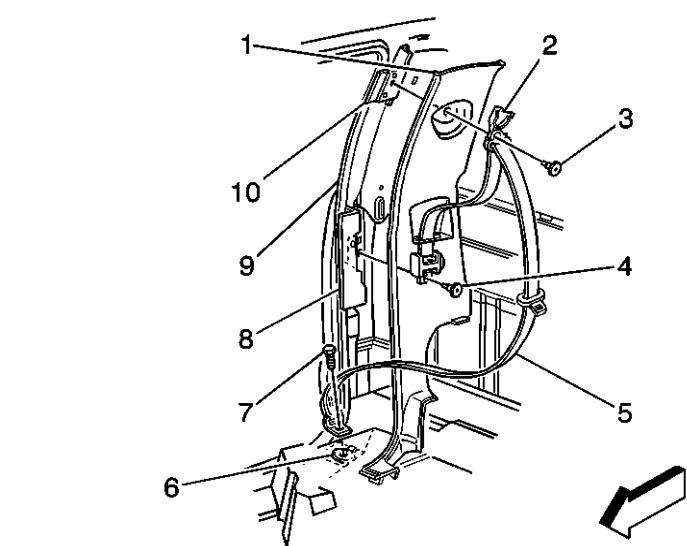


Remove the door trim sill plate. Refer to **"Door Sill Plate Replacement (Crewcab)"** **"Door Sill Plate Replacement (Blazer)"**.

- Remove the upper seat belt anchor bolt (3) and the lower seat belt anchor bolt (7).

- Remove the coat hook. Refer to "Coat Hook Replacement (Crewcab)" "Coat Hook Replacement (Blazer)".
- Remove the shoulder belt opening trim cover.
- Feed the seatbelt through the trim panel (1).
- Gently pry the trim panel (1) from the body.
- Remove the trim panel (1) from the vehicle.

### Installation Procedure

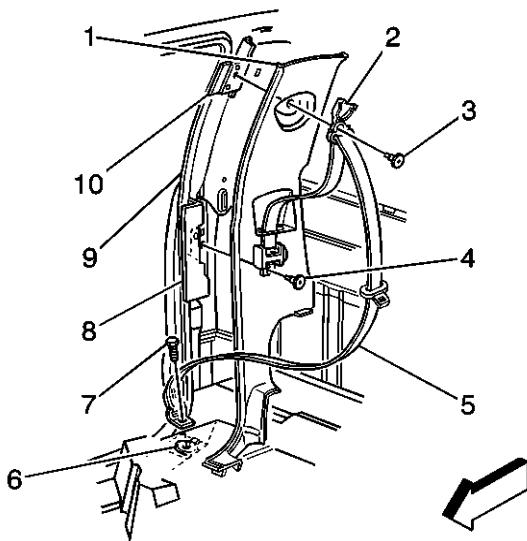

Install the trim panel (1) to the vehicle.

- Feed the seatbelt (5) through the trim panel (1).
- Install the shoulder belt opening trim cover.
- Install the coat hook. Refer to "Coat Hook Replacement (Crewcab)" "Coat Hook Replacement (Blazer)".
- **Notice:** Refer to Fastener Notice in Cautions and Notices.

Install the upper seat belt anchor bolt (3).

**Tighten:** Tighten the upper seat belt anchor bolt to 55 Nm (41 lb ft).


- Install the lower seat belt anchor bolt (7).
- Tighten:** Tighten the lower seat belt anchor bolt to 55 Nm (41 lb ft).
- Install the door sill trim plate. Refer to "Door Sill Plate Replacement (Crewcab)" "Door Sill Plate Replacement (Blazer)".

## Repair Instructions

### Trim Replacement - Third Pillar (Blazer)

2001-S/T TRK (China)


### Removal Procedure

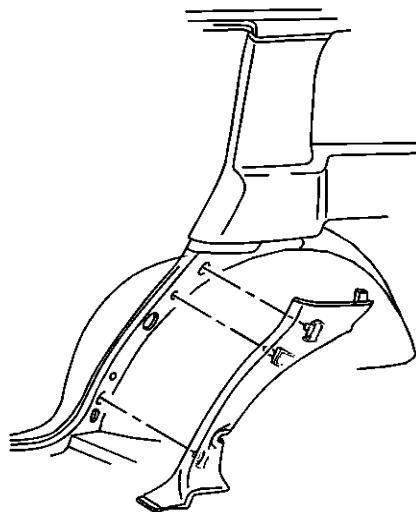

Remove the rear door sill trim plate. Refer to "Door Sill Plate Replacement (Crewcab)" "Door Sill Plate Replacement (Blazer)".

- Remove the lower rear seat belt bolt.
- Remove the body side lower trim panel from the vehicle.

### Installation Procedure

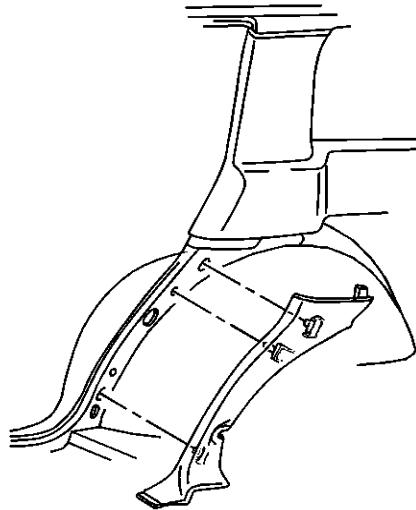

Install the body side lower trim panel to the vehicle.

- **Notice:** Refer to Fastener Notice in Cautions and Notices.

Install the lower seat belt bolt.


**Tighten:** Tighten the bolt to 55 Nm (41 lb ft).

- Install the rear door sill trim plate. Refer to "Door Sill Plate Replacement (Crewcab)" "Door Sill Plate Replacement (Blazer)".

## Repair Instructions

### Trim Panel Replacement - Left Hinge Pillar


#### Removal Procedure

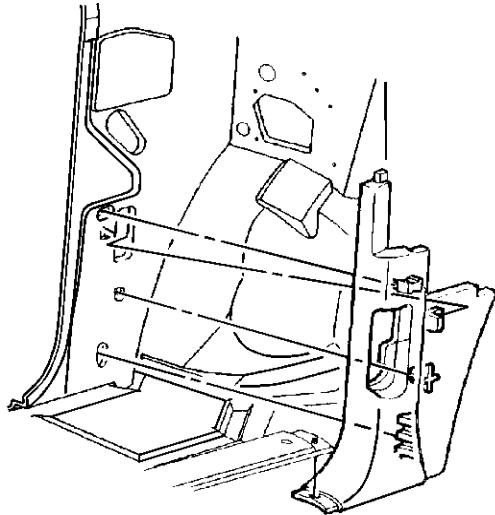

Remove the left front door sill trim plate. Refer to "Door Sill Plate Replacement (Crewcab)" "Door Sill Plate Replacement (Blazer)".

- Remove the body hinge pillar trim panel from the vehicle.

#### Installation Procedure

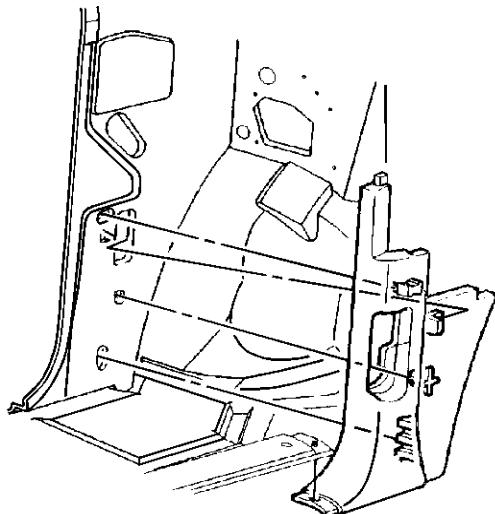


Install the body hinge pillar trim panel to the vehicle.

- Install the left front door sill trim plate. Refer to "Door Sill Plate Replacement (Crewcab)" "Door Sill Plate Replacement (Blazer)".

## Repair Instructions

### Trim Panel Replacement - Right Hinge Pillar


#### Removal Procedure

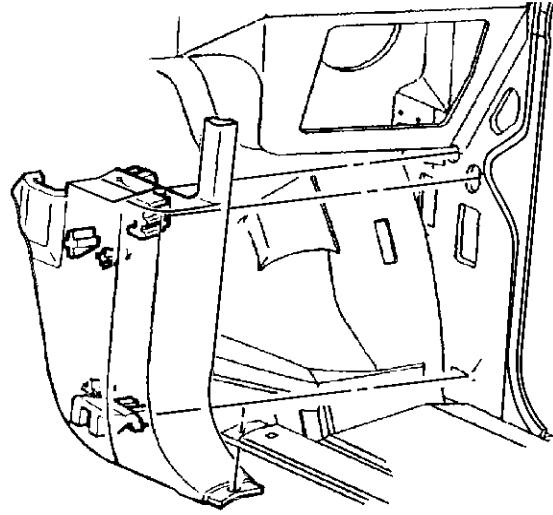

Remove the right front door sill trim plate from the vehicle by gently pulling it upward.

- Remove the right-side instrument panel sound insulator. Refer to "Closeout/Insulator Panel Replacement - Right" in Instrument Panel, Gauges and Console.
- Remove the body hinge pillar trim panel.

#### Installation Procedure

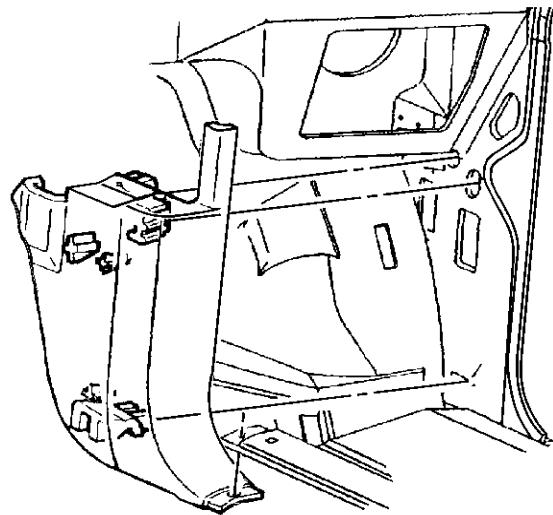


Install the body hinge trim panel.

- Install the right-side instrument panel sound insulator. Refer to "Closeout/Insulator Panel Replacement - Right" in Instrument Panel, Gauges and Console.
- Install the right front door sill trim plate to the vehicle by snapping it into place.

## Repair Instructions

### Trim Panel Replacement - Body Side


#### Removal Procedure

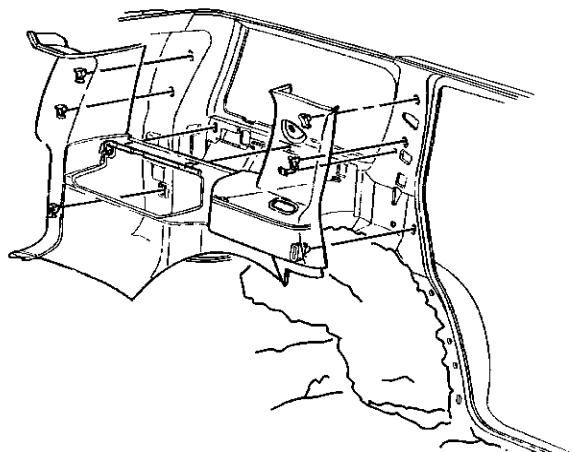

Remove the upper and lower rear seat belt anchor bolts.

- Remove the liftgate opening door sill trim plate. Refer to "Door Sill Plate Replacement - Lift Gate".
- Remove the jack storage cover (driver side only).
- Remove the screws that retain the body side trim panel to the vehicle (driver side only).
- Remove the spare tire and the carrier assembly (if equipped).
- Remove the left and right body side trim panel from the vehicle.
- Feed the seat belt through the trim panel.

#### Installation Procedure

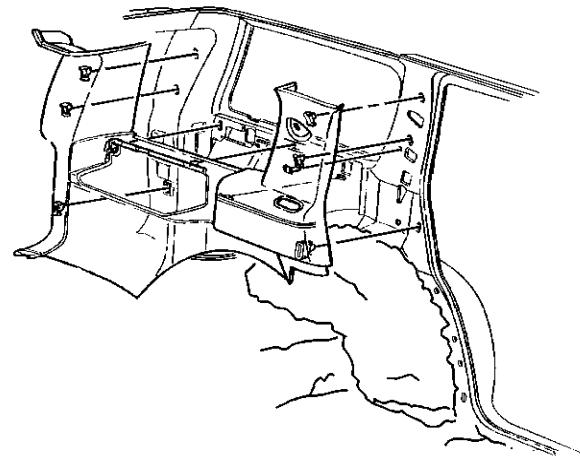

Install the body side trim panel to the vehicle.

- Feed the seat belt through the trim panel.
- **Notice:** Refer to Fastener Notice in Cautions and Notices.

Install the screws that retain the body side trim panel to the vehicle (left side only).

**Tighten:** Tighten the screws to 1.9 Nm (17 lb ft).

- Install the spare tire and the carrier assembly (if equipped).
- Install the jack storage cover (left side only).
- Install the liftgate opening door sill trim plate. Refer to "Door Sill Plate Replacement - Lift Gate".
- Install the upper and lower rear seat belt anchor bolts.

**Tighten:**

- Tighten the upper bolts to 55 Nm (41 lb ft).
- Tighten the lower bolts to 55 Nm (41 lb ft).

## Special Tools and Equipment

### Special Tools

Illustration	Tool Number/ Description
	J 38778 Door Trim Pad Clip Remover

