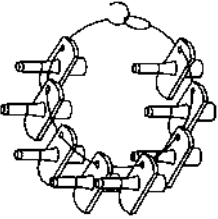
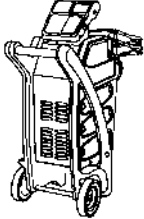
 
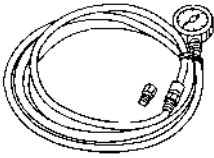
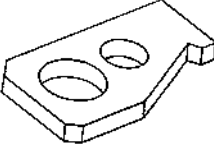
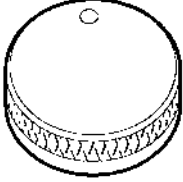
 

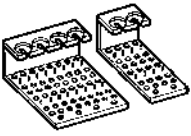
 
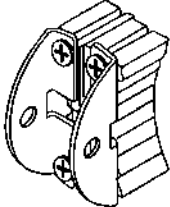
 
 
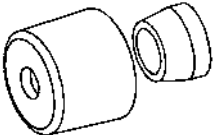
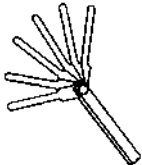
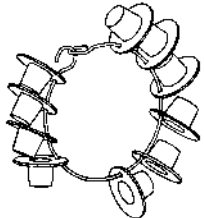



 
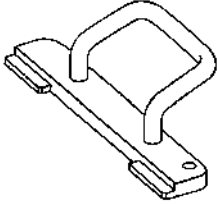
 
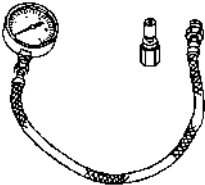
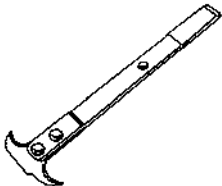
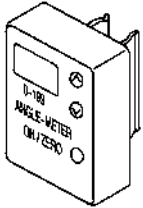
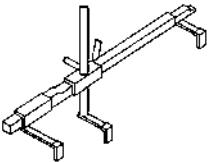
9.6.7.1 专用工具

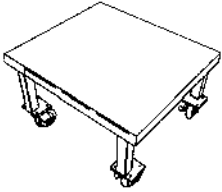
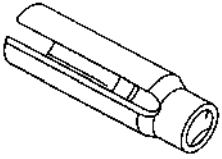
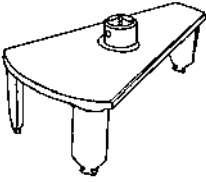
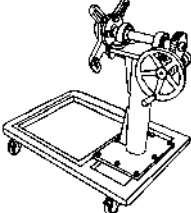
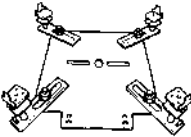

 

图示	工具编号/说明
	CH-807 EN-807 封闭螺塞
	CH-48027 EN-34730-91 EN-49495 DW100-010 数字式压力表
	CH-50619 托架定位销
	EL-42000 蓄电池测试仪
	EN-232 机油压力检查适配器
	EN-235-D 密封件安装套件
	EN-422 KM-422 83 94 959 凸轮盖密封件拆卸工 具/安装工具

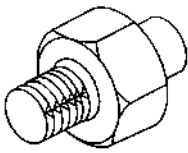
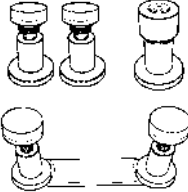
 
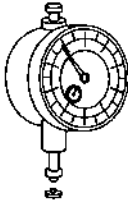
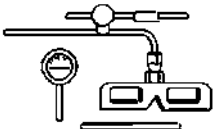
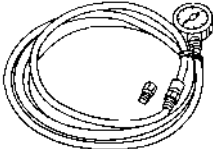
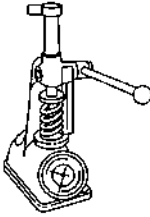
	<p>EN-498-B GE-498-B 机油压力表</p>
	<p>EN-652 KM-652 飞轮固定工具</p>
	<p>EN-658 - 1 KM-658 - 1 J-35624 安装工具</p>
	<p>EN-840 EN-46116 KM-840 J-36017 83 94 157 钳子拆卸工具</p>
	<p>EN-845 KM-845 挺柱吸取设备</p>
	<p>EN-849 KM-849 储藏装置</p>
	<p>EN-956-1 加长件</p>
	<p>EN-958 KM-958</p>

	<p>气门杆密封件安装工具</p>
	<p>EN-6009 KM-6009 83 96 335 点火线圈拆卸工具/安 装工具</p>
	<p>EN-6086 EN-50173 MKM-6086 基本套件，弹簧和楔块 更换工具</p>
	<p>EN-6167 KM-6167 反向固定工具适配器组 件</p>
	<p>EN-6171 KM-6171 释放工具</p>
	<p>EN-6215 KM-6215 安装设备</p>
	<p>EN-6333 KM-6333 正时皮带张紧器固定杆</p>
	<p>EN-6340 KM-6340 锁止工具</p>

	
	<p>EN-6347 反向支柱</p>
	<p>EN-6349 KM-6349 锁销</p>
	<p>EN-6351 KM-6351 装配套筒</p>
	<p>EN-6361 KM-6361 测隙规组件</p>
	<p>EN-6368 塞子组</p>
	<p>EN-6624 KM-6624 后主密封件拆卸工具</p>
	<p>EN-6625 飞轮锁止装置</p>

	
	<p>EN-6628-A KM-6628-A 锁止工具</p>
	<p>EN-8087 J-8087 气缸规</p>
	<p>EN-35314-A 排气系统背压表</p>
	<p>EN-45000 KM-J-45000 J-45000 密封件拆卸工具</p>
	<p>EN-45059 J-45059 角度测量仪</p>
	<p>EN-47519 发动机总成提升托架</p>
	<p>EN-48244</p>

	<p>发动机总成拆卸工具</p>
	<p>EN-48259 EN-6179 氧传感器拆卸/安装工具</p>
	<p>EN-48279 燃油传感器锁环工具</p>
	<p>EN-49721 发动机大修台架</p>
	<p>EN-49802 托架支撑工具</p>
	<p>EN-50129 发动机桥式工具</p>
	<p>EN-50129-GSV 发动机桥式工具适配器</p>
	<p>EN-50170-01 发动机机油压力表适配器</p>

	
	<p>EN-50620 (-EN1, -EN2, -TM1, - TM2, -RM) 动力总成支撑工具</p>
	<p>GE-328-B KM-328-B 销子拆卸工具</p>
	<p>GE-571-B MKM-571-B J-8001 千分表</p>
	<p>GE-7872 千分表座</p>
	<p>GE-21867-A J-21867-A KM-498-B 压力表和适配器组件</p>
	<p>GE-22738-B J-22738-B 气门弹簧测试仪</p>