

I 保险丝

1 号发动机室继电器盒和 1 号发动机室接线盒 (参见 22 页)

保险丝		系统 / 装置名称	位置
10A	DOME	Clock (w/ Navigation System)	22-4
		Clock (w/o Navigation System)	22-4
		Combination Meter	12-7
		Door Control Receiver	2-25
		Foot Lamp (LH)	2-25
		Foot Lamp (RH)	2-26
		Foot Lamp (Rear LH)	2-26
		Foot Lamp (Rear RH)	2-26
		Vanity Lamp (LH)	2-27
		Vanity Lamp (RH)	2-27
		Map Lamp (RH)	2-27
		Map Lamp (LH)	2-28
		Ignition Key Cylinder Light (w/o Smart Entry & Start System)	2-30
		Transponder Key Amplifier (w/o Smart Entry & Start System)	2-30
		Key Slot (w/ Smart Entry & Start System)	2-30
10A	MPX-B	A/C Amplifier (Front)	31-12
		Front Controller	2-69
		Electrical Key Oscillator (Outside Luggage Room)	2-108
		Electrical Key Oscillator (Rear Console)	2-109
		Combination Meter	2-55
		Position Control	2-60
		Door ECU (Front RH)	2-89
		Power Window	2-75
		Steering Sensor	14-4
		Rear Power Seat (Return Control)	17-1
		Rear Controller	17-2
10A	ECU-B	EPS	14-5
15A	TURN-HAZ	Turn Signal Flasher	8-3
20A	D/C CUT	Door Control Receiver	2-25
		Foot Lamp (LH)	2-25
		Foot Lamp (RH)	2-26
		Foot Lamp (Rear LH)	2-26
		Foot Lamp (Rear RH)	2-26
		Vanity Lamp (LH)	2-27

保险丝		系统 / 装置名称	位置
20A	D/C CUT	Vanity Lamp (RH)	2-27
		Map Lamp (RH)	2-27
		Map Lamp (LH)	2-28
		Combination Meter	2-53
		Transponder Key Amplifier (w/o Smart Entry & Start System)	2-30
		Key Slot (w/ Smart Entry & Start System)	2-30
		Rear Power Seat (Return Control)	17-1
		Rear Controller	17-2
		Clock (w/ Navigation System)	22-4
		Clock (w/o Navigation System)	22-4
		Front Window Deicer	23-4
		A/C Amplifier (Front)	31-12
20A	IG2 MAIN	Transponder Key	2-20
		Steering Lock	2-20
		Combination Meter	2-54
		Noise Filter (Bank 1)	4-4
		Noise Filter (Ignition Bank 1)	5-2
		Engine Control (3UZ-FE)	6-16
		Combination Meter	9-9
		Airbag Sensor Assembly Center	13-2
30A	RAD NO.1	Stereo Component Amplifier (14 Speaker)	28-5
		Stereo Component Amplifier (8 Speaker)	29-5
30A	RAD NO.2	Stereo Component Amplifier (14 Speaker)	28-5
		Stereo Component Amplifier (8 Speaker)	29-5
30A	LH J/B-B	Radio Receiver Assembly (14 Speaker)	28-6
		Radio Receiver Assembly (8 Speaker)	29-6
30A	RH J/B-B	Power Source Control	1-1
		Multiplex Communication System (BEAN)	2-21
30A	MAIN	Headlamp	2-3
		Headlamp Cleaner	10-3
30A	ABS2	ABS, TRC, VSC and Tire Pressure Warning System	11-5
30A	STARTER	Engine Control System	7-2
		Starting (w/o Smart Entry & Start System)	3-2
		Engine Control (3GR-FE)	7-9
40A	FAN1	Cooling Fan (3GR-FE)	24-1
50A	ABS1	ABS, TRC, VSC and Tire Pressure Warning System	11-5

I 保险丝

保险丝		系统 / 装置名称	位置
50A	GLW PLG2	Air Conditioner (Front)	31-5
50A	HEATER	Air Conditioner (Front)	31-5
50A	GLW PLG1	Air Conditioner (Front)	31-5
50A	DEFOG	Rear Window Defogger	24-4
60A	P/I-B	Engine Control (3UZ-FE)	6-5
60A	E/G-B	Front Controller	2-70
		Hi Headlamp	2-69
		Charging	3-4
		Engine Control (3UZ-FE)	6-13
		Engine Control (3GR-FE)	7-7
60A	FAN2	Cooling Fan (3UZ- FE)	24-1
60A	E/G-AM	Air Conditioner (Front) (3GR-FE)	31-5
		Front Window Deicer	23-4
		Headlight Cleaner	10-3
80A	LH J/B-AM	Charging	3-4
		ECT and A/T Indicator (3UZ-FE)	6-21
		Engine Control (3UZ-FE)	6-5
		Turn Signal and Hazard Warning Light	8-3
		Adaptive Front-Lighting System	9-5
		Headlight Cleaner	10-3
		ABS, TRC, VSC and Tire Pressure Warning System	11-5
		EPS	14-5
		Sliding Roof	15-2
		Power Seat (Driver's Seat w/o Driving Position Memory)	16-1
		Seat Heater (Front)	18-1
		Electric Tension Reducer	20-1
		Cooling Fan	24-2
		Night View System	25-9
		Parking Assist (Parking Assist-Sensor)	26-6
		Multi-Display	27-5
		Rear Seat Entertainment System	28-18
		Multi-Display	27-5
		Audio System (8 Speaker)	29-3
		Combination Meter	30-5
		Air Conditioner (Front)	31-5
		Air Conditioner (Rear)	32-1

保险丝		系统 / 装置名称	位置
80A	RH J/B-AM	Stop Lamp	2-88
		Transponder Key	2- 18
		Steering Lock	2- 22
		Starting (w/o Smart Entry & Start System)	3-2
		Engine Control (3UZ-FE)	6-5
		Engine Control (3GR-FE)	7-9
		Turn Signal and Hazard Warning Light	8-3
		Adaptive Front-Lighting System	9-5
		Headlight Cleaner	10-3
		ABS, TRC, VSC and Tire Pressure Warning System	11-5
		Pre-Crash Safety System	12-5
		EPS	14-5
		Sliding Roof	15-2
		Power Seat (Driver's Seat w/o Driving Position Memory)	16-1
		Seat Heater (Front)	18-3
		Shift Lock	19-2
		Electric Tension Reducer	20-1
		Cigarette Lighter	21-3
		Power Outlet	21-4
		Clock (w/ Navigation System)	22-4
		Clock (w/o Navigation System)	22-4
		Front Window Deicer	23-4
		Cooling Fan (3GR-FE)	24-1
		Cooling Fan (3UZ-FE)	24-1
		Night View System	25-9
		Parking Assist (Parking Assist-Sensor)	26-6
		Navigation System and Parking Assist (Back Guide Monitor)	27-5
		Audio System (14 Speaker)	28-3
		Audio System (8 Speaker)	29-3
		Air Conditioner (Front)	31-5
		Air Conditioner (Rear)	32-1
80A	RR J/B	M ultiplex Commun ication System (BEAN)	2-15
		Pre-Crash Safety System	12-5
		Power Seat (Rear Passenger's Seat)	17-2
		Seat Heater (Rear)	19-4
		Electric Tension Reducer	20-1

I 保险丝

保险丝		系统 / 装置名称	位置
80A	RR J/B	Air Conditioner (Rear)	32-3
80A	EPS	EPS	14-4
150A	ALT	Starting (w/o Smart Entry & Start System)	3-2
		ECT and A/T Indicator (3UZ-FE)	6-25
		Engine Control (3GR-FE)	7-9
		Turn Signal and Hazard Warning Light	8-3
		Adaptive Front-Lighting System	9-5
		Headlight Cleaner	10-3
		ABS, TRC, VSC and Tire Pressure Warning System	11-5
		Pre-Crash Safety System	12-5
		EPS	14-5
		Sliding Roof	15-2
		Power Seat (Driver's Seat w/o Driving Position Memory)	16-1
		Power Seat (Rear Passenger's Seat)	17-2
		Seat Heater (Front)	18-3
		Shift Lock	19-2
		Seat Heater (Rear)	19-4
		Electric Tension Reducer	20-1
		Cigarette Lighter	21-3
		Power Outlet	21-4
		Clock (w/ Navigation System)	22-4
		Clock (w/o Navigation System)	22-4
		Front Window Deicer	23-4
		Cooling Fan (3GR-FE)	24-1
		Cooling Fan (3UZ-FE)	24-1
		Night View System	25-9
		Parking Assist (Parking Assist-Sensor)	26-6
		Navigation System and Parking Assist (Back Guide Monitor)	27-5
		Audio System (14 Speaker)	28-3
		Audio System (8 Speaker)	29-3
		Air Conditioner (Front)	31-5
		Air Conditioner (Rear)	32-1
		Fuel Lid Opener	30-8

2 号发动机室继电器盒和 2 号发动机室接线盒 (参见 26 页)

保险丝		系统 / 装置名称	位置
7.5A	A/C COMP	Air Conditioner (Front) (3GR-FE)	31-5

保险丝		系统 / 装置名称	位置
7.5A	ALT-S	Charging (3UZ-FE)	3-4
10A	IG2	Ignition (3UZ-FE)	4-4
		Ignition (3GR-FE)	5-4
		Engine Control (3UZ-FE)	6-5
		Engine Control (3GR-FE)	7-9
10A	EFI NO.2	Engine Control (3UZ-FE)	6-5
		Engine Control (3GR-FE)	7-9
10A	ETCS	Engine Control (3UZ-FE)	6-15
		Engine Control (3GR-FE)	7-9
10A	PTL1	Multiplex Communication System (BEAN)	2-85
10A	FR TAIL	Front Controller	2-70
		Multiplex Communication System (BEAN)	2-70
10A	HORN	Front Controller	2-70
15A	A/F	Engine Control (3GR-FE)	7-15
15A	H-LP R LWR	Headlamp	2-67
15A	H-LP L LWR	Headlamp	2-67
15A	H-LP UPR	Headlamp	2-70
15A	FR FOG	Front Fog Light	2-70
20A	WASHER	Washer	2-70
25A	FR CTRL-B	Front Controller	2-70
		Headlamp	2-67
25A	DEICER	Front Window Deicer	23-4
25A	F/PMP	Engine Control (3GR-FE)	7-9
25A	EFI	Engine Control (3UZ-FE)	6-15
		Engine Control (3GR-FE)	7-9
30A	ABS2	ABS, TRC, VSC and Tire Pressure Warning System	11-5
30A	FR CTRL-AM	Front Controller	2-70
		Front Fog Light	2-70
		Washer	2-70
30A	H-LP CLN	Headlight Cleaner	10-3

驾驶员侧接线盒 (参见 36 页)

保险丝		系统 / 装置名称	位置
7.5A	H-LP LVL	Adaptive Front-Lighting System	9-5
7.5A	TV	Navigation System and Parking Assist (Back Guide Monitor)	27-5
		Rear Seat Entertainment System	28-18
		Audio System (14 Speaker)	28-3

I 保险丝

保险丝		系统 / 装置名称	位置
7.5A	TV	Audio System (8 Speaker) (w/ Navigation System)	29-5
		Audio System (8 Speaker) (w/o Navigation System)	29-4
7.5A	PANEL	Illumination	2-37
		Air Conditioner (Front)	31-16
7.5A	A/C	Air Conditioner (Front)	31-8
10A	LH-IG	Charging	3-4
		ECT and A/T Indicator (3UZ-FE)	6-21
		Engine Control (3GR-FE)	7-9
		Turn Signal and Hazard Warning Light	8-3
		Headlight Cleaner	10-3
		Electric Tension Reducer	20-1
		Cooling Fan	24-3
		Parking Assist (Parking Assist-Sensor)	26-6
		Air Conditioner (Rear)	32-1
10A	ECU-IG LH	Front Controller	2-70
		ABS, TRC, VSC and Tire Pressure Warning System	11-5
		EPS	14-5
		Sliding Roof	15-2
		Navigation System and Parking Assist (Back Guide Monitor)	27-5
		Air Conditioner (Front)	31-5
10A	LH-B	Illumination	2-31
10A	FUEL OPN	Combination Meter	30-8
		Fuel Lid Opener	30-8
10A	RAD NO.3	Audio System (14 Speaker)	28-6
		Audio System (8 Speaker)	29-6
15A	FR S/HTR LH	Seat Heater (Front)	18-3
20A	FR DOOR LH	Multiplex Communication System (BEAN)	2-71
20A	RR DOOR LH	Multiplex Communication System (BEAN)	2-95
25A	S/ROOF	Sliding Roof	15-3
30A	FR WIP	Windshield Wiper Motor	2-33
30A	FR P/SEAT LH	Power Seat (Lumbar Support)	2-58
		Power Seat (Driver's Seat w/o Driving Position Memory)	16-1

前乘员侧接线盒 (参见 42 页)

保险丝		系统 / 装置名称	位置
7.5A	ACC	Multiplex Communication System (AVC-LAN)	1-4
		Transponder Key	2-19

保险丝		系统 / 装置名称	位置
7.5A	ACC	Rear Sunshade (w/ Rear Sunshade)	2-78
		Clock (w/ Navigation System)	22-4
		Clock (w/o Navigation System)	22-4
		Television Camera Controller	27-5
		Multi-Display	27-5
		Audio System (14 Speaker)	28-3
		Audio System (8 Speaker)	29-3
		Rear Seat Entertainment System	28-18
		Rear Controller	28-4
		Air Conditioner (Rear)	32-1
7.5A	AM1	Shift Lock	19-2
		Starting (w/o Smart Entry & Start System)	3-2
		Engine Control (3GR-FE)	7-9
7.5A	SECURITY	Engine Immobiliser System (w/o Smart Entry & Start System)	7-29
7.5A	RH-IG	ECT and A/T Indicator (3UZ-FE)	6-24
		Cruise Control (3GR-FE)	7-19
		Seat Heater (Front)	18-4
		Electric Tension Reducer	20-4
		Front Window Deicer	23-4
		Parking Assist (Parking Assist-Sensor)	26-6
		Air Conditioner (Front)	31-9
7.5A	STOP SW	Stop Lamp	2-88
7.5A	GAUGE	Combination Meter	2-54
		Engine Control (3UZ-FE)	6-16
		ECT and A/T Indicator (3GR-FE)	7-23
7.5A	OBD	DLC3	7-27
10A	ECU-IG RH	Multiplex Communication System (AVC-LAN)	1-4
		Multiplex Communication System (BEAN)	2-50
		Shift Lock	19-2
		Night View System	25-6
		Navigation System and Parking Assist (Back Guide Monitor)	27-5
		Audio System (14 Speaker)	28-6
		Audio System (8 Speaker)	29-3
		Air Conditioner (Front)	31-9
10A	IGN	Steering Lock	2-20

I 保险丝

保险丝		系统 / 装置名称	位置
10A	IGN	Engine Control (3UZ-FE)	6-16
		ECT and A/T Indicator (3GR-FE)	7-23
		SRS	13-2
15A	PWR OUTLET	Power Outlet	21-4
15A	CIG	Cigarette Lighter	21-3
15A	FR S/HTR RH	Seat Heater (Front)	18-4
15A	AM2	Starting (w/o Smart Entry & Start System)	3-2
		Engine Control (3UZ-FE)	6-5
		Engine Control (3GR-FE)	7-5
		Turn Signal and Hazard Warning Light	8-3
		Adaptive Front-Lighting System	9-5
		Headlight Cleaner	10-3
		ABS, TRC, VSC and Tire Pressure Warning System	11-5
		SRS	13-2
		EPS	14-5
		Sliding Roof	15-2
		Shift Lock	19-2
		Electric Tension Reducer	20-1
		Cigarette Lighter	21-3
		Power Outlet	21-4
		Clock (w/ Navigation System)	22-4
		Clock (w/o Navigation System)	22-4
		Front Window Deicer	23-4
		Cooling Fan (3GR-FE)	24-1
		Cooling Fan (3UZ-FE)	24-1
		Night View System	25-9
		Parking Assist (Parking Assist-Sensor)	26-6
		Navigation System and Parking Assist (Back Guide Monitor)	27-5
		Audio System (14 Speaker)	28-3
		Audio System (8 Speaker)	29-3
		Air Conditioner (Front)	31-5
		Air Conditioner (Rear)	32-1
20A	TI & TE	Power Tilt and Power Telescopic	2-50
20A	FR DOOR RH	Multiplex Communication System (BEAN)	2-89
20A	RR DOOR RH	Multiplex Communication System (BEAN)	2-99
25A	STR LOCK	Steering Lock	2-22

保险丝		系统 / 装置名称	位置
30A	PTL2	Multiplex Communication System (BEAN)	2-85
30A	FR P/SEAT RH	Power Seat (Front Passenger's Seat)	16-4

行李箱接线盒 (参见 53 页)

保险丝		系统 / 装置名称	位置
7.5A	RR FOG	Rear Fog Light	2-83
10A	RR TAIL	Taillight	2-88
10A	STOP LP R	Stop Lamp	2-88
10A	RR-B	Rear Fog Light	2-83
		Taillight	2-88
		Stop Lamp	2-88
		Air Conditioner (Rear)	32-1
10A	RR-IG1	Taillight	2-88
		Stop Lamp	2-88
		Rear Fog Light	2-83
		Rear Sunshade	2-79
		Electric Tension Reducer	20-1
10A	STOP LP L	Stop Lamp	2-88
15A	RR S/HTR	Seat Heater (Rear)	19-4
30A	RR P/SEAT	Power Seat (Rear Passenger's Seat)	17-2