

SECTION SE

SEAT

CONTENTS

BASIC INSPECTION	4	POWER RETURN SWITCH	15
DIAGNOSIS AND REPAIR WORKFLOW	4	LH	15
WorkFlow	4	LH : Description	15
SYSTEM DESCRIPTION	5	LH : Component Function Check	15
POWER SEAT	5	LH : Diagnosis Procedure	15
System Description	5	LH : Component Inspection	16
Component Parts Location	5	RH	16
Component Description	6	RH : Description	16
HEATED SEAT	7	RH : Component Function Check	16
System Description	7	RH : Diagnosis Procedure	16
Component Parts Location	7	RH : Component Inspection	17
Component Description	7	REAR SEATBACK SWITCH	19
LUMBAR SUPPORT	8	LH	19
System Description	8	LH : Description	19
Component Parts Location	8	LH : Component Function Check	19
Component Description	8	LH : Diagnosis Procedure	19
REAR SEATBACK RELEASE CONTROL	9	LH : Component Inspection	20
System Description	9	RH	20
Component Parts Location	9	RH : Description	20
Component Description	9	RH : Component Function Check	20
REAR SEATBACK POWER RETURN SYSTEM	10	RH : Diagnosis Procedure	20
System Diagram	10	RH : Component Inspection	21
System Description	10	PRIMARY POSITION LIMIT SWITCH	23
Component Parts Location	13	LH	23
Component Description	13	LH : Description	23
DTC/CIRCUIT DIAGNOSIS	14	LH : Component Function Check	23
POWER SUPPLY AND GROUND CIRCUIT	14	LH : Diagnosis Procedure	23
REAR SEATBACK POWER RETURN CONTROL UNIT	14	LH : Component Inspection	24
REAR SEATBACK POWER RETURN CONTROL UNIT : Diagnosis Procedure	14	RH	24
		RH : Description	24
		RH : Component Function Check	24
		RH : Diagnosis Procedure	25
		RH : Component Inspection	26
		RETURN COMPLETE LIMIT SWITCH	27

LH	27	Reference Value	58
LH : Description	27	Wiring Diagram - REAR SEATBACK POWER RE-	
LH : Component Function Check	27	TURN SYSTEM -	61
LH : Diagnosis Procedure	27	Fail-safe	67
LH : Component Inspection	28		
RH	28	SYMPTOM DIAGNOSIS	69
RH : Description	28	REAR SEATBACK POWER RETURN SYS-	
RH : Component Function Check	28	TEM DOES NOT OPERATE	69
RH : Diagnosis Procedure	29		
RH : Component Inspection	30	BOTH SIDES	69
MOTOR SENSOR	31	BOTH SIDES : Diagnosis Procedure	69
LH	31	LH	69
LH : Description	31	LH : Diagnosis Procedure	69
LH : Component Function Check	31		
LH : Diagnosis Procedure	31	RH	70
RH	33	RH : Diagnosis Procedure	70
RH : Description	33		
RH : Component Function Check	33	MALFUNCTION DETECTION BUZZER	
RH : Diagnosis Procedure	33	SOUNDS DURING POWER RETURN MO-	
POWER RETURN MOTOR	36	TOR INVERSE ROTATION	72
LH	36	LH	72
LH : Description	36	LH : Diagnosis Procedure	72
LH : Component Function Check	36		
LH : Diagnosis Procedure	36	RH	72
RH	37	RH : Diagnosis Procedure	72
RH : Description	37		
RH : Component Function Check	37	DOES NOT RETURN BUT MALFUNCTION	
RH : Diagnosis Procedure	37	DETECTION BUZZER SOUNDS	74
VEHICLE SPEED SIGNAL CIRCUIT	39	LH	74
Description	39	LH : Diagnosis Procedure	74
Component Function Check	39		
Diagnosis Procedure	39	RH	74
POWER SEAT	41	RH : Diagnosis Procedure	74
Wiring Diagram - POWER SEAT FOR DRIVER			
SIDE (WITHOUT AUTOMATIC DRIVE POSI-			
TIONER) -	41	ANTI-PINCH FUNCTION DOES NOT OPER-	
Wiring Diagram - POWER SEAT FOR PASSEN-		ATE	75
GER SIDE -	44	Diagnosis Procedure	75
HEATED SEAT	47	SQUEAK AND RATTLE TROUBLE DIAG-	
Wiring Diagram - HEATED SEAT -	47	NOSES	76
LUMBAR SUPPORT	51	Work Flow	76
Wiring Diagram - LUMBAR SUPPORT SYSTEM -	51	Inspection Procedure	78
REAR SEATBACK RELEASE CONTROL	54	Diagnostic Worksheet	80
Wiring Diagram - REAR SEATBACK RELEASE			
CONTROL -	54	PRECAUTION	82
ECU DIAGNOSIS INFORMATION	58	PRECAUTIONS	82
REAR SEAT BACK POWER RETURN CON-		Precaution for Supplemental Restraint System	
TROL UNIT	58	(SRS) "AIR BAG" and "SEAT BELT PRE-TEN-	
		SIONER"	82
		Precaution Necessary for Steering Wheel Ro-	
		tation after Battery Disconnect	82
		Service Notice	83
		Precaution for Work	83
		PREPARATION	84
		PREPARATION	84
		Special Service Tool	84

Commercial Service Tool	84	Exploded View	105
CLIP LIST	85	Removal and Installation	105
Clip List	85		
REMOVAL AND INSTALLATION	86	LUMBAR SUPPORT SWITCH	106
FRONT SEAT	86	Exploded View	106
Exploded View	86	Removal and Installation	106
Removal and Installation	89		
Disassembly and Assembly	90	HEATED SEAT SWITCH	107
REAR SEAT	97	Exploded View	107
Exploded View	97	Removal and Installation	107
Removal and Installation	98		
Disassembly and Assembly	100	POWER RETURN SWITCH	108
REAR SEAT BACK POWER RETURN CON- TROL UNIT	104	Exploded View	108
Exploded View	104	Removal and Installation	108
Removal and Installation	104		
POWER SEAT SWITCH	105	REAR SEATBACK SWITCH	109
		Exploded View	109
		Removal and Installation	109
		REAR SEATBACK RELEASE SWITCH	110
		Exploded View	110
		Removal and Installation	110

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SE

< BASIC INSPECTION >

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

WorkFlow

INFOID:000000004347345

DETAILED FLOW

1. OBTAIN INFORMATION ABOUT SYMPTOM

Interview the customer to obtain the malfunction information (conditions and environment when the malfunction occurred) as much as possible when the customer brings the vehicle in.

>> GO TO 2.

2. REPRODUCE THE MALFUNCTION INFORMATION

Check the malfunction on the vehicle that the customer describes.

Inspect the relation of the symptoms and the condition when the symptoms occur.

>> GO TO 3.

3. IDENTIFY THE MALFUNCTIONING SYSTEM WITH "SYMPTOM DIAGNOSIS"

Use "Symptom diagnosis" from the symptom inspection result in step 2 and then identify where to start performing the diagnosis based on possible causes and symptoms.

>> GO TO 4.

4. IDENTIFY THE MALFUNCTIONING PARTS WITH "COMPONENT DIAGNOSIS"

Perform the diagnosis with "Component diagnosis" of the applicable system.

>> GO TO 5.

5. REPAIR OR REPLACE THE MALFUNCTIONING PARTS

Repair or replace the specified malfunctioning parts.

>> GO TO 6.

6. FINAL CHECK

Check that malfunctions are not reproduced when obtaining the malfunction information from the customer, referring to the symptom inspection result in step 2.

Are the malfunctions corrected?

YES >> INSPECTION END
NO >> GO TO 3.

< SYSTEM DESCRIPTION >

SYSTEM DESCRIPTION

POWER SEAT

System Description

INFOID:000000004347346

BCM can operate regardless of the ignition switch position, because battery power is supplied at all times to power seat switch.

SLIDING OPERATION

While operating the sliding switch located in power seat switch, sliding motor operates and makes possible the seat front and back position adjustment.

RECLINING OPERATION


While operating the reclining switch located in power seat switch, reclining motor operates and makes possible the seat back forward and backward position adjustment.

LIFTING OPERATION

While operating the lifting switch located in power seat switch, lifting motor operates and makes possible the seat cushion up and down position adjustment.

Component Parts Location

INFOID:000000004347347

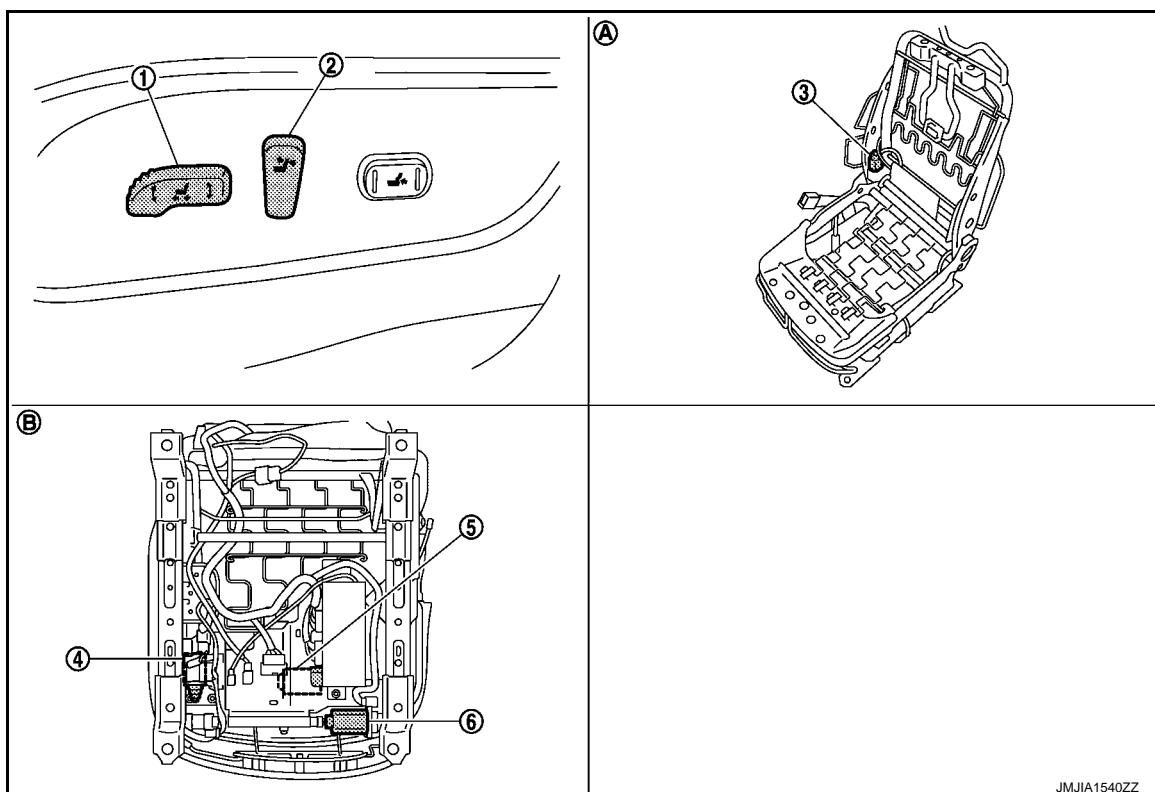

JMJA1540ZZ

- 1. Sliding switch and lifting switch (driver side) B414
- 2. Reclining switch (driver side) B414
- 3. Reclining motor (driver side) B415
- 4. Lifting motor (rear) (driver side) B418
- 5. Lifting motor (front) (driver side) B417
- 6. Sliding motor (driver side) B416

A. View with seat cushion pad and seat back pad are removed.
 B. Backside of seat cushion

A

B

C

D

E

F

G

H

I

SE

K

L

M

N

O

P

POWER SEAT

< SYSTEM DESCRIPTION >

Component Description

INFOID:000000004347348

Item	Function
BCM	Supplies at all times the power received from battery to power seat switch
Power seat switch	Built-in reclining switch, sliding switch and lifting switch, controls the power supplied to each motor
Reclining motor	With the power supplied from power seat switch, operates forward and backward movement of seatback
Sliding motor	With the power supplied from power seat switch, operates forward and backward slide of seat
Lifting motor (front/rear)	With the power supplied from power seat switch, operates up and down movement of seat cushion

HEATED SEAT

< SYSTEM DESCRIPTION >

HEATED SEAT

System Description

INFOID:0000000004347349


Heated seat is a system that operates when ignition switch is in ON position.

HEATER OPERATION

- While operating the heated seat switch, seat cushion heater and seat back heater operate.
- Temperature of seat can be adjusted by operating on heated seat switch.

Component Parts Location

INFOID:0000000004347350

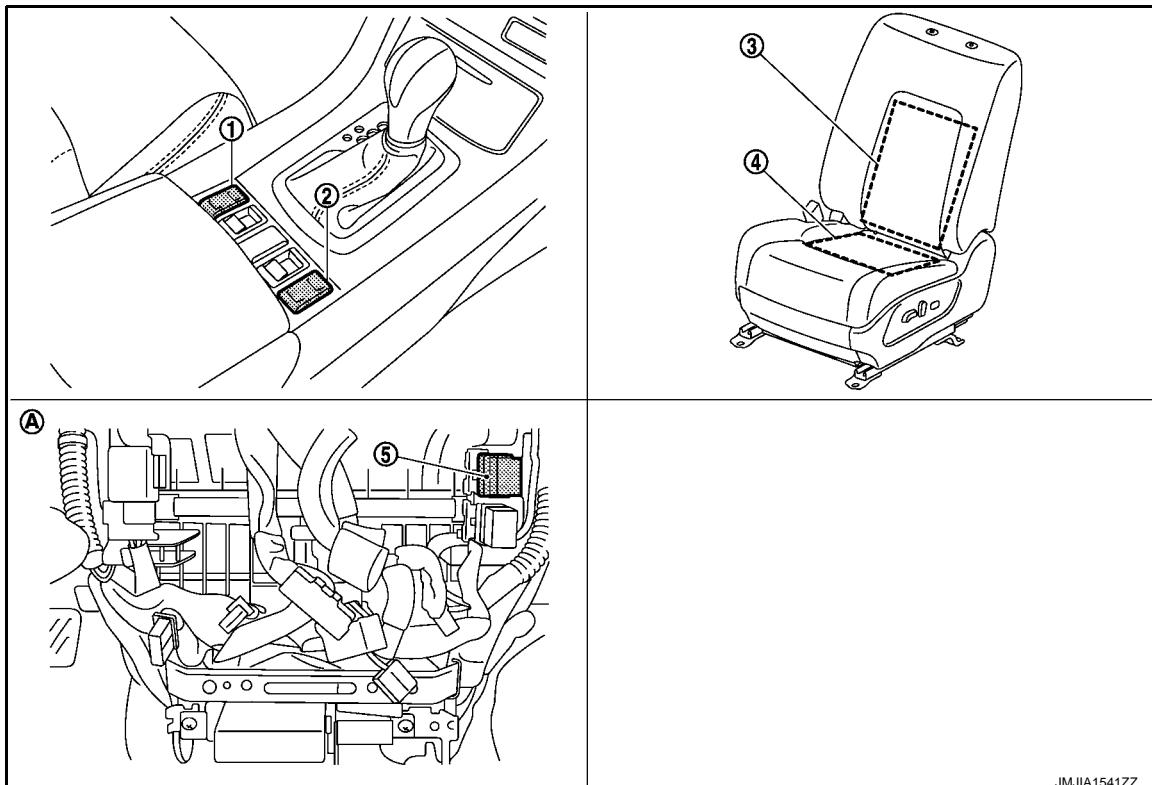

JMJIA1541ZZ

1. Heated seat switch (driver side)
M172
2. Heated seat switch (passenger side)
M173
3. Seat back heater
 - Driver side B412
 - Passenger side B432
4. Seat cushion heater
 - Driver side B412
 - Passenger side B432
5. Heated seat relay M70

A. Behind cluster lid C

Component Description

INFOID:0000000004347351

Item	Function
Heated seat switch	<ul style="list-style-type: none">• Power is supplied to each heater• Depending on LOW/HIGH position of switch, operating heater number is changeable
Seat cushion heater	Built-in seat cushion, heater operate with the power supplied from heater seat switch
Seat back heater	Built-in seatback, heater operate with the power supplied from heater seat switch

LUMBAR SUPPORT

< SYSTEM DESCRIPTION >

LUMBAR SUPPORT


System Description

INFOID:0000000004347352

- Lumbar support can operate regardless of the ignition switch position because battery power is supplied to it at all times.
- While operating the lumbar support switch, lumbar support motor operates which allows forward and backward operation of seatback support.

Component Parts Location

INFOID:0000000004347353

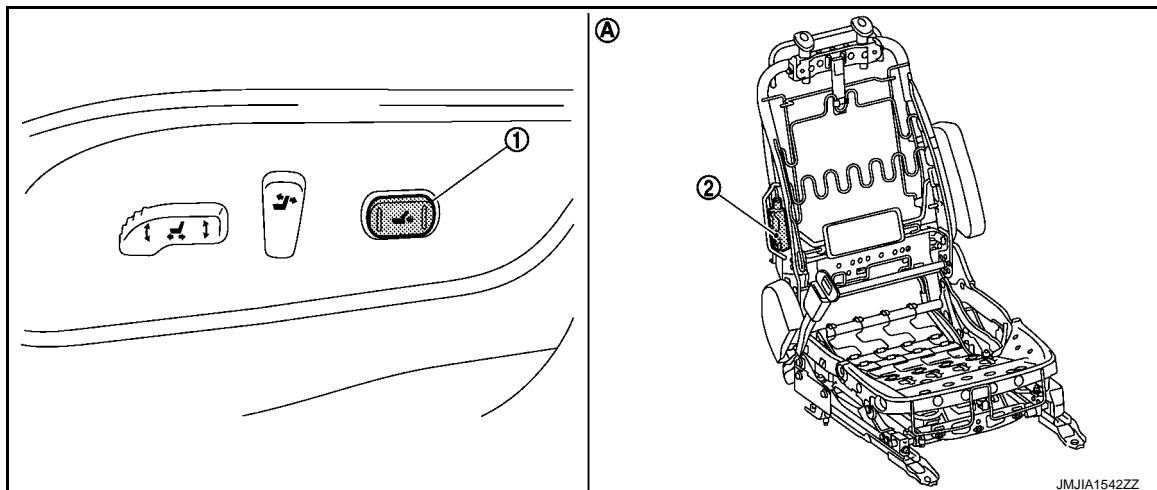

1. Lumbar support switch B457
2. Lumbar support motor B458

A. View with seat back pad is removed

Component Description

INFOID:0000000004347354

Item	Function
Lumbar support switch	Controls the power supplied to lumbar support motor
Lumbar support motor	With the power supplied from lumbar support switch, operates forward and backward movement of seatback support device

REAR SEATBACK RELEASE CONTROL

< SYSTEM DESCRIPTION >

REAR SEATBACK RELEASE CONTROL


System Description

INFOID:0000000004347355

- Rear seatback release control is composed of rear seatback release switch and rear seatback release actuator
- When rear seatback release switch is pressed, the rear seatback release actuator operate in order to unlock the rear seatback lock
- When the rear seatback is unlocked, the spring located inside the rear seat device rebound, and the rear seatback return to the fall down position

Component Parts Location

INFOID:0000000004347356

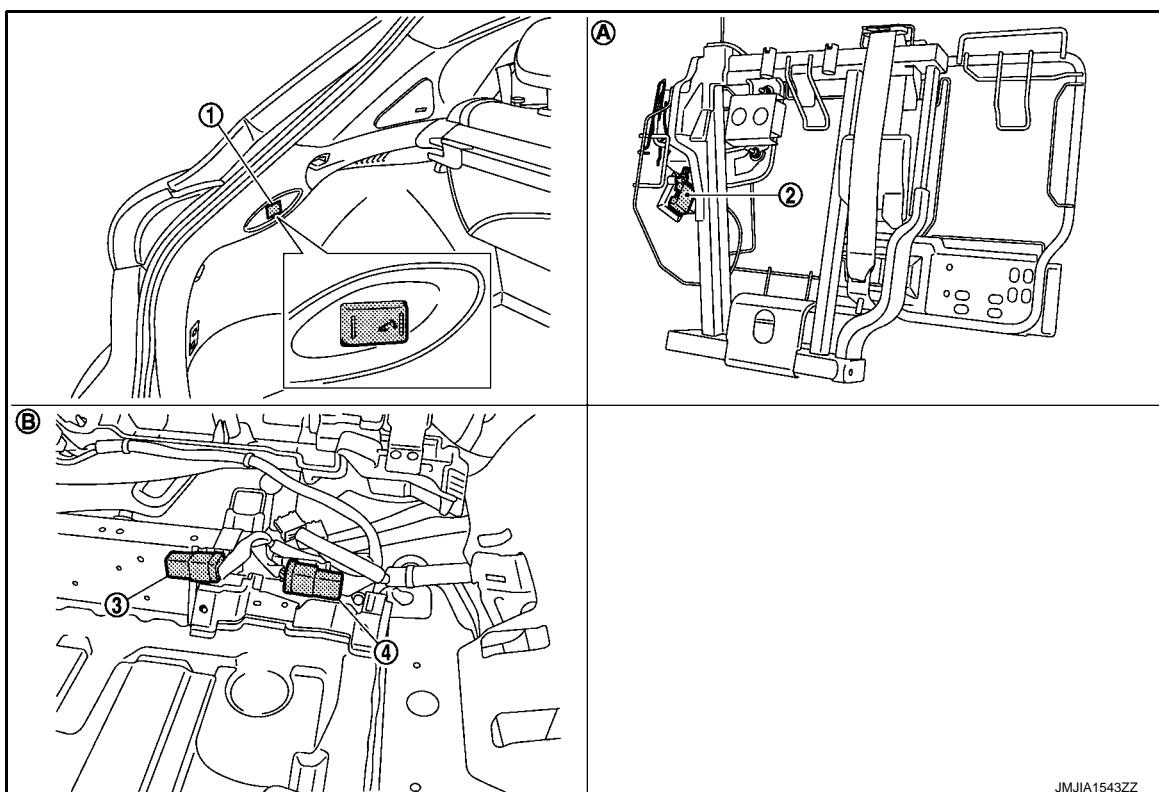

Component Description

INFOID:0000000004347357

Item	Function
Rear seatback release switch	Release the rear seatback when it is locked
Rear seatback release actuator	Pressed the rear seatback release switch to release the rear seatback when it is locked


REAR SEATBACK POWER RETURN SYSTEM

< SYSTEM DESCRIPTION >

REAR SEATBACK POWER RETURN SYSTEM

System Diagram

INFOID:0000000004347358

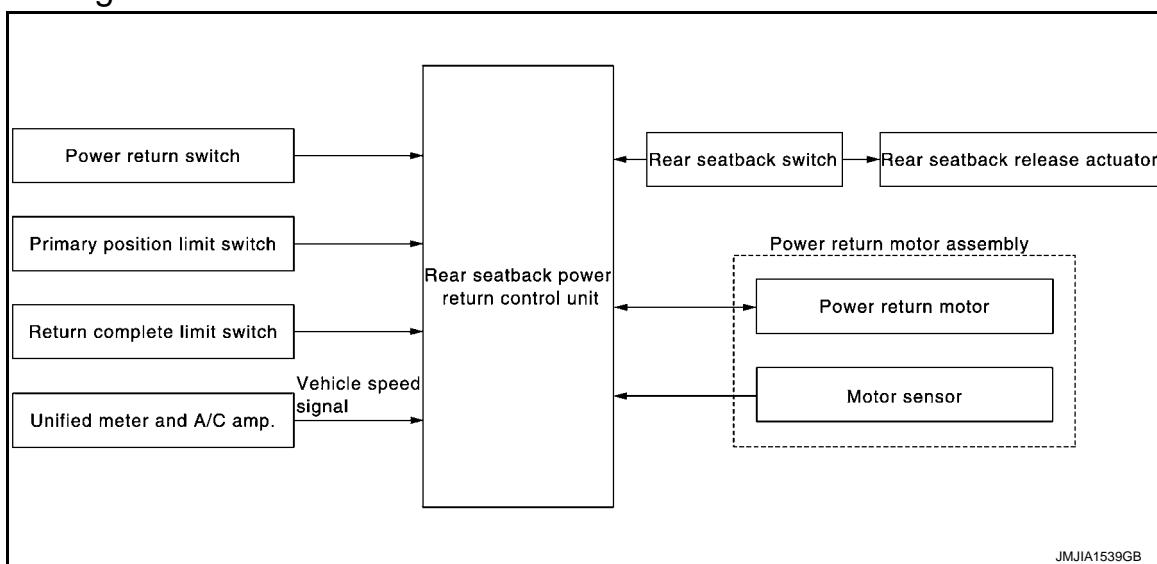

System Description

INFOID:0000000004347359

DESCRIPTION

Rear Seatback Release Control

- Rear seatback release control is composed of rear seatback release switch and rear seatback release actuator
- When rear seatback switch is pressed in release direction, the rear seatback release actuator operate in order to unlock the rear seatback lock
- When the rear seatback is unlocked, the spring located inside the rear seat device rebound, and the rear seatback return to the fall down position.

Rear Seatback Power Return System

- The rear seat back power return system is the system that enables the return operation of the left and right rear seatbacks independently by pressing and holding the power return switch or the rear seatback switch in the UP direction.
- As for the safety mechanism, the reverse operation is performed if the switch is released during the return operation. The anti-pitch function is installed so that the automatic reverse operation is performed if the pinching of foreign materials between the left and right rear seatbacks is detected.

OPERATION DESCRIPTION

The rear seatback power return system consists of the sector gear that transmits the movement information of rear seatback power return control unit, power return switch, power return motor, motor sensor, primary position limit switch, return complete limit switch and power return motor.

Return Operation Starting Condition

The rear seat back return operation starts when all of the following conditions are satisfied.

- Vehicle speed 2 km/h (1 MPH) or less
- Return complete limit switch: ON
- The battery voltage is normal

Operation sequence	Rear seatback condition	Sector gear condition	Primary position limit switch	Return complete limit switch
1	Return completion position	Initial position	OFF	OFF
2	Fold-down position	Initial position	OFF	ON
3	Active	Return non-completion position	OFF → ON	ON

REAR SEATBACK POWER RETURN SYSTEM

< SYSTEM DESCRIPTION >

Operation sequence	Rear seatback condition	Sector gear condition	Primary position limit switch	Return complete limit switch
4	Return completion position	Return completion position	ON	OFF
5		Initial position	OFF	OFF

- In the condition that the rear seatback is raised (return completion position), the sector gear is in the initial position and the primary position limit switch and return complete limit switch are OFF.
- When the rear seatback to the fold-down position, the return complete limit switch turns ON, and the rear seatback power return control unit judges that the rear seatback is tilted (return non-completion position).
- When pressing and holding the power return switch or the rear seatback switch in the UP direction, the rear seatback power return control unit detects the power return ON signal and supplies the power to the power return motor. Then, the rear seatback power return control unit sounds the operation start buzzer.
- With the power supplied from the rear seat back power control unit, the power return motor rotates in the return direction. The rear seatback starts the return operation via the sector gear.
- When the sector gear starts rotating in the return direction, the primary position limit switch turns ON. The rear seatback power return control unit judges that the sector gear is in any position other than the initial position.
- When the rear seatback moves to the return position, the return complete limit switch turns OFF. The rear seatback power return control unit activates the return completion buzzer and stops the power return motor. Then, the rear seatback power return control unit reverses the power return motor after 0.2 seconds so that the sector gear returns to the initial position.
- When the sector gear returns to the initial position by reverse rotation of the power return motor, the primary position limit switch turns OFF. The rear seatback power return control unit stops the reverse operation of the power return motor. The return operation is completed.
- When releasing the switch during the return operation (both the primary position limit switch and return complete limit switch are ON), the rear seatback power return control unit detects the power switch OFF signal and returns the rear seatback to the fold-down position by the reverse rotation of the power return motor. When pushing the switch again during the reverse operation, the return operation restarts.

NOTE:

Disconnect the battery with the sector gear in any position other than the initial position (primary position limit switch: ON). The sector gear is returned to the initial position when the battery is connected again.

ANTI-PINCH OPERATION

When the pinch between RH/LH rear seatbacks is detected during the return operation, the malfunction detecting buzzer sounds and the rear seatback returns to the fold-down position.

- If there is a pinching of foreign materials between the left and right rear seatbacks during the return operation (both the primary position limit switch and return complete switch are ON), the voltage pulse of motor sensor changes.
- When inputting the pinching signal from the motor sensor, the rear seatback power return control unit sounds the malfunction detecting buzzer and stops the power return motor. Then, the rear seatback power return control unit reverses the power return motor after 0.2 second so that the rear seatback returns to the fold-down position.

SECTOR GEAR REVERSE STARTING CONDITION

If any of the following conditions are satisfied, the sector gear may be reversed.

- Rear seatback return is completed (return complete limit switch: OFF)
- Release the power return switch before completing the return
- Pinch detection
- Lock detection of power return motor
(Lock at normal rotation)
- The rear seatback return is not completed within 60 seconds
- Detect the battery voltage malfunction during the return operation
- Return to the normal condition after detecting the battery voltage malfunction during the return operation
- The primary position limit switch does not turn OFF → ON within the specified motor pulse number from starting the return operation.

SECTOR GEAR REVERSE STOP CONDITION

If any of the following conditions are satisfied, the reverse operation stops.

- Sector gear initial position (primary position limit switch: OFF)
- Lock detection of power return motor (Lock during reverse operation)
- The sector gear initial position is not completed within 60 seconds

REAR SEATBACK POWER RETURN SYSTEM

< SYSTEM DESCRIPTION >

NOTE:

The battery voltage indicates the voltage between battery voltage (system) terminal 17 and GND (system) terminal 32 of rear seatback power return control unit. It is normal when the voltage is $7.5 \pm 10\%$ or more. If it is less than the specified value, there is a malfunction.

POWER CONSUMPTION CONTROL SYSTEM

Rear seatback power return control unit incorporates a power consumption control function that reduces the power consumption according to the vehicle status.

Low Power Consumption Mode

If all of the following conditions are satisfied for 30 seconds period of time, the system shifts to the low power consumption mode.

- Power return switch or rear seatback switch is OFF
- Power return motor does not operate
- Vehicle speed 2 km/h (1 MPH) or less




If any of the following conditions are satisfied, the low power consumption mode is released.

- When the power return switch or rear seatback switch is pressed
- When the change occurs to the pulse of vehicle speed sensor

There are the following functions as the low power consumption mode.

- Turn the power supply of primary position limit switch and return complete limit switch to OFF
- Turn the power supply of the motor sensor to OFF when the power return motor is not operated

BUZZER OPERATION PATTERN AND ORDER OF PRIORITY

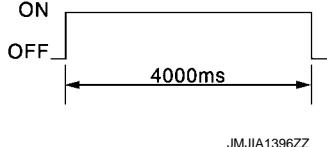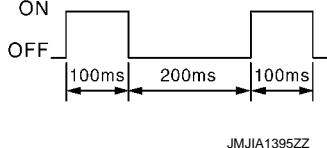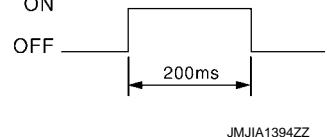
Operation type	Sound pattern	Priority
Malfunction		1
Return operation completed		2
Start return operation		3

REAR SEATBACK POWER RETURN SYSTEM

< SYSTEM DESCRIPTION >

Component Parts Location

INFOID:000000004347360

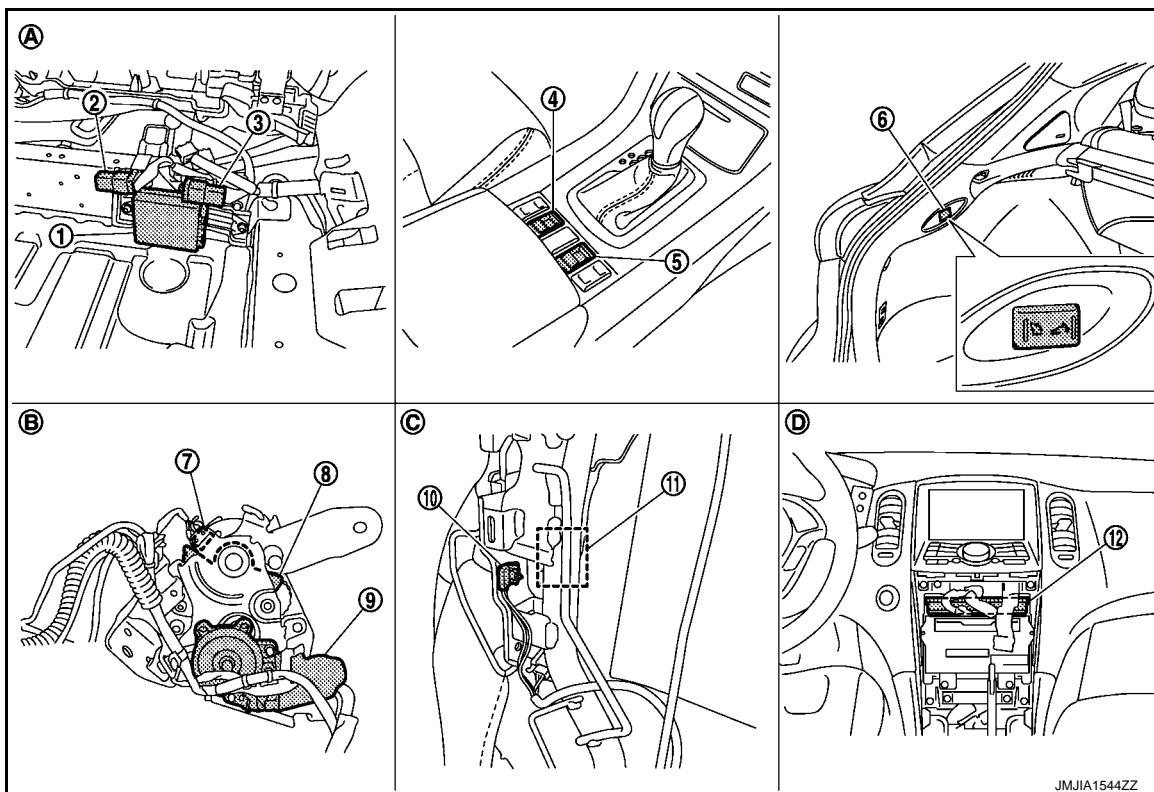

JMJA1544ZZ

1. Rear seatback power return control unit B226, B227	2. Rear seatback release relay (LH) B246	3. Rear seatback release relay (RH) B247
4. Power return switch (LH) M174	5. Power return switch (RH) M175	6. Rear seatback switch (LH) B52
7. Primary position limit switch (RH) B505	8. Sector gear (RH)	9. Power return motor assembly (RH) B504
10. Return complete limit switch (LH) B513	11. Rear seatback release actuator (LH) B513	12. Unified meter and A/C amp. M66, M67
A. Behind of rear seat (RH)	B. In seat device	C. View with seatback pad is removed
D. Behind cluster lid C		

Component Description

INFOID:000000004347361

Item	Function
Rear seatback power return control unit	Control the rear seatback power return system
Power return motor	Operate the rear seatback
Motor sensor	Detect the operation of power return motor
Power return switch	Switch that performs the return operation
Rear seatback switch	Performs the return operation or release the rear seatback when it is locked
Rear seatback release actuator	Pressed the rear seatback release switch to release the rear seatback when it is locked
Primary position limit switch	Detect the initial position of sector gear
Return complete limit switch	Detect the return position of rear seatback
Unified meter and A/C amp.	Transmit the vehicle speed signal
Sector gear	Transmit the operation of power return motor to rear seatback

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

POWER SUPPLY AND GROUND CIRCUIT

REAR SEATBACK POWER RETURN CONTROL UNIT

REAR SEATBACK POWER RETURN CONTROL UNIT : Diagnosis Procedure

INFOID:000000004347362

1. CHECK FUSE

Check that the following fuses are not fusing.

Terminal No.	Signal name	Fuse No.
16		32 (30A)
17	Battery power supply	6 (10A)

Is the fuse fusing?

YES >> Replace the blown fuse after repairing the affected circuit if a fuse is blown.
NO >> GO TO 2.

2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect rear seatback power return control unit connector.
3. Check voltage between rear seatback power return control unit harness connector and ground.

(+) Rear seatback power return control unit		(-)	Voltage (Approx.)
Connector	Terminal		
B226	17	Ground	Battery voltage
B227	16		

Is the measurement value normal?

YES >> GO TO 3.
NO >> Repair harness or connector.

3. CHECK GROUND CIRCUIT

Check continuity between rear seatback power return control unit harness connector and ground.

Rear seatback power return control unit		Ground	Continuity
Connector	Terminal		
B226	32		
B227	13		Existed

Does continuity exist?

YES >> INSPECTION END
NO >> Repair harness or connector.

POWER RETURN SWITCH

< DTC/CIRCUIT DIAGNOSIS >

POWER RETURN SWITCH

LH

LH : Description

INFOID:000000004347363

Switch that performs the return operation.

LH : Component Function Check

INFOID:000000004347364

1. CHECK FUNCTION

Check that the rear seatback (LH) rises when pressing and holding the power return switch (LH).

Is the inspection result normal?

YES >> Power return switch (LH) is OK.

NO >> Refer to [SE-15, "LH : Diagnosis Procedure".](#)

LH : Diagnosis Procedure

INFOID:000000004347365

1. CHECK REAR SEATBACK POWER RETURN CONTROL UNIT INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect power return switch (LH) connector.
3. Check voltage between power return switch (LH) harness connector and ground.

(+) Power return switch (LH)		(-)	Voltage (V) (Approx.)
Connector	Terminal		
B174	1	Ground	5

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2. CHECK FRONT POWER RETURN SWITCH (LH) CIRCUIT

1. Disconnect rear seatback power return control unit connector.
2. Check continuity between rear seatback power return control unit harness connector and power return switch (LH) harness connector.

Rear seatback power return control unit		Power return switch (LH)		Continuity
Connector	Terminal	Connector	Terminal	
B226	28	M174	1	Existed

3. Check continuity between rear seatback power return control unit harness connector and ground.

Rear seatback power return control unit		Ground	Continuity
Connector	Terminal		
M226	28		Not existed

Is the inspection result normal?

YES >> Replace rear seatback power return control unit. Refer to [SE-104, "Removal and Installation".](#)

NO >> Repair or replace harness.

3. CHECK POWER RETURN SWITCH (LH) GROUND CIRCUIT

Check continuity power return switch (LH) harness connector and ground.

Power return switch (LH)		Ground	Continuity
Connector	Terminal		
M174	2		Existed

POWER RETURN SWITCH

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness.

4. CHECK POWER RETURN SWITCH (LH)

Check power return switch (LH).

Refer to [SE-16, "LH : Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace power return switch (LH). Refer to [SE-108, "Removal and Installation"](#).

5. CHECK INTERMITTENT INCIDENT

Refer to [GI-40, "Intermittent Incident"](#).

>> INSPECTION END

LH : Component Inspection

INFOID:0000000004347366

1. CHECK FRONT POWER RETURN SWITCH (LH)

1. Turn ignition OFF.
2. Disconnect power return switch (LH) connector.
3. Check power return switch (LH) terminals.

Power return switch (LH) connector	Terminal		Condition	Continuity
M174	1	2	Power return switch (LH) is pressed	Existed
			Power return switch (LH) is released	Not existed

Is the inspection result normal?

YES >> Power return switch (LH) is OK.

NO >> Replace power return switch (LH). Refer to [SE-108, "Removal and Installation"](#).

RH

RH : Description

INFOID:0000000004347367

Switch that performs the return operation.

RH : Component Function Check

INFOID:0000000004347368

1. CHECK FUNCTION

Check that the rear seatback (RH) rises when pressing and holding the power return switch (RH).

Is the inspection result normal?

YES >> Power return switch (RH) is OK.

NO >> Refer to [SE-16, "RH : Diagnosis Procedure"](#).

RH : Diagnosis Procedure

INFOID:0000000004347369

1. CHECK REAR SEATBACK POWER RETURN CONTROL UNIT INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect power return switch (RH) connector.
3. Check voltage between power return switch (RH) harness connector and ground.

(+)	(-)	Voltage (V) (Approx.)
Power return switch (RH)		
Connector	Terminal	
M175	1	Ground
		5

Is the inspection result normal?

POWER RETURN SWITCH

< DTC/CIRCUIT DIAGNOSIS >

YES >> GO TO 3.
NO >> GO TO 2.

2.CHECK POWER RETURN SWITCH (RH) CIRCUIT

1. Disconnect rear seatback power return control unit connector.
2. Check continuity between rear seatback power return control unit harness connector and power return switch (RH) harness connector.

Rear seatback power return control unit		Power return switch (RH)		Continuity
Connector	Terminal	Connector	Terminal	
B226	20	M175	1	Existed

3. Check continuity between rear seatback power return control unit harness connector and ground.

Rear seatback power return control unit		Ground	Continuity
Connector	Terminal		
B226	20		Not existed

Is the inspection result normal?

YES >> Replace rear seatback power return control unit. Refer to [SE-104, "Removal and Installation"](#).
NO >> Repair or replace harness.

3.CHECK POWER RETURN SWITCH (RH) GROUND CIRCUIT

Check continuity power return switch (RH) harness connector and ground.

Power return switch (RH)		Ground	Continuity
Connector	Terminal		
M175	2		Existed

Is the inspection result normal?

YES >> GO TO 4.
NO >> Repair or replace harness.

4.CHECK POWER RETURN SWITCH (RH)

Check power return switch (RH).

Refer to [SE-17, "RH : Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 5.
NO >> Replace power return switch (RH). Refer to [SE-108, "Removal and Installation"](#).

5.CHECK INTERMITTENT INCIDENT

Refer to [GI-40, "Intermittent Incident"](#).

>> INSPECTION END

RH : Component Inspection

INFOID:000000004347370

1.CHECK POWER RETURN SWITCH (RH)

1. Turn ignition OFF.
2. Disconnect power return switch (RH) connector.
3. Check power return switch (RH) terminals.

Power return switch (RH) connector	Terminal		Condition	Continuity
M175	1	2	Power return switch (RH) is pressed	Existed
			Power return switch (RH) is released	Not existed

Is the inspection result normal?

YES >> Power return switch (RH) is OK.

POWER RETURN SWITCH

< DTC/CIRCUIT DIAGNOSIS >

NO >> Replace power return switch (RH). Refer to [SE-108, "Removal and Installation".](#)

REAR SEATBACK SWITCH

< DTC/CIRCUIT DIAGNOSIS >

REAR SEATBACK SWITCH

LH

LH : Description

INFOID:000000004347371

Switch that performs the return operation or release operation.

LH : Component Function Check

INFOID:000000004347372

1. CHECK FUNCTION

Check that the rear seatback (LH) rises when pressing and holding the rear seatback switch (LH) in UP direction.

Is the inspection result normal?

YES >> Rear seatback switch (LH) is OK.

NO >> Refer to [SE-19, "LH : Diagnosis Procedure"](#).

LH : Diagnosis Procedure

INFOID:000000004347373

1. CHECK REAR SEATBACK POWER RETURN CONTROL UNIT INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect rear seatback switch (LH) connector.
3. Check voltage between rear seatback switch (LH) harness connector and ground.

(+) Rear seatback switch (LH)		(-)	Voltage (V) (Approx.)
Connector	Terminal		
B52	2	Ground	5

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2. CHECK REAR SEAT BACK SWITCH (LH) CIRCUIT

1. Disconnect rear seatback power return control unit connector.
2. Check continuity between rear seatback power return control unit harness connector and rear seatback switch (LH) harness connector.

Rear seatback power return control unit		Rear seatback switch (LH)		Continuity
Connector	Terminal	Connector	Terminal	
B226	28	B52	2	Existed

3. Check continuity between rear seatback power return control unit harness connector and ground.

Rear seatback power return control unit		Ground	Continuity
Connector	Terminal		
B226	28		Not existed

Is the inspection result normal?

YES >> Replace rear seatback power return control unit. Refer to [SE-104, "Removal and Installation"](#).

NO >> Repair or replace harness.

3. CHECK REAR SEATBACK SWITCH (LH) GROUND CIRCUIT

Check continuity rear seatback switch (LH) harness connector and ground.

Rear seatback switch (LH)		Ground	Continuity
Connector	Terminal		
B52	3		Existed

REAR SEATBACK SWITCH

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness.

4. CHECK REAR SEATBACK SWITCH (LH)

Check rear seatback switch (LH).

Refer to [SE-20, "LH : Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace rear seatback switch (LH). Refer to [SE-110, "Removal and Installation"](#).

5. CHECK INTERMITTENT INCIDENT

Refer to [GI-40, "Intermittent Incident"](#).

>> INSPECTION END

LH : Component Inspection

INFOID:0000000004347374

1. CHECK REAR SEATBACK SWITCH (LH)

1. Turn ignition switch OFF.
2. Disconnect rear seatback switch (LH) connector.
3. Check rear seatback switch (LH) terminals.

Rear seatback switch (LH) connector	Terminal		Condition	Continuity
B52	2	3	Rear seatback switch (LH) is pressed in UP direction	Existed
			Rear seatback switch (LH) is released in UP direction	Not existed

Is the inspection result normal?

YES >> Rear seatback switch (LH) is OK.

NO >> Replace seatback return switch (LH). Refer to [SE-110, "Removal and Installation"](#).

RH

RH : Description

INFOID:0000000004347375

Switch that performs the return operation or release operation.

RH : Component Function Check

INFOID:0000000004347376

1. CHECK FUNCTION

Check that the rear seatback (RH) rises when pressing and holding the rear seatback switch (RH) in UP direction.

Is the inspection result normal?

YES >> Rear seatback switch (RH) is OK.

NO >> Refer to [SE-20, "RH : Diagnosis Procedure"](#).

RH : Diagnosis Procedure

INFOID:0000000004347377

1. CHECK REAR SEATBACK POWER RETURN CONTROL UNIT INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect rear seatback switch (RH) connector.
3. Check voltage between rear seatback switch (RH) harness connector and ground.

REAR SEATBACK SWITCH

< DTC/CIRCUIT DIAGNOSIS >

(+) Rear seatback switch (RH)		(-)	Voltage (V) (Approx.)
Connector	Terminal		
B239	2	Ground	5

Is the inspection result normal?

YES >> GO TO 3.
NO >> GO TO 2.

2.CHECK REAR SEATBACK SWITCH (RH) CIRCUIT

1. Disconnect rear seatback power return control unit connector.
2. Check continuity between rear seatback power return control unit harness connector and rear seatback switch (RH) harness connector.

Rear seatback power return control unit		Rear seatback switch (RH)		Continuity
Connector	Terminal	Connector	Terminal	
B226	20	B239	2	Existed

3. Check continuity between rear seatback power return control unit harness connector and ground.

Rear seatback power return control unit		Ground	Continuity
Connector	Terminal		
B226	20		Not existed

Is the inspection result normal?

YES >> Replace rear seatback power return control unit. Refer to [SE-104, "Removal and Installation"](#).
NO >> Repair or replace harness.

3.CHECK REAR SEATBACK SWITCH (RH) GROUND CIRCUIT

Check continuity rear seatback switch (RH) harness connector and ground.

Rear seatback switch (RH)		Ground	Continuity
Connector	Terminal		
B239	3		Existed

Is the inspection result normal?

YES >> GO TO 4.
NO >> Repair or replace harness.

4.CHECK REAR SEATBACK SWITCH (RH)

Check rear seatback switch (RH).

Refer to [SE-21, "RH : Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 5.
NO >> Replace rear seatback switch (RH). Refer to [SE-109, "Removal and Installation"](#).

5.CHECK INTERMITTENT INCIDENT

Refer to [GI-40, "Intermittent Incident"](#).

>> INSPECTION END

RH : Component Inspection

INFOID:000000004347378

1.CHECK REAR SEATBACK SWITCH (RH)

1. Turn ignition switch OFF.
2. Disconnect rear seatback switch (RH) connector.
3. Check rear seatback switch (RH) terminals.

REAR SEATBACK SWITCH

< DTC/CIRCUIT DIAGNOSIS >

Rear seatback switch (RH) connector	Terminal		Condition	Continuity
B239	2	3	Rear seatback switch (RH) is pressed in UP direction	Existed
			Rear seatback switch (RH) is released in UP direction	Not existed

Is the inspection result normal?

YES >> Rear seatback switch (RH) is OK.

NO >> Replace rear seatback switch (RH). Refer to [SE-109, "Removal and Installation".](#)

PRIMARY POSITION LIMIT SWITCH

< DTC/CIRCUIT DIAGNOSIS >

PRIMARY POSITION LIMIT SWITCH

LH

LH : Description

INFOID:000000004347379

Detect the initial position of sector gear (LH).

LH : Component Function Check

INFOID:000000004347380

1. CHECK FUNCTION

Check that the rear seatback (LH) rises when pressing and holding the power return switch (LH) or rear seatback switch (LH) in UP direction.

Is the inspection result normal?

YES >> Primary position limit switch (LH) is OK.
NO >> Refer to [SE-23, "LH : Diagnosis Procedure"](#).

LH : Diagnosis Procedure

INFOID:000000004347381

1. CHECK REAR SEATBACK POWER RETURN CONTROL UNIT INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect primary position limit switch (LH) connector.
3. Check voltage between primary position limit switch (LH) connector and ground.

(+) Primary position limit switch (LH)		(-)	Voltage (V) (Approx.)
Connector	Terminal		
B512	6	Ground	Battery voltage

NOTE:

It is not low power consumption mode.

Is the inspection result normal?

YES >> GO TO 3.
NO >> GO TO 2.

2. CHECK PRIMARY POSITION LIMIT SWITCH (LH) SIGNAL CIRCUIT

1. Disconnect rear seatback power return control unit connector.
2. Check continuity between rear seatback power return control unit harness connector and primary position limit switch (LH) harness connector.

Rear seatback power return control unit		Primary position limit switch (LH)		Continuity
Connector	Terminal	Connector	Terminal	
B226	21	B512	6	Existed

3. Check continuity between rear seatback power return control unit harness connector and ground.

Rear seatback power return control unit		Ground	Continuity
Connector	Terminal		
B226	21		

Is the inspection result normal?

YES >> Replace rear seatback power return control unit. Refer to [SE-104, "Removal and Installation"](#).
NO >> Repair or replace harness.

3. CHECK PRIMARY POSITION LIMIT SWITCH (LH) GROUND CIRCUIT

1. Check continuity between rear seatback power return control unit harness connector and primary position limit switch (LH) harness connector.

A

B

C

D

E

F

G

H

I

SE

K

L

M

N

O

P

PRIMARY POSITION LIMIT SWITCH

< DTC/CIRCUIT DIAGNOSIS >

Rear seatback power return control unit		Primary position limit switch (LH)		Continuity
Connector	Terminal	Connector	Terminal	
B226	31	B512	9	Existed

2. Check continuity between rear seatback power return control unit harness connector and ground.

Rear seatback power return control unit		Ground	Continuity
Connector	Terminal		
B226	31		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness.

4. CHECK PRIMARY POSITION LIMIT SWITCH (LH)

Check primary position limit switch (LH).

Refer to [SE-24, "LH : Component Inspection".](#)

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace primary position limit switch (LH) [seat device assembly (LH)]. Refer to [SE-97, "Exploded View".](#)

5. CHECK INTERMITTENT INCIDENT

Refer to [GI-40, "Intermittent Incident".](#)

>> INSPECTION END

LH : Component Inspection

INFOID:0000000004347382

COMPONENT INSPECTION

1. CHECK PRIMARY POSITION LIMIT SWITCH (LH)

1. Turn ignition switch OFF.
2. Disconnect primary position limit switch (LH) connector.
3. Check primary position limit switch (LH) terminals.

Primary position limit switch (LH) connector	Terminal		Condition	Continuity
B512	6	9	Primary position limit switch (LH) is pressed	Existed
			Primary position limit switch (LH) is released	Not existed

Is the inspection result normal?

YES >> Primary position limit switch (LH) is OK.

NO >> Replace primary position limit switch (LH) [seat device assembly (LH)]. Refer to [SE-97, "Exploded View".](#)

RH

RH : Description

INFOID:0000000004347383

Detect the initial position of sector gear (RH).

RH : Component Function Check

INFOID:0000000004347384

1. CHECK FUNCTION

Check that the rear seatback (RH) rises when pressing and holding the power return switch (RH) or rear seatback switch (RH) in UP direction.

Is the inspection result normal?

YES >> Primary position limit switch (RH) is OK.

PRIMARY POSITION LIMIT SWITCH

< DTC/CIRCUIT DIAGNOSIS >

NO >> Refer to [SE-25, "RH : Diagnosis Procedure"](#).

RH : Diagnosis Procedure

INFOID:000000004347385

1. CHECK REAR SEATBACK POWER RETURN CONTROL UNIT INPUT SIGNAL

1. Turn ignition switch OFF.
2. Connect primary position limit switch (RH) connector.
3. Check voltage between primary position limit switch (RH) harness connector and ground.

(+) Primary position limit switch (RH)		(-)	Voltage (V) (Approx.)
Connector	Terminal		
B505	15	Ground	Battery voltage

NOTE:

It is not low power consumption mode.

Is the inspection result normal?

YES >> GO TO 3.
NO >> GO TO 2.

2. CHECK PRIMARY POSITION LIMIT SWITCH (RH) SIGNAL CIRCUIT

1. Disconnect rear seatback power return control unit connector.
2. Check continuity between rear seatback power return control unit harness connector and primary position limit switch (RH) harness connector.

Rear seatback power return control unit		Primary position limit switch (RH)		Continuity
Connector	Terminal	Connector	Terminal	
B226	22	B505	15	Existed

3. Check continuity between rear seatback power return control unit harness connector and ground.

Rear seatback power return control unit		Ground	Continuity
Connector	Terminal		
B226	22		Not existed

Is the inspection result normal?

YES >> Replace rear seatback power return control unit. Refer to [SE-104, "Removal and Installation"](#).
NO >> Repair or replace harness.

3. CHECK PRIMARY POSITION LIMIT SWITCH (RH) GROUND CIRCUIT

1. Check continuity between rear seatback power return control unit harness connector and primary position limit switch (RH) harness connector.

Rear seatback power return control unit		Primary position limit switch (RH)		Continuity
Connector	Terminal	Connector	Terminal	
B226	23	B505	14	Existed

2. Check continuity between rear seatback power return control unit harness connector and ground.

Rear seatback power return control unit		Ground	Continuity
Connector	Terminal		
B226	23		Not existed

Is the inspection result normal?

YES >> GO TO 4.
NO >> Repair or replace harness.

4. CHECK PRIMARY POSITION LIMIT SWITCH (RH)

PRIMARY POSITION LIMIT SWITCH

< DTC/CIRCUIT DIAGNOSIS >

Check primary position limit switch (RH).

Refer to [SE-26, "RH : Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace primary position limit switch (RH) [seat device assembly (RH)]. Refer to [SE-97, "Exploded View"](#).

5.CHECK INTERMITTENT INCIDENT

Refer to [GI-40, "Intermittent Incident"](#).

>> INSPECTION END

RH : Component Inspection

INFOID:000000004347386

COMPONENT INSPECTION

1.CHECK PRIMARY POSITION LIMIT SWITCH (RH)

1. Turn ignition switch OFF.
2. Disconnect primary position limit switch (RH) connector.
3. Check primary position limit switch (RH) terminals.

Primary position limit switch (RH) connector	Terminal		Condition	Continuity
B505	14	15	Primary position limit switch (RH) is pressed	Existed
			Primary position limit switch (RH) is released	Not existed

Is the inspection result normal?

YES >> Primary position limit switch (RH) is OK.

NO >> Replace primary position limit switch (RH) [seat device assembly (RH)]. Refer to [SE-97, "Exploded View"](#).

RETURN COMPLETE LIMIT SWITCH

< DTC/CIRCUIT DIAGNOSIS >

RETURN COMPLETE LIMIT SWITCH

LH

LH : Description

INFOID:000000004347387

Detect the return completion position of rear seatback (LH).

LH : Component Function Check

INFOID:000000004347388

1. CHECK FUNCTION

Check that the rear seatback (LH) rises when pressing and holding the power return switch (LH) or rear seatback switch (LH) in UP direction.

Is the inspection result normal?

YES >> Return complete limit switch (LH) is OK.
NO >> Refer to [SE-27, "LH : Diagnosis Procedure"](#).

LH : Diagnosis Procedure

INFOID:000000004347389

1. CHECK REAR SEATBACK POWER RETURN CONTROL UNIT INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect rear seatback lock assembly (LH) connector.
3. Check voltage between rear seatback lock assembly (LH) harness connector and ground.

(+) Rear seatback lock assembly (LH)		(-)	Voltage (V) (Approx.)
Connector	Terminal		
B513	8	Ground	Battery voltage

NOTE:

It is not low power consumption mode.

Is the inspection result normal?

YES >> GO TO 3.
NO >> GO TO 2.

2. CHECK RETURN COMPLETE LIMIT SWITCH (LH) SIGNAL CIRCUIT

1. Disconnect rear seatback power return control unit connector.
2. Check continuity between rear seatback power return control unit harness connector and rear seatback lock assembly (LH) harness connector.

Rear seatback power return control unit		Rear seatback lock assembly (LH)		Continuity
Connector	Terminal	Connector	Terminal	
B226	29	B513	8	Existed

3. Check continuity between rear seatback power return control unit harness connector and ground.

Rear seatback power return control unit		Ground	Continuity
Connector	Terminal		
B226	29		Not existed

Is the inspection result normal?

YES >> Replace rear seatback power return control unit. Refer to [SE-104, "Removal and Installation"](#).
NO >> Repair or replace harness.

3. CHECK RETURN COMPLETE LIMIT SWITCH (LH) GROUND CIRCUIT

1. Check continuity between rear seatback power return control unit harness connector and rear seatback lock assembly (LH) harness connector.

A

B

C

D

E

F

G

H

I

SE

K

L

M

N

O

P

RETURN COMPLETE LIMIT SWITCH

< DTC/CIRCUIT DIAGNOSIS >

Rear seatback power return control unit		Rear seatback lock assembly (LH)		Continuity
Connector	Terminal	Connector	Terminal	
B226	31	B513	9	Existed

2. Check continuity between rear seatback power return control unit harness connector and ground.

Rear seatback power return control unit		Ground	Continuity
Connector	Terminal		Not existed
B226	31		

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness.

4. CHECK RETURN COMPLETE LIMIT SWITCH (LH)

Check return complete limit switch (LH).

Refer to [SE-28, "LH : Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace return complete limit switch (LH) [rear seatback lock assembly (LH)]. Refer to [SE-97, "Exploded View"](#).

5. CHECK INTERMITTENT INCIDENT

Refer to [GI-40, "Intermittent Incident"](#).

>> INSPECTION END

LH : Component Inspection

INFOID:0000000004347390

COMPONENT INSPECTION

1. CHECK RETURN COMPLETE LIMIT SWITCH (LH)

1. Turn ignition switch OFF.
2. Disconnect rear seatback lock assembly (LH) connector.
3. Check rear seatback lock assembly (LH) terminals.

Rear seatback lock assembly (LH) connector	Terminal		Condition	Continuity
B513	8	9	Return complete limit switch (LH) is pressed	Existed
			Return complete limit switch (LH) is released	Not existed

Is the inspection result normal?

YES >> Return complete limit switch (LH) is OK.

NO >> Replace return complete limit switch (LH) [rear seatback lock assembly (LH)]. Refer to [SE-97, "Exploded View"](#).

RH

RH : Description

INFOID:0000000004347391

Detect the return completion position of rear seatback (RH).

RH : Component Function Check

INFOID:0000000004347392

1. CHECK FUNCTION

Check that the rear seatback (RH) rises when pressing and holding the power return switch (RH) or rear seatback switch (RH) in UP direction.

Is the inspection result normal?

YES >> Return complete limit switch (RH) is OK.

RETURN COMPLETE LIMIT SWITCH

< DTC/CIRCUIT DIAGNOSIS >

NO >> Refer to [SE-29, "RH : Diagnosis Procedure"](#).

RH : Diagnosis Procedure

INFOID:000000004347393

1. CHECK REAR SEATBACK POWER RETURN CONTROL UNIT INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect rear seatback lock assembly (RH) connector.
3. Check voltage between rear seatback lock assembly (RH) harness connector and ground.

(+) Rear seatback lock assembly (RH)		(-)	Voltage (V) (Approx.)
Connector	Terminal		
B506	13	Ground	Battery voltage

NOTE:

It is not low power consumption mode.

Is the inspection result normal?

YES >> GO TO 3.
NO >> GO TO 2.

2. CHECK RETURN COMPLETE LIMIT SWITCH (RH) SIGNAL CIRCUIT

1. Disconnect rear seatback power return control unit connector.
2. Check continuity between rear seatback power return control unit harness connector and rear seatback lock assembly (RH) harness connector.

Rear seatback power return control unit		Rear seatback lock assembly (RH)		Continuity
Connector	Terminal	Connector	Terminal	
B226	30	B506	13	Existed

3. Check continuity between rear seatback power return control unit harness connector and ground.

Rear seatback power return control unit		Ground	Continuity
Connector	Terminal		
B226	30		Not existed

Is the inspection result normal?

YES >> Replace rear seatback power return control unit. Refer to [SE-104, "Removal and Installation"](#).
NO >> Repair or replace harness.

3. CHECK RETURN COMPLETE LIMIT SWITCH (RH) GROUND CIRCUIT

1. Check continuity between rear seatback power return control unit harness connector and rear seatback lock assembly (RH) harness connector.

Rear seatback power return control unit		Rear seatback lock assembly (RH)		Continuity
Connector	Terminal	Connector	Terminal	
B226	23	B506	14	Existed

2. Check continuity between rear seatback power return control unit harness connector and ground.

Rear seatback power return control unit		Ground	Continuity
Connector	Terminal		
B226	23		Not existed

Is the inspection result normal?

YES >> GO TO 4.
NO >> Repair or replace harness.

4. CHECK RETURN COMPLETE LIMIT SWITCH (RH)

RETURN COMPLETE LIMIT SWITCH

< DTC/CIRCUIT DIAGNOSIS >

Check return complete limit switch (RH).

Refer to [SE-30, "RH : Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace return complete limit switch (RH) [rear seatback lock assembly (RH)]. Refer to [SE-97, "Exploded View"](#).

5.CHECK INTERMITTENT INCIDENT

Refer to [GI-40, "Intermittent Incident"](#).

>> INSPECTION END

RH : Component Inspection

INFOID:000000004347394

COMPONENT INSPECTION

1.CHECK RETURN COMPLETE LIMIT SWITCH (RH)

1. Turn ignition switch OFF.
2. Disconnect rear seatback lock assembly (RH) connector.
3. Check rear seatback lock assembly (RH) terminals.

Rear seatback lock assembly (RH) connector	Terminal		Condition	Continuity
B506	13	14	Return complete limit switch (RH) is pressed	Existed
			Return complete limit switch (RH) is released	Not existed

Is the inspection result normal?

YES >> Return complete limit switch (RH) is OK.

NO >> Replace return complete limit switch (RH) [rear seatback lock assembly (RH)]. Refer to [SE-97, "Exploded View"](#).

MOTOR SENSOR

< DTC/CIRCUIT DIAGNOSIS >

MOTOR SENSOR

LH

LH : Description

INFOID:000000004347395

Detect the operation condition of power return motor (LH).

LH : Component Function Check

INFOID:000000004347396

1. CHECK FUNCTION

Check that the rear seatback (LH) rises when pressing and holding the power return switch (LH) or rear seatback switch (LH) in UP direction.

Is the inspection result normal?

YES >> Motor sensor (LH) is OK.


NO >> Refer to [SE-31, "LH : Diagnosis Procedure".](#)

LH : Diagnosis Procedure

INFOID:000000004347397

1. CHECK MOTOR SENSOR (LH) OUTPUT SIGNAL

1. Turn ignition switch OFF.
2. Check voltage between rear seatback power return control unit harness connector and ground.

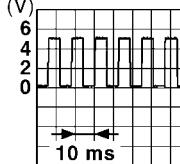(+) Rear seatback power return control unit		(-) Connector	Condition	Voltage (V) (Approx.)
Connector	Terminal			
B227	10	Ground	During the power return motor (LH) operation	 10 ms
			When pinching between LH/RH seats occurs	The above pulse width should be expanded

Is the inspection result normal?

YES >> GO TO 7.

NO >> GO TO 2.

2. CHECK MOTOR SENSOR (LH) SIGNAL CIRCUIT

1. Disconnect power return motor assembly (LH) connector and rear seatback power return control unit connector.
2. Check continuity between power return motor assembly (LH) harness connector and rear seatback power return control unit harness connector.

Rear seatback power return control unit		Power return motor assembly (LH)		Continuity
Connector	Terminal	Connector	Terminal	
B227	10	B511	4	Existed

3. Check continuity between power return motor assembly (LH) harness connector and ground.

Rear seatback power return control unit		Ground	Continuity
Connector	Terminal		
B227	10		Not existed

Is the inspection result normal?

MOTOR SENSOR

< DTC/CIRCUIT DIAGNOSIS >

YES >> GO TO 3.

NO >> Repair or replace harness.

3.CHECK MOTOR SENSOR (LH) POWER SUPPLY

1. Connect rear seatback power return control unit connector.
2. Check voltage between power return motor assembly (LH) harness connector and ground.

(+) Power return motor assembly (LH)		(-)	Condition	Voltage (V) (Approx.)
Connector	Terminal			
B511	3	Ground	When the power return switch is operated	Battery voltage

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 4.

4.CHECK MOTOR SENSOR (LH) POWER SUPPLY CIRCUIT

1. Disconnect rear seatback power return control unit connector.
2. Check continuity between rear seatback power return control unit harness connector and power return motor assembly (LH) harness connector.

Rear seatback power return control unit		Power return motor assembly (LH)		Continuity
Connector	Terminal	Connector	Terminal	
B227	11	B511	3	Existed

3. Check continuity between rear seatback power return control unit harness connector and ground.

Rear seatback power return control unit		Ground	Continuity
Connector	Terminal		
B227	11		Not existed

Is the inspection result normal?

YES >> Replace rear seatback power return control unit. Refer to [SE-104, "Removal and Installation"](#).
NO >> Repair or replace harness.

5.CHECK MOTOR SENSOR (LH) GROUND CIRCUIT 1

1. Disconnect rear seatback power return control unit connector.
2. Check continuity between power return motor assembly harness connector and ground.

Rear seatback power return control unit		Power return motor assembly (LH)		Continuity
Connector	Terminal	Connector	Terminal	
B227	9	B511	5	Existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace harness.

6.CHECK MOTOR SENSOR (LH) GROUND CIRCUIT 2

1. Connect rear seatback power return control unit connector.
2. Check continuity between rear seatback power return control unit harness connector and ground.

Rear seatback power return control unit		Ground	Continuity
Connector	Terminal		
B227	9		Existed

Is the inspection result normal?

YES >> Replace motor sensor (LH) [seat device assembly (LH)]. Refer to [SE-97, "Exploded View"](#).

NO >> Replace rear seatback power return control unit. Refer to [SE-104, "Removal and Installation"](#).

MOTOR SENSOR

< DTC/CIRCUIT DIAGNOSIS >

7. CHECK INTERMITTENT INCIDENT

Refer to [GI-40, "Intermittent Incident"](#).

>> INSPECTION END

RH

RH : Description

INFOID:000000004347398

Detect the operation condition of power return motor (RH).

RH : Component Function Check

INFOID:000000004347399

1. CHECK FUNCTION

Check that the rear seatback (RH) rises when pressing and holding the power return switch (RH) or rear seatback switch (RH) in UP direction.

Is the inspection result normal?

YES >> Motor sensor (RH) is OK.


NO >> Refer to [SE-33, "RH : Diagnosis Procedure"](#).

RH : Diagnosis Procedure

INFOID:000000004347400

1. CHECK MOTOR SENSOR (RH) OUTPUT SIGNAL

1. Turn ignition switch OFF.
2. Check voltage between rear seatback power return control unit harness connector and ground.

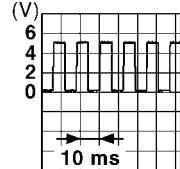(+)		(-)	Condition	Voltage (V) (Approx.)
Connector	Terminal			
B227	2	Ground	During the power return motor (RH) operation	 JKMIA0070GB
			When pinching between LH/RH seats occurs	The above pulse width should be expanded

Is the inspection result normal?

YES >> GO TO 7.

NO >> GO TO 2.

2. CHECK MOTOR SENSOR (RH) SIGNAL CIRCUIT

1. Disconnect power return motor assembly (RH) connector and rear seatback power return control unit connector.
2. Check continuity between power return motor assembly (RH) harness connector and rear seatback power return control unit harness connector.

Rear seatback power return control unit		Power return motor assembly (RH)		Continuity
Connector	Terminal	Connector	Terminal	
B227	2	B504	18	Existed

3. Check continuity between power return motor assembly (RH) harness connector and ground.

A

B

C

D

E

F

G

H

I

SE

K

L

M

N

O

P

MOTOR SENSOR

< DTC/CIRCUIT DIAGNOSIS >

Rear seatback power return control unit		Ground	Continuity
Connector	Terminal		Not existed
B227	2		

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness.

3. CHECK MOTOR SENSOR (RH) POWER SUPPLY

1. Connect rear seatback power return control unit connector.
2. Check voltage power return motor assembly (RH) harness connector and ground.

(+)		(-)	Condition	Voltage (V) (Approx.)
Power return motor assembly (RH)	Connector			
B504	17	Ground	When the power return switch is operated	Battery voltage

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 4.

4. CHECK MOTOR SENSOR (RH) POWER SUPPLY CIRCUIT

1. Disconnect rear seatback power return control unit connector.
2. Check continuity between rear seatback power return control unit harness connector and power return motor assembly (RH) harness connector.

Rear seatback power return control unit		Power return motor assembly (RH)		Continuity
Connector	Terminal	Connector	Terminal	
B227	3	B504	17	Existed

3. Check continuity between rear seatback power return control unit harness connector and ground.

Rear seatback power return control unit		Ground	Continuity
Connector	Terminal		
B227	3		

Is the inspection result normal?

YES >> Replace rear seatback power return control unit. Refer to [SE-104, "Removal and Installation"](#).
NO >> Repair or replace harness.

5. CHECK MOTOR SENSOR (RH) GROUND CIRCUIT 1

1. Disconnect rear seatback power return control unit connector.
2. Check continuity between power return motor assembly harness connector and power return motor assembly (RH) harness connector.

Rear seatback power return control unit		Power return motor assembly (RH)		Continuity
Connector	Terminal	Connector	Terminal	
B227	1	B504	19	

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace harness.

6. CHECK MOTOR SENSOR (LH) GROUND CIRCUIT 2

1. Connect rear seatback power return control unit connector.
2. Check continuity between rear seatback power return control unit harness connector and ground.

MOTOR SENSOR

< DTC/CIRCUIT DIAGNOSIS >

Rear seatback power return control unit		Ground	Continuity
Connector	Terminal		Existed
B227	1		

Is the inspection result normal?

YES >> Replace motor sensor (RH) [seat device assembly (RH)]. Refer to [SE-97, "Exploded View"](#).
NO >> Replace rear seatback power return control unit. Refer to [SE-104, "Removal and Installation"](#).

7. CHECK INTERMITTENT INCIDENT

Refer to [GI-40, "Intermittent Incident"](#).

>> INSPECTION END

A

B

C

D

E

F

G

H

I

SE

K

L

M

N

O

P

POWER RETURN MOTOR

< DTC/CIRCUIT DIAGNOSIS >

POWER RETURN MOTOR

LH

LH : Description

INFOID:000000004347401

Operate the rear seatback.

LH : Component Function Check

INFOID:000000004347402

1. CHECK FUNCTION

Check that the rear seatback (LH) rises when pressing and holding the power return switch (LH) or rear seatback switch (LH) in UP direction.

Is the inspection result normal?

YES >> Power return motor (LH) is OK.

NO >> Refer to [SE-36, "LH : Diagnosis Procedure"](#).

LH : Diagnosis Procedure

INFOID:000000004347403

1. CHECK POWER RETURN MOTOR (LH) INPUT SIGNAL

1. Turn ignition switch OFF.
2. Check voltage between power return motor assembly (LH) harness connector and ground.

(+) Power return motor assembly (LH)		(-)	Condition	Voltage (V) (Approx.)	
Connector	Terminal				
B511	1	Ground	During the power return motor (LH) reverse operation	Battery voltage	
			Other than the above	0	
	2		During the power return motor (LH) return operation	Battery voltage	
			Other than the above	0	

Is the inspection result normal?

YES >> Replace power return motor assembly (LH) [seat device assembly (LH)]. Refer to [SE-97, "Exploded View"](#).

NO >> GO TO 2.

2. CHECK POWER RETURN MOTOR (LH) CIRCUIT

1. Disconnect rear seatback power return control unit connector and power return motor assembly (LH) connector.
2. Check continuity between rear seatback power return control unit harness connector and power return motor assembly (LH) harness connector.

Rear seatback power return control unit		Power return motor assembly (LH)		Continuity
Connector	Terminal	Connector	Terminal	
B227	5	B511	1	Existed
	6		2	

3. Check continuity between rear seatback power return control unit harness connector and ground.

Rear seatback power return control unit		Ground	Continuity
Connector	Terminal		
B227	5		
	6		Not existed

Is the inspection result normal?

POWER RETURN MOTOR

< DTC/CIRCUIT DIAGNOSIS >

YES >> Replace rear seatback power return control unit. Refer to [SE-104, "Removal and Installation"](#).
NO >> Repair or replace harness.

RH

RH : Description

INFOID:000000004347404

Operate the rear seatback.

RH : Component Function Check

INFOID:000000004347405

1. CHECK FUNCTION

Check that the rear seatback (RH) rises when pressing and holding the power return switch (RH) or rear seatback switch (RH) in UP direction.

Is the inspection result normal?

YES >> Power return motor (RH) is OK.
NO >> Refer to [SE-37, "RH : Diagnosis Procedure"](#).

RH : Diagnosis Procedure

INFOID:000000004347406

1. CHECK POWER RETURN MOTOR (RH) INPUT SIGNAL

1. Turn ignition switch OFF.
2. Check voltage between power return motor assembly (RH) harness connector and ground.

(+) Power return motor assembly (RH)		(-) Connector	Condition	Voltage (V) (Approx.)
Connector	Terminal			
B504	20	Ground	During the power return motor (RH) reverse operation	Battery voltage
			Other than the above	0
	21		During the power return motor (RH) return operation	Battery voltage
			Other than the above	0

Is the inspection result normal?

YES >> Replace power return motor assembly (RH) [seat device assembly (RH)]. Refer to [SE-97, "Exploded View"](#).
NO >> GO TO 2.

2. CHECK POWER RETURN MOTOR (RH) CIRCUIT

1. Disconnect rear seatback power return control unit connector and power return motor assembly (RH) connector.
2. Check continuity between rear seatback power return control unit harness connector and power return motor assembly (RH) harness connector.

Rear seatback power return control unit		Power return motor assembly (RH)		Continuity
Connector	Terminal	Connector	Terminal	
B227	7	B504	20	Existed
	8		21	

3. Check continuity between rear seatback power return control unit harness connector and ground.

Rear seatback power return control unit		Ground	Continuity
Connector	Terminal		
B227	7		
	8		

Is the inspection result normal?

POWER RETURN MOTOR

< DTC/CIRCUIT DIAGNOSIS >

YES >> Replace rear seatback power return control unit. Refer to [SE-104, "Removal and Installation"](#).
NO >> Repair or replace harness.

VEHICLE SPEED SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

VEHICLE SPEED SIGNAL CIRCUIT

Description

INFOID:0000000004347407

Transmits vehicle speed signal to rear seatback power return control unit.

Component Function Check

INFOID:0000000004347408

1. CHECK FUNCTION

Check that the rear seatback rises when pressing and holding the power return switch or rear seatback switch in UP direction.

Is the inspection result normal?

YES >> Vehicle speed signal circuit is OK.
NO >> Refer to [SE-39, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000004347409

1. CHECK VEHICLE SPEED OPERATION


1. Check speed meter operate normally.

Is the inspection result normal?

YES >> GO TO 2.
NO >> Refer to [MWI-4, "Work flow"](#).

2. CHECK VEHICLE SPEED INPUT SIGNAL

Check voltage between rear seatback power return control unit harness connector and ground.

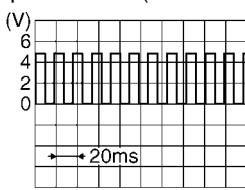(+) Rear seatback power return control unit		(-)	Condition	Voltage (V) (Approx.)
Connector	Terminal			
B226	24	Ground	When vehicle speed is approx.40 km/h (25MPH)	<p>NOTE: Maximum voltage may be 12V due to specifications (connected units)</p> <p>(V)</p>  <p>SKIA6649J</p>

Is the inspection result normal?

YES >> GO TO 3.
NO >> Refer to [MWI-4, "Work flow"](#).

3. CHECK VEHICLE SPEED SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect rear seatback power return control unit connector and unified meter and A/C amp. connector.
3. Check continuity between power return control unit harness connector and unified meter and A/C amp. harness connector.

Rear seatback power return control unit		Unified meter and A/C amp.		Continuity
Connector	Terminal	Connector	Terminal	
B226	24	M66	28	Existed

4. Check continuity between rear seatback power return control unit harness connector and ground.

VEHICLE SPEED SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

Rear seatback power return control unit		Ground	Continuity
Connector	Terminal		
B226	24		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness.

4. CHECK INTERMITTENT INCIDENT

Refer to [GI-40, "Intermittent Incident"](#).

>> INSPECTION END


POWER SEAT

< DTC/CIRCUIT DIAGNOSIS >

POWER SEAT

Wiring Diagram - POWER SEAT FOR DRIVER SIDE (WITHOUT AUTOMATIC DRIVE POSITIONER) - INFOID:000000004347410

POWER SEAT FOR DRIVER SIDE (WITHOUT AUTOMATIC DRIVE POSITIONER)

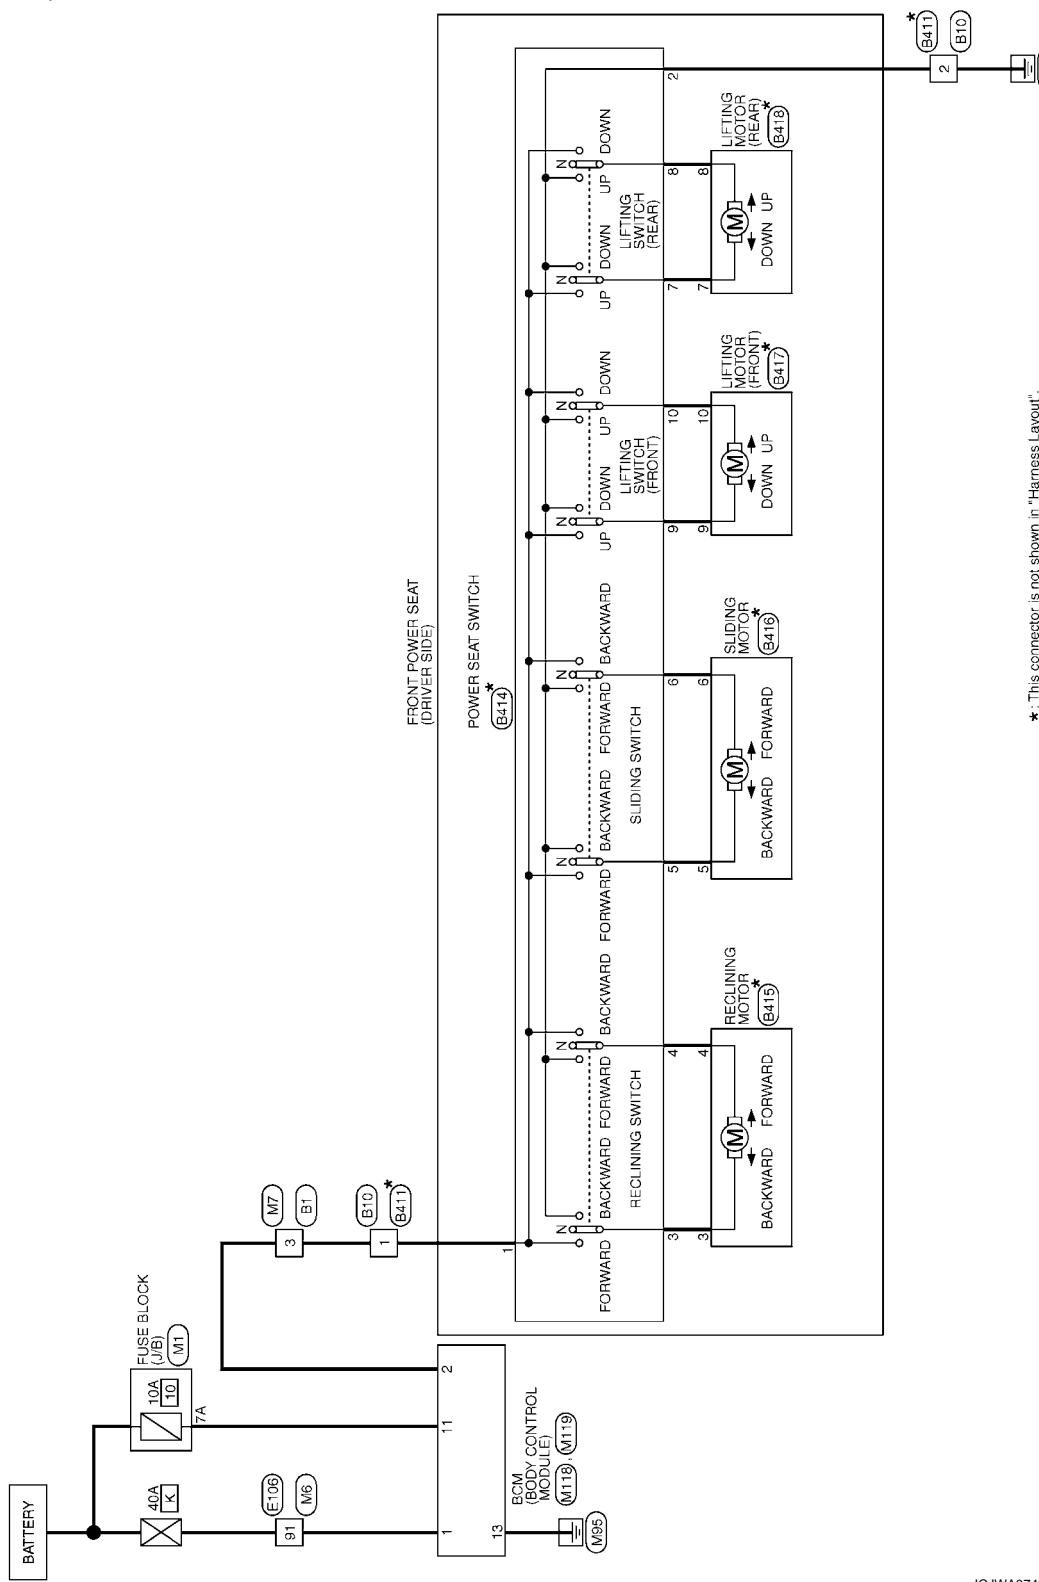

2008/08/28

JCJWA0749GE


POWER SEAT

< DTC/CIRCUIT DIAGNOSIS >

POWER SEAT FOR DRIVER SIDE (WITHOUT AUTOMATIC DRIVE POSITIONER)

Connector No.	B10	Connector No.	B411
Connector Name	WIRE TO WIRE	Connector Name	WIRE TO WIRE (WITHOUT AUTOMATIC DRIVE POSITIONER)
Connector Type	TH80FW-CS16-TM4	Connector Type	NS10FW-CS
			

 Connector No. B411
Connector Name WIRE TO WIRE (WITHOUT AUTOMATIC DRIVE POSITIONER)
Connector Type NS10FW-CS




Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
1	SB	-	1	R	-
2	B	-	2	B	-

Connector No. B411
Connector Name WIRE TO WIRE (WITHOUT AUTOMATIC DRIVE POSITIONER)
Connector Type NS10FW-CS

Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
1	SB	-	1	R	-
2	B	-	2	B	-

 Connector No. B411
Connector Name WIRE TO WIRE (WITHOUT AUTOMATIC DRIVE POSITIONER)
Connector Type NS10FW-CS



Connector No.	B411	Connector No.	B418
Connector Name	SLIDING MOTOR (DRIVER SIDE) (WITHOUT AUTOMATIC DRIVE POSITIONER)	Connector Name	LIFTING MOTOR (FRONT) (DRIVER SIDE) (WITHOUT AUTOMATIC DRIVE POSITIONER)
Connector Type	6098-0239	Connector Type	NS20FW-CS

Connector No. B411
Connector Name SLIDING MOTOR (DRIVER SIDE) (WITHOUT AUTOMATIC DRIVE POSITIONER)
Connector Type NS20FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
1	SB	-	1	R	-
2	B	-	2	B	-

Connector No. B411
Connector Name SLIDING MOTOR (DRIVER SIDE) (WITHOUT AUTOMATIC DRIVE POSITIONER)
Connector Type NS20FW-CS



JCJWA0750GB

POWER SEAT

< DTC/CIRCUIT DIAGNOSIS >

POWER SEAT FOR DRIVER SIDE (WITHOUT AUTOMATIC DRIVE POSITIONER)

Connector No.	Connector Name	Connector No.	Connector Name
E106	MI	MI	FUSE BLOCK (J/E)
Connector No.	Connector Name	Connector No.	Connector Name
WIRE TO WIRE	WIRE TO WIRE	WIRE TO WIRE	WIRE TO WIRE
Connector Type	THB0W/CS16-TM4	Connector Type	THB0MW/CS16-TM4
Connector No.	Connector Name	Connector No.	Connector Name
WIRE TO WIRE	WIRE TO WIRE	WIRE TO WIRE	WIRE TO WIRE
Connector Type	THB0W/CS16-TM4	Connector Type	THB0MW/CS16-TM4



Connector No.	E106	Connector Name	WIRE TO WIRE	Connector No.	M1	Connector Name	WIRE BLOCK (J/B)
Connector Type	THDWF-C516-TMA	Connector Type	NSF2FW-M2	Connector No.		Connector Name	WIRE TO WIRE



Terminal No.		Signal Name [Specification]		Signal Name [Specification]	
Terminal No.	Color of Wire	Terminal No.	Color of Wire	Terminal No.	Color of Wire
91	R	91	W	—	—
7A	R	—	—	—	—
—	—	—	—	—	—

Signal Name [Specification]			Signal Name [Specification]		
Terminal No.	Color of Wire	Signal Name	Terminal No.	Color of Wire	Signal Name
91	W	-	7A	R	-

Connector No.	MI18	Connector No.	M119
Connector Type	BCM (BODY CONTROL MODULE)	Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	MOFB-LC	Connector Type	NS16F-GS

Connector No.	M118	Connector No.	M119
Connector Type	ECOM (BODY CONTROL MODULE)	Connector Name	ECOM (BODY CONTROL MODULE)
Connector Type	MOSET-LC	Connector Type	NSI-BW-CS



Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
1	R	BAT (F1)	1	R	BAT (F1SE)
2	-----	-----	2	-----	-----



JCJWA0751GB

Revision: 2010 March

 

POWER SEAT

< DTC/CIRCUIT DIAGNOSIS >

Wiring Diagram - POWER SEAT FOR PASSENGER SIDE -

INFOID:000000004347411

POWER SEAT FOR PASSENGER SIDE

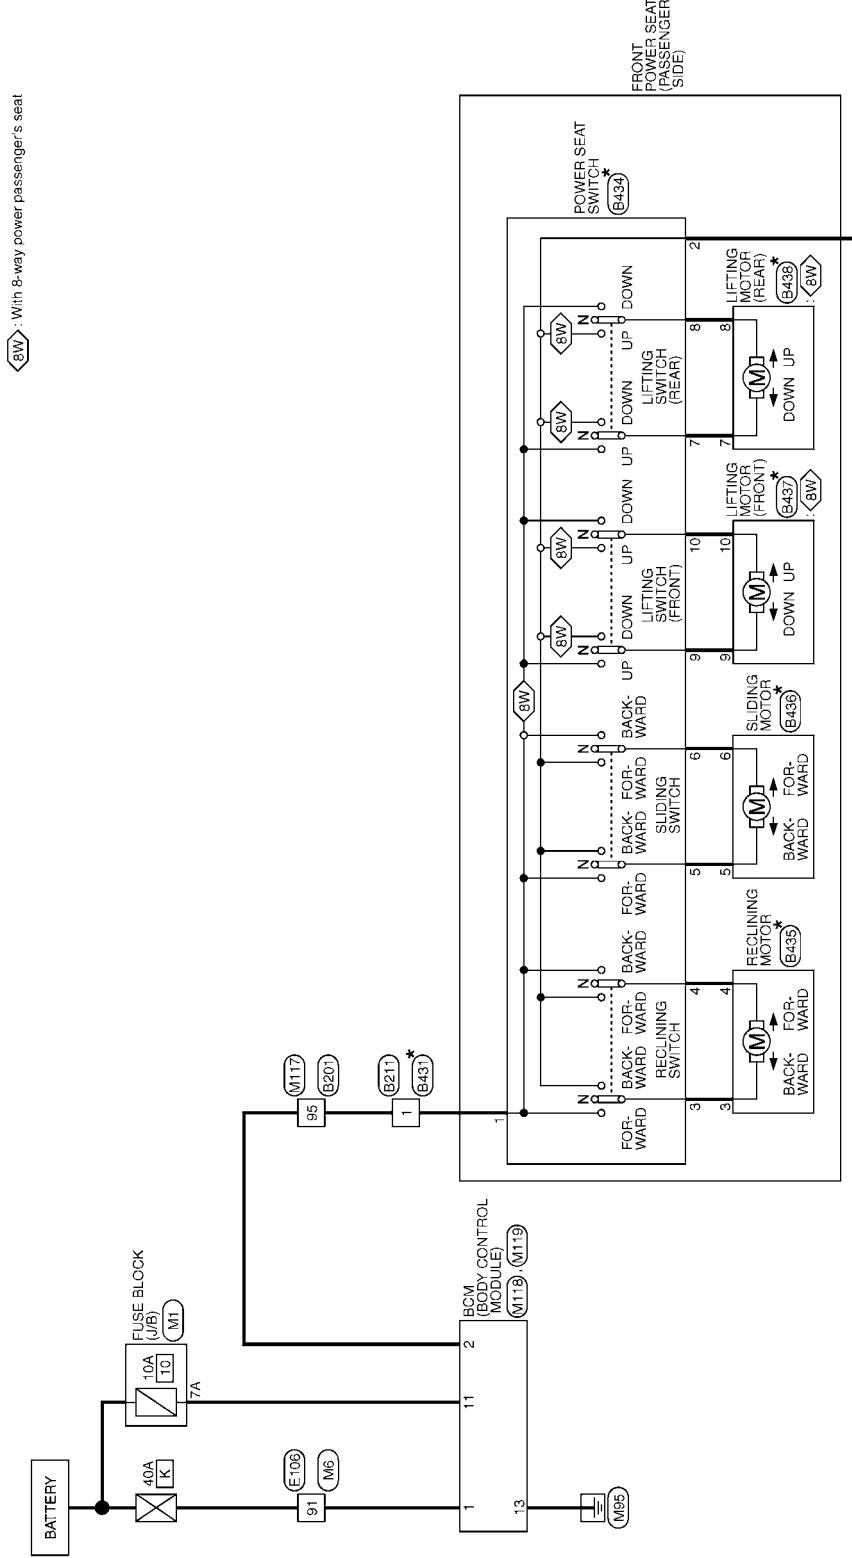

* : This connector is not shown in "Harness Layout".

2008/08/28

JCJWA0752GB


HEATED SEAT

< DTC/CIRCUIT DIAGNOSIS >

HEATED SEAT

Wiring Diagram - HEATED SEAT -

INFOID:0000000004347412

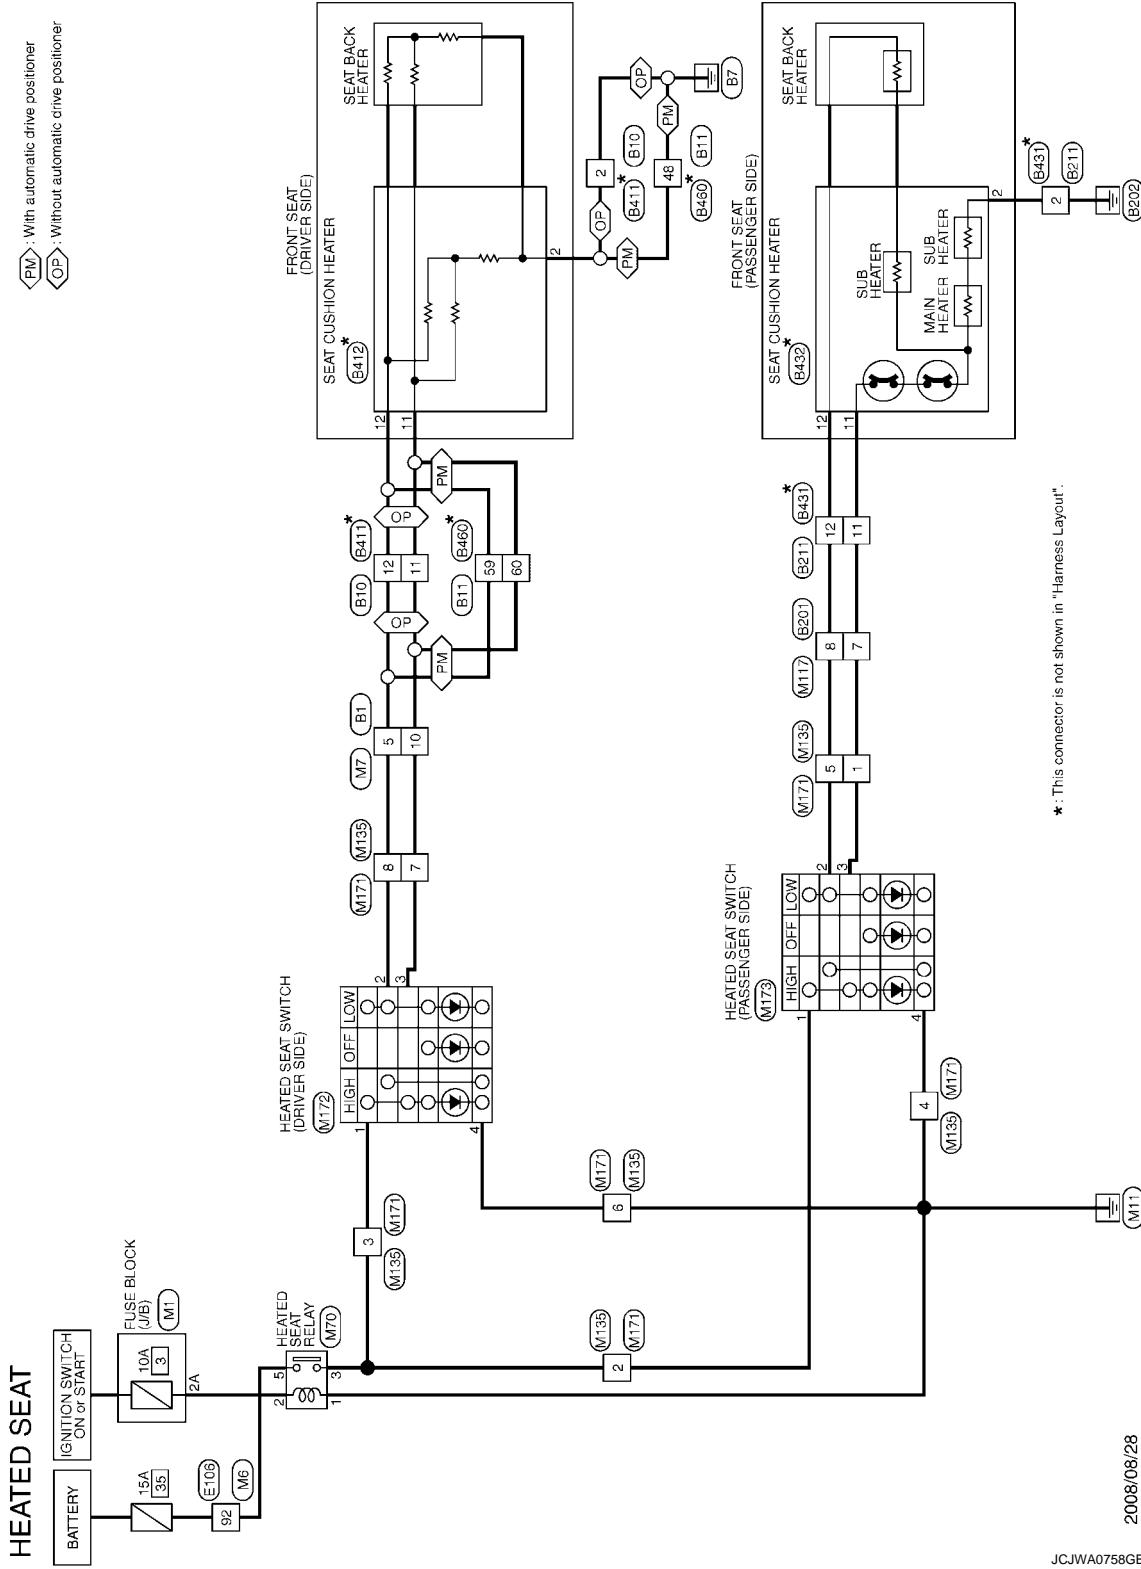

2008/08/28

JCJWA0758GB

HEATED SEAT

< DTC/CIRCUIT DIAGNOSIS >

HEATED SEAT

Connector No.	B10	Connector No.	B11
Connector Name	WIRE TO WIRE (WITHOUT AUTOMATIC DRIVE POSITIONER)	Connector Name	WIRE TO WIRE (WITH AUTOMATIC DRIVE POSITIONER)
Connector Type	MO4FW-LC	Connector Type	NS16FY-CS
			
			

Terminal No.			Signal Name [Specification]		
Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
5	GR	-	2	B	-
10	O	-	11	O	-
			12	GR	-

Terminal No.			Signal Name [Specification]		
Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
48	B	-	59	GR	-
60	O	-	61	GR	-
			62	R	-

Connector No. B411	WIRE TO WIRE (WITHOUT AUTOMATIC DRIVE POSITIONER)	Connector Name M047W-LC	Connector No. B412	SEAT CUSHION HEATER (DRIVER SIDE)	Connector Name M031W-LC
Connector No. B411	WIRE TO WIRE (WITHOUT AUTOMATIC DRIVE POSITIONER)	Connector Name M047W-LC	Connector No. B431	WIRE TO WIRE (WITHOUT AUTOMATIC DRIVE POSITIONER)	Connector Name M047W-LC
					Connector Type MCMMW-LC

JGJWA0759GB

HEATED SEAT

< DTC/CIRCUIT DIAGNOSIS >

HEATED SEAT

Connector No.	B432
Connector Name	SEAT CUSHION HEATER (PASSENGER SIDE)
Connector Type	M03EW-LC

Connector No.	B460
Connector Name	WIRE TO WIRE (WITH AUTOMATIC DRIVE POSITIONER)
Connector Type	NS16MW-CS

Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS00FW-M2

Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
2	B	—	48	B	—
11	Y	—	59	Y/G	—
12	Y/G	—	60	—	—

Terminal No.	Color of Wire	Signal Name (Specification)
92	L	-

Terminal No.	Color of Wire	Signal Name [Specification]
2A	G	—

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Type	THBONW-CS16-TM4

Connector No.	M70
Connector Name	HEATED SEAT RELAY
Connector Type	MS302FL-M2-LC

Connector No.	M117
Connector Name	WIRE TO WIRE
Connector Type	THICKWW-CSI6-TM4

Terminal No.	Color of Wire	Signal Name [Specification]
92	L	—

Terminal No.	Color of Wire	Signal Name [Specification]
1	B	—

Terminal No.	Color of Wire	Signal Name [Specification]
7	W	—

JGJWA0760GB

HEATED SEAT

< DTC/CIRCUIT DIAGNOSIS >

HEATED SEAT																																							
Connector No.	M135	Connector No.	M171																																				
Connector Name	WIRE TO WIRE	Connector Name	WIRE TO WIRE																																				
Connector Type	NS308FBR-CS	Connector Type	NS308FBR-CS																																				
																																							
<table border="1"> <tr><td>1</td><td>2</td><td>3</td></tr> <tr><td>4</td><td>5</td><td>6</td></tr> <tr><td>7</td><td>8</td><td></td></tr> </table>	1	2	3	4	5	6	7	8		<table border="1"> <tr><td>3</td><td>4</td><td>5</td></tr> <tr><td>8</td><td>7</td><td>6</td></tr> <tr><td></td><td></td><td>1</td></tr> </table>	3	4	5	8	7	6			1	<table border="1"> <tr><td>5</td><td>6</td><td></td></tr> <tr><td>4</td><td>2</td><td>1</td></tr> <tr><td>3</td><td></td><td></td></tr> </table>	5	6		4	2	1	3			<table border="1"> <tr><td>5</td><td>6</td><td></td></tr> <tr><td>4</td><td>2</td><td>1</td></tr> <tr><td>3</td><td></td><td></td></tr> </table>	5	6		4	2	1	3		
1	2	3																																					
4	5	6																																					
7	8																																						
3	4	5																																					
8	7	6																																					
		1																																					
5	6																																						
4	2	1																																					
3																																							
5	6																																						
4	2	1																																					
3																																							
Terminal No.	Color of Wire	Signal Name (Specification)	Terminal No.	Color of Wire	Signal Name (Specification)																																		
1	GR	-	1	P	-																																		
2	G	-	2	LG	-																																		
3	G	-	3	SB	-																																		
4	B	-	4	V	-																																		
5	L	-																																					
6	B	-																																					
7	SB	-																																					
8	GR	-																																					

JCJWA0761GB

LUMBAR SUPPORT


< DTC/CIRCUIT DIAGNOSIS >

LUMBAR SUPPORT

Wiring Diagram - LUMBAR SUPPORT SYSTEM -

INFOID:0000000004347413

LUMBAR SUPPORT

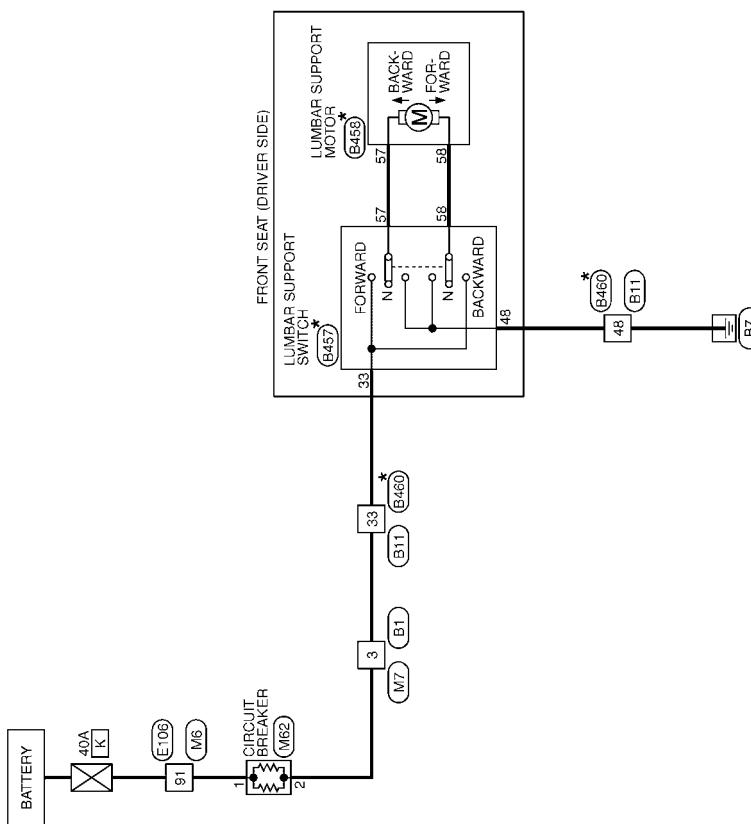

LUMBAR SUPPORT

< DTC/CIRCUIT DIAGNOSIS >

LUMBAR SUPPORT

		
Connector No. B1	Connector Name WIRE TO WIRE (WITH AUTOMATIC DRIVE POSITIONER)	Connector Type NS16FW-CS
Connector No. B1	Connector Name WIRE TO WIRE	Connector Type TI80FW-CS16-TM4
Connector No. B1	Connector Name WIRE TO WIRE	Connector Type TI80FW-CS16-TM4
Connector No. B1	Connector Name WIRE TO WIRE	Connector Type TI80FW-CS16-TM4

Connector No.	B460	Connector Name WIRE TO WIRE DRIVE POSITION (W/ AUTOMATIC NS18MW-CS	Connector Type TH180W-CS16-TM4
Connector No.	E106	Connector Name WIRE TO WIRE	Connector Type TH180MN-CS16-TM4
Connector No.		Connector Name WIRE TO WIRE	Connector Type TH180MN-CS16-TM4
Connector No.		Connector Name WIRE TO WIRE	Connector Type TH180MN-CS16-TM4

H.S.

1	2	3	4
5	6	7	8
9	10	11	12
13	14	15	16
1	2	3	4
5	6	7	8
9	10	11	12
13	14	15	16
1	2	3	4
5	6	7	8
9	10	11	12
13	14	15	16
1	2	3	4
5	6	7	8
9	10	11	12
13	14	15	16

Serial Name [Specification]				Signal Name [Specification]			
Terminal No.	Color of Wire	Terminal No.	Color of Wire	Terminal No.	Color of Wire	Terminal No.	Color of Wire
33	B	91	W	91	W	91	W
48	—	—	—	—	—	—	—

JGJWA0756GB

LUMBAR SUPPORT

< DTC/CIRCUIT DIAGNOSIS >

A

B

C

D

E

F

G

H

I

SE

K


L

M

N

O

P

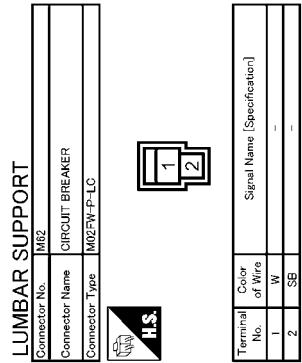

JCJWA0757GB

REAR SEATBACK RELEASE CONTROL

< DTC/CIRCUIT DIAGNOSIS >


REAR SEATBACK RELEASE CONTROL

Wiring Diagram - REAR SEATBACK RELEASE CONTROL -

INFOID:0000000004347414

REAR SEATBACK RELEASE CONTROL

* : This connector is not shown in "Harness Layout".

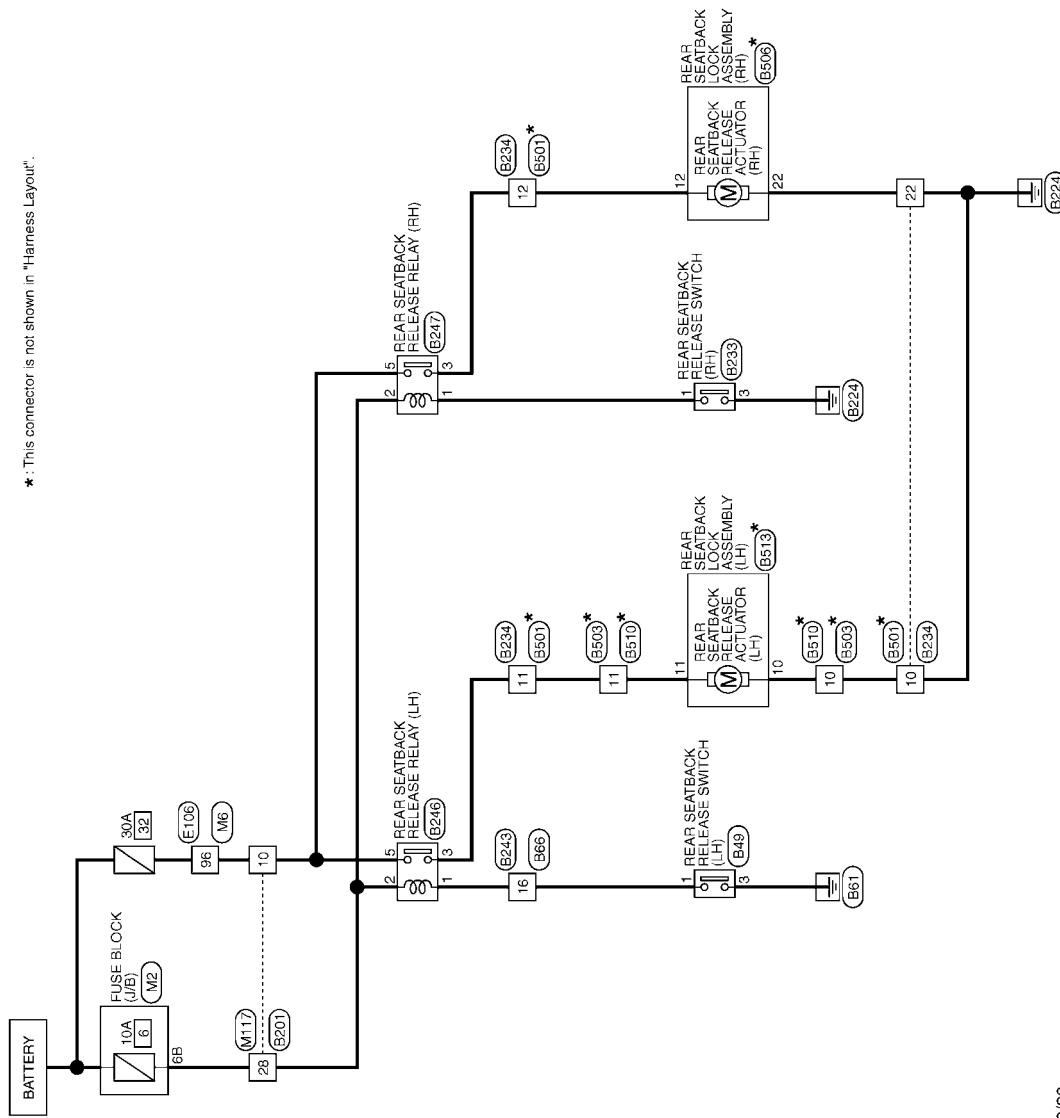

2008/08/26

JGJWA0769GI

REAR SEATBACK RELEASE CONTROL

< DTC/CIRCUIT DIAGNOSIS >

REAR SEATBACK RELEASE CONTROL

 H.S.	REAR SEATBACK RELEASE SWITCH (LH)	Connector No. B49	Connector Name REAR SEATBACK RELEASE SWITCH (LH)	Connector No. B201	Connector Name WIRE TO WIRE	Connector No. B233	Connector Name REAR SEATBACK RELEASE SWITCH (RH)
 H.S.	TH44MW-NH	Connector Type TH44MW-NH	Connector Type TH80FW-CS16-TM4				
 H.S.	TK06FW-1V	Connector Type TK06FW-1V					

Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
1	BR	-	10	W	-
3	B	-	28	Y	-
6	BR	-			

Connector No.	B234	Connector No.	B243
Connector Name	WIRE TO WIRE	Connector Name	WIRE TO WIRE
Connector Type	NS-BWW-CS	Connector Type	TH24W-NH
Connector No.	B235	Connector No.	B246
Connector Name	WIRE TO WIRE	Connector Name	REAR SEAT BACK RELEASE RELAY (LH)
Connector Type	NS-BWW-CS	Connector Type	WS20TL-M2
Connector No.	B247	Connector No.	B247
Connector Name	REAR SEAT BACK RELEASE RELAY (RH)	Connector Name	REAR SEAT BACK RELEASE RELAY (RH)
Connector Type	MS20TL-M2	Connector Type	MS20TL-M2

Terminal No.	Color of Wire	Signal Name [Specification]
10	R	-
11	W	-
12	W	-
22	B	-

Terminal No.	Color of Wire	Signal Name [Specification]
16	BR	-
17	R	-
18	W	-
19	W	-
20	B	-
21	BR	-
22	BR	-
23	BR	-
24	BR	-




Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-
2	Y	-
3	O	-
4	W	-
5	W	-

JCJWA0770GB

REAR SEATBACK RELEASE CONTROL

< DTC/CIRCUIT DIAGNOSIS >

REAR SEATBACK RELEASE CONTROL
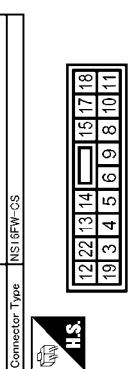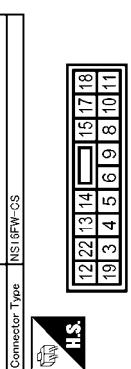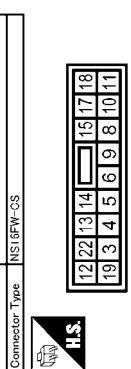
<table border="1"> <tr><td>Connector No.</td><td>B501</td></tr> <tr><td>Connector Name</td><td>WIRE TO WIRE</td></tr> <tr><td>Connector Type</td><td>NS10FW-CS</td></tr> </table> 	Connector No.	B501	Connector Name	WIRE TO WIRE	Connector Type	NS10FW-CS	<table border="1"> <tr><td>Connector No.</td><td>B503</td></tr> <tr><td>Connector Name</td><td>WIRE TO WIRE</td></tr> <tr><td>Connector Type</td><td>NS10FW-CS</td></tr> </table> 	Connector No.	B503	Connector Name	WIRE TO WIRE	Connector Type	NS10FW-CS	<table border="1"> <tr><td>Connector No.</td><td>B506</td></tr> <tr><td>Connector Name</td><td>REAR SEATBACK LOCK ASSEMBLY (RH)</td></tr> <tr><td>Connector Type</td><td>NS30FW-CS</td></tr> </table> 	Connector No.	B506	Connector Name	REAR SEATBACK LOCK ASSEMBLY (RH)	Connector Type	NS30FW-CS																											
Connector No.	B501																																														
Connector Name	WIRE TO WIRE																																														
Connector Type	NS10FW-CS																																														
Connector No.	B503																																														
Connector Name	WIRE TO WIRE																																														
Connector Type	NS10FW-CS																																														
Connector No.	B506																																														
Connector Name	REAR SEATBACK LOCK ASSEMBLY (RH)																																														
Connector Type	NS30FW-CS																																														
<table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>10</td><td>B</td><td>-</td></tr> <tr><td>11</td><td>V/W</td><td>-</td></tr> <tr><td>12</td><td>W</td><td>-</td></tr> <tr><td>22</td><td>B</td><td>-</td></tr> </table>	Terminal No.	Color of Wire	Signal Name [Specification]	10	B	-	11	V/W	-	12	W	-	22	B	-	<table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>10</td><td>B</td><td>-</td></tr> <tr><td>11</td><td>V/W</td><td>-</td></tr> <tr><td>12</td><td>W</td><td>-</td></tr> <tr><td>22</td><td>B</td><td>-</td></tr> </table>	Terminal No.	Color of Wire	Signal Name [Specification]	10	B	-	11	V/W	-	12	W	-	22	B	-	<table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>10</td><td>B</td><td>-</td></tr> <tr><td>11</td><td>V/W</td><td>-</td></tr> <tr><td>12</td><td>W</td><td>-</td></tr> <tr><td>22</td><td>B</td><td>-</td></tr> </table>	Terminal No.	Color of Wire	Signal Name [Specification]	10	B	-	11	V/W	-	12	W	-	22	B	-
Terminal No.	Color of Wire	Signal Name [Specification]																																													
10	B	-																																													
11	V/W	-																																													
12	W	-																																													
22	B	-																																													
Terminal No.	Color of Wire	Signal Name [Specification]																																													
10	B	-																																													
11	V/W	-																																													
12	W	-																																													
22	B	-																																													
Terminal No.	Color of Wire	Signal Name [Specification]																																													
10	B	-																																													
11	V/W	-																																													
12	W	-																																													
22	B	-																																													
<table border="1"> <tr><td>Connector No.</td><td>B513</td></tr> <tr><td>Connector Name</td><td>REAR SEATBACK LOCK ASSEMBLY (LH)</td></tr> <tr><td>Connector Type</td><td>NS30FW-CS</td></tr> </table> 	Connector No.	B513	Connector Name	REAR SEATBACK LOCK ASSEMBLY (LH)	Connector Type	NS30FW-CS	<table border="1"> <tr><td>Connector No.</td><td>E106</td></tr> <tr><td>Connector Name</td><td>WIRE TO WIRE</td></tr> <tr><td>Connector Type</td><td>TH80FW-CS16-TM4</td></tr> </table> 	Connector No.	E106	Connector Name	WIRE TO WIRE	Connector Type	TH80FW-CS16-TM4	<table border="1"> <tr><td>Connector No.</td><td>M2</td></tr> <tr><td>Connector Name</td><td>FUSE BLOCK (J/B)</td></tr> <tr><td>Connector Type</td><td>NS10FW-CS</td></tr> </table> 	Connector No.	M2	Connector Name	FUSE BLOCK (J/B)	Connector Type	NS10FW-CS																											
Connector No.	B513																																														
Connector Name	REAR SEATBACK LOCK ASSEMBLY (LH)																																														
Connector Type	NS30FW-CS																																														
Connector No.	E106																																														
Connector Name	WIRE TO WIRE																																														
Connector Type	TH80FW-CS16-TM4																																														
Connector No.	M2																																														
Connector Name	FUSE BLOCK (J/B)																																														
Connector Type	NS10FW-CS																																														
<table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>10</td><td>B</td><td>-</td></tr> <tr><td>11</td><td>V/W</td><td>-</td></tr> <tr><td>12</td><td>W</td><td>-</td></tr> <tr><td>22</td><td>B</td><td>-</td></tr> </table>	Terminal No.	Color of Wire	Signal Name [Specification]	10	B	-	11	V/W	-	12	W	-	22	B	-	<table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>10</td><td>B</td><td>-</td></tr> <tr><td>11</td><td>V/W</td><td>-</td></tr> <tr><td>12</td><td>W</td><td>-</td></tr> <tr><td>22</td><td>B</td><td>-</td></tr> </table>	Terminal No.	Color of Wire	Signal Name [Specification]	10	B	-	11	V/W	-	12	W	-	22	B	-	<table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>10</td><td>B</td><td>-</td></tr> <tr><td>11</td><td>V/W</td><td>-</td></tr> <tr><td>12</td><td>W</td><td>-</td></tr> <tr><td>22</td><td>B</td><td>-</td></tr> </table>	Terminal No.	Color of Wire	Signal Name [Specification]	10	B	-	11	V/W	-	12	W	-	22	B	-
Terminal No.	Color of Wire	Signal Name [Specification]																																													
10	B	-																																													
11	V/W	-																																													
12	W	-																																													
22	B	-																																													
Terminal No.	Color of Wire	Signal Name [Specification]																																													
10	B	-																																													
11	V/W	-																																													
12	W	-																																													
22	B	-																																													
Terminal No.	Color of Wire	Signal Name [Specification]																																													
10	B	-																																													
11	V/W	-																																													
12	W	-																																													
22	B	-																																													
<table border="1"> <tr><td>Connector No.</td><td>B514</td></tr> <tr><td>Connector Name</td><td>REAR SEATBACK LOCK ASSEMBLY (LH)</td></tr> <tr><td>Connector Type</td><td>NS30FW-CS</td></tr> </table> 	Connector No.	B514	Connector Name	REAR SEATBACK LOCK ASSEMBLY (LH)	Connector Type	NS30FW-CS	<table border="1"> <tr><td>Connector No.</td><td>E107</td></tr> <tr><td>Connector Name</td><td>WIRE TO WIRE</td></tr> <tr><td>Connector Type</td><td>TH80FW-CS16-TM4</td></tr> </table> 	Connector No.	E107	Connector Name	WIRE TO WIRE	Connector Type	TH80FW-CS16-TM4	<table border="1"> <tr><td>Connector No.</td><td>M3</td></tr> <tr><td>Connector Name</td><td>FUSE BLOCK (J/B)</td></tr> <tr><td>Connector Type</td><td>NS10FW-CS</td></tr> </table> 	Connector No.	M3	Connector Name	FUSE BLOCK (J/B)	Connector Type	NS10FW-CS																											
Connector No.	B514																																														
Connector Name	REAR SEATBACK LOCK ASSEMBLY (LH)																																														
Connector Type	NS30FW-CS																																														
Connector No.	E107																																														
Connector Name	WIRE TO WIRE																																														
Connector Type	TH80FW-CS16-TM4																																														
Connector No.	M3																																														
Connector Name	FUSE BLOCK (J/B)																																														
Connector Type	NS10FW-CS																																														
<table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>10</td><td>B</td><td>-</td></tr> <tr><td>11</td><td>V/W</td><td>-</td></tr> <tr><td>12</td><td>W</td><td>-</td></tr> <tr><td>22</td><td>B</td><td>-</td></tr> </table>	Terminal No.	Color of Wire	Signal Name [Specification]	10	B	-	11	V/W	-	12	W	-	22	B	-	<table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>10</td><td>B</td><td>-</td></tr> <tr><td>11</td><td>V/W</td><td>-</td></tr> <tr><td>12</td><td>W</td><td>-</td></tr> <tr><td>22</td><td>B</td><td>-</td></tr> </table>	Terminal No.	Color of Wire	Signal Name [Specification]	10	B	-	11	V/W	-	12	W	-	22	B	-	<table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>10</td><td>B</td><td>-</td></tr> <tr><td>11</td><td>V/W</td><td>-</td></tr> <tr><td>12</td><td>W</td><td>-</td></tr> <tr><td>22</td><td>B</td><td>-</td></tr> </table>	Terminal No.	Color of Wire	Signal Name [Specification]	10	B	-	11	V/W	-	12	W	-	22	B	-
Terminal No.	Color of Wire	Signal Name [Specification]																																													
10	B	-																																													
11	V/W	-																																													
12	W	-																																													
22	B	-																																													
Terminal No.	Color of Wire	Signal Name [Specification]																																													
10	B	-																																													
11	V/W	-																																													
12	W	-																																													
22	B	-																																													
Terminal No.	Color of Wire	Signal Name [Specification]																																													
10	B	-																																													
11	V/W	-																																													
12	W	-																																													
22	B	-																																													

JCJWA0771GB

REAR SEATBACK RELEASE CONTROL

< DTC/CIRCUIT DIAGNOSIS >

A

B

C

D

E

F

G

H

I

SE

K


L

M

N

O

P

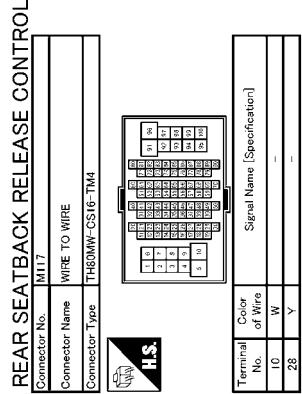

JCJWA0772GB

REAR SEAT BACK POWER RETURN CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >


ECU DIAGNOSIS INFORMATION

REAR SEAT BACK POWER RETURN CONTROL UNIT

Reference Value

INFOID:000000004347415

TERMINAL LAYOUT

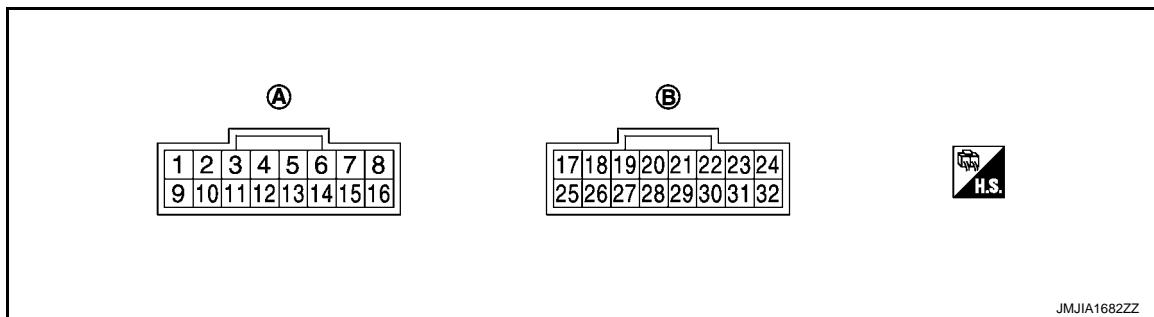


A. B227

B. B226



PHYSICAL VALUES

Rear seat back power return control unit

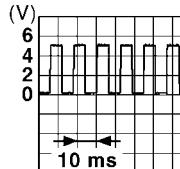Terminal No.		Wire color	Description		Condition	Value (Approx.)
+	-		Signal name	Input/Output		
1	Ground	V	Ground (Motor sensor RH)	—	—	0
2	Ground	Y	Motor sensor (RH) input signal	Input	When the power return motor (RH) is operated	 (V)
					When the pinch occurs	
3	Ground	G	Motor sensor (RH) Power supply	Input	When the power return motor is operated	Battery voltage
5	Ground	W	Power return motor (LH) backward signal	Output	When the power return motor (LH) performs reverse operation	Battery voltage
					Other than the above	
6	Ground	L	Power return motor (LH) forward signal	Output	When the power return motor (LH) performs return operation	Battery voltage
					Other than the above	
7	Ground	W	Power return motor (RH) backward signal	Output	When the power return motor (RH) performs reverse operation	Battery voltage
					Other than the above	
8	Ground	R	Power return motor (RH) forward signal	Output	When the power return motor (RH) performs return operation	Battery voltage
					Other than the above	

REAR SEAT BACK POWER RETURN CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

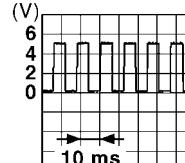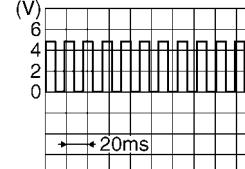Terminal No.		Wire color	Description		Condition	Value (Approx.)
+	-		Signal name	Input/Output		
9	Ground	P	Ground (Motor sensor LH)	—	—	0
10	Ground	BR	Motor sensor (LH) input signal	Input	When the power return motor (LH) is operated	 (V) 6 4 2 0 10 ms <small>JMKIA0070GB</small>
					When the pinch occurs	The above pulse width should be expanded
11	Ground	W	Motor sensor (LH) Power supply	Input	When the power return motor is operated	Battery voltage
13	Ground	B	Ground (power)	—	—	0
16	Ground	W	Battery power supply (power)	Input	—	Battery voltage
17	Ground	Y	Battery power supply (system)	Input	—	Battery voltage
20	Ground	P	Power return switch (RH) or rear seatback switch (RH) in UP direction input signal	Input	When pressing the power return switch (RH) or rear seatback switch (RH) in UP direction	0
					Other than the above	5
21	Ground	GR	Primary position limit switch (LH) input signal	Input	When the sector gear (LH) is in the initial position (other than low power consumption mode)	Battery voltage
					Other than the above	0
22	Ground	P	Primary position limit switch (RH) input signal	Input	When the sector gear (RH) is in the initial position (other than low power consumption mode)	Battery voltage
					Other than the above	0
23	Ground	L	Ground (limit switch RH)	—	—	0
24	Ground	BR	Vehicle speed signal (8-pulse)	Input	When vehicle speed is approx.40 km/h (25MPH)	NOTE: Maximum voltage may be 12 V due to specifications (connected units)
						 (V) 6 4 2 0 20ms <small>SKIA6649J</small>
28	Ground	LG	Power return switch (LH) or rear seatback switch in UP direction input signal	Input	When pressing the power return switch (LH) or rear seatback switch in UP direction	0
					Other than the above	5

A

B

C

D

E

F

G

H

I

SE

K

L

M

N

O

P

REAR SEAT BACK POWER RETURN CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

Terminal No.		Wire color	Description		Condition	Value (Approx.)
+	-		Signal name	Input/Output		
29	Ground	G	Return complete limit switch (LH) input signal	Input	When the rear seatback (LH) is in the return completion position (other than low power consumption mode)	Battery voltage
					Other than the above	0
30	Ground	R	Return complete limit switch (RH) input signal	Input	When the rear seatback (RH) is in the return completion position (other than low power consumption mode)	Battery voltage
					Other than the above	0
31	Ground	L	Ground (limit switch LH)	—	—	0
32	Ground	B	Ground (system)	—	—	0

REAR SEAT BACK POWER RETURN CONTROL UNIT


< ECU DIAGNOSIS INFORMATION >

Wiring Diagram - REAR SEATBACK POWER RETURN SYSTEM -

INFOID:000000004347416

A B C D E F G H I J K L M

REAR SEATBACK POWER RETURN SYSTEM

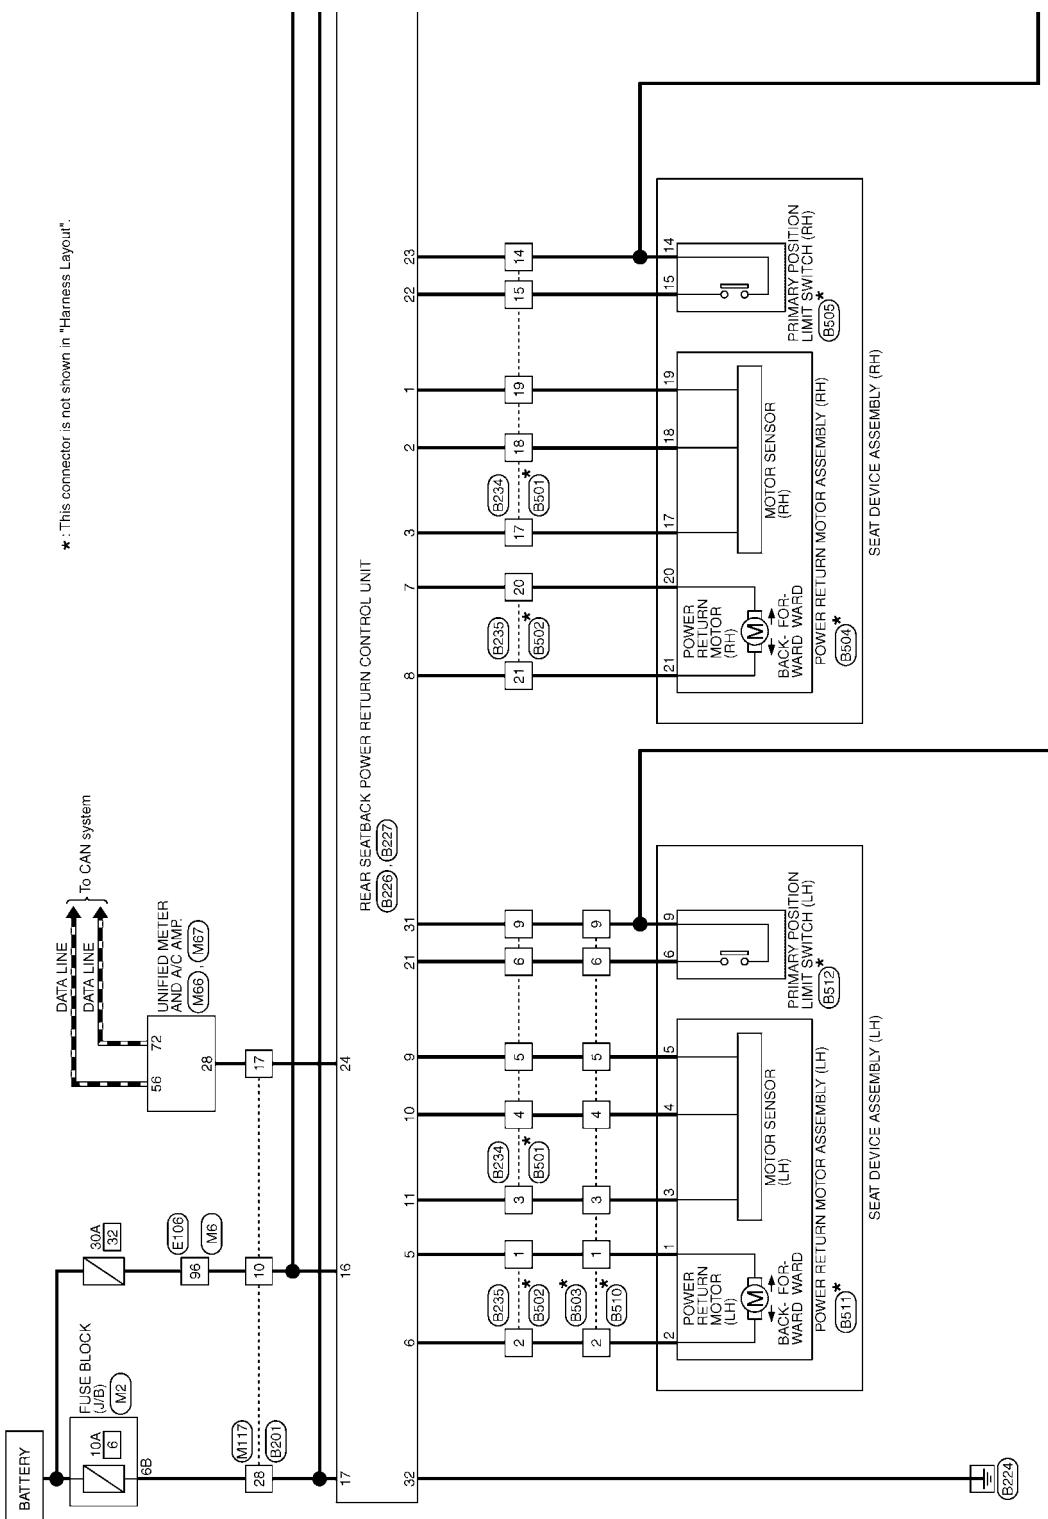


2008/08/28

JCJWA0762GB

REAR SEAT BACK POWER RETURN CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

* This connector is not shown in "Harness Layout".

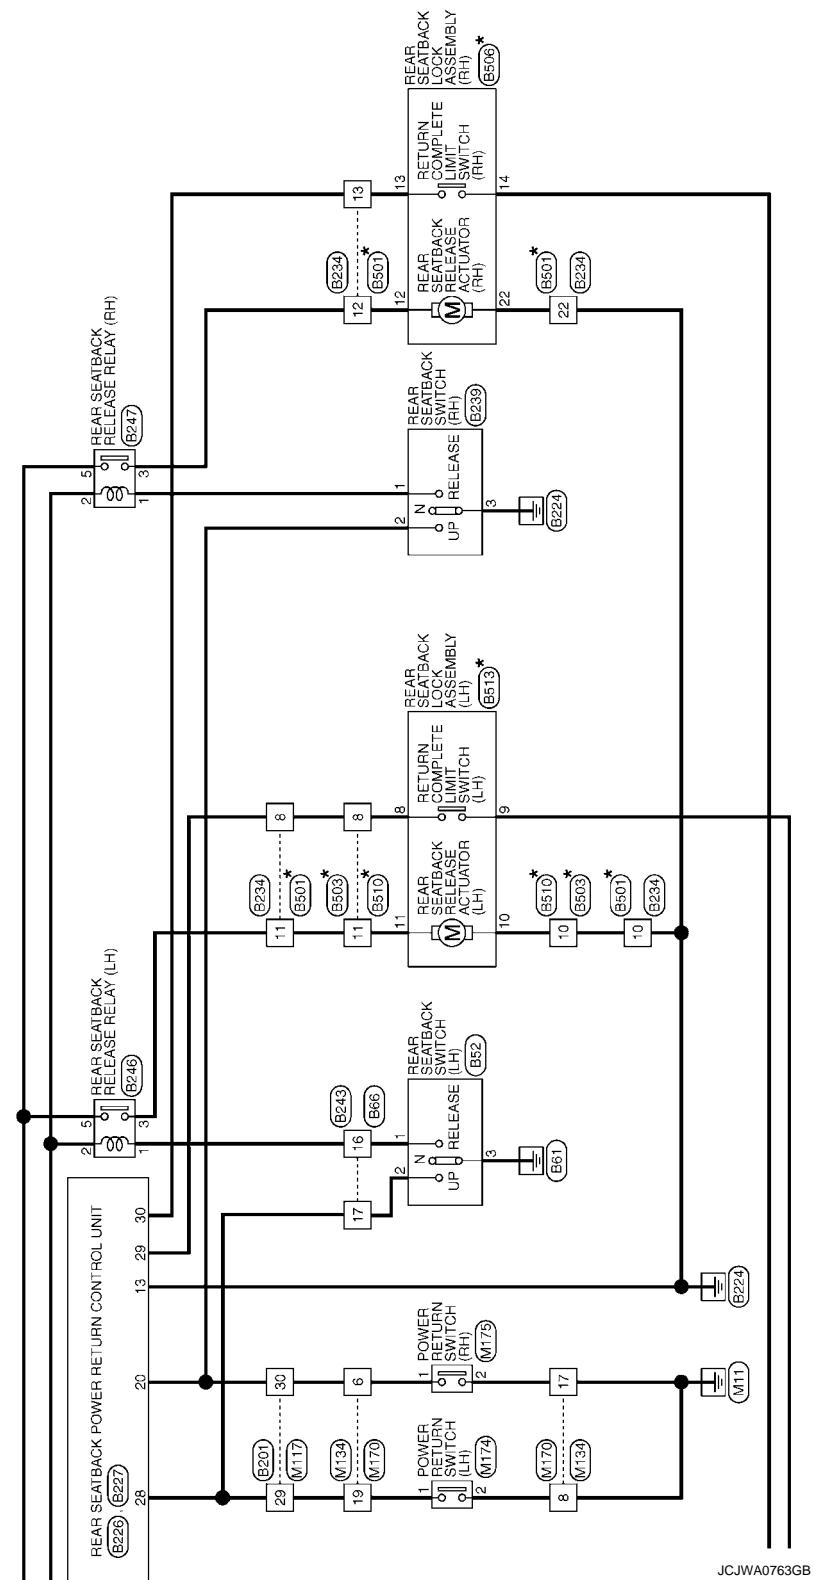

JCJWA0763GB

REAR SEAT BACK POWER RETURN CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

REAR SEATBACK POWER RETURN SYSTEM

Connector No.	B66	Connector No.	B201
Connector Name	WIRE TO WIRE	Connector Name	REAR SEATBACK POWER RETURN
Connector Type	TH24MW-NH	Connector Type	YAA16FW



Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
16	BR	-	10	W	-
17	O	-	17	BR	ELIP UP SW RH
3	B	-	28	Y	PRIMALLY POSITION L/S (LH)

Terminal No.	Color of Wire	Signal Name [Specification]
1	2	3
2	4	5
3	5	6
4	6	7
5	7	8
6	8	9
7	9	10
8	10	11
9	11	12
10	12	13
11	13	14
12	14	15
13	15	16

Connector No.	B226	Connector No.	B201
Connector Name	REAR SEATBACK POWER RETURN	Connector Name	REAR SEATBACK POWER RETURN
Connector Type	YAA16FW	Connector Type	YAA16FW



Connector No.	B201	Connector No.	B226
Connector Name	WIRE TO WIRE	Connector Name	REAR SEATBACK POWER RETURN
Connector Type	TH80FW-16-TM4	Connector Type	YAA16FW



18	17	15	14	13	22	12
11	10	8	9	6	5	4
10	9	7	8	5	3	19
11	12	13	14	15	16	-

Connector No.	B226	Connector No.	B234
Connector Name	REAR SEATBACK POWER RETURN	Connector Name	WIRE TO WIRE
Connector Type	YAA16FW	Connector Type	NS16MMW-CS



15	P	-
17	G	-
18	Y	-
19	V	-
22	B	-

Terminal No.	Color of Wire	Signal Name [Specification]
15	P	-
17	G	-
18	Y	-
19	V	-
22	B	-



JCJWA0764GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
W
X
Y
Z

REAR SEAT BACK POWER RETURN CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

REAR SEATBACK POWER RETURN SYSTEM

Connector No.	Connector Name	Connector Type	Wire to Wire	Signal Name [Specification]
B235	WIRE TO WIRE	MDA-MW-LC	—	—
	REAR SEATBACK SWITCH (RH)	TK06FW-1V	—	—
			20 21	1 2 3
			2 1	—
			20 21	—
			2 1	—

Connector No.	Connector Name	Connector Type	Wire to Wire	Signal Name [Specification]
B239	REAR SEATBACK SWITCH (RH)	TK06FW-NH	—	—
			20 21	1 2 3
			2 1	—
			20 21	—
			2 1	—

Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
1	W	—	1	O	—
2	L	—	2	P	—
3	W	—	3	B	—
21	R	—			

Connector No.	Connector Name	Connector Type	Wire to Wire	Signal Name [Specification]
B247	REAR SEATBACK RELEASE RELAY (RH)	MSD2FL-M2	—	—
			20 22	1 2 3
			2 1	—
			20 22	—
			2 1	—

Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
1	O	—	3	G	—
2	Y	—	4	G/R	—
3	W	—	5	G/R	—
5	W	—	6	SB	—
			8	O	—
			9	V	—
			10	B	—
			11	V/N	—
			12	W	—
			13	L	—
			14	L/B	—

Connector No.	Connector Name	Connector Type	Wire to Wire	Signal Name [Specification]
B246	REAR SEATBACK RELEASE RELAY (LH)	MSD2FL-M2	—	—
			21 20	1 2
			2 1	—
			21 20	—
			2 1	—

Terminal No.	Color of Wire	Signal Name [Specification]
1	BR	—
2	O	—
3	W	—
5	W	—

Terminal No.	Color of Wire	Signal Name [Specification]
15	L/W	—
17	GR	—
18	GR/B	—
19	GR/R	—
22	B	—

Terminal No.	Color of Wire	Signal Name [Specification]
12	22	1 4
13	22	15 17 18
14	3	5 6 9 8 10 11
19	3	—
20	3	—
21	5	—
22	5	—
23	1	—
24	1	—

Terminal No.	Color of Wire	Signal Name [Specification]
3	G	—
4	G/R	—
5	G/R	—
6	SB	—
8	O	—
9	V	—
10	B	—
11	V/N	—
12	W	—
13	L	—
14	L/B	—

JCJWA0765GB

REAR SEAT BACK POWER RETURN CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

REAR SEATBACK POWER RETURN SYSTEM

Connector No.	B503	Connector No.	B504
Connector Name	WIRE TO WIRE	Connector Name	POWER RETURN MOTOR ASSEMBLY (RH)
Connector Type	NS10MFW-CS	Connector Type	6098-0245



Terminal No.	Color of Wire	Signal Name [Specification]
1	R	-
2	R/W	-
3	G	-
4	G/B	-
5	G/R	-
6	SB	-
8	O	-
9	V	-
10	B	-
11	V/W	-

Terminal No.	Color of Wire	Signal Name [Specification]
17	G/R	MOTOR SENS BAT
18	GR/B	MOTOR SENS SIGNAL
19	GR/R	MOTOR SENS GND
20	LG	-
21	LG/B	-



Connector No.	B506	Connector No.	B506
Connector Name	PRIMARY POSITION LIMIT SWITCH	Connector Name	REAR SEATBACK LOCK ASSEMBLY (RH)
Connector Type	TK02FW	Connector Type	NS10MFW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1	LG/B	-
2	LG	-
3	GR	-
4	GR/B	-
5	GR/R	-
6	L/W	-
8	L	-
9	L/B	-
10	B	-
11	W	-

Terminal No.	Color of Wire	Signal Name [Specification]
14	L/B	-
15	L/W	-
16	-	-
17	-	-
18	-	-
19	-	-
20	-	-
21	-	-

Terminal No.	Color of Wire	Signal Name [Specification]
12	W	-
13	L	-
14	L/B	-
22	E	-



Terminal No.	Color of Wire	Signal Name [Specification]
8	W	-
9	L	-
10	L/B	-
11	E	-



Connector No.	B513	Connector No.	B513
Connector Name	PRIMARY POSITION LIMIT SWITCH	Connector Name	REAR SEATBACK LOCK ASSEMBLY (LH)
Connector Type	TK02FW	Connector Type	NS10MFW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
2	LG/B	-
3	LG	-
4	GR	MOTOR SENS BAT
5	GR/B	MOTOR SENS SIGNAL
6	GR/R	MOTOR SENS GND



Terminal No.	Color of Wire	Signal Name [Specification]
7	W	-
8	L	-
9	L/B	-
10	B	-
11	W	-



 
JCJWA0766GB


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
W
X
Y
Z

REAR SEAT BACK POWER RETURN CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

REAR SEATBACK POWER RETURN SYSTEM

Connector No.	M2	Connector No.	M6
Connector Name	FUSE BLOCK (J/B)	Connector Name	WIRE TO WIRE
Connector Type	NS10FW-CS	Connector Type	TH80MW-CS16-TM4
			
			
Terminal No.	Color of Wire	Terminal No.	Color of Wire
96	P	96	W
Signal Name [Specification]	-	Signal Name [Specification]	-

 Connector No.	M117	Connector No.	M134
Connector Name	WIRE TO WIRE	Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4	Connector Type	TH124MW-NH
			
			
Terminal No.	Color of Wire	Terminal No.	Color of Wire
10	W	1	2
17	BR	2	3
28	Y	3	4
29	Y	4	5
30	V	5	6
Signal Name [Specification]	-	Signal Name [Specification]	-
CAN-H	-	9	8
CAN-L	-	10	7
	-	11	6
	-	12	5
	-	13	4
	-	14	3
	-	15	2
	-	16	1
	-	17	12
	-	18	11
	-	19	10
	-	20	9
	-	21	8
	-	22	7
	-	23	6
	-	24	5

JCJWA0767GB

REAR SEAT BACK POWER RETURN CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

A

B

C

D

E

F

G

H

I

SE

K

 
L

M

N

O

P

REAR SEATBACK POWER RETURN SYSTEM			
Connector No.	M174	Connector No.	M175
Connector Name	POWER RETURN SWITCH (LH)	Connector Name	POWER RETURN SWITCH (RH)
Connector Type	TK04FW	Connector Type	TK04FW-B
			
Terminal No.	Color of Wire	Signal Name [Specification]	
1	Y	-	
2	BR	-	
Terminal No.	Color of Wire	Signal Name [Specification]	
1	CR	-	
2	L	-	

JCJWA0768GB

INFOID:0000000004347417

Fail-safe

Even if the automatic return control is inactivated, the fold-down and manual return operations can be performed

REAR SEAT BACK POWER RETURN CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

Possible location of malfunction	Diagnosis mode	Corrective action
Return complete limit switch "ON" malfunction	The return completion position cannot be detected	Detect the lock with the rear seatback power return control unit, and then reverse the power return motor
Return complete limit switch "OFF" malfunction	The automatic return cannot be performed because the return completion position is misrecognized	The manual return operation can be performed
Primary position limit switch "ON" malfunction	The initial position of the sector gear cannot be detected	Detect the lock with the rear seatback power return control unit, and then stop the power return motor * If the above condition is repeated for 4 times, stop the subsequent automatic return operation. However, the manual return operation can be performed
Primary position limit switch "OFF" malfunction	The initial position of the sector gear is misrecognized (The sector gear reverse operation cannot be performed)	<ul style="list-style-type: none"> • Return the sector gear to the initial position if the primary position limit switch is not turned to ON after starting the return (Lock detection) • The manual return operation can be performed
Sensor malfunction (fixed to High or Low)	The motor lock is misrecognized because the pulse does not change	<ul style="list-style-type: none"> • If the pulse does not change completely after starting the motor operation, return the sector gear to the initial position • The manual return operation can be performed

REAR SEATBACK POWER RETURN SYSTEM DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

REAR SEATBACK POWER RETURN SYSTEM DOES NOT OPERATE
BOTH SIDES

BOTH SIDES : Diagnosis Procedure

INFOID:000000004347418

1. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check power supply and ground circuit.

Refer to [SE-14, "REAR SEATBACK POWER RETURN CONTROL UNIT : Diagnosis Procedure".](#)

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2. CHECK VEHICLE SPEED SIGNAL CIRCUIT

Check vehicle speed signal circuit.

Refer to [SE-39, "Component Function Check".](#)

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3. CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-40, "Intermittent Incident".](#)

NO >> GO TO 1.

LH

LH : Diagnosis Procedure

INFOID:000000004347419

SE

1. PERFORM POWER RETURN SWITCH AND REAR SEATBACK SWITCH

Perform power return switch and rear seatback switch.

From which power return switch (or rear seatback switch) does the seat return operation occur?

POWER RETURN SWITCH>>GO TO 2.

REAR SEATBACK SWITCH>>GO TO 3.

BOTH SIDES>>GO TO 4.

2. CHECK POWER RETURN SWITCH (LH)

Check power return switch (LH).

Refer to [SE-15, "LH : Component Function Check".](#)

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the malfunctioning parts.

3. CHECK REAR SEATBACK SWITCH (LH)

Check rear seatback switch (LH).

Refer to [SE-19, "LH : Component Function Check".](#)

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the malfunctioning parts.

4. CHECK POWER RETURN MOTOR (LH)

Check power return motor (LH).

Refer to [SE-36, "LH : Component Function Check".](#)

Is the inspection result normal?

REAR SEATBACK POWER RETURN SYSTEM DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

YES >> GO TO 5.

NO >> Repair or replace the malfunctioning parts.

5. CHECK RETURN COMPLETE LIMIT SWITCH (LH)

Check return complete limit switch (LH).

Refer to [SE-27. "LH : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace the malfunctioning parts.

6. CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-40. "Intermittent Incident"](#).

NO >> GO TO 1.

RH

RH : Diagnosis Procedure

INFOID:000000004347420

1. PERFORM POWER RETURN SWITCH AND REAR SEATBACK SWITCH

Perform power return switch and rear seatback switch.

From which power return switch (or rear seatback switch) does the seat return operation occur?

POWER RETURN SWITCH>>GO TO 2.

REAR SEATBACK SWITCH>>GO TO 3.

BOTH SIDES>>GO TO 4.

2. CHECK POWER RETURN SWITCH (RH)

Check power return switch (RH).

Refer to [SE-16. "RH : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the malfunctioning parts.

3. CHECK REAR SEATBACK SWITCH (RH)

Check rear seatback switch (RH).

Refer to [SE-20. "RH : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the malfunctioning parts.

4. CHECK POWER RETURN MOTOR (RH)

Check power return motor (RH).

Refer to [SE-37. "RH : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace the malfunctioning parts.

5. CHECK RETURN COMPLETE LIMIT SWITCH (RH)

Check return complete limit switch (RH).

Refer to [SE-28. "RH : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace the malfunctioning parts.

6. CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

REAR SEATBACK POWER RETURN SYSTEM DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

YES >> Check intermittent incident. Refer to [GI-40, "Intermittent Incident"](#).
NO >> GO TO 1.

A

B

C

D

E

F

G

H

I

SE

K

L

M

N

O

P

MALFUNCTION DETECTION BUZZER SOUNDS DURING POWER RETURN MOTOR INVERSE ROTATION

< SYMPTOM DIAGNOSIS >

MALFUNCTION DETECTION BUZZER SOUNDS DURING POWER RETURN MOTOR INVERSE ROTATION

LH

LH : Diagnosis Procedure

INFOID:000000004347421

1. CHECK RETURN COMPLETE LIMIT SWITCH (LH)

Check return complete limit switch (LH).

Refer to [SE-27, "LH : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2. CHECK PRIMARY POSITION LIMIT SWITCH (LH)

Check primary position limit switch (LH).

Refer to [SE-23, "LH : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3. CHECK POWER RETURN MOTOR (LH)

Check power return motor (LH).

Refer to [SE-36, "LH : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the malfunctioning parts.

4. CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-40, "Intermittent Incident"](#).

NO >> GO TO 1.

RH

RH : Diagnosis Procedure

INFOID:000000004347422

1. CHECK RETURN COMPLETE LIMIT SWITCH (RH)

Check return complete limit switch (RH).

Refer to [SE-28, "RH : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2. CHECK PRIMARY POSITION LIMIT SWITCH (RH)

Check primary position limit switch (RH).

Refer to [SE-24, "RH : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3. CHECK POWER RETURN MOTOR (RH)

Check power return motor (RH).

Refer to [SE-37, "RH : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 4.

MALFUNCTION DETECTION BUZZER SOUNDS DURING POWER RETURN MOTOR INVERSE ROTATION

< SYMPTOM DIAGNOSIS >

NO >> Repair or replace the malfunctioning parts.

4. CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-40, "Intermittent Incident"](#).

NO >> GO TO 1.

A

B

C

D

E

F

G

H

I

SE

K

L

M

N

O

P

DOES NOT RETURN BUT MALFUNCTION DETECTION BUZZER SOUNDS

< SYMPTOM DIAGNOSIS >

DOES NOT RETURN BUT MALFUNCTION DETECTION BUZZER SOUNDS

LH

LH : Diagnosis Procedure

INFOID:000000004347423

1. CHECK PRIMARY POSITION LIMIT SWITCH (LH)

Check primary position limit switch (LH).

Refer to [SE-23, "LH : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2. CHECK MOTOR SENSOR (LH)

Check motor sensor (LH).

Refer to [SE-31, "LH : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3. CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-40, "Intermittent Incident"](#).

NO >> GO TO 1.

RH

RH : Diagnosis Procedure

INFOID:000000004347424

1. CHECK PRIMARY POSITION LIMIT SWITCH (RH)

Check primary position limit switch (RH).

Refer to [SE-23, "LH : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2. CHECK MOTOR SENSOR (RH)

Check motor sensor (RH).

Refer to [SE-33, "RH : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3. CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-40, "Intermittent Incident"](#).

NO >> GO TO 1.

ANTI-PINCH FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

ANTI-PINCH FUNCTION DOES NOT OPERATE

Diagnosis Procedure

INFOID:0000000004347425

1. CHECK MOTOR SENSOR (LH)

Check motor sensor (LH).

Refer to [SE-31, "LH : Component Function Check".](#)

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2. CHECK MOTOR SENSOR (RH)

Check motor sensor (RH).

Refer to [SE-33, "RH : Component Function Check".](#)

Is the inspection result normal?

YES >> Replace rear seatback power return control unit. Refer to [SE-104, "Removal and Installation".](#)

NO >> Repair or replace the malfunctioning parts.

A

B

C

D

E

F

G

H

I

SE

K

L

M

N

O

P


SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

SQUEAK AND RATTLE TROUBLE DIAGNOSES

Work Flow

INFOID:0000000004347426

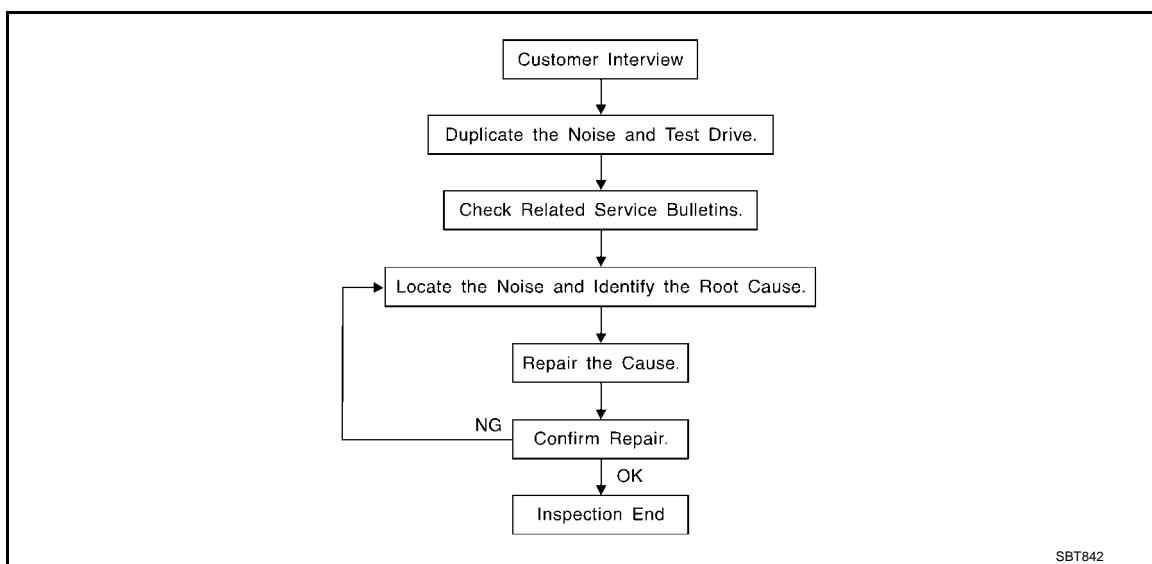

CUSTOMER INTERVIEW

Interview the customer if possible, to determine the conditions that exist when the noise occurs. Use the Diagnostic Worksheet during the interview to document the facts and conditions when the noise occurs and any of customer's comments; refer to [SE-80, "Diagnostic Worksheet"](#). This information is necessary to duplicate the conditions that exist when the noise occurs.

- The customer may not be able to provide a detailed description or the location of the noise. Attempt to obtain all the facts and conditions that exist when the noise occurs (or does not occur).
- If there is more than one noise in the vehicle, perform a diagnosis and repair the noise that the customer is concerned about. This can be accomplished by performing a cruise test on the vehicle with the customer.
- After identifying the type of noise, isolate the noise in terms of its characteristics. The noise characteristics are provided so the customer, service adviser and technician are all speaking the same language when defining the noise.
- Squeak – (Like tennis shoes on a clean floor)
Squeak characteristics include the light contact/fast movement/brought on by road conditions/hard surfaces = higher pitch noise/softer surfaces = lower pitch noises/edge to surface = chirping
- Creak – (Like walking on an old wooden floor)
Creak characteristics include firm contact/slow movement/twisting with a rotational movement/pitch dependent on materials/often brought on by activity.
- Rattle – (Like shaking a baby rattle)
Rattle characteristics include the fast repeated contact/vibration or similar movement/loose parts/missing clip or fastener/incorrect clearance.
- Knock – (Like a knock on a door)
Knock characteristics include hollow sounding/sometimes repeating/often brought on by driver action.
- Tick – (Like a clock second hand)
Tick characteristics include gentle contacting of light materials/loose components/can be caused by driver action or road conditions.
- Thump – (Heavy, muffled knock noise)
Thump characteristics include softer knock/dead sound often brought on by activity.
- Buzz – (Like a bumblebee)
Buzz characteristics include high frequency rattle/firm contact.
- Often the degree of acceptable noise level will vary depending up on the person. A noise that you may judge as acceptable may be very irritating to the customer.
- Weather conditions, especially humidity and temperature, may have a great effect on noise level.

DUPLICATE THE NOISE AND TEST DRIVE

If possible, drive the vehicle with the customer until the noise is duplicated. Note any additional information on the Diagnostic Worksheet regarding the conditions or location of the noise. This information can be used to duplicate the same conditions when you confirm the repair.

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

If the noise can be duplicated easily during the test drive, to help identify the source of the noise, try to duplicate the noise with the vehicle stopped by doing one or all of the following:

- 1) Close a door.
- 2) Tap or push/pull around the area where the noise appears to be coming from.
- 3) Rev the engine.
- 4) Use a floor jack to recreate vehicle "twist".
- 5) At idle, apply engine load (electrical load, half-clutch on M/T models, drive position on A/T models).
- 6) Raise the vehicle on a hoist and hit a tire with a rubber hammer.

- Drive the vehicle and attempt to duplicate the conditions the customer states exist when the noise occurs.
- If it is difficult to duplicate the noise, drive the vehicle slowly on an undulating or rough road to stress the vehicle body.

CHECK RELATED SERVICE BULLETINS

After verifying the customer concern or symptom, check ASIST for Technical Service Bulletins (TSBs) related to that concern or symptom.

If a TSB relates to the symptom, follow the procedure to repair the noise.

LOCATE THE NOISE AND IDENTIFY THE ROOT CAUSE

1. Narrow down the noise to a general area. To help pinpoint the source of the noise, use a listening tool (Chassis Ear: J-39570, Engine Ear and mechanics stethoscope).
2. Narrow down the noise to a more specific area and identify the cause of the noise by:
 - Removing the components in the area that you suspect the noise is coming from.
Do not use too much force when removing clips and fasteners, otherwise clips and fastener can be broken or lost during the repair, resulting in the creation of new noise.
 - Tapping or pushing/pulling the component that you suspect is causing the noise.
Do not tap or push/pull the component with excessive force, otherwise the noise will be eliminated only temporarily.
 - Feeling for a vibration with your hand by touching the component(s) that you suspect is (are) causing the noise.
 - Placing a piece of paper between components that you suspect are causing the noise.
 - Looking for loose components and contact marks.
Refer to [SE-78. "Inspection Procedure"](#).

REPAIR THE CAUSE

- If the cause is a loose component, tighten the component securely.
- If the cause is insufficient clearance between components:
 - Separate components by repositioning or loosening and retightening the component, if possible.
 - Insulate components with a suitable insulator such as urethane pads, foam blocks, felt cloth tape or urethane tape. A Nissan Squeak and Rattle Kit (J-43980) is available through your authorized Nissan Parts Department.

CAUTION:

Do not use excessive force as many components are constructed of plastic and may be damaged.

NOTE:

Always check with the Parts Department for the latest parts information.

The following materials are contained in the Nissan Squeak and Rattle Kit (J-43980). Each item can be ordered separately as needed.

URETHANE PADS [1.5 mm (0.059 in) thick]

Insulates connectors, harness, etc.

76268-9E005: 100 × 135 mm (3.94 × 5.31 in)/76884-71L01: 60 × 85 mm (2.36 × 3.35 in)/76884-71L02: 15 × 25 mm (0.59 × 0.98 in)

INSULATOR (Foam blocks)

Insulates components from contact. Can be used to fill space behind a panel.

73982-9E000: 45 mm (1.77 in) thick, 50 × 50 mm (1.97 × 1.97 in)/73982-50Y00: 10 mm (0.39 in) thick, 50 × 50 mm (1.97 × 1.97 in)

INSULATOR (Light foam block)

80845-71L00: 30 mm (1.18 in) thick, 30 × 50 mm (1.18 × 1.97 in)

FELT CLOTH TAPE

Used to insulate where movement does not occur. Ideal for instrument panel applications.

68370-4B000: 15 × 25 mm (0.59 × 0.98 in) pad/68239-13E00: 5 mm (0.20 in) wide tape roll

The following materials, not found in the kit, can also be used to repair squeaks and rattles.

UHMW (TEFLON) TAPE

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

Insulates where slight movement is present. Ideal for instrument panel applications.

SILICONE GREASE

Used in place of UHMW tape that will be visible or not fit. Will only last a few months.

SILICONE SPRAY

Use when grease cannot be applied.

DUCT TAPE

Use to eliminate movement.

CONFIRM THE REPAIR

Confirm that the cause of a noise is repaired by test driving the vehicle. Operate the vehicle under the same conditions as when the noise originally occurred. Refer to the notes on the Diagnostic Worksheet.

Inspection Procedure

INFOID:000000004347427

Refer to Table of Contents for specific component removal and installation information.

INSTRUMENT PANEL

Most incidents are caused by contact and movement between:

1. The cluster lid A and instrument panel
2. Acrylic lens and combination meter housing
3. Instrument panel to front pillar garnish
4. Instrument panel to windshield
5. Instrument panel mounting pins
6. Wiring harnesses behind the combination meter
7. A/C defroster duct and duct joint

These incidents can usually be located by tapping or moving the components to duplicate the noise or by pressing on the components while driving to stop the noise. Most of these incidents can be repaired by applying felt cloth tape or silicon spray (in hard to reach areas). Urethane pads can be used to insulate wiring harness.

CAUTION:

Do not use silicone spray to isolate a squeak or rattle. If you saturate the area with silicone, you will not be able to recheck the repair.

CENTER CONSOLE

Components to pay attention to include:

1. Shifter assembly cover to finisher
2. A/C control unit and cluster lid C
3. Wiring harnesses behind audio and A/C control unit

The instrument panel repair and isolation procedures also apply to the center console.

DOORS

Pay attention to the:

1. Finisher and inner panel making a slapping noise
2. Inside handle escutcheon to door finisher
3. Wiring harnesses tapping
4. Door striker out of alignment causing a popping noise on starts and stops

Tapping or moving the components or pressing on them while driving to duplicate the conditions can isolate many of these incidents. You can usually insulate the areas with felt cloth tape or insulator foam blocks from the Nissan Squeak and Rattle Kit (J-43980) to repair the noise.

TRUNK

Trunk noises are often caused by a loose jack or loose items put into the trunk by the owner.

In addition look for:

1. Trunk lid dumpers out of adjustment
2. Trunk lid striker out of adjustment
3. The trunk lid torsion bars knocking together
4. A loose license plate or bracket

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

Most of these incidents can be repaired by adjusting, securing or insulating the item(s) or component(s) causing the noise.

SUNROOF/HEADLINING

Noises in the sunroof/headlining area can often be traced to one of the following:

1. Sunroof lid, rail, linkage or seals making a rattle or light knocking noise
2. Sunvisor shaft shaking in the holder
3. Front or rear windshield touching headlining and squeaking

Again, pressing on the components to stop the noise while duplicating the conditions can isolate most of these incidents. Repairs usually consist of insulating with felt cloth tape.

SEATS

When isolating seat noise it's important to note the position the seat is in and the load placed on the seat when the noise is present. These conditions should be duplicated when verifying and isolating the cause of the noise.

Cause of seat noise include:

1. Headrest rods and holder
2. A squeak between the seat pad cushion and frame
3. The rear seatback lock and bracket

These noises can be isolated by moving or pressing on the suspected components while duplicating the conditions under which the noise occurs. Most of these incidents can be repaired by repositioning the component or applying urethane tape to the contact area.

UNDERHOOD

Some interior noise may be caused by components under the hood or on the engine wall. The noise is then transmitted into the passenger compartment.

Causes of transmitted under hood noise include:

1. Any component mounted to the engine wall
2. Components that pass through the engine wall
3. Engine wall mounts and connectors
4. Loose radiator mounting pins
5. Hood bumpers out of adjustment
6. Hood striker out of adjustment

These noises can be difficult to isolate since they cannot be reached from the interior of the vehicle. The best method is to secure, move or insulate one component at a time and test drive the vehicle. Also, engine RPM or load can be changed to isolate the noise. Repairs can usually be made by moving, adjusting, securing, or insulating the component causing the noise.

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

Diagnostic Worksheet

INFOID:000000004347428







SQUEAK & RATTLE DIAGNOSTIC WORKSHEET

Dear Infiniti Customer:

We are concerned about your satisfaction with your Infiniti vehicle. Repairing a squeak or rattle sometimes can be very difficult. To help us fix your Infiniti right the first time, please take a moment to note the area of the vehicle where the squeak or rattle occurs and under what conditions. You may be asked to take a test drive with a service consultant or technician to ensure we confirm the noise you are hearing.

I. WHERE DOES THE NOISE COME FROM? (circle the area of the vehicle)

The illustrations are for reference only, and may not reflect the actual configuration of your vehicle.

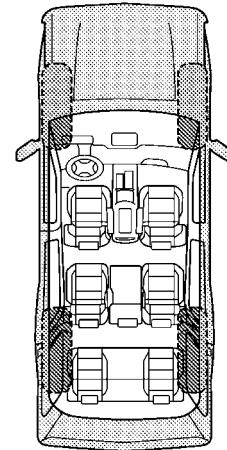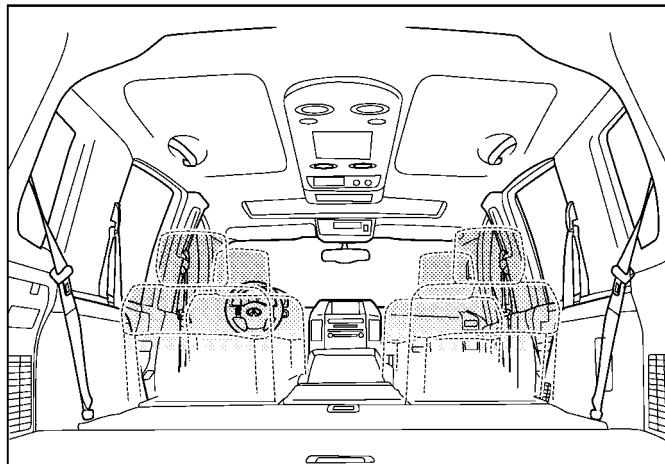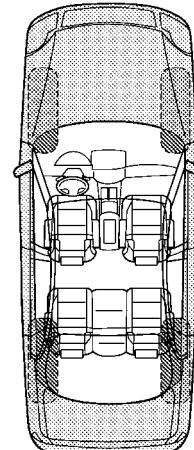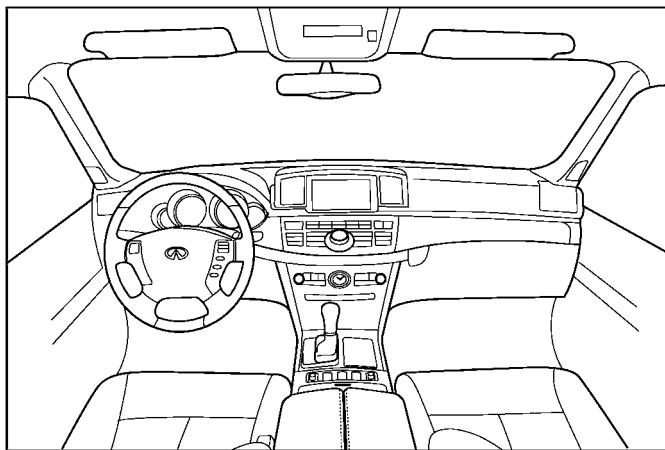

Continue to page 2 of the worksheet and briefly describe the location of the noise or rattle. In addition, please indicate the conditions which are present when the noise occurs.

PIIB8741E

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

SQUEAK & RATTLE DIAGNOSTIC WORKSHEET - page 2

Briefly describe the location where the noise occurs:

II. WHEN DOES IT OCCUR? (please check the boxes that apply)

<input type="checkbox"/> anytime	<input type="checkbox"/> after sitting out in the rain
<input type="checkbox"/> 1st time in the morning	<input type="checkbox"/> when it is raining or wet
<input type="checkbox"/> only when it is cold outside	<input type="checkbox"/> dry or dusty conditions
<input type="checkbox"/> only when it is hot outside	<input type="checkbox"/> other:

A

B

C

D

E

III. WHEN DRIVING:

<input type="checkbox"/> through driveways	<input type="checkbox"/> squeak (like tennis shoes on a clean floor)
<input type="checkbox"/> over rough roads	<input type="checkbox"/> creak (like walking on an old wooden floor)
<input type="checkbox"/> over speed bumps	<input type="checkbox"/> rattle (like shaking a baby rattle)
<input type="checkbox"/> only about _____ mph	<input type="checkbox"/> knock (like a knock at the door)
<input type="checkbox"/> on acceleration	<input type="checkbox"/> tick (like a clock second hand)
<input type="checkbox"/> coming to a stop	<input type="checkbox"/> thump (heavy, muffled knock noise)
<input type="checkbox"/> on turns: left, right or either (circle)	<input type="checkbox"/> buzz (like a bumble bee)
<input type="checkbox"/> with passengers or cargo	
<input type="checkbox"/> other: _____	
<input type="checkbox"/> after driving _____ miles or _____ minutes	

IV. WHAT TYPE OF NOISE

<input type="checkbox"/> squeak (like tennis shoes on a clean floor)
<input type="checkbox"/> creak (like walking on an old wooden floor)
<input type="checkbox"/> rattle (like shaking a baby rattle)
<input type="checkbox"/> knock (like a knock at the door)
<input type="checkbox"/> tick (like a clock second hand)
<input type="checkbox"/> thump (heavy, muffled knock noise)
<input type="checkbox"/> buzz (like a bumble bee)

F

G

H

I

TO BE COMPLETED BY DEALERSHIP PERSONNEL

Test Drive Notes:

SE

YES	NO	Initials of person performing
-----	----	-------------------------------

L

Vehicle test driven with customer	<input type="checkbox"/>	<input type="checkbox"/>	_____
- Noise verified on test drive	<input type="checkbox"/>	<input type="checkbox"/>	_____
- Noise source located and repaired	<input type="checkbox"/>	<input type="checkbox"/>	_____
- Follow up test drive performed to confirm repair	<input type="checkbox"/>	<input type="checkbox"/>	_____

M

N

VIN: _____ Customer Name: _____
W.O.# _____ Date: _____

O

This form must be attached to Work Order

PIIB8742E

P

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000004347429

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIR BAG".
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precaution Necessary for Steering Wheel Rotation after Battery Disconnect

INFOID:0000000004347430

NOTE:

- Before removing and installing any control units, first turn the push-button ignition switch to the LOCK position, then disconnect both battery cables.
- After finishing work, confirm that all control unit connectors are connected properly, then re-connect both battery cables.
- Always use CONSULT-III to perform self-diagnosis as a part of each function inspection after finishing work. If a DTC is detected, perform trouble diagnosis according to self-diagnosis results.

For vehicle with steering lock unit, if the battery is disconnected or discharged, the steering wheel will lock and cannot be turned.

If turning the steering wheel is required with the battery disconnected or discharged, follow the operation procedure below before starting the repair operation.

OPERATION PROCEDURE

1. Connect both battery cables.

NOTE:

Supply power using jumper cables if battery is discharged.

2. Turn the push-button ignition switch to ACC position.
(At this time, the steering lock will be released.)

3. Disconnect both battery cables. The steering lock will remain released with both battery cables disconnected and the steering wheel can be turned.

4. Perform the necessary repair operation.

PRECAUTIONS

< PRECAUTION >

5. When the repair work is completed, re-connect both battery cables. With the brake pedal released, turn the push-button ignition switch from ACC position to ON position, then to LOCK position. (The steering wheel will lock when the push-button ignition switch is turned to LOCK position.)
6. Perform self-diagnosis check of all control units using CONSULT-III.

A

Service Notice

INFOID:000000004347431

B

- When removing or installing various parts, place a cloth or padding onto the vehicle body to prevent scratches.
- Handle trim, molding, instruments, grille, etc. carefully during removing or installing. Be careful not to oil or damage them.
- Apply sealing compound where necessary when installing parts.
- When applying sealing compound, be careful that the sealing compound does not protrude from parts.
- When replacing any metal parts (for example body outer panel, members, etc.), be sure to take rust prevention measures.

C

Precaution for Work

INFOID:000000004347432

D

- When removing or disassembling each component, be careful not to damage or deform it. If a component may be subject to interference, be sure to protect it with a shop cloth.
- When removing (disengaging) components with a screwdriver or similar tool, be sure to wrap the component with a shop cloth or vinyl tape to protect it.
- Protect the removed parts with a shop cloth and keep them.
- Replace a deformed or damaged clip.
- If a part is specified as a non-reusable part, always replace it with new one.
- Be sure to tighten bolts and nuts securely to the specified torque.
- After re-installation is completed, be sure to check that each part works normally.
- Follow the steps below to clean components.
 - Water soluble foul: Dip a soft cloth into lukewarm water, and wring the water out of the cloth to wipe the fouled area.
Then rub with a soft and dry cloth.
 - Oily foul: Dip a soft cloth into lukewarm water with mild detergent (concentration: within 2 to 3%), and wipe the fouled area.
Then dip a cloth into fresh water, and wring the water out of the cloth to wipe the detergent off. Then rub with a soft and dry cloth.
- Do not use organic solvent such as thinner, benzene, alcohol, and gasoline.
- For genuine leather seats, use a genuine leather seat cleaner.

E

F

G

H

I

SE

K

L

M

N

O

P

PREPARATION

< PREPARATION >


PREPARATION

PREPARATION

Special Service Tool



INFOID:000000004347433

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

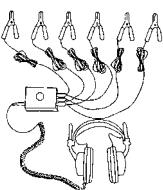Tool number (Kent-Moore No.) Tool name	Description
(J39570) Chassis ear	 SIIA0993E
(J43980) NISSAN Squeak and Rattle Kit	 SIIA0994E

Commercial Service Tool

INFOID:000000004347434

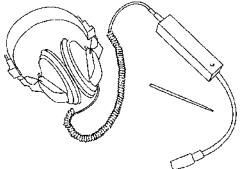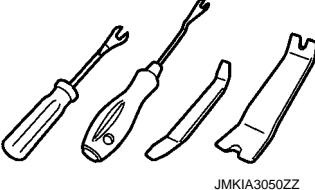Tool name	Description
Engine ear	 SIIA0995E
Remover tool	 JMKIA3050ZZ

CLIP LIST

< PREPARATION >

CLIP LIST

Clip List

INFOID:0000000006113823

Shapes	Removal & Installation	Shapes	Removal & Installation
	<p>Removal: Remove by bending up with flat-bladed screwdrivers or clip remover.</p>		<p>Removal: Finisher Clip A Flat-bladed screwdriver Clip B</p>
	<p>Removal: Remove with a clip remover.</p>		<p>Removal: Flat-bladed screwdriver Finisher Body panel Clip A Clip B (Grommet)</p>
	<p>Removal: Push center pin to catching position. (Do not remove center pin by hitting it.)</p> <p>Installation:</p>		<p>Removal: Holder portion of clip must be spread out to remove rod.</p>
	<p>Removal: Remove by bending up with flat-bladed screwdrivers or clip remover.</p> <p>Clip Finisher</p>		<p>Removal:</p> <ol style="list-style-type: none"> 1. Screw out with a Phillips screwdriver. 2. Remove female portion with flat-bladed screwdriver.
	<p>Removal:</p>		<p>Removal:</p> <p>Rotate 45° to remove.</p> <p>Installation:</p>
	<p>Removal:</p>		<p>Removal:</p>

JMJA3734GB

A

B

C

D

E

F

G

H

I

SE

K

L

M

N

O

P

FRONT SEAT

< REMOVAL AND INSTALLATION >


REMOVAL AND INSTALLATION

FRONT SEAT

Exploded View

INFOID:0000000004347435

DRIVER'S SEAT

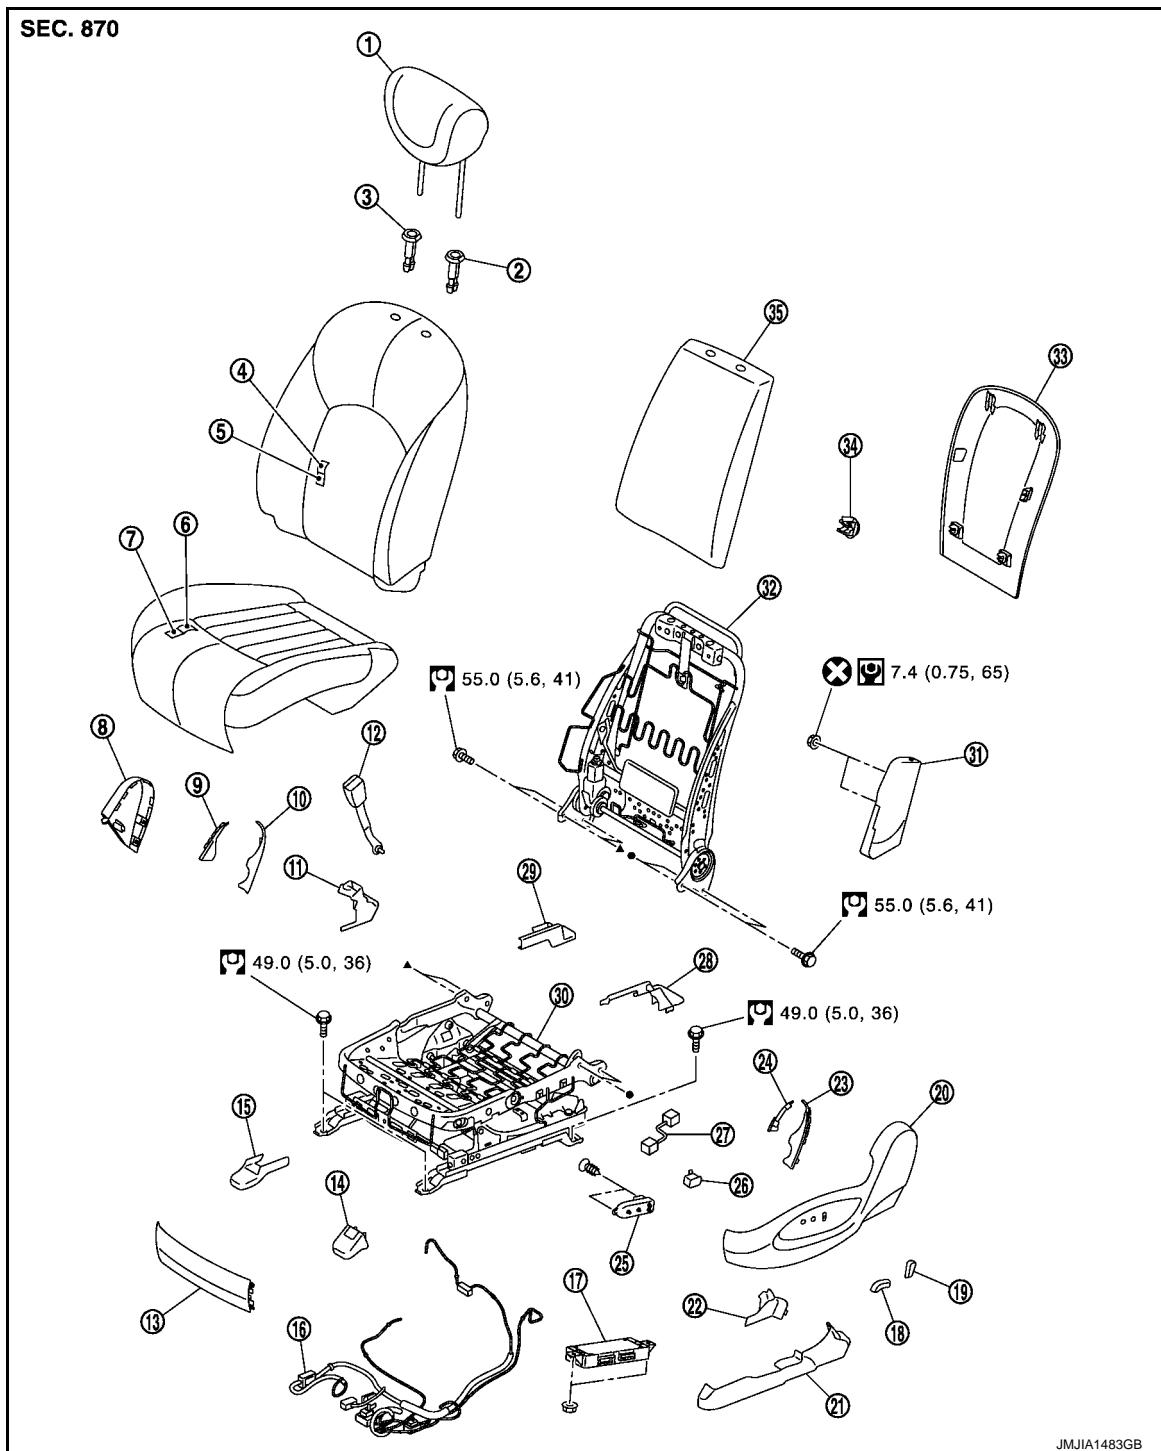

JMJIA1483GB

1. Headrest	2. Headrest holder (locked)	3. Headrest holder (free)
4. Seatback trim	5. Seatback pad	6. Seat cushion trim
7. Seat cushion pad	8. Seat cushion inner finisher outside	9. Seat cushion inner finisher inside (front)

FRONT SEAT

< REMOVAL AND INSTALLATION >

10. Seat cushion inner finisher inside (rear)	11. Seat cushion inner lower finisher	12. Seat belt buckle
13. Seat cushion front finisher	14. Front outer slide cover	15. Front inner slide cover
16. Seat harness	17. Driver seat control unit	18. Seat slide & lifter switch knob
19. Seat reclining switch knob	20. Seat cushion outer finisher outside	21. Seat cushion outer lower finisher (outside)
22. Seat cushion outer lower finisher (in- side)	23. Seat cushion outer finisher inside (rear)	24. Seat cushion outer finisher inside (front)
25. Seat control switch	26. Lumbar support switch	27. Seat control harness
28. Rear outer slide cover	29. Rear inner slide cover	30. Seat cushion frame
31. Side air bag module	32. Seatback frame	33. Seatback board
34. Seatback board clip	35. Seatback silencer	

Refer to [GI-4, "Components"](#) for symbols in the figure.

PASSENGER'S SEAT

CAUTION:

Never disassembly the component parts of only front passenger seat in the dotted lines shown in the figure below. (With occupant classification system control unit model)

A

B

C

D

E

F

G

H

I

SE

K

L

M


N

O

P

FRONT SEAT

< REMOVAL AND INSTALLATION >

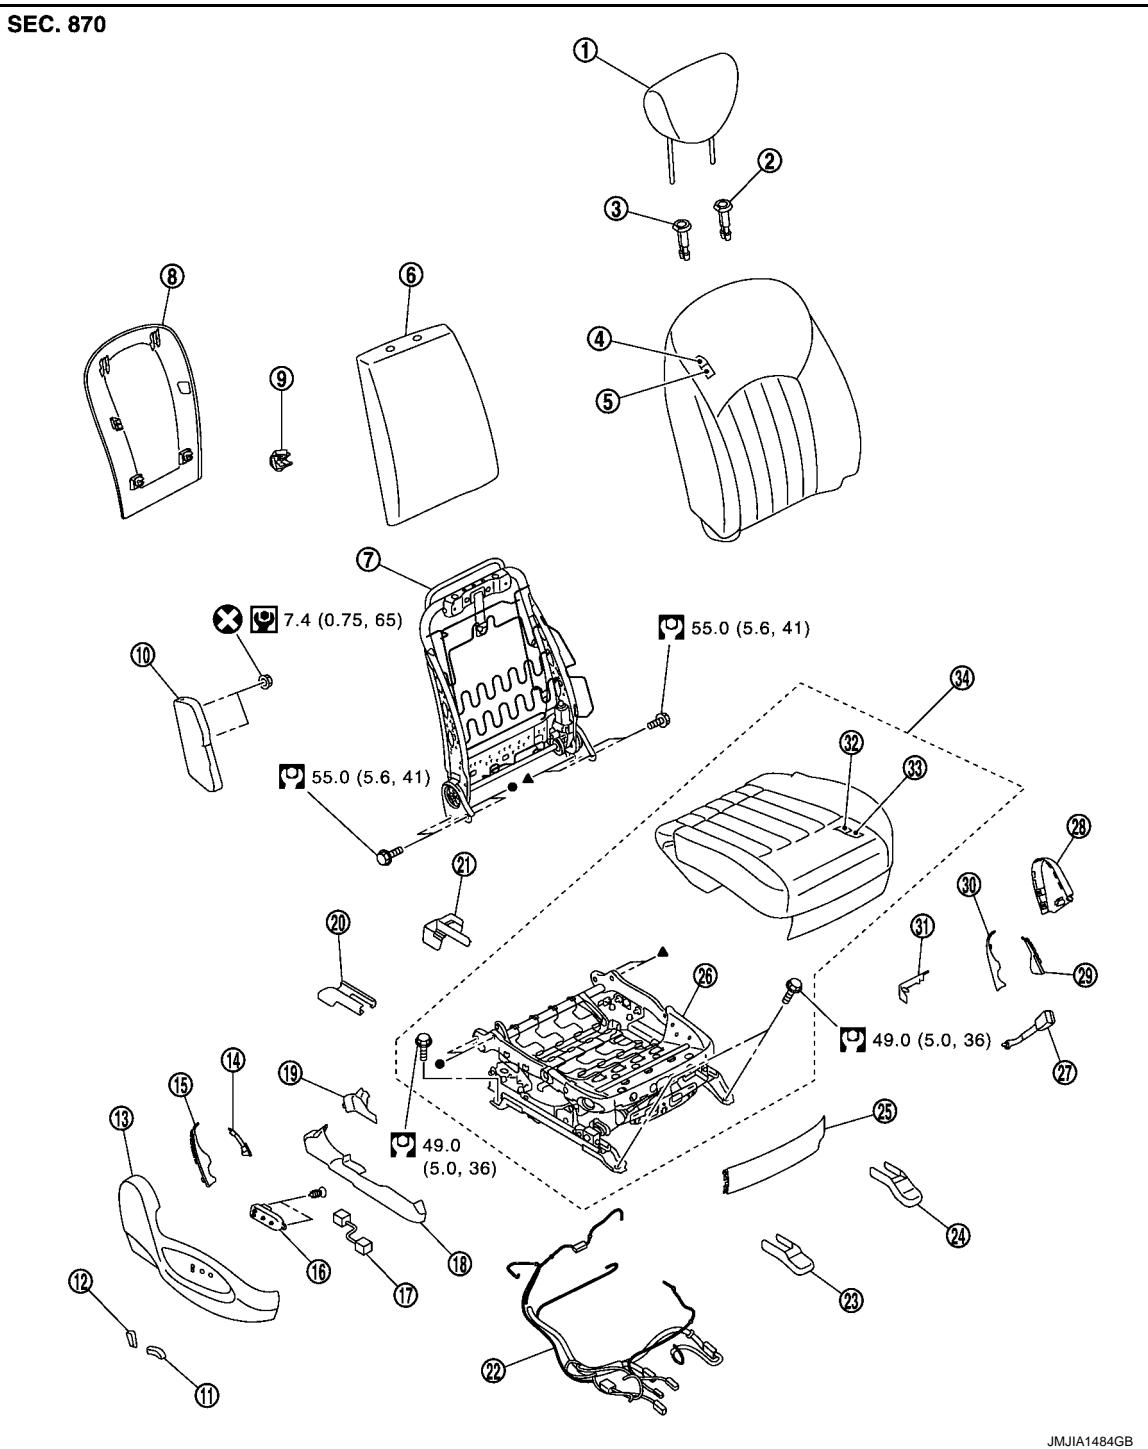

1. Headrest	2. Headrest holder (locked)	3. Headrest holder (free)
4. Seatback trim	5. Seatback pad	6. Seatback silencer
7. Seatback frame	8. Seatback board	9. Seatback board clip
10. Side air bag module	11. Seat slide & lifter switch knob	12. Seat reclining switch knob
13. Seat cushion outer finisher outside	14. Seat cushion outer finisher inside (front)	15. Seat cushion outer finisher inside (rear)
16. Seat control switch	17. Seat control harness	18. Seat cushion outer lower finisher (outside)
19. Seat cushion outer lower finisher (inside)	20. Rear outer slide cover	21. Rear inner slide cover
22. Seat harness	23. Front outer slide cover	24. Front inner slide cover

FRONT SEAT

< REMOVAL AND INSTALLATION >

25. Seat cushion front finisher	26. Seat cushion frame	27. Seat belt buckle
28. Seat cushion inner finisher outside	29. Seat cushion inner finisher inside (front)	30. Seat cushion inner finisher inside (rear)
31. Seat cushion inner finisher lower	32. Seat cushion trim	33. Seat cushion pad
34. Seat cushion assembly		

Refer to [GI-4, "Components"](#) for symbols in the figure.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

INFOID:000000004347436

Removal and Installation


REMOVAL

CAUTION:

When removing and installing, use shop cloths to protect parts from damage.


1. Remove the headrest.
2. Remove the front slide cover.
 - a. Front outer slide cover
 - Slide the seat to the rear-most position.
 - Pull up the front edge of the front slide cover to release the pawls.
 - Slide the front slide cover forward to release the pawls.

△ : Pawl

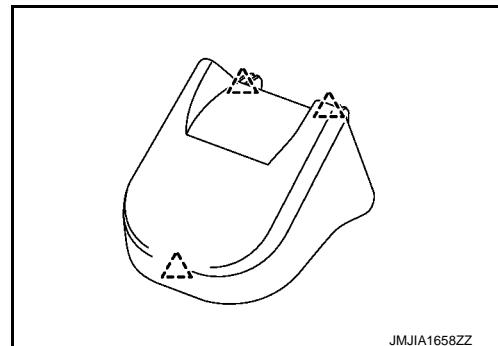

- b. Front inner slide cover
 - Slide the seat to the rear-most position.
 - Pull up the front edge of the front slide cover to release the pawls.
 - Slide the front slide cover forward to release the pawls.

△ : Pawl

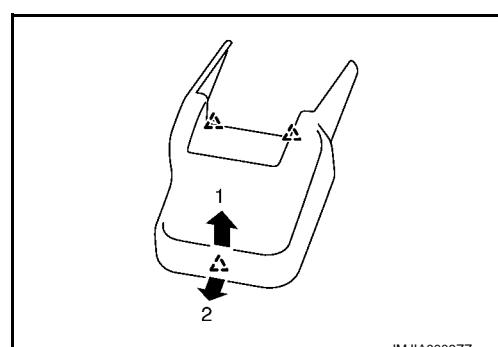


3. Remove the mounting bolts on the front side of the front seat.

4. Remove the rear slide cover.

- a. Rear outer slide cover
 - Slide the seat to the front-most position.
 - Pull up the rear edge of the rear outer slide cover to release the pawls.
 - Open the front end of the rear outer slide cover to release the pawls.

△ : Pawl

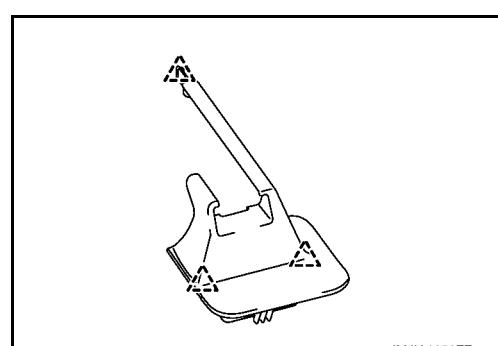


FRONT SEAT

< REMOVAL AND INSTALLATION >

b. Rear inner slide cover

- Slide the seat to the front-most position.
- Pull up the rear edge of the rear inner slide cover to release the pawls.
- Slide the rear inner slide cover rearward to release the pawls.

△ : Pawl

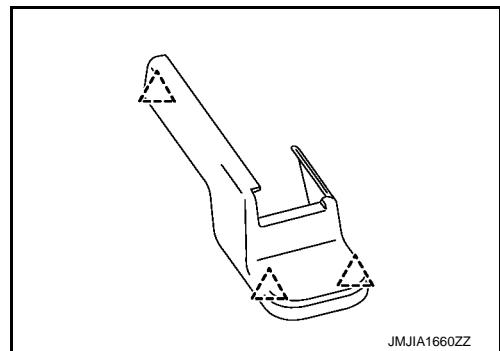

5. Remove the mounting bolts on the rear side of the front seat.

6. Set seatback in a standing position.

7. Disconnect harness connector under the seat and remove harness securing clips.

CAUTION:

Before removal, turn ignition switch OFF, disconnect battery negative terminal, and then wait for at least 3 minutes.

8. Remove seat from the vehicle.

CAUTION:

- When removing and installing, use shop cloths to protect parts from damage.
- When removing and installing, 2 workers are required so as to prevent it from dropping.

INSTALLATION

Install in the reverse order of removal.

CAUTION:

- Before installation, turn ignition switch OFF, disconnect both battery cables, and then wait for at least 3 minutes.
- Clamp the harness in position.

NOTE:

After installing the front seat, perform additional service when removing battery negative terminal.(Automatic drive positioner model only) Refer to [ADP-8, "ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Description"](#).

Disassembly and Assembly

INFOID:000000004347437

SEATBACK


Disassembly

1. Remove the seatback board.

- Remove the clips and pawls, and then pull out seatback board.
- Pull down the seatback board to release the upper pawls.

○ : Clip

△ : Pawl

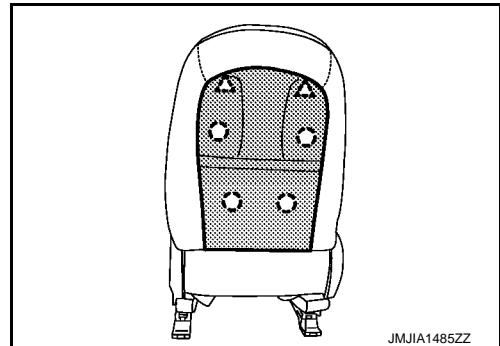


2. Remove the seatback trim retainer and seatback trim band from seat cushion frame.

3. Disconnect the harness connectors and remove the harness clamps.

FRONT SEAT


< REMOVAL AND INSTALLATION >

- Disconnect the reclining motor harness connector (A) and lumbar support harness connector (Driver's seat only) (B).

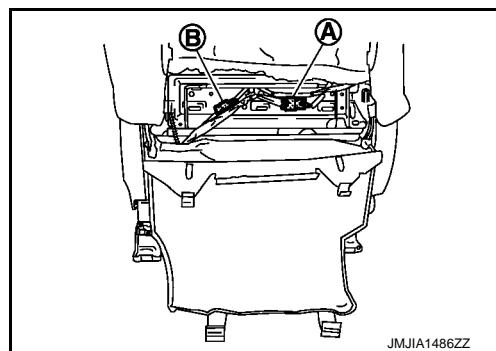


A
B
C
D
E
F
G

- Disconnect the seatback heater harness (C).

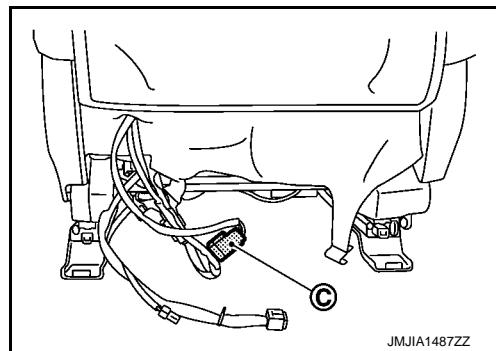

H
I

- Remove the harness clamps, and then side air bag module harness (D).

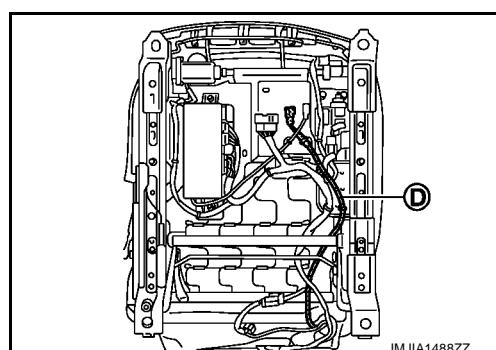


SE
K

4. Remove the metal clips and pawls, and then pull out seat cushion front finisher.

[] : Metal clip

△ : Pawl

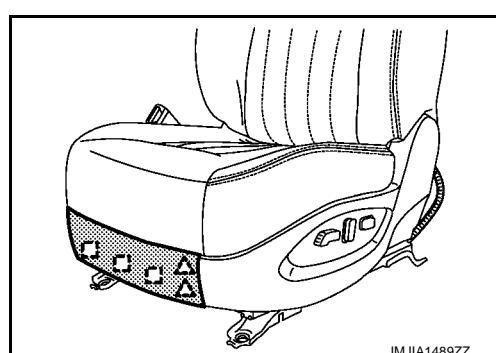

L
M
N
O
P

5. Remove the seat cushion outer finisher.

FRONT SEAT


< REMOVAL AND INSTALLATION >

- Remove the seat slide and lifter (With lifter seat), reclining switch knob.
- Remove the clips, metal clips and pawls, and then pull out seat cushion outer finisher outside.
- Disconnect the slide & lifter, reclining and lumbar support switch (Driver's seat only) harness connectors.


○ : Clip

[] : Metal clip

△ : Pawl

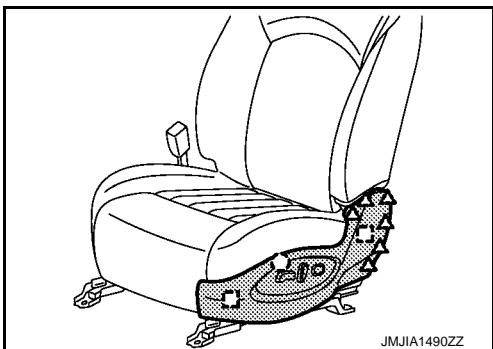


6. Remove the seat cushion outer finisher inside front (1) and rear (2).

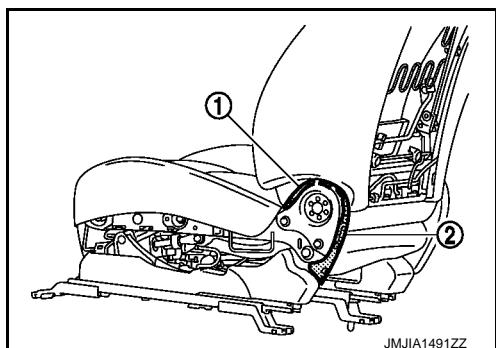


7. Remove the metal clip and pawls, and then pull out seat cushion inner finisher outside.

[] : Metal clip

△ : Pawl

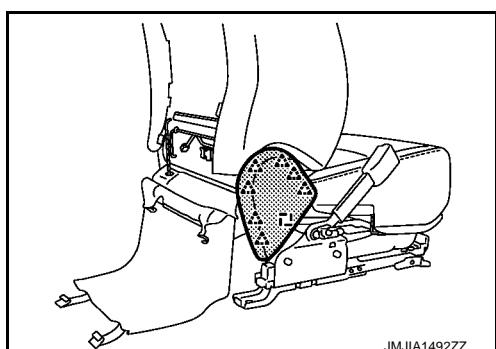

8. Remove the seat cushion inner finisher inside front (1) and rear (2).

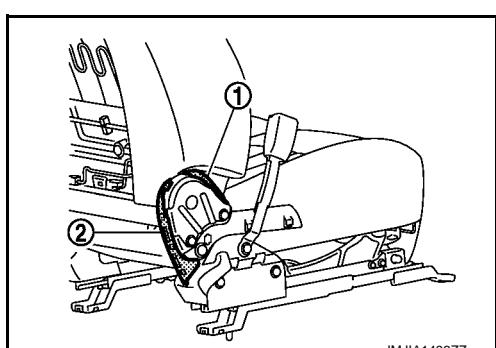

9. Remove the seatback trim and seatback pad.


FRONT SEAT

< REMOVAL AND INSTALLATION >

- Remove the headrest holder.

CAUTION:
Before installing headrest holder check its orientation. (front/rear and right/left)


- Remove the air bag module.
- Remove the seatback trim and seatback pad from the seatback frame.
- Remove the hog rings, and separate the seatback trim and seatback pad.

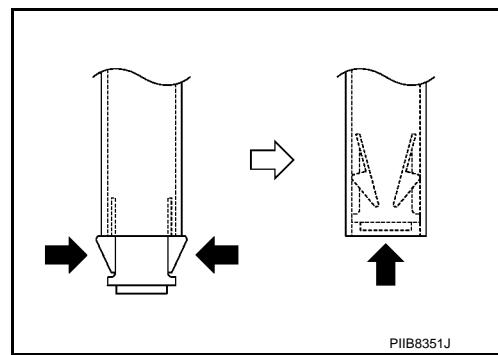

10. Remove the seatback silencer.

11. Remove the seatback frame.

Remove the seatback frame mounting bolts (A) and then remove the seatback frame.

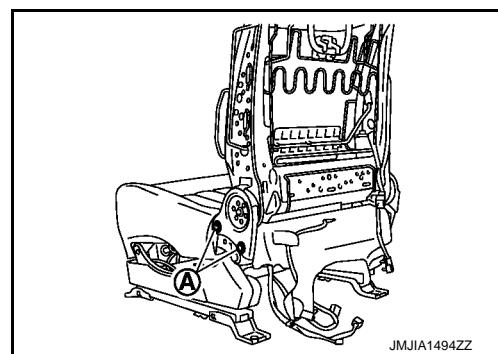

Assembly

Assemble in the reverse order of disassembly.

CAUTION:

Install the hog rings of seatback trim in position, and then securely connect the trim or trim cord with the pad side wire.

SEAT CUSHION

SE

Disassembly

CAUTION:

Never disassemble front passenger seat cushion assembly.


Always replace as an assembly.

For front passenger seat service parts, refer to the service part catalogue.

1. Remove the seatback board.
 - Remove the clips and pawls, and then pull out seatback board.
 - Pull down the seatback board to release the upper pawls.

○ : Clip

△ : Pawl

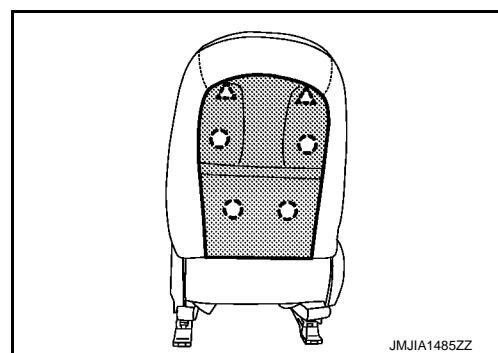

2. Remove the seatback trim retainer and seatback trim band from seat cushion frame.
3. Disconnect the harness connectors and remove the harness clamps.

K

L

M

N


O

P

FRONT SEAT


< REMOVAL AND INSTALLATION >

- Disconnect the reclining motor harness connector (A) and lumbar support harness connector (B) (Driver's seat only).

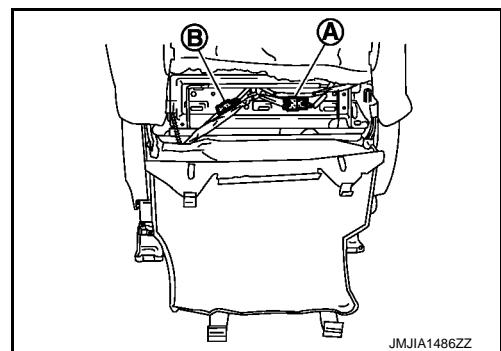


JMJA1486ZZ

- Disconnect the seatback heater harness connector (C).

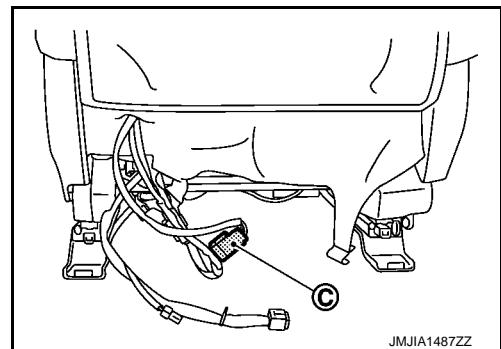

JMJA1487ZZ

- Remove the side air bag module harness (D).

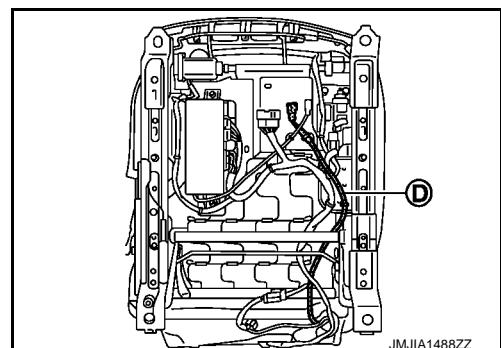


JMJA1488ZZ

4. Remove the metal clips and pawls, and then pull out seat cushion front finisher.

[] : Metal clip

△ : Pawl

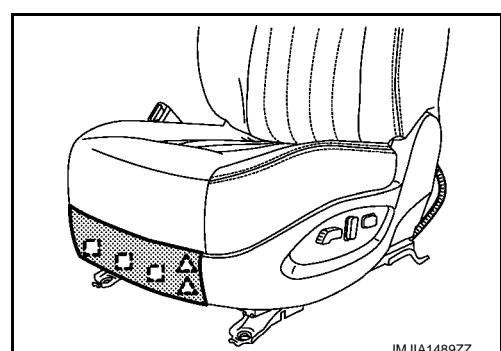

JMJA1489ZZ

5. Remove the seat cushion outer finisher.

FRONT SEAT


< REMOVAL AND INSTALLATION >

- Remove the seat slide and lifter (With lifter seat), reclining switch knob.
- Remove the clip, metal clips and pawls, and then pull out seat cushion outer finisher outside.
- Disconnect the slide & lifter, reclining and lumbar support switch (Driver's seat only) harness connectors.


○ : Clip

[] : Metal clip

△ : Pawl

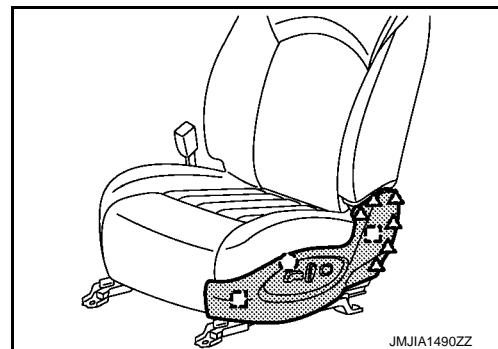


6. Remove the seat cushion outer finisher inside front (1) and rear (2).

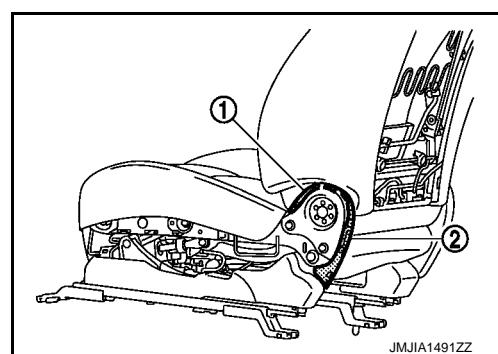


7. Remove the metal clip and pawls, and then pull out seat cushion inner finisher outside.

[] : Metal clip


△ : Pawl

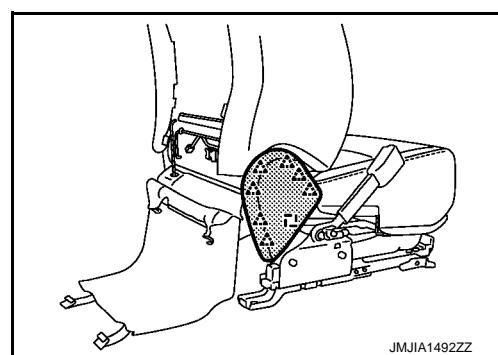

8. Remove the seat cushion inner finisher inside front (1) and rear (2).

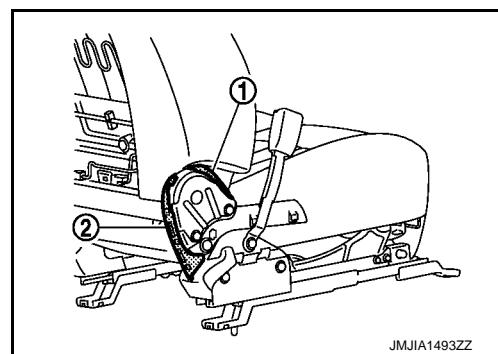

9. Remove the seatback assembly.
Remove the seatback assembly mounting bolts (A).

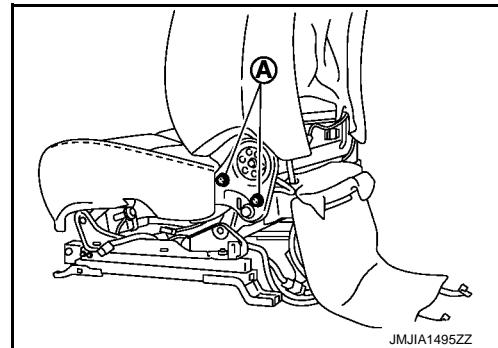

A
B
C
D
E
F
G
H
I
SE
K
L
M
N


O
P

FRONT SEAT

< REMOVAL AND INSTALLATION >


10. Remove the metal clips, and then pull out seat cushion outer lower finisher outside (1) and inside (2).

[] : Metal clip

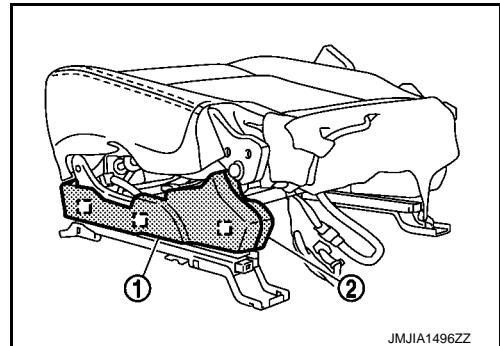


11. Remove the seat cushion inner lower finisher.

[] : Metal clip

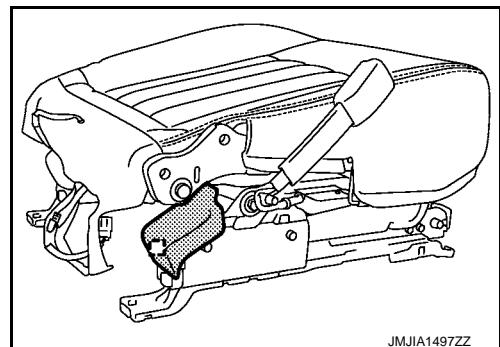

12. Remove the seat cushion trim and seat cushion pad. (Without occupant classification system control unit model)

- Disconnect the seat cushion heater unit harness connector (A).
- Remove the seat cushion trim retainer.
- Remove the hog rings, and separate the seat cushion trim and seat cushion pad.

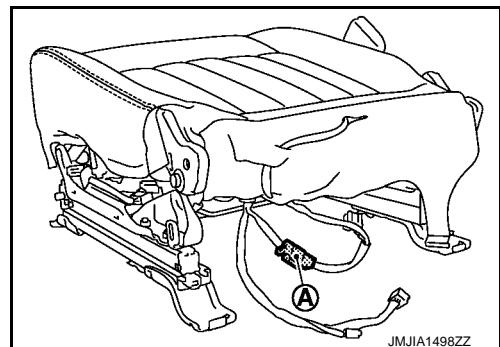

13. Remove the seat belt buckle. [SB-8, "SEAT BELT BUCKLE : Exploded View"](#)

14. Remove the driver seat control unit. (Driver's power seat only) [ADP-207, "Exploded View"](#)

Assembly

Assemble in the reverse order of disassembly.

CAUTION:

Install the hog rings of seat cushion trim in position, and then securely connect the trim or trim cord with the pad side wire.

REAR SEAT


< REMOVAL AND INSTALLATION >

REAR SEAT

Exploded View

INFOID:0000000004347438

REAR SEAT

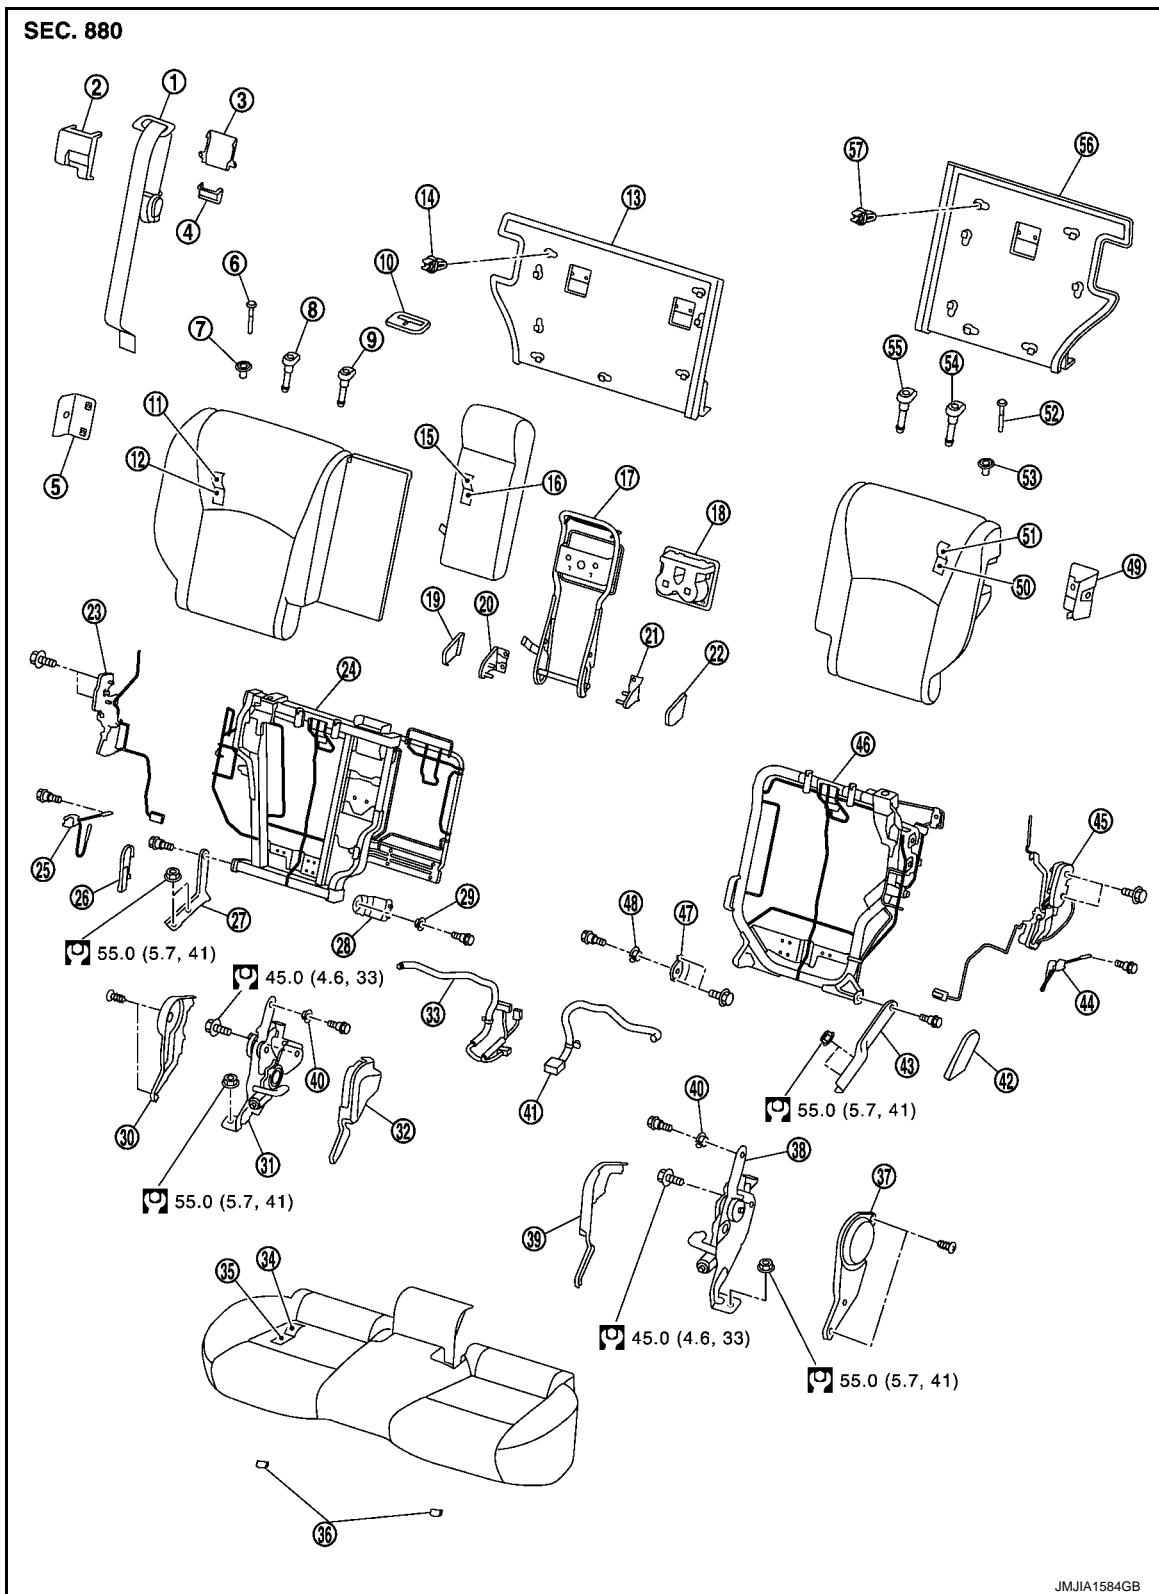

JMJIA1584GB

REAR SEAT

< REMOVAL AND INSTALLATION >

1. Rear center seat belt	2. Center seat belt retractor cover	3. Seat belt guide (upper)
4. Seat belt guide (lower)	5. Rear seatback lock cover (RH)	6. Rear seatback lock knob (RH)
7. Rear seatback lock knob finisher (RH)	8. Headrest holder (free)	9. Headrest holder (locked)
10. Seat belt finisher	11. Rear seatback trim (RH)	12. Rear seatback pad (RH)
13. Rear seatback board (RH)	14. Rear seatback board clip (RH)	15. Armrest trim
16. Armrest pad	17. Armrest frame	18. Cup holder
19. Armrest bracket cover (RH)	20. Armrest bracket (RH)	21. Armrest bracket (LH)
22. Armrest bracket cover (LH)	23. Rear seatback lock assembly (RH)	24. Rear seatback frame (RH)
25. Rear seat belt hook (RH)	26. Rear seatback hinge outer cover (RH)	27. Rear seatback hinge (RH)
28. Rear seatback hinge bracket (RH)	29. Rear seatback hinge bush (RH)	30. Reclining device outer cover (RH)
31. Reclining device assembly (RH)	32. Reclining device inner cover (RH)	33. Rear seat harness (RH)
34. Rear seat cushion trim	35. Rear seat cushion pad	36. Rear seat cushion hook
37. Reclining device outer cover (LH)	38. Reclining device assembly (LH)	39. Reclining device inner cover (LH)
40. Reclining device bush	41. Rear seat harness (LH)	42. Rear seatback hinge outer cover (LH)
43. Rear seatback hinge (LH)	44. Rear seat belt hook (LH)	45. Rear seatback lock assembly (LH)
46. Rear seatback frame (LH)	47. Rear seatback hinge bracket (LH)	48. Rear seatback hinge bush (LH)
49. Rear seatback lock cover (LH)	50. Rear seatback pad (LH)	51. Rear seatback trim (LH)
52. Rear seatback lock knob (LH)	53. Rear seatback lock knob finisher (LH)	54. Headrest holder (locked)
55. Headrest holder (free)	56. Rear seatback board (LH)	57. Rear seatback board clip (LH)

Refer to [GI-4, "Components"](#) for symbols in the figure.

Removal and Installation


INFOID:000000004347439

REMOVAL

CAUTION:

When removing and installing, use shop cloths to protect parts from damage.

1. Remove the seat cushion.
 - Pull the lock lever (1) at the front bottom of the seat cushion forward (1 for each side), and pull the seat cushion upward to release the wire (2) from the seat cushion hook. Then pull the seat cushion forward the remove
 - Remove the seat cushion from vehicle.

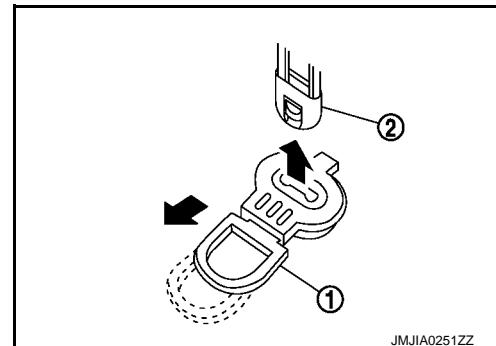


2. Remove the seatback.
 - Remove the luggage floor finisher front LH and RH. Refer to [INT-34, "Exploded View"](#).
 - Disconnect the rear seat harness connectors.
 - With power return seat model
LH seatback

REAR SEAT

< REMOVAL AND INSTALLATION >


Disconnect the rear seat harness connectors (A).

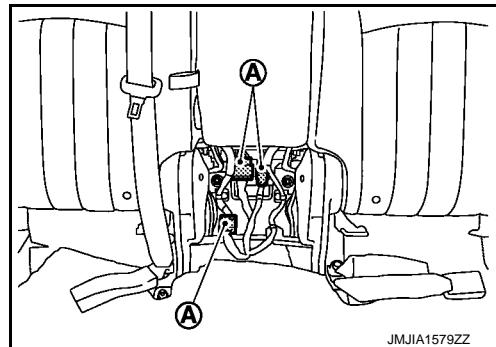

JMJIA1579ZZ

RH seatback

Disconnect the rear seat harness connector (A).

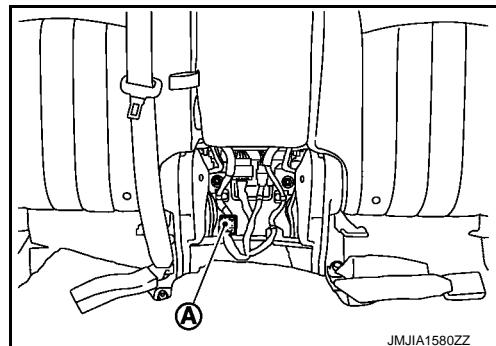


JMJIA1580ZZ

- Without power return seat model

LH seatback


Disconnect the rear seat harness connectors (A).

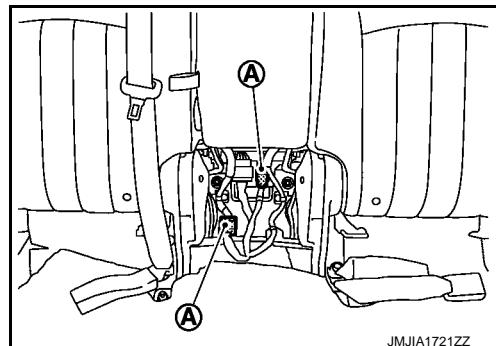

JMJIA1721ZZ

RH seatback

Disconnect the rear seat harness connector (A).

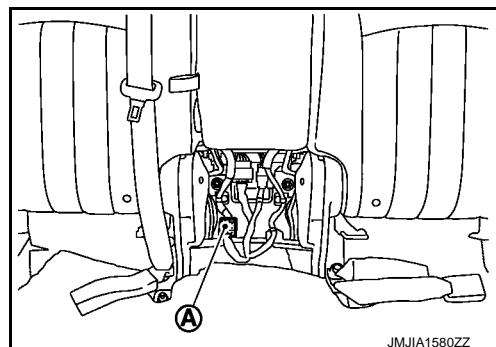


JMJIA1580ZZ

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

REAR SEAT


< REMOVAL AND INSTALLATION >

- Push the seatback lock pin (A).
- Remove the seatback mounting nuts (B), (C) and bolt (D).
- Remove the center seat belt anchor bolt. (RH seatback only)
Refer to [SB-11, "SEAT BELT RETRACTOR : Exploded View"](#).
- Remove the seatback from vehicle.

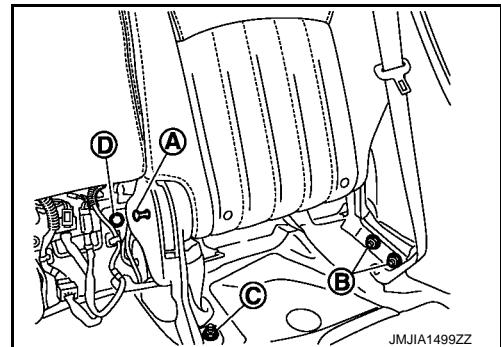

INSTALLATION

1. Install the rear seatback mounting nuts (1), (2), (3).
2. Lock the seatback striker (4).
3. Install the rear seatback mounting bolt (5).
4. Pull the rear seatback lock pin (6).

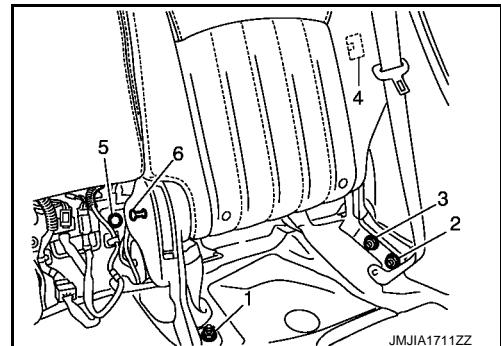

CAUTION:

- When removing and installing, use shop cloths to protect parts from damage.
- When removing and installing, 2 workers are required so as to prevent it from dropping.

Disassembly and Assembly


INFOID:000000004347440

SEATBACK


Disassembly

1. Remove the clips, and then pull out seatback board.

(○) : Clip

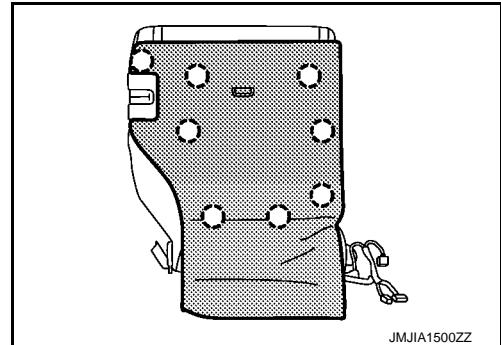


2. Remove the armrest.
 - Remove the armrest hinge covers (1).

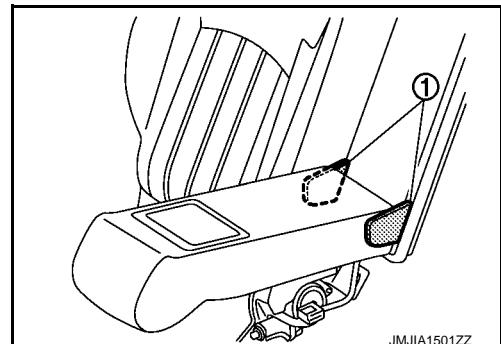

REAR SEAT

< REMOVAL AND INSTALLATION >

- Remove the arm rest mounting bolts (A), nuts (B) and hog rings (C), and then remove the armrest.

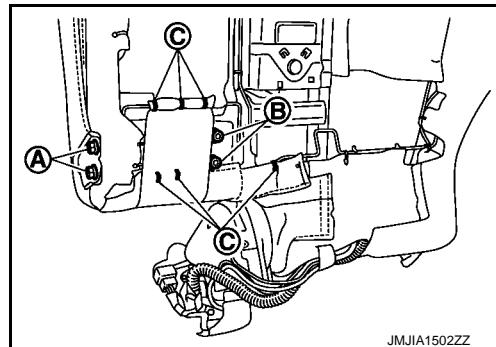


A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

3. Remove the seatback device assembly.

- Remove the seatback trim fixing hog rings.
- Disconnect the seatback lock harness connector.


LH seatback

Disconnect the seatback lock harness connector (A).

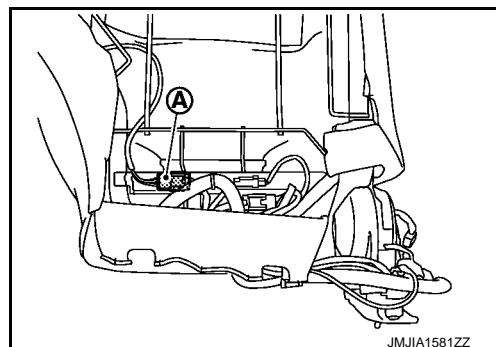

RH seatback


Disconnect the seatback lock harness connector (B).

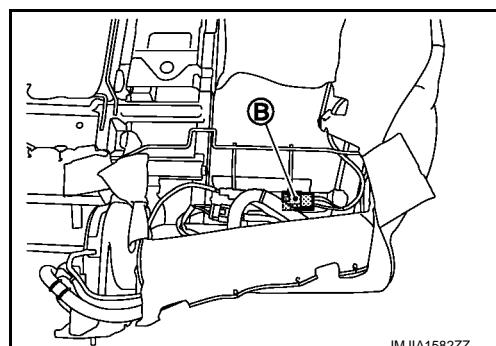

SE
K
L
M
N
O
P

- Remove the seatback device.


Remove the seatback device mounting bolts (C).

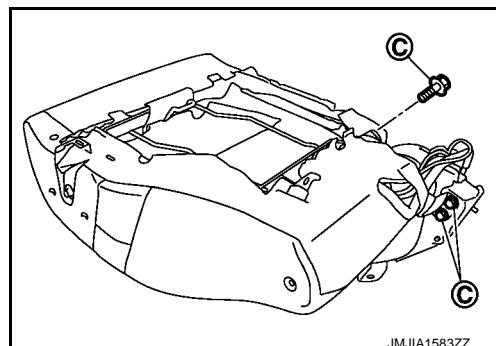

REAR SEAT

< REMOVAL AND INSTALLATION >


4. Remove the hinge bracket mounting bolt (A), and then remove the hinge bracket (1).

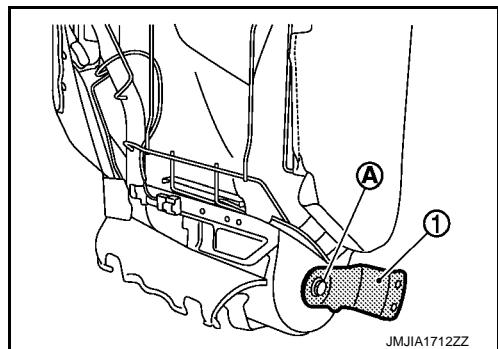

5. Remove the seatback trim and pad.


- Remove the metal clips and pawls, and then pull out seatback lock cover.

[] : Metal clip
△ : Pawl

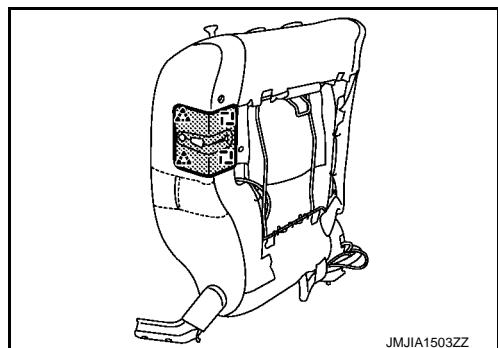


JMJA1503ZZ

- Remove the seatback hinge outer cover.

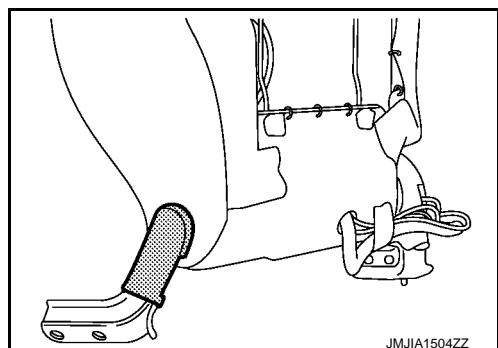

JMJA1504ZZ

- Remove the seatback hinge.
Remove the seatback hinge mounting bolt (A).

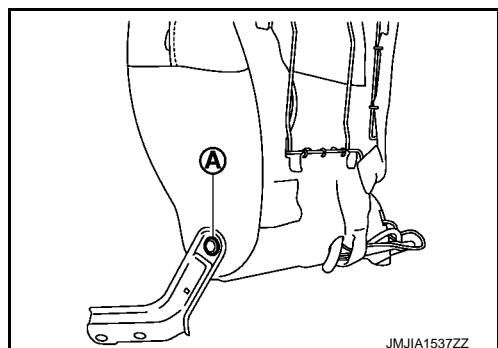


JMJA1537ZZ

- Turn seatback lock knob counterclockwise to remove.

REAR SEAT

< REMOVAL AND INSTALLATION >


- Push the seatback lock knob finisher pawl upward through the seatback pad and the seatback frame to remove it.

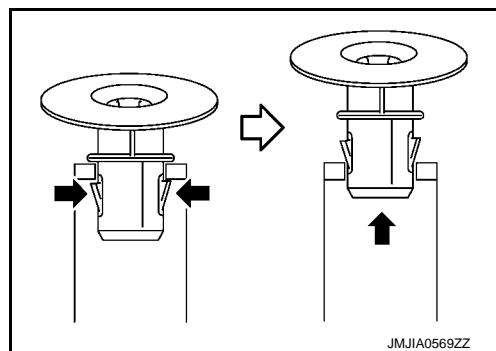

- Remove the headrest holder.


CAUTION:

Before installing headrest holder check its orientation.
(front/rear and right/left)

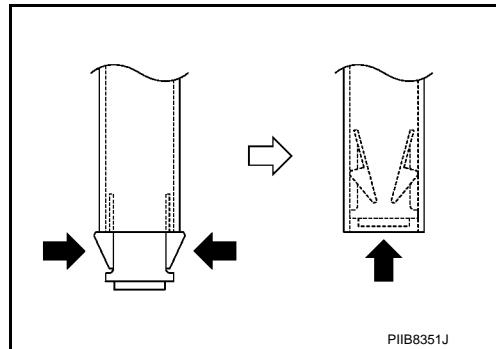

- Remove the seatback trim and pad.
- Remove the hog rings to separate the seatback trim and seatback pad.

- Remove the seatback lock assembly.
Remove the seatback lock assembly mounting bolts.

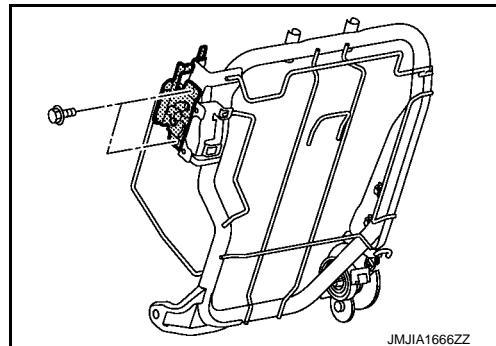

- Remove the rear center seat belt. Refer to [SB-11, "SEAT BELT RETRACTOR : Exploded View"](#)

Assembly

Assemble in the reverse order of disassembly.

CAUTION:

Install the hog rings of seatback trim in position, and then securely connect the trim or trim cord with the seatback frame.

SEAT CUSHION

Disassembly

Remove the hog rings to separate the trim and pad.

Assembly

Assemble in the reverse order of disassembly.

CAUTION:

Install the hog rings of seat cushion trim in position, and then securely connect the trim or trim cord with the seat cushion pad wire.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
SE


REAR SEAT BACK POWER RETURN CONTROL UNIT

< REMOVAL AND INSTALLATION >

REAR SEAT BACK POWER RETURN CONTROL UNIT

Exploded View

INFOID:0000000004347441

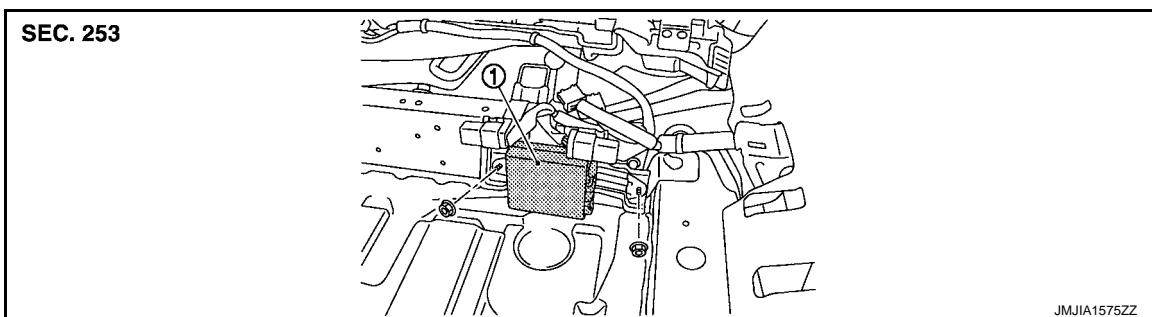

1. Rear seatback power return control unit

Removal and Installation


INFOID:0000000004347442

REMOVAL

CAUTION:

When removing and installing, use shop cloths to protect parts from damage.

1. Remove the luggage floor finisher assembly (front). Refer to [INT-35, "Removal and Installation"](#).
2. Remove mounting nuts (A).
3. Remove rear seatback power return control unit (1).

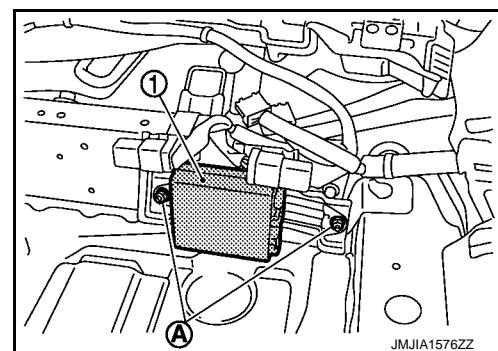

INSTALLATION

Install in the reverse order of removal.

CAUTION:

Be sure to clamp the harness to the right place.

POWER SEAT SWITCH

< REMOVAL AND INSTALLATION >

POWER SEAT SWITCH

Exploded View

INFOID:0000000004347443

Refer to [SE-86, "Exploded View".](#)

Removal and Installation


INFOID:0000000004347444

REMOVAL

CAUTION:

When removing and installing, use shop cloths to protect parts from damage.

1. Remove the seat cushion outer finisher (1). Refer to [SE-89, "Removal and Installation".](#)
2. Remove the screws (A).
3. Remove the power seat switch (2) from the seat cushion outer finisher.

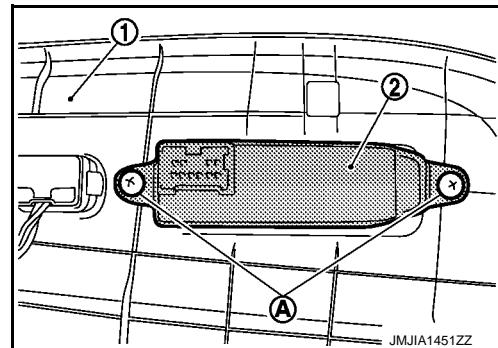

INSTALLATION

Install in the reverse order of removal.

CAUTION:

Be sure to clamp the harness to the right place.

A

B

C

D

E

F

G

H

I

SE

K

L

M

N

O

P

LUMBAR SUPPORT SWITCH

< REMOVAL AND INSTALLATION >

LUMBAR SUPPORT SWITCH

Exploded View

INFOID:0000000004347445

Refer to [SE-86, "Exploded View"](#).

Removal and Installation

INFOID:0000000004347446


REMOVAL

CAUTION:

When removing and installing, use shop cloths to protect parts from damage.

1. Remove the seat cushion outer finisher (1). Refer to [SE-89, "Removal and Installation"](#).
2. Remove the lumbar support switch (2) from the seat cushion outer finisher. With flat bladed screw driver (A).

 : Pawl

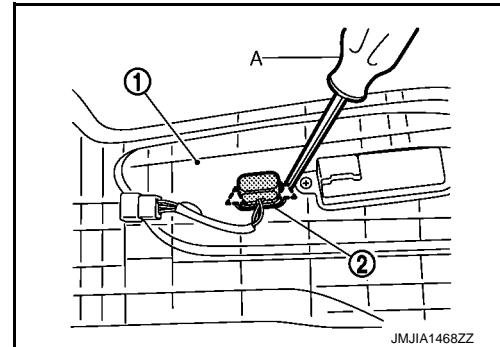

INSTALLATION

Install in the reverse order of removal.

CAUTION:

Be sure to clamp the harness to the right place.

HEATED SEAT SWITCH

< REMOVAL AND INSTALLATION >

HEATED SEAT SWITCH

Exploded View

INFOID:0000000004347447

Refer to [IP-23, "Exploded View"](#).

Removal and Installation

INFOID:0000000004347448

REMOVAL

CAUTION:


When removing and installing, use shop cloths to protect from damage.

1. Remove the console body assembly. Refer to [IP-23, "Removal and Installation"](#)
2. Remove heated seat switch (1) from switch bracket. With flat bladed screw driver (A).

 : Pawl

NOTE:

The same procedure is also performed for passenger side.

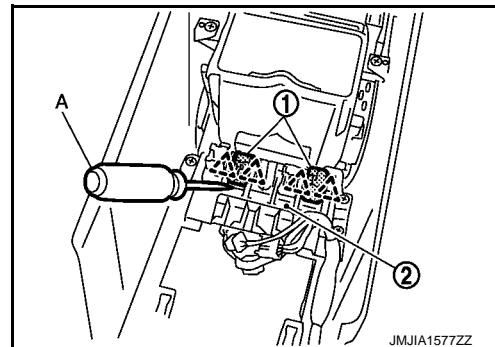

INSTALLATION

Install in the reverse order of removal.

A

B

C

D

E

F

G

H

SE

K

L

M

N

O

P

POWER RETURN SWITCH

< REMOVAL AND INSTALLATION >

POWER RETURN SWITCH

Exploded View

INFOID:0000000004347449

Refer to [IP-23, "Exploded View"](#).

Removal and Installation

INFOID:0000000004347450


REMOVAL

CAUTION:

When removing and installing, use shop cloths to protect parts from damage.

1. Remove the console body assembly. Refer to [IP-23, "Removal and Installation"](#)
2. Remove power return switch (1) from switch bracket. With flat bladed screw driver (A).

 : Pawl

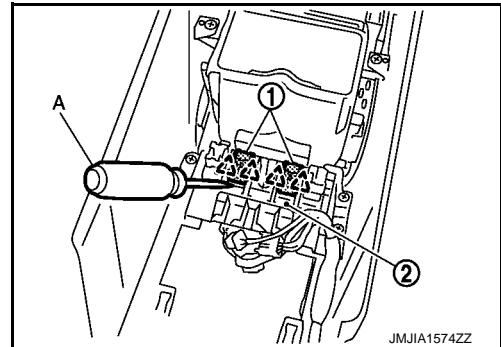

INSTALLATION

Install in the reverse order of removal.


REAR SEATBACK SWITCH

< REMOVAL AND INSTALLATION >

REAR SEATBACK SWITCH

Exploded View

INFOID:0000000004347451

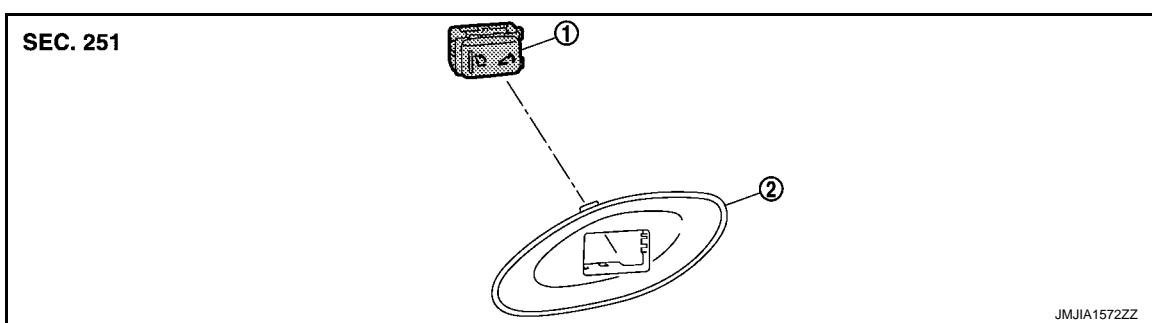

1. Rear seatback switch
2. Luggage side finisher lower escutcheon

Removal and Installation

INFOID:0000000004347452


REMOVAL

CAUTION:

When removing and installing, use shop cloths to protect parts from damage.

1. Remove the luggage side finisher lower escutcheon. Refer to [INT-35, "Removal and Installation"](#).
2. Remove rear power return switch (1) from luggage side finisher lower escutcheon. With flat bladed screw driver (A).

△ : Pawl

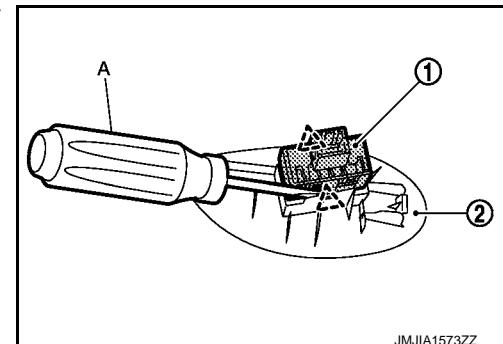

INSTALLATION

Install in the reverse order of removal.


REAR SEATBACK RELEASE SWITCH

< REMOVAL AND INSTALLATION >

REAR SEATBACK RELEASE SWITCH

Exploded View

INFOID:0000000004347453

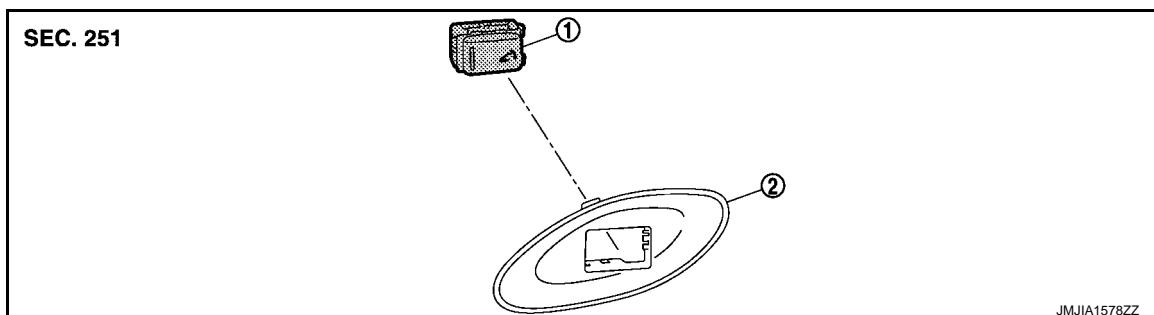

1. Rear seatback release switch
2. Luggage side finisher lower escutcheon

Removal and Installation

INFOID:0000000004347454


REMOVAL

CAUTION:

When removing and installing, use shop cloths to protect parts from damage.

1. Remove the luggage side finisher lower escutcheon. Refer to [INT-35, "Removal and Installation"](#).
2. Remove rear power return switch (1) from luggage side finisher lower escutcheon. With flat bladed screw driver (A).

△ : Pawl

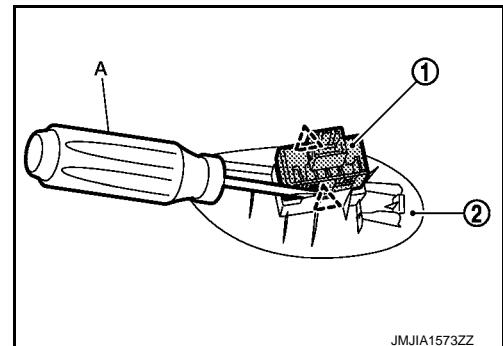

INSTALLATION

Install in the reverse order of removal.