

SECTION **DLN** DRIVELINE

A
B
C
DLN
E
F
G
H
I
J
K
L
M
N
O
P
39

CONTENTS

TRANSFER: ETX13C	
PRECAUTION	6
PRECAUTIONS	6
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	6
Service Notice or Precautions for Transfer	6
PREPARATION	7
PREPARATION	7
Special Service Tools	7
Commercial Service Tools	8
SYSTEM DESCRIPTION	10
COMPONENT PARTS	10
Component Parts Location	10
Component Description	10
AWD Control Unit	11
AWD Solenoid	11
Transfer Fluid Temperature Sensor	11
Electric Controlled Coupling	11
STRUCTURE AND OPERATION	12
Sectional View	12
Operation Description	12
SYSTEM	14
AWD SYSTEM	14
AWD SYSTEM : System Description	14
AWD SYSTEM : Fail-safe	15
AWD SYSTEM : Protection Function	15
DIAGNOSIS SYSTEM (AWD CONTROL UNIT)	17
CONSULT Function	17
ECU DIAGNOSIS INFORMATION	19
AWD CONTROL UNIT	19
Reference Value	19
Fail-safe	20
Protection Function	21
DTC Inspection Priority Chart	21
DTC Index	21
WIRING DIAGRAM	22
AWD SYSTEM	22
Wiring Diagram	22
BASIC INSPECTION	28
DIAGNOSIS AND REPAIR WORK FLOW	28
Work Flow	28
Diagnostic Work Sheet	29
DTC/CIRCUIT DIAGNOSIS	31
C1201 AWD CONTROL UNIT	31
DTC Logic	31
Diagnosis Procedure	31
C1203 ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)	32
DTC Logic	32
Diagnosis Procedure	32
C1204 AWD SOLENOID	33
DTC Logic	33
Diagnosis Procedure	33
Component Inspection	35
C1205 AWD ACTUATOR RELAY	36
DTC Logic	36
Diagnosis Procedure	36
C1210 ECM	38
DTC Logic	38
Diagnosis Procedure	38
P1804 TRANSFER CONTROL UNIT	39

DTC Logic	39	TRANSFER FLUID	57
Diagnosis Procedure	39	Inspection	57
P1809 TRANSFER CONTROL UNIT	40	Draining	57
DTC Logic	40	Refilling	57
Diagnosis Procedure	40	REMOVAL AND INSTALLATION	58
P1826 TRANSFER FLUID TEMPERATURE ...	41	AWD CONTROL UNIT	58
DTC Logic	41	Removal and Installation	58
Diagnosis Procedure	41	FRONT OIL SEAL	59
Component Inspection	42	Exploded View	59
U1000 CAN COMM CIRCUIT	44	Removal and Installation	59
Description	44	REAR OIL SEAL	60
DTC Logic	44	Exploded View	60
Diagnosis Procedure	44	Removal and Installation	60
U1010 CONTROL UNIT (CAN)	45	UNIT REMOVAL AND INSTALLATION	63
Description	45	TRANSFER ASSEMBLY	63
DTC Logic	45	Exploded View	63
Diagnosis Procedure	45	Removal and Installation	63
POWER SUPPLY AND GROUND CIRCUIT	46	UNIT DISASSEMBLY AND ASSEMBLY ...	65
Diagnosis Procedure	46	FRONT CASE AND REAR CASE	65
AWD WARNING LAMP	49	Exploded View	65
Component Function Check	49	Disassembly	66
Diagnosis Procedure	49	Assembly	69
SYMPTOM DIAGNOSIS	50	Inspection	73
AWD WARNING LAMP DOES NOT TURN ON	...	MAIN SHAFT	75
Description	50	Exploded View	75
Diagnosis Procedure	50	Disassembly	76
AWD WARNING LAMP DOES NOT TURN	...	Assembly	77
OFF	51	Inspection	78
Description	51	FRONT DRIVE SHAFT AND DRIVE CHAIN	80
Description	51	Exploded View	80
HEAVY TIGHT-CORNER BRAKING SYMP-		Disassembly	81
TOM OCCURS	52	Assembly	81
Description	52	Inspection	82
Diagnosis Procedure	52	SERVICE DATA AND SPECIFICATIONS	
VEHICLE DOES NOT ENTER AWD MODE	53	(SDS)	84
Description	53	SERVICE DATA AND SPECIFICATIONS	
Diagnosis Procedure	53	(SDS)	84
AWD WARNING LAMP BLINKS QUICKLY	54	General Specifications	84
Description	54	FRONT PROPELLER SHAFT: 2S56A	
AWD WARNING LAMP BLINKS SLOWLY	55	SYMPTOM DIAGNOSIS	85
Description	55	NOISE, VIBRATION AND HARSHNESS	
Diagnosis Procedure	55	(NVH) TROUBLESHOOTING	85
NOISE, VIBRATION AND HARSHNESS		NVH Troubleshooting Chart	85
(NVH) TROUBLESHOOTING	56	PREPARATION	86
NVH Troubleshooting Chart	56	PREPARATION	86
PERIODIC MAINTENANCE	57	Commercial Service Tools	86

PERIODIC MAINTENANCE	87	PREPARATION	102
FRONT PROPELLER SHAFT	87	PREPARATION	102
Inspection	87	Commercial Service Tools	102
REMOVAL AND INSTALLATION	88	PERIODIC MAINTENANCE	103
FRONT PROPELLER SHAFT	88	REAR PROPELLER SHAFT	103
Exploded View	88	Inspection	103
Removal and Installation	88	REMOVAL AND INSTALLATION	104
Inspection	89	REAR PROPELLER SHAFT	104
SERVICE DATA AND SPECIFICATIONS (SDS)	91	Exploded View	104
SERVICE DATA AND SPECIFICATIONS (SDS)	91	Removal and Installation	104
General Specifications	91	Inspection	107
Propeller Shaft Runout	91	SERVICE DATA AND SPECIFICATIONS (SDS)	109
Journal Axial Play	91	SERVICE DATA AND SPECIFICATIONS (SDS)	109
REAR PROPELLER SHAFT: 3S80A-R		General Specifications	109
SYMPTOM DIAGNOSIS	92	Propeller Shaft Runout	109
NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING	92	Journal Axial Play	109
NVH Troubleshooting Chart	92	FRONT FINAL DRIVE: F160A	
PREPARATION	93	SYSTEM DESCRIPTION	110
PREPARATION	93	FRONT FINAL DRIVE ASSEMBLY	110
Commercial Service Tools	93	System Diagram	110
PERIODIC MAINTENANCE	94	SYMPTOM DIAGNOSIS	111
REAR PROPELLER SHAFT	94	NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING	111
Inspection	94	NVH Troubleshooting Chart	111
REMOVAL AND INSTALLATION	95	PRECAUTION	112
REAR PROPELLER SHAFT	95	PRECAUTIONS	112
Exploded View	95	Service Notice or Precautions for Front Final Drive	
Removal and Installation	95	112	
Inspection	98	PREPARATION	113
SERVICE DATA AND SPECIFICATIONS (SDS)	100	PREPARATION	113
SERVICE DATA AND SPECIFICATIONS (SDS)	100	Special Service Tools	113
General Specifications	100	Commercial Service Tools	115
Propeller Shaft Runout	100	PERIODIC MAINTENANCE	116
Journal Axial Play	100	FRONT DIFFERENTIAL GEAR OIL	116
REAR PROPELLER SHAFT: 3F80A-1VL107		Inspection	116
SYMPTOM DIAGNOSIS	101	Draining	116
NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING	101	Refilling	116
NVH Troubleshooting Chart	101	REMOVAL AND INSTALLATION	117
SIDE OIL SEAL	117	RIGHT SIDE	117

A
B
C
D
DLN
E
F
G
H
I
J
K
L
M
N
O
P

RIGHT SIDE : Exploded View	117	Service Notice or Precautions for Rear Final Drive.	152
RIGHT SIDE : Removal and Installation	117		
LEFT SIDE	118	PREPARATION	153
LEFT SIDE : Exploded View	118	PREPARATION	153
LEFT SIDE : Removal and Installation	118	Special Service Tools	153
UNIT REMOVAL AND INSTALLATION ...	120	Commercial Service Tools	155
FRONT FINAL DRIVE ASSEMBLY	120	PERIODIC MAINTENANCE	157
Exploded View	120	REAR DIFFERENTIAL GEAR OIL	157
Removal and Installation	120	Inspection	157
UNIT DISASSEMBLY AND ASSEMBLY ..	122	Draining	157
SIDE SHAFT	122	Refilling	157
Exploded View	122	REMOVAL AND INSTALLATION	158
Disassembly	123	FRONT OIL SEAL	158
Assembly	123	2WD	158
Inspection After Disassembly	124	2WD : Exploded View	158
DIFFERENTIAL ASSEMBLY	125	2WD : Removal and Installation	158
Exploded View	125	AWD	162
Disassembly	126	AWD : Exploded View	163
Assembly	129	AWD : Removal and Installation	163
Adjustment	133	SIDE OIL SEAL	168
Inspection After Disassembly	138	2WD	168
DRIVE PINION	139	2WD : Exploded View	168
Exploded View	139	2WD : Removal and Installation	168
Disassembly	140	AWD	169
Assembly	141	AWD : Exploded View	170
Adjustment	143	AWD : Removal and Installation	170
Inspection After Disassembly	146	UNIT REMOVAL AND INSTALLATION ...	172
SERVICE DATA AND SPECIFICATIONS (SDS)	147	REAR FINAL DRIVE ASSEMBLY	172
SERVICE DATA AND SPECIFICATIONS (SDS)	147	2WD	172
General Specifications	147	2WD : Exploded View	172
Drive Gear Runout	147	2WD : Removal and Installation	172
Differential Side Gear Clearance	147	AWD	173
Preload Torque	147	AWD : Exploded View	174
Backlash	147	AWD : Removal and Installation	174
Companion Flange Runout	147	UNIT DISASSEMBLY AND ASSEMBLY ..	176
REAR FINAL DRIVE: R200		DIFFERENTIAL ASSEMBLY	176
SYSTEM DESCRIPTION	148	2WD	176
REAR FINAL DRIVE ASSEMBLY	148	2WD : Exploded View	176
System Diagram	148	2WD : Disassembly	177
SYMPTOM DIAGNOSIS	150	2WD : Assembly	179
NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING	150	2WD : Adjustment	183
NVH Troubleshooting Chart	150	2WD : Inspection After Disassembly	187
PRECAUTION	152	AWD	188
PRECAUTIONS	152	AWD : Exploded View	188
		AWD : Disassembly	189
		AWD : Assembly	192

AWD : Adjustment	195	AWD : Adjustment	214
AWD : Inspection After Disassembly	200	AWD : Inspection After Disassembly	215
DRIVE PINION	201	SERVICE DATA AND SPECIFICATIONS (SDS)	217
2WD	201	SERVICE DATA AND SPECIFICATIONS (SDS)	217
2WD : Exploded View	201	General Specification	217
2WD : Disassembly	202	Drive Gear Runout	217
2WD : Assembly	203	Differential Side Gear Clearance	217
2WD : Adjustment	207	Preload Torque	217
2WD : Inspection After Disassembly	207	Backlash	217
AWD	208	Drive Pinion Runout (2WD)	217
AWD : Exploded View	208	Companion Flange Runout (AWD)	218
AWD : Disassembly	209		
AWD : Assembly	211		

A

B

C

DLN

E

F

G

H

I

J

K

L

M

N

O

P

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000008285486

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Service Notice or Precautions for Transfer

INFOID:0000000008285487

- Never reuse transfer fluid, once it has been drained.
- Check the fluid level or replace the fluid only with the vehicle parked on level ground.
- During removal or installation, keep inside of transfer clear of dust or dirt.
- Replace all tires at the same time. Always use tires of the proper size and the same brand and pattern. Fitting improper size and unusually worn tires applies excessive force to vehicle mechanism and can cause longitudinal vibration.
- Disassembly should be done in a clean work area, it is preferable to work in dustproof area.
- Before proceeding with disassembly, thoroughly clean the transfer. It is important to prevent the internal parts from becoming contaminated by dirt or other foreign matter.
- All parts should be carefully cleaned with a general purpose, non-flammable solvent before inspection or reassembly.
- Check for the correct installation status prior to removal or disassembly. If matching marks are required, be certain they do not interfere with the function of the parts when applied.
- Check appearance of the disassembled parts for damage, deformation, and unusual wear. Replace them with a new ones if necessary.
- Gaskets, seals and O-rings should be replaced any time the transfer is disassembled.
- In principle, tighten bolts or nuts gradually in several steps working diagonally from inside to outside. If tightening sequence is specified, use it.
- Observe the specified torque when assembling.
- Clean and flush the parts sufficiently and blow-dry them.
- Be careful not to damage sliding surfaces and mating surfaces.
- Clean inner parts with lint-free cloth or towels. Do not use cotton work gloves and rags to prevent adhering fibers.

< PREPARATION >

PREPARATION**PREPARATION****Special Service Tools**

INFOID:000000008285488

A

B

C

DLN

E

F

G

H

I

J

K

L

M

N

O

 
P

Tool number (TechMate No.) Tool name	Description	
ST27862000 (—) Drift a: 62.5 mm (2.461 in) dia. b: 42 mm (1.65 in) dia.	Installing front oil seal	DLN
KV381054S0 (J-34286) Puller	Removing rear oil seal	
ST30720000 (J-25405) Drift a: 77 mm (3.03 in) dia. b: 55.5 mm (2.185 in) dia.	<ul style="list-style-type: none"> • Installing rear oil seal • Installing main shaft oil seal 	
KV40104830 (—) Drift a: 70 mm (2.76 in) dia. b: 63.5 mm (2.500 in) dia.	Installing rear oil seal	
ST33052000 (—) Drift a: 28 mm (1.10 in) dia. b: 22 mm (0.87 in) dia.	Removing main shaft assembly	
ST35321000 (—) Drift a: 49 mm (1.93 in) dia. b: 41 mm (1.61 in) dia.	Installing main shaft assembly	

PREPARATION



< PREPARATION >

[TRANSFER: ETX13C]

Tool number (TechMate No.) Tool name	Description
ST31214000 (J-25269-B) Drift a: 34 mm (1.34 in) dia. b: 25.5 mm (1.004 in) dia.	<ul style="list-style-type: none"> • Removing front drive shaft front bearing • Removing front drive shaft rear bearing  <p>ZZA0534D</p>
ST33200000 (J-26082) Drift a: 60 mm (2.36 in) dia. b: 44.5 mm (1.752 in) dia.	Installing front drive shaft front bearing
KV38104010 (—) Drift a: 67 mm (2.64 in) dia. b: 49 mm (1.93 in) dia.	Installing front drive shaft rear bearing

Commercial Service Tools

INFOID:000000008285489

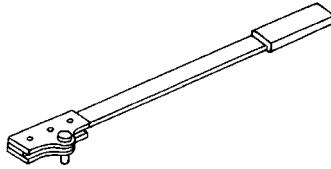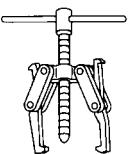Tool name	Description
Flange wrench	Removing and installing self-lock nut
	NT771
Puller	Removing companion flange
	NT077

PREPARATION

< PREPARATION >

[TRANSFER: ETX13C]

Tool name	Description
Replacer	<ul style="list-style-type: none"> • Removing front drive shaft front bearing • Removing front drive shaft rear bearing
Power tool	<p>Loosening bolts and nuts</p>

A

B

C

DLN

E

F

G

H

I

J

K

L

M

N


O

P

SYSTEM DESCRIPTION**COMPONENT PARTS**

Component Parts Location

INFOID:0000000008285490

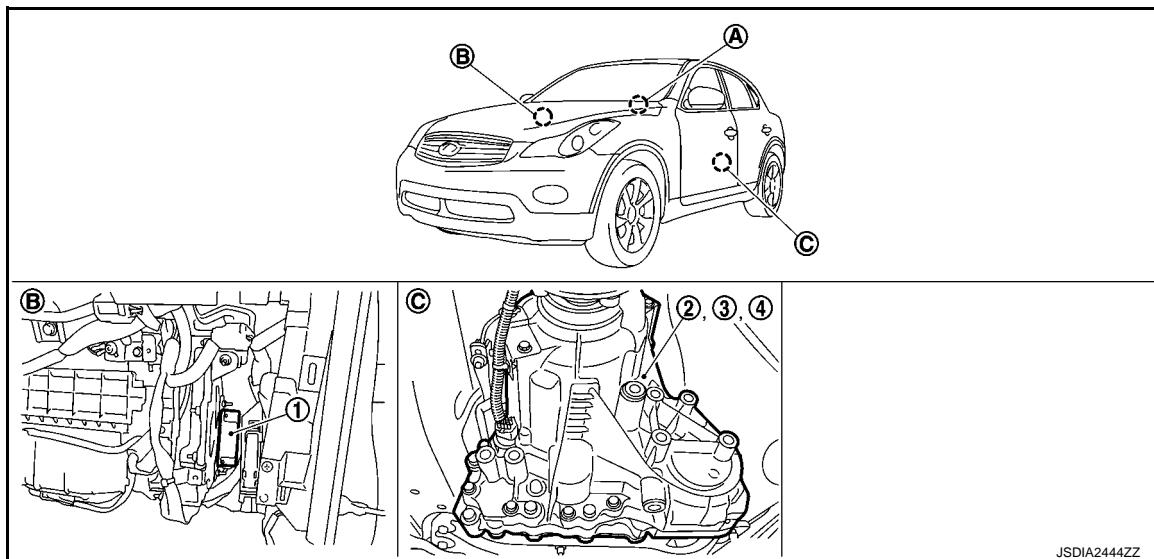

JSDIA2444ZZ

1. AWD control unit	2. AWD solenoid (inside transfer)	3. Transfer fluid temperature sensor (inside transfer)
4. Electric controlled coupling (inside transfer)		
A. AWD warning lamp (in combination meter)	B. Glove box assembly removed	C. Transfer assembly

Component Description

INFOID:0000000008285491

Component parts	Reference/Function
AWD control unit	DLN-11, "AWD Control Unit"
Wheel sensor	BRC-37, "Description"
AWD solenoid	DLN-11, "AWD Solenoid"
Transfer fluid temperature sensor	DLN-11, "Transfer Fluid Temperature Sensor"
Electric controlled coupling	DLN-11, "Electric Controlled Coupling"
AWD warning lamp	DLN-14, "AWD SYSTEM : System Description"
ABS actuator and electric unit (control unit)	Transmits the following signals to AWD control unit via CAN communication. <ul style="list-style-type: none"> Vehicle speed signal Stop lamp switch signal (brake signal)
ECM	Transmits the following signals to AWD control unit via CAN communication. <ul style="list-style-type: none"> Accelerator pedal position signal Engine speed signal
Unified meter and A/C amp.	Transmits conditions of parking brake switch to AWD control unit via CAN communication. Receive AWD warning lamp signal from AWD control unit via CAN communication.

< SYSTEM DESCRIPTION >

AWD Control Unit

INFOID:0000000008285492

- AWD control unit controls driving force distribution by signals from each sensor from rear wheel driving mode (0:100) to 4-wheel driving mode (50:50).
- Rear wheel driving conditions is available by fail-safe function if malfunction is detected in AWD system.

AWD ACTUATOR RELAY

AWD actuator relay is integrated with AWD control unit, and supplies AWD solenoid with voltage.

AWD Solenoid


INFOID:0000000008285493

AWD solenoid is integrated with electric controlled coupling, and controls electric controlled coupling by command current from AWD control unit.


Transfer Fluid Temperature Sensor

INFOID:0000000008285494

- Transfer fluid temperature sensor is integrated with electric controlled coupling.
- Transfer fluid temperature sensor detects the transfer fluid temperature and transmits a signal to AWD control unit.

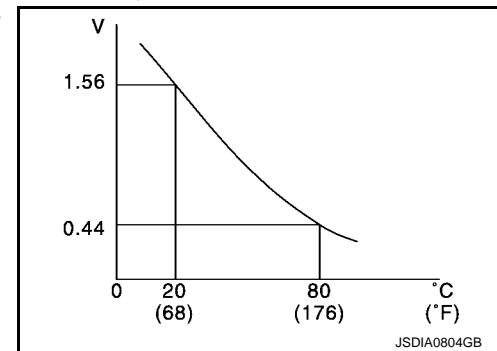

- The electrical resistance of the sensor decreases as temperature increases.

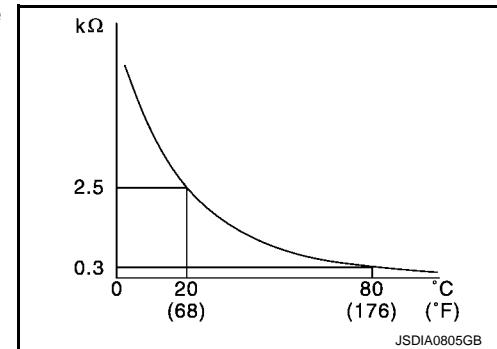

Electric Controlled Coupling

INFOID:0000000008285495

Electric controlled coupling is integrated with transfer and transmits driving force to rear final drive. For operation, refer to [DLN-12, "Operation Description"](#).

STRUCTURE AND OPERATION


< SYSTEM DESCRIPTION >

[TRANSFER: ETX13C]

STRUCTURE AND OPERATION

Sectional View

INFOID:0000000008285496

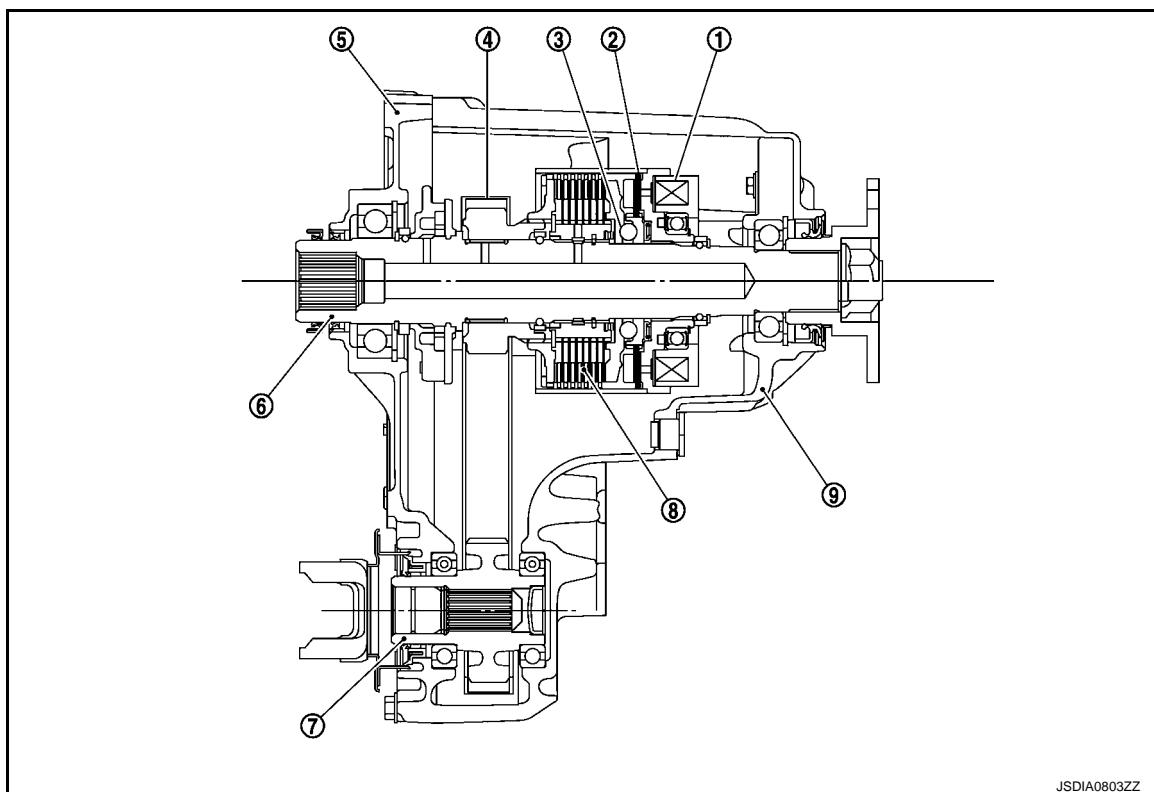


JSDIA0803ZZ

1. Electromagnet	2. Control clutch	3. Cam
4. Drive chain	5. Front case	6. Main shaft
7. Front drive shaft	8. Main clutch	9. Rear case

Operation Description

INFOID:0000000008285497

POWER TRANSFER DIAGRAM

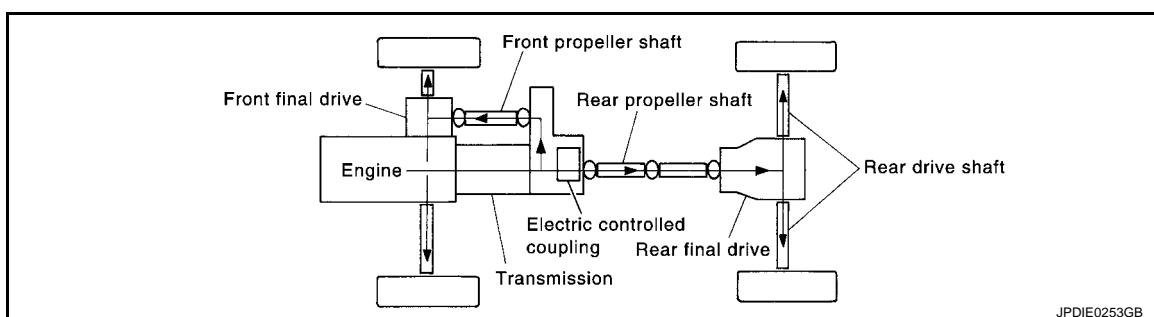


JPDIE0253GB

OPERATION PRINCIPLE ELECTRIC CONTROLLED COUPLING

STRUCTURE AND OPERATION


< SYSTEM DESCRIPTION >

[TRANSFER: ETX13C]

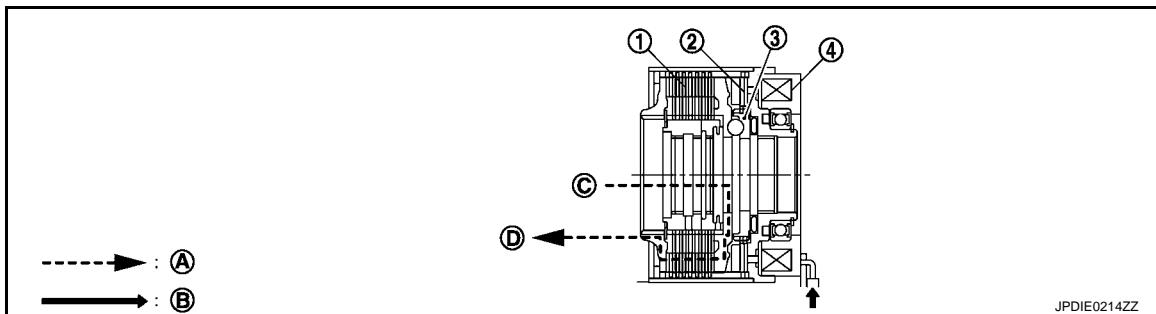

1. Main clutch	2. Control clutch	3. Cam
4. Electromagnet		
A. Torque flow	B. Current commanded from AWD control unit	C. From transmission
D. To front propeller shaft		

1. AWD control unit supplies command current to electric controlled coupling (AWD solenoid).
2. Control clutch is engaged by electromagnet and torque is detected in control clutch.
3. The cam operates in response to control clutch torque and applies pressure to main clutch.
4. Main clutch transmits torque to front wheels according to pressing power.
 - Transmission torque to front wheels is determined according to command current.

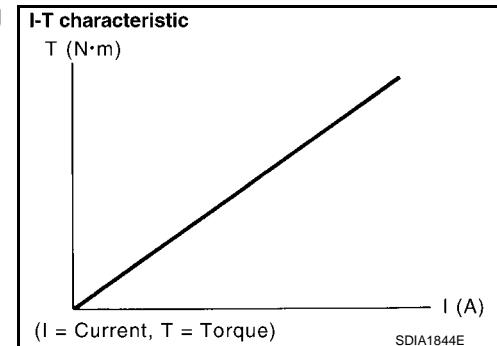


< SYSTEM DESCRIPTION >

SYSTEM**AWD SYSTEM****AWD SYSTEM : System Description**

INFOID:0000000008285498

- Pressing force of multiple disc clutch is controlled by electric control. Driving torque distribution of front and rear wheels changes automatically between approximately 0 : 100 (Rear wheel drive) and 50 : 50 (AWD) to have an optimized torque distribution adapted to road condition change.
- In accordance with fail-safe function, when system is malfunctioning, AWD control stops, and the system becomes rear wheel drive. Refer to [DLN-15, "AWD SYSTEM : Fail-safe"](#).
- When a high load status continues for electric controlled coupling, AWD control temporarily becomes rear wheel drive, according to protection function. Refer to [DLN-15, "AWD SYSTEM : Protection Function"](#).

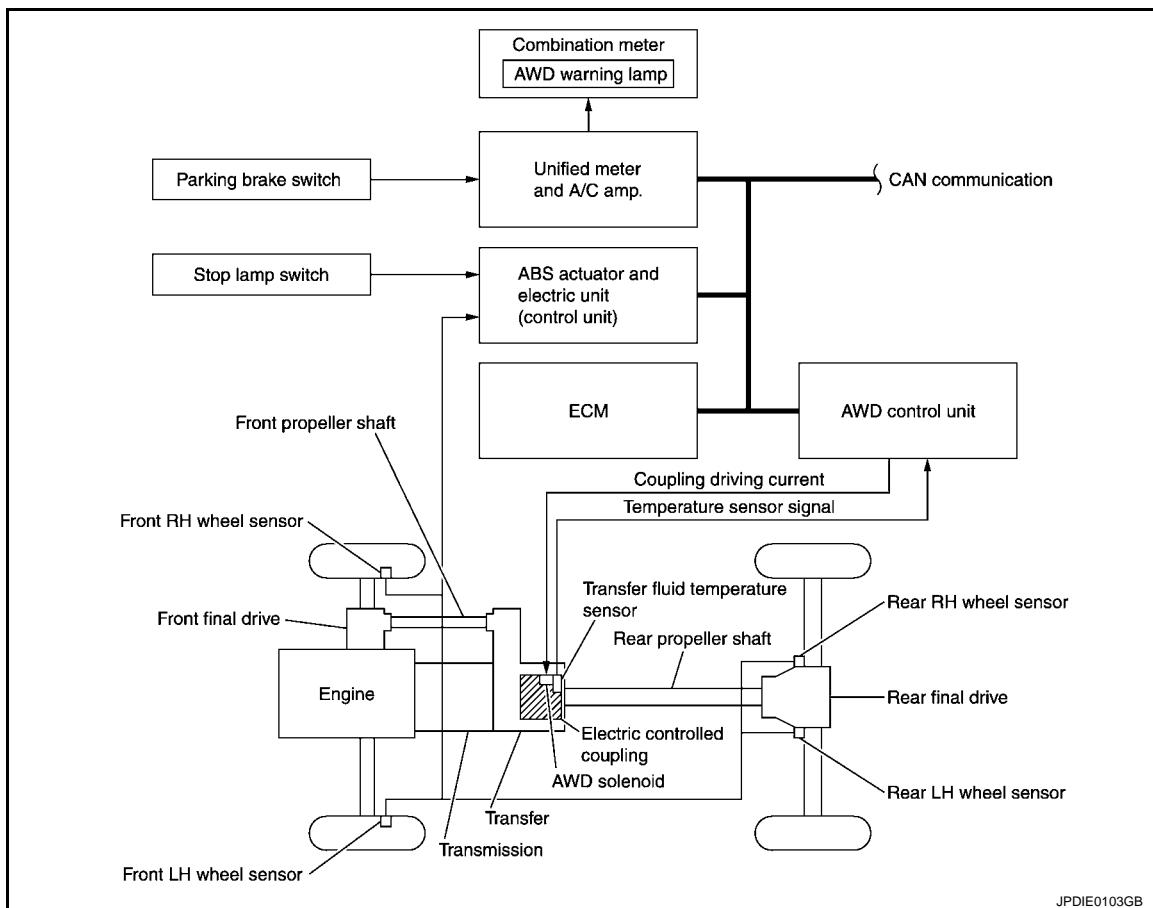SYSTEM DIAGRAM**INPUT/OUTPUT SIGNAL**

It transmits/receives each signal from the following control unit via CAN communication line.


Component parts	Signal item
ABS actuator and electric unit (control unit)	<p>Transmits the following signals to AWD control unit via CAN communication.</p> <ul style="list-style-type: none"> • Vehicle speed signal • Stop lamp switch signal (brake signal)
ECM	<p>Transmits the following signals to AWD control unit via CAN communication.</p> <ul style="list-style-type: none"> • Accelerator pedal position signal • Engine speed signal
Unified meter and A/C amp.	<p>Transmits conditions of parking brake switch to AWD control unit via CAN communication.</p> <p>Receive AWD warning lamp signal from AWD control unit via CAN communication.</p>

OPERATION CHARACTERISTIC

< SYSTEM DESCRIPTION >

VEHICLE STARTS CONTROL

- At the start, torque distribution for front and rear wheels is fixed by electric control and stable start is achieved.
- Makes possible stable driving, with no wheel spin, on snowy roads or other slippery surfaces.

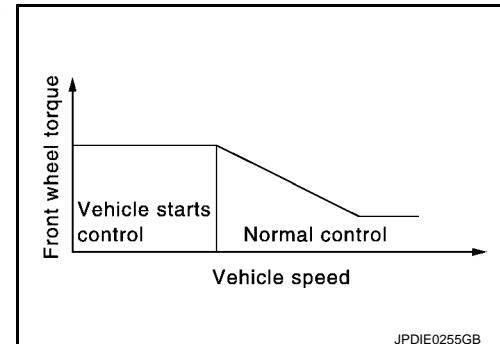

NORMAL CONTROL

- On roads which do not require AWD, it contributes to improved fuel economy by driving in conditions close to rear-wheel drive and it results in better fuel efficiency and provides FR-like steering characteristics.
- When spin occurs on rear wheel, distribute optimum torque to front wheel and keep stable driving.
- The vehicle cornering status is judged according to information from each sensor, and the optimum torque is distributed to front wheels for preventing tight cornering/braking symptom.

AWD WARNING LAMP INDICATION CONDITION

- Turns ON when there is a malfunction in AWD system. AWD warning lamp indicates the vehicle is in fail-safe mode.
- Also turns ON when ignition switch is turned ON, for the purpose of lamp check. Turns OFF approximately for 1 second after the engine starts if system is normal.

AWD WARNING LAMP INDICATION

Condition	AWD warning lamp
Lamp check	Turns ON when ignition switch is turned ON. (Turns OFF approx. 1 second after the engine start.)
AWD system malfunction	ON
Protection function is activated due to heavy load to electric controlled coupling. (AWD system is not malfunctioning and AWD system changes to rear wheel drive.)	Quick blinking: 2 times/second (Blinking in approx. 1 minute and then turning OFF)
Large difference in diameter of front/rear tires	Slow blinking: 1 time/2 seconds (Continuing to blink until turning ignition switch OFF)
Other than above (system normal)	OFF

CAUTION:

AWD warning lamp also turns ON due to data reception error, CAN communication error etc.

AWD SYSTEM : Fail-safe

INFOID:0000000008285499

- If any malfunction occurs in AWD electrical system, and control unit detects the malfunction, AWD warning lamp on combination meter turns ON to indicate system malfunction.
- When AWD warning lamp is ON, vehicle changes to rear-wheel drive or shifts to 4-wheel drive (front-wheels still have some driving torque)

AWD SYSTEM : Protection Function

INFOID:0000000008285500

AWD system activates its protection function (shuts down AWD system temporarily) if AWD system detects high load continuously or the front wheel tire size differs from the rear tire size. (AWD system is automatically restored if AWD system no longer detects any overload or the tire size difference is eliminated.)

DTC	Warning lamp	Error area and root cause	Contents of protection function
—	Blinking ^{*1}	Transfer assembly in protection mode. It is not malfunction. (Internal temperature rise of electronic controlled coupling)	Shuts down AWD system temporarily
—	Blinking ^{*2}	Malfunction in each tire or different tire diameter	

SYSTEM

< SYSTEM DESCRIPTION >

[TRANSFER: ETX13C]

*1: Quick blinking: 2 times/second (blinking for approximately 1 minute and then turned OFF)

*2: Slow blinking: 1 time/2 seconds (continuing to blink until ignition switch is turned OFF)

NOTE:

- If the warning lamp blinks slowly during driving but remains OFF after the engine is restarted, the system is normal. If it again blinks slowly after driving for some time, vehicle must be inspected.
- When there is a difference of revolution speed between the front and rear wheel the shift occasionally changes to direct 4-wheel driving conditions automatically. This is not a malfunction.

DIAGNOSIS SYSTEM (AWD CONTROL UNIT)

CONSULT Function

INFOID:0000000008285501

APPLICATION ITEMS

CONSULT can display each diagnostic item using the diagnostic test modes as follows.

Diagnostic test mode	Function
ECU Identification	AWD control unit part number can be read.
Self Diagnostic Result	Self-diagnostic results and freeze frame data can be read and erased quickly.*
Data Monitor	Input/Output data in the AWD control unit can be read.
Active Test	Diagnostic Test Mode in which CONSULT drives some actuators apart from the AWD control unit and also shifts some parameters in a specified range.

* : The following diagnosis information is erased by erasing.

- DTC
- Freeze frame data (FFD)

ECU IDENTIFICATION

AWD control unit part number can be read.

SELF DIAGNOSTIC RESULT

Refer to [DLN-21, "DTC Index"](#).

When "PRSNT" is displayed on self-diagnosis result.

- The system is presently malfunctioning.

When "PAST" is displayed on self-diagnosis result.

- System malfunction in the past is detected, but the system is presently normal.

FREEZE FRAME DATA (FFD)

The following vehicle status is recorded when DTC is detected and is displayed on CONSULT.

Item name	Display item
IGN COUNTER (0 – 39)	<p>The number of times that ignition switch is turned ON after the DTC is detected is displayed.</p> <ul style="list-style-type: none"> • When "0" is displayed : It indicates that the system is presently malfunctioning. • When except "0" is displayed : It indicates that system malfunction in the past is detected, but the system is presently normal. <p>NOTE: Each time when ignition switch is turned OFF to ON, numerical number increases in 1→2→3...38→39. When the operation number of times exceeds 39, the number do not increase and "39" is displayed until self-diagnosis is erased.</p>

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor item (Unit)	Remarks
STOP LAMP SW [On/Off]	Stop lamp switch signal status via CAN communication line is displayed.
ENG SPEED SIG [Run/Stop]	Engine status is displayed.
ETS ACTUATOR [On/Off]	Operating condition of AWD actuator relay (integrated in AWD control unit) is displayed.
4WD WARN LAMP [On/Off]	Control status of AWD warning lamp is displayed.
4WD MODE SW [##]* ¹	Mode switch is not equipped, but displayed.
4WD MODE MON [AUTO]	Control status of AWD is displayed.
DIS-TIRE MONI [mm]	Improper size tire installed condition is displayed.
P BRAKE SW [On/Off]	Parking brake switch signal status via CAN communication line is displayed.
BATTERY VOLT [V]	Power supply voltage for AWD control unit

DIAGNOSIS SYSTEM (AWD CONTROL UNIT)

< SYSTEM DESCRIPTION >

[TRANSFER: ETX13C]

Monitor item (Unit)	Remarks
THRTL POS SEN [%]	Throttle opening status is displayed.
ETS SOLENOID [A]	Monitored value of current at AWD solenoid
FR RH SENSOR [km/h] or [mph]	Wheel speed calculated by front RH wheel sensor signal is displayed.
FR LH SENSOR [km/h] or [mph]	Wheel speed calculated by front LH wheel sensor signal is displayed.
RR RH SENSOR [km/h] or [mph]	Wheel speed calculated by rear RH wheel sensor signal is displayed.
RR LH SENSOR [km/h] or [mph]	Wheel speed calculated by rear LH wheel sensor signal is displayed.

*1: It is not setting, but it is displayed.

ACTIVE TEST

Use this mode to determine and identify the details of a malfunction based on self-diagnostic results or data monitor. AWD control unit gives drive signal to actuator with receiving command from CONSULT to check operation of actuator.

Test item	Condition	Description
ETS S/V (Detects AWD solenoid)	<ul style="list-style-type: none"> • Vehicle stopped • Engine running • No DTC detected 	<p>Change command current value to AWD solenoid, and then change driving mode. (Monitor value is normal if it is within approx. $\pm 10\%$ of command value.)</p> <ul style="list-style-type: none"> • Qu: Increase current value in increments of 0.2 A • Qd: Decrease current value in increments of 0.2 A • UP: Increase current value in increments of 0.02 A • DOWN: Decrease current value in increments of 0.02 A

CAUTION:

Never energize continuously for a long time.

< ECU DIAGNOSIS INFORMATION >

ECU DIAGNOSIS INFORMATION

AWD CONTROL UNIT

Reference Value

INFOID:0000000008285502

VALUES ON THE DIAGNOSIS TOOL

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor item	Condition	Value/Status	DLN
STOP LAMP SW	Brake pedal: Depressed	On	E
	Brake pedal: Released	Off	
ENG SPEED SIG	Engine stopped (Engine speed: Less than 400 rpm)	Stop	F
	Engine running (Engine speed: 400 rpm or more)	Run	
ETS ACTUATOR	Engine stopped (Ignition switch: ON)	Off	G
	Engine running	On	
4WD WARN LAMP	AWD warning lamp: ON	On	H
	AWD warning lamp: OFF	Off	
4WD MODE SW ^{*1}	Always	##	
4WD MODE MON	Engine running	AUTO	
DIS-TIRE MONI	Vehicle running with normal size tire installed	0 – 4 mm	I
	Vehicle running with improper size tire installed (Front/rear tire size difference, wear condition)	4 – 8 mm, 8 – mm	
P BRAKE SW	Parking brake operated	On	J
	Parking brake not operated	Off	
BATTERY VOLT	Always	Battery voltage	K
THRTL POS SEN	When depressing accelerator pedal (Value rises gradually in response to throttle position.)	0 – 100%	L
ETS SOLENOID	Engine running • At idle speed	Approx. 0.000 A	M
	Engine running • 3,000 rpm or more constant	Approx. 0.000 – 0.500 A ^{*2}	
FR RH SENSOR	Vehicle stopped	0.00 km/h (0.00 mph)	N
	Vehicle running CAUTION: Check air pressure of tire under standard condition.	Approx. equal to the indication on speedometer (Inside of ±10%)	
FR LH SENSOR	Vehicle stopped	0.00 km/h (0.00 mph)	O
	Vehicle running CAUTION: Check air pressure of tire under standard condition.	Approx. equal to the indication on speedometer (Inside of ±10%)	
RR RH SENSOR	Vehicle stopped	0.00 km/h (0.00 mph)	P
	Vehicle running CAUTION: Check air pressure of tire under standard condition.	Approx. equal to the indication on speedometer (Inside of ±10%)	
RR LH SENSOR	Vehicle stopped	0.00 km/h (0.00 mph)	P
	Vehicle running CAUTION: Check air pressure of tire under standard condition.	Approx. equal to the indication on speedometer (Inside of ±10%)	

AWD CONTROL UNIT


< ECU DIAGNOSIS INFORMATION >

[TRANSFER: ETX13C]

*1: It is not setting, but it is displayed.

*2: The values are changed by throttle opening and engine speed.

TERMINAL LAYOUT

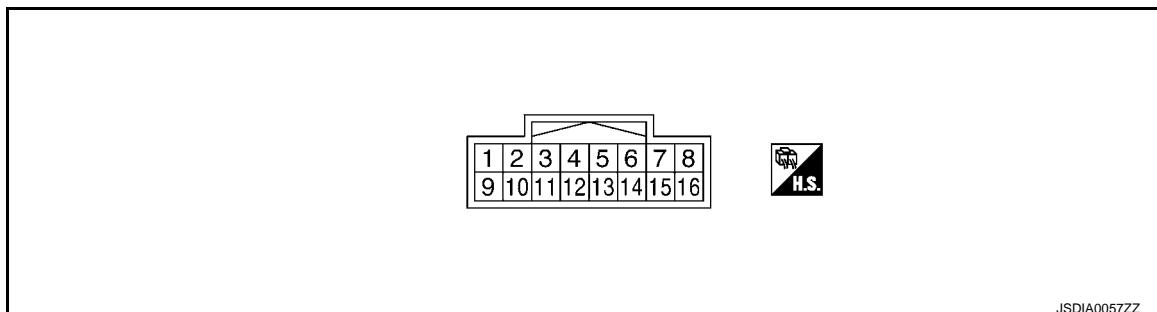

JSDIA0057ZZ

PHYSICAL VALUES

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
1 (BR)	Ground	AWD solenoid power supply	Output	Engine speed: At idle	0 V
				Engine speed: 3,000 rpm or more constant	2.5 V*
2 (Y)	Ground	AWD solenoid ground	Input	Engine speed: At idle	0 V
				Engine speed: 3,000 rpm or more constant	0 V
3 (W)	Ground	Transfer fluid temperature sensor ground	Input	Always	
7 (G)	Ground	Ignition switch	Input	Ignition switch: ON	Battery voltage
				Ignition switch: OFF	0 V
8 (L)	—	CAN-H	Input/ Output	—	
9 (O)	Ground	Power supply (AWD solenoid)	Input	Always	
10 (B)	Ground	Ground	—	Always	
11 (GR)	Ground	Ground	—	Always	
13 (LG)	Ground	Transfer fluid temperature sensor power supply	Output	Transfer temperature: 20°C (68°F)	1.56 V
				Transfer temperature: 80°C (176°F)	0.44 V
15 (Y)	Ground	Power supply (AWD control unit)	Input	Always	
16 (P)	—	CAN-L	Input/ Output	—	

*: The values are changed by throttle opening and engine speed.

CAUTION:

When using circuit tester to measure voltage for inspection, be sure not to extend forcibly any connector terminals.

Fail-safe

INFOID:0000000008285503

- If any malfunction occurs in AWD electrical system, and control unit detects the malfunction, AWD warning lamp on combination meter turns ON to indicate system malfunction.
- When AWD warning lamp is ON, vehicle changes to rear-wheel drive or shifts to 4-wheel drive (front-wheels still have some driving torque)

AWD CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

[TRANSFER: ETX13C]

Protection Function

INFOID:000000008285504

AWD system activates its protection function (shuts down AWD system temporarily) if AWD system detects high load continuously or the front wheel tire size differs from the rear tire size. (AWD system is automatically restored if AWD system no longer detects any overload or the tire size difference is eliminated.)

DTC	Warning lamp	Error area and root cause	Contents of protection function
—	Blinking ^{*1}	Transfer assembly in protection mode. It is not malfunction. (Internal temperature rise of electronic controlled coupling)	Shuts down AWD system temporarily
—	Blinking ^{*2}	Malfunction in each tire or different tire diameter	

*1: Quick blinking: 2 times/second (blinking for approximately 1 minute and then turned OFF)

*2: Slow blinking: 1 time/2 seconds (continuing to blink until ignition switch is turned OFF)

NOTE:

- If the warning lamp blinks slowly during driving but remains OFF after the engine is restarted, the system is normal. If it again blinks slowly after driving for some time, vehicle must be inspected.
- When there is a difference of revolution speed between the front and rear wheel the shift occasionally changes to direct 4-wheel driving conditions automatically. This is not a malfunction.

DTC Inspection Priority Chart

INFOID:000000008285505

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	Detected items (DTC)
1	<ul style="list-style-type: none">• U1000 CAN COMM CIRCUIT• U1010 CONTROL UNIT (CAN)
2	<ul style="list-style-type: none">• C1201 CONTROLLER FAILURE• C1205 4WD ACTUATOR RLY• P1804 CONTROL UNIT 3• P1809 CONTROL UNIT 4
3	<ul style="list-style-type: none">• C1203 ABS SYSTEM• C1210 ENGINE SIGNAL 1
4	<ul style="list-style-type: none">• C1204 4WD SOLENOID• P1826 OIL TEMP SEN

DTC Index

INFOID:000000008285506

DTC	Display Items	Reference
C1201	CONTROLLER FAILURE	DLN-31, "DTC Logic"
C1203	ABS SYSTEM	DLN-32, "DTC Logic"
C1204	4WD SOLENOID	DLN-33, "DTC Logic"
C1205	4WD ACTUATOR RLY	DLN-36, "DTC Logic"
C1210	ENGINE SIGNAL 1	DLN-38, "DTC Logic"
P1804	CONTROL UNIT 3	DLN-39, "DTC Logic"
P1809	CONTROL UNIT 4	DLN-40, "DTC Logic"
P1826	OIL TEMP SEN	DLN-41, "DTC Logic"
U1000	CAN COMM CIRCUIT	DLN-44, "DTC Logic"
U1010	CONTROL UNIT (CAN)	DLN-45, "DTC Logic"

NOTE:

If some DTCs are displayed at the same time, refer to [DLN-21, "DTC Inspection Priority Chart"](#).


WIRING DIAGRAM

AWD SYSTEM

Wiring Diagram

INFOID:000000008285507

 : Refer to 'Connector Information' in "HOW TO READ WIRING DIAGRAMS" in "CENTRAL INFORMATION"

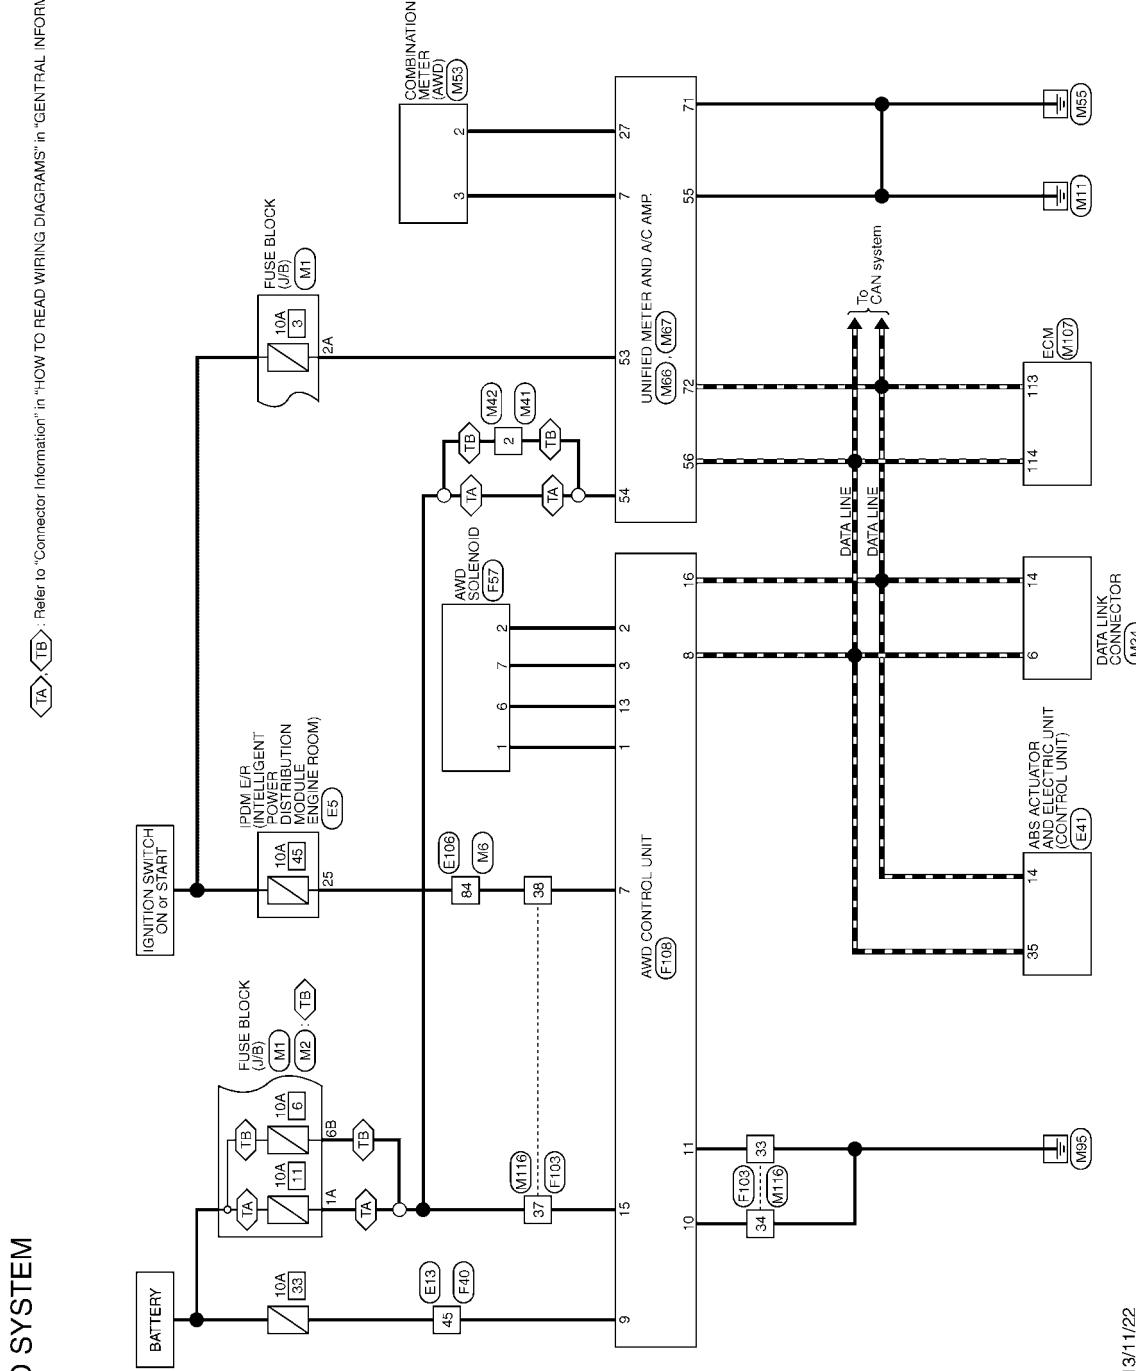

2013/11/22

JRDWG2202GF

AWD SYSTEM

< WIRING DIAGRAM >

 
[TRANSFER: ETX13C]

AWD SYSTEM

Connector No. E5

Connector Name ENGINE ROOM

Connector Type TH90FW-CS15-M4-IV



Terminal Color Of Wire

Signal Name (Specification)

4	V	-
5	L	-
7	R	-
12	BW	-
13	Y	-
16	LG	-
19	BG	-
20	B	-
21	S3	-
22	W	-
23	L	-
24	G	-
25	LG	-
27	GR	-
28	V	-
29	P	-
30	R	-
31	BR	-
32	Y	-
33	G	-
34	BG	-
37	SHIELD	-
38	L	-
39	P	-
40	R	-
41	W	-
42	LG	-
43	G	-
45	BG	-
46	SHIELD	-
47	W	-
48	BR	-
49	G	-
50	B	-
51	S3	-
52	R	-

Connector No. E106

Connector Name WIRE TO WIRE

Connector Type TH90FW-CS16-TH4



Terminal Color Of Wire

Signal Name (Specification)

1	B	GROUND
2	G	DEMR
3	R	UBVR
4	B	GROUND
5	Y	DS TL
6	BG	DP BI
7	BR	DP BR
9	B	DP IR
10	W	DS IR
12	L	VAC
14	P	CANL
15	SHIELD	GROUND
19	P	UST
25	Y	BUS-L
26	LG	DP FL
27	GR	DS RL
28	G	UZ
29	LG	DS RR
30	S3	BLS
31	R	VDC OFF SW
35	L	CANH
45	B	BUS-H

Terminal Color Of Wire

Signal Name (Specification)

1	Y	-
2	SHIELD	-
3	LB	-
4	SHIELD	-
5	BR	-
7	G	-

A

B

DLN

M

G

I

K

M

Z

O

P

JRDWC2246GB

AWD SYSTEM

< WIRING DIAGRAM >

[TRANSFER: ETX13C]

AWD SYSTEM		Signal Name [Specification]	
42	G	-	-
43	BR	-	-
45	W	SHIELD	-
49	L	-	-
50	P	-	-
51	L	-	-
54	BG	-	-
57	BR	-	-
59	W	WIRE TO WIRE	-
60	LG	-	-
61	G	SA436EER-SB-S4223	-
62	SB	-	-
63	W	-	-
64	B	-	-
65	G	-	-
66	R	-	-
67	SHIELD	-	-
68	Y	-	-
69	LG	-	-
70	W	-	-
71	R	-	-
72	Y	-	-
73	B	-	-
74	BR	- (With CC)	-
74	L	- (Without CC)	-
75	G	- (With CC)	-
75	W	- (Without CC)	-
76	W	- (With CC)	-
76	Y	- (Without CC)	-
77	P	- (Without CC)	-
77	R	- (With CC)	-
78	BR	- (Without CC)	-
78	L	- (With CC)	-
79	Y	- (Without CC)	-
79	SB	- (With CC)	-
81	R	-	-
82	SB	-	-
83	BG	-	-
84	G	-	-
85	L	-	-
86	P	-	-
87	Y	-	-
89	GR	-	-
90	SHIELD	-	-
91	W	-	-
92	Y	-	-
93	V	-	-
94	LG	-	-
95	BG	-	-

AWD SYSTEM		Signal Name [Specification]	
96	P	-	-
97	R	-	-
98	SHIELD	-	-
99	L	-	-
100	P	-	-

AWD SYSTEM		Signal Name [Specification]	
33	SB	-	-
34	O	-	-
37	SHIELD	-	-
38	W	-	-
39	Y	-	-
40	G	-	-
41	B	-	-
42	GR	-	-
43	R	-	-
45	O	-	-
46	SHIELD	-	-
47	W/L	-	-
48	LG	-	-
49	On	-	-
50	LY	-	-
51	W	-	-
52	UG	-	-

AWD SYSTEM		Signal Name [Specification]	
1	LY	-	-
2	SHIELD	-	-
3	LB	-	-
4	SHIELD	-	-
5	BR	-	-
7	G	-	-
8	W	-	-
9	W	-	-
10	G	-	-
11	R	-	-
12	P	-	-
13	L	-	-
14	LG	-	-
15	BR	-	-
16	Y	-	-
18	LG	-	-
19	P	-	-
20	O	-	-
21	Y	-	-
22	G	-	-
23	Y	-	-
24	LG	-	-
25	V	-	-
27	GR	-	-
28	BR	-	-
29	L	-	-
30	R	-	-
31	P	-	-
32	W	-	-

JRDWC2247GB

AWD SYSTEM

< WIRING DIAGRAM >

[TRANSFER: ETX13C]

A

B

C

DLN

M

T

G

I

X

Z

O

P

AWD SYSTEM

Connector No. F108

Connector Name AWD CONTROL UNIT

Connector Type THGFWW-NH



Terminal Color Of Wire		Signal Name [Specification]	Signal Name [Specification]
1	BR	AWD SOL (+)	P
2	Y	AWD SOL (-)	G
3	W	FLUID TEMP (-)	BG
7	G	IGN	Y
8	L	CANH	7B
9	O	AWD SOL BAT	R
10	B	GROUND	SB
11	GR	GROUND	-
13	LG	FLUID TEMP (+)	-
15	Y	BATTERY POWER SUPPLY	-
16	P	CANL	-

Connector No. M1

Connector Name FUSE BLOCK (J6)

Connector Type NSH6FWW-M2



16	V	-	77	P	- (Without ICC)
17	SB	-	77	R	- (With ICC)
18	V	-	78	L	- (With ICC)
20	BG	-	78	R	- (Without ICC)
21	L	-	79	W	- (Without ICC)
22	W	-	79	Y	- (With ICC)
23	P	-	80	SB	-
24	BR	-	81	SB	-
25	Y	-	82	SB	-
26	V	-	83	V	-
27	G	-	84	G	-
28	G	-	85	L	-
31	L	-	86	P	-
32	G	-	87	W	-
33	B	-	89	GR	-
34	W	-	90	SHIELD	-
35	R	-	91	W	-
36	SHIELD	-	92	Y	-
37	V	-	93	BR	-
38	BG	-	94	P	-
39	BR	-	95	GR	-
41	W	-	96	W	-
42	BG	-	97	L	-
43	BG	-	98	SHIELD	-
45	W	-	99	V	-
49	L	-	100	SB	-


Terminal Color Of Wire		Signal Name [Specification]	Signal Name [Specification]	Connector No.	Connector Name	Connector Type
3B	P	-	-	M24	DATA LINK CONNECTOR	BD16FW
54	Y	-	-	HS.	-	-
57	G	-	-	HS.	-	-
59	W	-	-	HS.	-	-
60	L	-	-	HS.	-	-
61	G	-	-	HS.	-	-
62	SB	-	-	HS.	-	-
63	G	-	-	HS.	-	-
64	B	-	-	HS.	-	-
65	W	-	-	HS.	-	-
66	R	-	-	HS.	-	-
67	SHIELD	-	-	HS.	-	-
68	Y	-	-	HS.	-	-
69	GR	-	-	HS.	-	-
70	LG	-	-	HS.	-	-
71	LG	-	-	HS.	-	-
72	Y	-	-	HS.	-	-
73	SB	-	-	HS.	-	-
74	BR	-	-	HS.	-	-
74	L	-	-	HS.	-	-
75	G	-	-	HS.	-	-
76	GR	-	-	HS.	-	-
76	W	-	-	HS.	-	-
77	P	-	-	HS.	-	-

JRDWC2248GB

AWD SYSTEM

[TRANSFER: ETX13C]

< WIRING DIAGRAM >

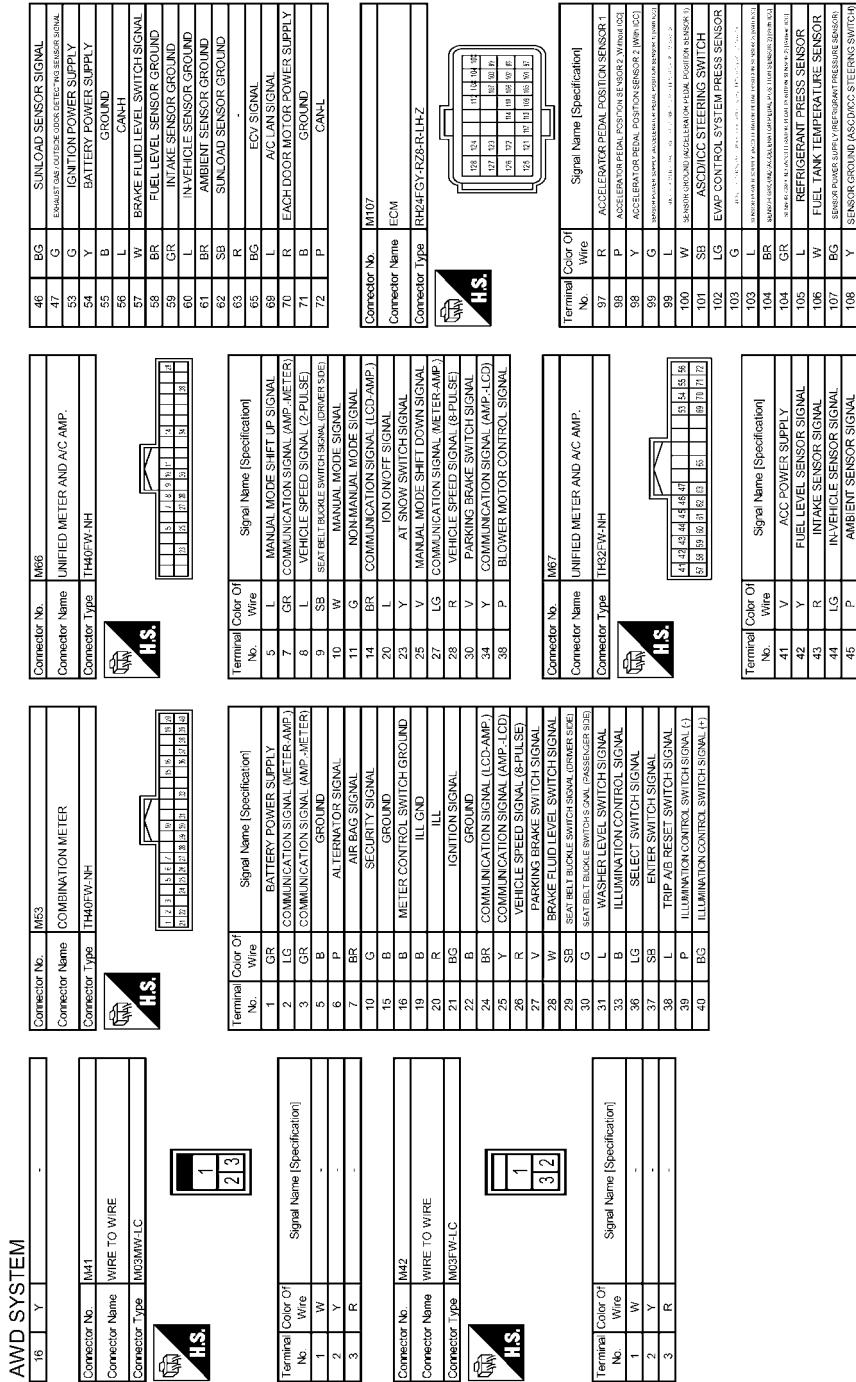

JRDWC2249GB

AWD SYSTEM

< WIRING DIAGRAM >

[TRANSFER: ETX13C]

A

B

C

DLN

E

F

G

H

I

J

K

 
L

M

N

O

P



AWD SYSTEM	
109	G
110	R
112	V
113	P
114	L
117	V
121	LG
122	P
123	B
124	B
125	R
126	BR
127	B
128	B

FNP signal

ENGINE SPEED OUTPUT SIGNAL

CAN COMMUNICATION LINE

CAN COMMUNICATION LINE

DATA LINK CONNECTOR

EVAP CANISTER VENT CONTROL VALVE

STOP LAMP SWITCH

ECM GROUND

ECM GROUND

POWER SUPPLY FOR ECM

ASD/CC BRAKE SWITCH

ECM GROUND

ECM GROUND

Connector No.	M116
Connector Name	WIRE TO WIRE
Connector Type	TK36MWNS10



Terminal No.	Color Of Wire	Signal Name [Specification]
2	P	-
3	L	-
4	R	-
5	B	-
9	R	-
10	R	-
19	BG	-
20	Y	-
28	B	-
29	LG	-
31	W	-
33	B	-
34	B	-
35	L	-
36	P	-
37	Y	-
38	G	-
43	P	-
44	L	-
45	BR	-

JRDWC2250GB

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:0000000008285508

DETAILED FLOW

1. INTERVIEW FROM THE CUSTOMER

Clarify customer complaints before inspection. First of all, perform an interview utilizing [DLN-29, "Diagnostic Work Sheet"](#) and reproduce symptoms as well as fully understand it. Ask customer about his/her complaints carefully. Check symptoms by driving vehicle with customer, if necessary.

CAUTION:

Customers are not professional. Never guess easily like "maybe the customer means that...," or "maybe the customer mentions this symptom".

>> GO TO 2.

2. CHECK SYMPTOM

Reproduce the symptom that is indicated by the customer, based on the information from the customer obtained by interview. Also check that the symptom is not caused by protection function. Refer to [DLN-21, "Protection Function"](#).

CAUTION:

When the symptom is caused by normal operation, fully inspect each portion and obtain the understanding of customer that the symptom is not caused by a malfunction.

>> GO TO 3.

3. PERFORM SELF-DIAGNOSIS

 **With CONSULT**

Perform self-diagnosis for "ALL MODE AWD/4WD".

Is any DTC detected?

YES >> Record or print self-diagnosis results. GO TO 4.

NO >> GO TO 6.

4. RECHECK SYMPTOM

 **With CONSULT**

1. Erase self-diagnostic results for "ALL MODE AWD/4WD".

2. Perform DTC confirmation procedures for the error detected system.

NOTE:

If some DTCs are detected at the same time, determine the order for performing the diagnosis based on [DLN-21, "DTC Inspection Priority Chart"](#).

Is any DTC detected?

YES >> GO TO 5.

NO >> Check harness and connectors based on the information obtained by interview. Refer to [GI-42, "Intermittent Incident"](#).

5. REPAIR OR REPLACE ERROR-DETECTED PARTS

- Repair or replace error-detected parts.
- Reconnect part or connector after repairing or replacing.
- When DTC is detected, erase self-diagnostic results for "ALL MODE AWD/4WD".

>> GO TO 7.

6. IDENTIFY ERROR-DETECTED SYSTEM BY SYMPTOM DIAGNOSIS

Estimate error-detected system based on symptom diagnosis and perform inspection.

Can the error-detected system be identified?

DIAGNOSIS AND REPAIR WORK FLOW

[TRANSFER: ETX13C]

< BASIC INSPECTION >

YES >> GO TO 7.

NO >> Check harness and connectors based on the information obtained by interview. Refer to [GI-42](#), ["Intermittent Incident"](#).

7. FINAL CHECK

With CONSULT

1. Check the reference value for AWD control unit.
2. Recheck the symptom and check that symptom is not reproduced on the same conditions.

Is the symptom reproduced?

YES >> GO TO 3.

NO >> INSPECTION END

Diagnostic Work Sheet

INFOID:000000008285509

DLN

Description

- In general, customers have their own criteria for a problem. Therefore, it is important to understand the symptom and status well enough by asking the customer about his/her concerns carefully. To systemize all the information for the diagnosis, prepare the interview sheet referring to the interview points.
- In some cases, multiple conditions that appear simultaneously may cause a DTC to be detected.

Interview sheet sample

Interview sheet						
Customer name	MR/MS	Registration number		Initial year registration		
		Vehicle type		VIN		
Storage date		Engine		Mileage	km (Mile)	
Symptom	<input type="checkbox"/> Vehicle does not enter AWD mode.					
	<input type="checkbox"/> AWD warning lamp turns on.					
	<input type="checkbox"/> Heavy tight-corner braking symptom occurs					
	<input type="checkbox"/> Noise <input type="checkbox"/> Vibration					
	<input type="checkbox"/> Others ()					
First occurrence	<input type="checkbox"/> Recently <input type="checkbox"/> Others ()					
Frequency of occurrence	<input type="checkbox"/> Always <input type="checkbox"/> Under a certain conditions of <input type="checkbox"/> Sometimes (time(s)/day)					
Climate conditions	<input type="checkbox"/> Irrelevant					
	Weather	<input type="checkbox"/> Fine	<input type="checkbox"/> Cloud	<input type="checkbox"/> Rain	<input type="checkbox"/> Snow	<input type="checkbox"/> Others ()
	Temperature	<input type="checkbox"/> Hot	<input type="checkbox"/> Warm	<input type="checkbox"/> Cool	<input type="checkbox"/> Cold	<input type="checkbox"/> Temperature (Approx. °C)
Relative humidity	<input type="checkbox"/> High	<input type="checkbox"/> Moderate	<input type="checkbox"/> Low			
Road conditions	<input type="checkbox"/> Urban area <input type="checkbox"/> Suburb area <input type="checkbox"/> High way <input type="checkbox"/> Mounting road (uphill or down hill) <input type="checkbox"/> Rough road					
Operation conditions, etc.	<input type="checkbox"/> Irrelevant <input type="checkbox"/> When engine starts <input type="checkbox"/> During idling <input type="checkbox"/> During driving <input type="checkbox"/> During acceleration <input type="checkbox"/> At constant speed driving <input type="checkbox"/> During deceleration <input type="checkbox"/> During cornering (right curve or left curve)					

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[TRANSFER: ETX13C]

Interview sheet

Customer name	MR/MS	Registration number		Initial year registration	
		Vehicle type		VIN	
Storage date		Engine		Mileage	km (Mile)
Other conditions					

Memo

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

C1201 AWD CONTROL UNIT

DTC Logic

INFOID:000000008285510

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1201	CONTROLLER FAILURE	Malfunction has occurred inside AWD control unit.	Internal malfunction of AWD control unit

DLN

DTC CONFIRMATION PROCEDURE

1. DTC REPRODUCTION PROCEDURE

With CONSULT

1. Turn the ignition switch OFF to ON.
2. Perform self-diagnosis for "ALL MODE AWD/4WD".

Is DTC "C1201" detected?

YES >> Proceed to diagnosis procedure. Refer to [DLN-31, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000008285511

1. PERFORM SELF-DIAGNOSIS

With CONSULT

1. Erase self-diagnostic results for "ALL MODE AWD/4WD".
2. Turn the ignition switch OFF, and then wait 10 seconds or more.
3. Perform self-diagnosis for "ALL MODE AWD/4WD".

Is DTC "C1201" detected?

YES >> Replace AWD control unit. Refer to [DLN-58, "Removal and Installation"](#).
 NO >> Check AWD control unit pin terminals for damage or loose connection with harness connector. If any items are damaged, repair or replace error-detected parts.

C1203 ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< DTC/CIRCUIT DIAGNOSIS >

[TRANSFER: ETX13C]

C1203 ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

DTC Logic

INFOID:0000000008285512

DTC DETECTION LOGIC

DTC	Display items	Malfunction detected condition	Possible cause
C1203	ABS SYSTEM	Malfunction related to wheel sensor has been detected by ABS actuator and electric unit (control unit).	ABS malfunction • Vehicle speed signal error

DTC CONFIRMATION PROCEDURE

1. DTC REPRODUCTION PROCEDURE

With CONSULT

1. Start the engine and drive at 30 km/h (19 MPH) or more for approximately 1 minute.
2. Perform self-diagnosis for "ALL MODE AWD/4WD".

Is DTC "C1203" detected?

YES >> Proceed to diagnosis procedure. Refer to [DLN-32, "Diagnosis Procedure"](#).

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008285513

1. PERFORM ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF-DIAGNOSIS

With CONSULT

Perform self-diagnosis for "ABS".

Is any DTC detected?

YES >> Check the DTC. Refer to [BRC-117, "DTC No. Index"](#).

NO >> GO TO 2.

2. ERASE SELF-DIAGNOSTIC RESULT

With CONSULT

1. Erase self-diagnostic results for "ALL MODE AWD/4WD".
2. Start the engine and drive vehicle at 30 km/h (19 MPH) or more for approximately 1 minute.
3. Check that ABS warning lamp turns OFF.
4. Perform self-diagnosis for "ALL MODE AWD/4WD".

Does ABS warning lamp turn OFF?

YES >> GO TO 3.

NO >> Perform trouble diagnosis for ABS warning lamp system. Refer to [BRC-102, "Component Function Check"](#).

3. CHECK TERMINALS AND HARNESS CONNECTORS

Check AWD control unit pin terminals for damage or loose connection with harness connector.

Is inspection result normal?

YES >> After turning the ignition switch OFF, perform DTC confirmation procedure again. When DTC "C1203" is detected, Replace AWD control unit. Refer to [DLN-58, "Removal and Installation"](#).

NO >> Repair or replace error-detected parts.

< DTC/CIRCUIT DIAGNOSIS >

C1204 AWD SOLENOID**DTC Logic**

INFOID:0000000008285514

DTC DETECTION LOGIC

DTC	Display items	Malfunction detected condition	Possible cause
C1204	4WD SOLENOID	Malfunction related to AWD solenoid has been detected.	<ul style="list-style-type: none"> Internal malfunction of electronic controlled coupling Malfunction of AWD solenoid power supply circuit (open or short) Malfunction of AWD solenoid command current

A

B

C

DLN

E

F

G

H

I

J

K

L

M

N

O

P

DTC CONFIRMATION PROCEDURE**1.DTC REPRODUCTION PROCEDURE****With CONSULT**

- Turn the ignition switch OFF to ON.
- Perform self-diagnosis for "ALL MODE AWD/4WD".

Is DTC "C1204" detected?YES >> Proceed to diagnosis procedure. Refer to [DLN-33, "Diagnosis Procedure"](#).

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008285515

1.CHECK AWD SOLENOID POWER SUPPLY (1)

- Turn the ignition switch OFF.
- Disconnect AWD control unit harness connector.
- Check the voltage between AWD control unit harness connector and ground.

AWD control unit		—	Voltage
Connector	Terminal		
F108	9	Ground	Battery voltage

- Turn the ignition switch OFF.

CAUTION:**Never start the engine.**

- Check the voltage between AWD control unit harness connector and ground.

AWD control unit		—	Voltage
Connector	Terminal		
F108	9	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK AWD SOLENOID POWER SUPPLY (2)

- Turn the ignition switch OFF.
- Check the 10A fuse (#33)
- Check the harness for open or short between AWD control unit harness connector No.9 terminal and 10A (#33).

Is the inspection result normal?YES >> Perform the trouble diagnosis for power supply circuit. Refer to [PG-6, "Wiring Diagram - BATTERY POWER SUPPLY -"](#).

NO >> Repair or replace error-detected parts.

< DTC/CIRCUIT DIAGNOSIS >

3. CHECK AWD CONTROL UNIT GROUND

Check the continuity between AWD control unit harness connector and ground.

AWD control unit		—	Continuity
Connector	Terminal		
F108	10	Ground	Existed
	11		

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace error-detected parts.

4. CHECK AWD SOLENOID CIRCUIT (1)

Check the resistance between AWD control unit terminals.

AWD control unit		Resistance (Approx.)	
Terminal	Terminal		
F108	1	2	2.45 Ω

Is the inspection result normal?

YES >> GO TO 7.

NO >> GO TO 5.

5. CHECK AWD SOLENOID CIRCUIT (2)

1. Disconnect AWD solenoid harness connector.

2. Check the continuity between AWD control unit harness connector and AWD solenoid harness connector.

AWD control unit		AWD solenoid		Continuity
Connector	Terminal	Connector	Terminal	
F108	1	F57	1	Existed
	2		2	

3. Check the continuity between AWD control unit harness connector and the ground.

AWD control unit		—	Continuity
Connector	Terminal		
F108	1	Ground	Not existed
	2		

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace error-detected parts.

6. CHECK AWD SOLENOIDCheck AWD solenoid. Refer to [DLN-35, "Component Inspection"](#).Is the inspection result normal?

YES >> GO TO 7.

NO >> AWD solenoid is malfunctioning. Replace electric controlled coupling. Refer to [DLN-75, "Exploded View"](#).**7. CHECK TERMINALS AND HARNESS CONNECTORS**

- Check AWD control unit pin terminals for damage or loose connection with harness connector.
- Check AWD solenoid pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?YES >> Replace AWD control unit. Refer to [DLN-58, "Removal and Installation"](#).

< DTC/CIRCUIT DIAGNOSIS >

NO >> Repair or replace error-detected parts.

Component Inspection

INFOID:000000008285516

A

B

C

DLN

E

F

G

H

I

J

K

L

M

N

O

P

1. CHECK AWD SOLENOID

1. Turn the ignition switch OFF.
2. Disconnect AWD solenoid harness connector.
3. Check the resistance between AWD solenoid connector terminals.

AWD solenoid Terminal	Resistance (Approx.)	
1	2	2.45 Ω

Is the inspection result normal?

YES >> INSPECTION END

NO >> AWD solenoid is malfunctioning. Replace electric controlled coupling. Refer to [DLN-75, "Exploded View"](#).

C1205 AWD ACTUATOR RELAY

DTC Logic

INFOID:0000000008285517

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1205	4WD ACTUATOR RLY	Malfunction has been detected from AWD actuator relay integrated with AWD control unit, or malfunction related to AWD solenoid has been detected.	<ul style="list-style-type: none"> Internal malfunction of AWD control unit Malfunction of AWD solenoid power supply circuit (open or short)

DTC CONFIRMATION PROCEDURE

1. DTC REPRODUCTION PROCEDURE

With CONSULT

- Turn the ignition switch OFF to ON.
- Perform self-diagnosis for "ALL MODE AWD/4WD".

Is DTC "C1205" detected?

YES >> Proceed to diagnosis procedure. Refer to [DLN-36, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008285518

1. CHECK AWD SOLENOID CIRCUIT (1)

- Turn the ignition switch OFF.
- Disconnect AWD control unit harness connector.
- Check the continuity between AWD control unit harness connector and the ground.

AWD control unit		—	Continuity
Connector	Terminal		
F108	1	Ground	Not existed
	2		

Is the inspection result normal?

YES >> GO TO 2.
 NO >> GO TO 3.

2. CHECK TERMINALS AND HARNESS CONNECTORS

- Check AWD control unit pin terminals for damage or loose connection with harness connector.
- Check AWD solenoid pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> After connecting each harness connector, perform DTC confirmation procedure again. When DTC "C1205" is detected, replace AWD control unit. Refer to [DLN-58, "Removal and Installation"](#).
 NO >> Repair or replace damaged parts.

3. CHECK AWD SOLENOID

- Disconnect AWD solenoid harness connector.
- Check the continuity between AWD solenoid harness connector and the ground.

AWD solenoid		—	Continuity
Terminal			
1	Ground		Not existed

Is the inspection result normal?

C1205 AWD ACTUATOR RELAY

< DTC/CIRCUIT DIAGNOSIS >

[TRANSFER: ETX13C]

YES >> GO TO 4.

NO >> Replace electric controlled coupling. Refer to [DLN-75, "Exploded View"](#).

A

4. CHECK AWD SOLENOID CIRCUIT

Check the continuity between AWD control unit harness connector and the ground.

B

AWD control unit		—	Continuity
Connector	Terminal		
F108	1	Ground	Not existed
	2		

C

Is the inspection result normal?

DLN

YES >> GO TO 5.

NO >> Repair or replace damaged parts.

E

5. CHECK TERMINALS AND HARNESS CONNECTORS

F

1. Check AWD control unit pin terminals for damage or loose connection with harness connector.
2. Check AWD solenoid pin terminals for damage or loose connection with harness connector.

G

Is the inspection result normal?

H

YES >> After connecting each harness connector, perform DTC confirmation procedure again. When DTC "C1205" is detected, GO TO 1.

NO >> Repair or replace damaged parts.

I

J

K

L

M

N

O

P

< DTC/CIRCUIT DIAGNOSIS >

C1210 ECM

DTC Logic

INFOID:0000000008285519

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1210	ENGINE SIGNAL 1	Malfunction related to engine signal has been detected.	Malfunction of engine control system

DTC CONFIRMATION PROCEDURE

1. DTC REPRODUCTION PROCEDURE

With CONSULT

1. Start the engine. Drive the vehicle for a while.
2. Perform self-diagnosis for "ALL MODE AWD/4WD".

Is DTC "C1210" detected?

YES >> Proceed to diagnosis procedure. Refer to [DLN-38, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008285520

1. PERFORM ECM SELF-DIAGNOSIS

With CONSULT

Perform self-diagnosis for "ENGINE".

Is any DTC detected?

YES >> Check the DTC. Refer to [EC-578, "DTC Index"](#).
 NO >> GO TO 2.

2. CHECK TERMINALS AND HARNESS CONNECTORS

Check AWD control unit pin terminals for damage or loose connection with harness connector.

Is inspection result normal?

YES >> After turning the ignition switch OFF, perform DTC confirmation procedure again. When DTC "C1210" is detected, Replace AWD control unit. Refer to [DLN-58, "Removal and Installation"](#).
 NO >> Repair or replace error-detected parts.

P1804 TRANSFER CONTROL UNIT

DTC Logic

INFOID:0000000008285521

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
P1804	CONTROL UNIT 3	Malfunction has occurred inside AWD control unit.	Malfunction is detected in the memory (EEPROM) system of transfer control unit.

DTC CONFIRMATION PROCEDURE

1. DTC REPRODUCTION PROCEDURE

 **With CONSULT**

1. Turn the ignition switch ON.
2. Perform self-diagnosis for "ALL MODE AWD/4WD".

Is DTC "P1804" detected?

YES >> Proceed to diagnosis procedure. Refer to [DLN-39, "Diagnosis Procedure"](#).

NO >> INSPECTION END.

Diagnosis Procedure

INFOID:0000000008285522

1. REPLACE AWD CONTROL UNIT

CAUTION:

Replace AWD control unit when DTC "P1804" is detected simultaneously with other items.

>> Replace AWD control unit. Refer [DLN-58, "Removal and Installation"](#).

P1809 TRANSFER CONTROL UNIT

DTC Logic

INFOID:0000000008285523

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
P1809	CONTROL UNIT 4	Malfunction has occurred inside AWD control unit.	AD converter system of transfer control unit is malfunctioning.

DTC CONFIRMATION PROCEDURE

1. DTC REPRODUCTION PROCEDURE

 **With CONSULT**

1. Turn the ignition switch ON.
2. Perform self-diagnosis for "ALL MODE AWD/4WD".

Is DTC "P1809" detected?

YES >> Proceed to diagnosis procedure. Refer to [DLN-40, "Diagnosis Procedure"](#).

NO >> INSPECTION END.

Diagnosis Procedure

INFOID:0000000008285524

1. REPLACE AWD CONTROL UNIT

CAUTION:

Replace AWD control unit when DTC "P1809" is detected simultaneously with other items.

>> Replace AWD control unit. Refer [DLN-58, "Removal and Installation"](#).

P1826 TRANSFER FLUID TEMPERATURE

DTC Logic

INFOID:0000000008285525

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
P1826	OIL TEMP SEN	Transfer fluid temperature sensor voltage condition is continued 0 V or more than 2.45 V for several seconds.	<ul style="list-style-type: none"> Malfunction of transfer fluid temperature sensor or transfer fluid temperature sensor circuit. Malfunction of AWD control unit.

DTC CONFIRMATION PROCEDURE

1.DTC REPRODUCTION PROCEDURE

With CONSULT

- Turn the ignition switch ON.
- Perform self-diagnosis for "ALL MODE AWD/4WD".

Is DTC "P1826" detected?

YES >> Proceed to diagnosis procedure. Refer to [DLN-41, "Diagnosis Procedure"](#).
 NO >> INSPECTION END.

Diagnosis Procedure

INFOID:0000000008285526

1.CHECK TRANSFER FLUID TEMPERATURE SENSOR SIGNAL (1)

- Turn the ignition switch OFF.
- Disconnect AWD solenoid harness connector.
- Turn the ignition switch ON.
- Check the voltage between AWD solenoid harness connector terminals.

AWD solenoid		Voltage (Approx.)	
Connector	Terminal		
F57	6	7	2.5 V

Is the inspection result normal?

YES >> GO TO 2.
 NO >> GO TO 3.

2.CHECK TRANSFER FLUID TEMPERATURE SENSOR

Check transfer fluid temperature sensor. Refer to [DLN-42, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 6.
 NO >> AWD solenoid is malfunctioning. Replace electric controlled coupling. Refer to [DLN-75, "Exploded View"](#).

3.CHECK TRANSFER FLUID TEMPERATURE SENSOR SIGNAL (2)

Check the voltage between AWD solenoid harness connector and ground.

AWD solenoid		—	Voltage (Approx.)
Connector	Terminal		
F57	6	Ground	2.5 V

Is the inspection result normal?

YES >> GO TO 4.
 NO >> GO TO 5.

4.CHECK AWD CONTROL UNIT GROUND

< DTC/CIRCUIT DIAGNOSIS >

1. Turn the ignition switch OFF.
2. Disconnect AWD control unit harness connector.
3. Check the continuity between AWD control unit harness connector and ground.

AWD control unit		—	Continuity
Connector	Terminal		
F108	10	Ground	Existed
	11		

Is the inspection result normal?

YES >> GO TO 5.
NO >> Repair or replace error-detected parts.

5.CHECK TRANSFER FLUID TEMPERATURE SENSOR CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect AWD control unit harness connector.
3. Check the continuity between AWD control unit harness connector and AWD solenoid harness connector.

AWD control unit		AWD solenoid		Continuity
Connector	Terminal	Connector	Terminal	
F108	13	F57	6	Existed
	3		7	

4. Check the continuity between AWD control unit harness connector and the ground.

AWD control unit		—	Continuity
Connector	Terminal		
F108	13	Ground	Not existed
	3		

Is the inspection result normal?

YES >> GO TO 2.
NO >> Repair or replace error-detected parts.

6.CHECK TERMINALS AND HARNESS CONNECTORS

- Check AWD control unit pin terminals for damage or loose connection with harness connector.
- Check transfer fluid temperature sensor pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> Replace AWD control unit. Refer to [DLN-58, "Removal and Installation"](#).
NO >> Repair or replace error-detected parts.

Component Inspection

INFOID:0000000008285527

1.CHECK TRANSFER FLUID TEMPERATURE SENSOR

1. Turn ignition switch OFF.
2. Disconnect AWD solenoid harness connector.
3. Check resistance between AWD solenoid connector terminals.

AWD solenoid		Condition	Resistance (Approx.)
Terminal			
6	7	20°C (68°F)	2.5 kΩ
		80°C (176°F)	0.3 kΩ

Is inspection result normal?

YES >> INSPECTION END

P1826 TRANSFER FLUID TEMPERATURE

< DTC/CIRCUIT DIAGNOSIS >

[TRANSFER: ETX13C]

NO >> Transfer fluid temperature sensor is malfunctioning. Replace electric controlled coupling. Refer to [DLN-75, "Exploded View"](#).

A

B

C

DLN

E

F

G

H

I

J

K

L

M

N

O

P

< DTC/CIRCUIT DIAGNOSIS >

U1000 CAN COMM CIRCUIT

Description

INFOID:0000000008285528

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit communicate data but selectively reads required data only.

DTC Logic

INFOID:0000000008285529

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
U1000	CAN COMM CIRCUIT	AWD control unit is not transmitting/receiving CAN communication signal for 2 seconds or more.	CAN communication error

DTC CONFIRMATION PROCEDURE

1. DTC REPRODUCTION PROCEDURE

With CONSULT

1. Turn the ignition switch OFF to ON.
2. Perform self-diagnosis for "ALL MODE AWD/4WD".

Is DTC "U1000" detected?

YES >> Proceed to diagnosis procedure. Refer to [DLN-44, "Diagnosis Procedure"](#).

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008285530

Proceed to [LAN-16, "Trouble Diagnosis Flow Chart"](#).

< DTC/CIRCUIT DIAGNOSIS >

U1010 CONTROL UNIT (CAN)

Description

INFOID:0000000008285531

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit communicate data but selectively reads required data only.

DTC Logic

INFOID:0000000008285532

DLN

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
U1010	CONTROL UNIT (CAN)	Detecting error during the initial diagnosis of CAN controller of AWD control unit.	Internal malfunction of AWD control unit

DTC CONFIRMATION PROCEDURE

1. DTC REPRODUCTION PROCEDURE

With CONSULT

1. Turn the ignition switch OFF to ON.
2. Perform self-diagnosis for "ALL MODE AWD/4WD".

Is DTC "U1010" detected?

YES >> Proceed to diagnosis procedure. Refer to [DLN-45, "Diagnosis Procedure"](#).

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008285533

1. CHECK AWD CONTROL UNIT

Check AWD control unit harness connector for disconnection and deformation.

Is the inspection result normal?

YES >> Replace AWD control unit. Refer to [DLN-58, "Removal and Installation"](#).

NO >> Repair or replace error-detected parts.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[TRANSFER: ETX13C]

POWER SUPPLY AND GROUND CIRCUIT

Diagnosis Procedure

INFOID:0000000008285534

1. CHECK AWD CONTROL UNIT POWER SUPPLY (1)

1. Turn the ignition switch OFF.
2. Disconnect AWD control unit harness connector.
3. Check the voltage between AWD control unit harness connector and ground.

AWD control unit		—	Voltage (Approx.)
Connector	Terminal		
F108	7	Ground	0 V

4. Turn the ignition switch ON.

CAUTION:

Never start the engine.

5. Check the voltage between AWD control unit harness connector and ground.

AWD control unit		—	Voltage
Connector	Terminal		
F108	7	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.
NO >> GO TO 2.

2. CHECK AWD CONTROL UNIT POWER SUPPLY (2)

1. Turn the ignition switch OFF.
2. Check the 10A fuse (#45).
3. Disconnect IPDM E/R harness connector.
4. Check the continuity between AWD control unit harness connector and IPDM E/R harness connector.

AWD control unit		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
F108	7	E5	25	Existed

5. Check the continuity between AWD control unit harness connector and the ground.

AWD control unit		—	Continuity
Connector	Terminal		
F108	7	Ground	Not existed

Is the inspection result normal?

YES >> Perform the trouble diagnosis for ignition power supply circuit. Refer to [PG-44, "Wiring Diagram - IGNITION POWER SUPPLY -"](#).
NO >> Repair or replace error-detected parts.

3. CHECK AWD CONTROL UNIT POWER SUPPLY (3)

1. Turn the ignition switch OFF.
2. Check the voltage between AWD control unit harness connector and ground.

AWD control unit		—	Voltage (Approx.)
Connector	Terminal		
F108	15	Ground	Battery voltage

3. Turn the ignition switch ON.

CAUTION:

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[TRANSFER: ETX13C]

Never start the engine.

- Check the voltage between AWD control unit harness connector and ground.

AWD control unit		—	Voltage
Connector	Terminal		
F108	15	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 4.

4. CHECK AWD CONTROL UNIT POWER SUPPLY (4)

- Turn the ignition switch OFF.
- Check the 10A fuse (#11^{*1} or #6^{*2}).

*1: Option abbreviation is TA.
 *2: Option abbreviation is TB.
 For details of the option abbreviations, refer to [GI-12, "Connector Information"](#).

- Disconnect fuse block (J/B) harness connector.
- Check the continuity between AWD control unit harness connector and fuse block (J/B).

AWD control unit		Fuse block (J/B)		Continuity
Connector	Terminal	Connector	Terminal	
F108	15	M1	1A ^{*1} or 6B ^{*2}	Existed

*1: Option abbreviation is TA.

*2: Option abbreviation is TB.

For details of the option abbreviations, refer to [GI-12, "Connector Information"](#).

- Check the continuity between AWD control unit harness connector and the ground.

AWD control unit		—	Continuity
Connector	Terminal		
F108	15	Ground	Not existed

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit. Refer to [PG-6, "Wiring Diagram - BATTERY POWER SUPPLY -"](#).

NO >> Repair or replace error-detected parts.

5. CHECK AWD SOLENOID POWER SUPPLY (1)

- Turn the ignition switch OFF.
- Check the voltage between AWD control unit harness connector and ground.

AWD control unit		—	Voltage
Connector	Terminal		
F108	9	Ground	Battery voltage

- Turn the ignition switch ON.

CAUTION:

Never start the engine.

- Check the voltage between AWD control unit harness connector and ground.

AWD control unit		—	Voltage
Connector	Terminal		
F108	9	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 7.

A

B

C

DLN

E

F

G

H

I

J

K

L

M

N

O

P

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[TRANSFER: ETX13C]

NO >> GO TO 6.

6. CHECK AWD SOLENOID POWER SUPPLY (2)

1. Turn the ignition switch OFF.
2. Check the 10A fuse (#33).
3. Check the harness for open or short between AWD control unit harness connector No.9 terminal and fuse box.

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit. Refer to [PG-6, "Wiring Diagram - BATTERY POWER SUPPLY -"](#).

NO >> Repair or replace error-detected parts.

7. CHECK AWD CONTROL UNIT GROUND

1. Turn the ignition switch OFF.
2. Check the continuity between AWD control unit harness connector and ground.

AWD control unit		—	Continuity
Connector	Terminal		
F108	10	Ground	Existed
	11		

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair or replace error-detected parts.

< DTC/CIRCUIT DIAGNOSIS >

AWD WARNING LAMP

Component Function Check

INFOID:0000000008285535

1. CHECK AWD WARNING LAMP FUNCTION

1. Turn the ignition switch ON.
2. Check that AWD warning lamp lights up.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to diagnosis procedure. Refer to [DLN-49, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000008285536

1. CHECK POWER SUPPLY AND GROUND CIRCUIT

Perform the trouble diagnosis for power supply and ground circuit. Refer to [DLN-46, "Diagnosis Procedure"](#).Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the error-detected parts.

2. PERFORM SELF-DIAGNOSIS

With CONSULT

Perform self-diagnosis for "ALL MODE AWD/4WD".

Is any DTC detected?YES >> Check the DTC. Refer to [DLN-21, "DTC Index"](#).

NO >> GO TO 3.

3. CHECK AWD WARNING LAMP SIGNAL

With CONSULT

1. Turn the ignition switch ON.

CAUTION:**Never start the engine.**

2. Check "4WD WARN LAMP" of CONSULT "DATA MONITOR" for "ALL MODE AWD/4WD".

Does the item on "DATA MONITOR" indicate "On"?YES >> Perform the trouble diagnosis for combination meter power supply circuit. Refer to [MWI-55, "COMBINATION METER : Diagnosis Procedure"](#).NO >> Replace AWD control unit. Refer to [DLN-58, "Removal and Installation"](#).

SYMPTOM DIAGNOSIS

AWD WARNING LAMP DOES NOT TURN ON

Description

INFOID:000000008285537

AWD warning lamp does not turn ON when the ignition switch is turned to ON.

Diagnosis Procedure

INFOID:000000008285538

1. CHECK AWD WARNING LAMP

Perform the trouble diagnosis for AWD warning lamp. Refer to [DLN-49, "Diagnosis Procedure".](#)

Is the inspection result normal?

YES >> Check each harness connector pin terminal for malfunction or disconnection.

NO >> Repair or replace the error-detected parts.

AWD WARNING LAMP DOES NOT TURN OFF

Description

INFOID:0000000008285539

AWD warning lamp does not turn OFF several seconds after the engine started.

Description

INFOID:0000000008285540

1. PERFORM SELF-DIAGNOSIS

With CONSULT

Perform self-diagnosis for "ALL MODE AWD/4WD".

Is any DTC detected?

DLN

YES >> Check the DTC. Refer to [DLN-21, "DTC Index"](#).

NO >> GO TO 2.

2. CHECK AWD WARNING LAMP

Perform the trouble diagnosis of the AWD warning lamp. Refer to [DLN-49, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> Check each harness connector pin terminal for malfunction or disconnection.

NO >> Repair or replace the error-detected parts.

E

F

G

H

I

J

K

L

M

N

O

P

HEAVY TIGHT-CORNER BRAKING SYMPTOM OCCURS

Description

INFOID:0000000008285541

Heavy tight-corner braking symptom occurs when the vehicle is driven and the steering wheel is turned fully to either side after the engine is started.

NOTE:

Light tight-corner braking symptom may occur depending on driving conditions. This is not malfunction.

Diagnosis Procedure

INFOID:0000000008285542

1. PERFORM ECM SELF-DIAGNOSIS

With CONSULT

Perform self-diagnosis for "ENGINE".

Is any DTC detected?

YES >> Check the DTC.

NO >> GO TO 2.

2. PERFORM SELF-DIAGNOSIS

With CONSULT

Perform self-diagnosis for "ALL MODE AWD/4WD".

Is DTC "U1000" detected?

YES >> Proceed to [LAN-16. "Trouble Diagnosis Flow Chart"](#).

NO >> GO TO 3.

3. CHECK TRANSFER FLUID TEMPERATURE SENSOR

Perform the trouble diagnosis of the transfer fluid temperature sensor. Refer to [DLN-41, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the error-detected parts.

4. CHECK AWD SOLENOID

Perform the trouble diagnosis of the AWD solenoid. Refer to [DLN-33, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace the error-detected parts.

5. CHECK ELECTRIC CONTROLLED COUPLING

1. Turn the ignition switch OFF.
2. Set the transmission to neutral. Release the parking brake.
3. Lift up the vehicle.
4. Rotate the rear propeller shaft.
5. Hold the front propeller shaft lightly.

Does the front propeller shaft rotate?

YES >> Replace electric controlled coupling for mechanical malfunction (clutch sticking etc.). Refer to [DLN-75, "Exploded View"](#).

NO >> Check each harness connector pin terminal for disconnection.

VEHICLE DOES NOT ENTER AWD MODE

Description

INFOID:0000000008285543

Vehicle does not enter 4-wheel drive mode even though AWD warning lamp turned to OFF.

Diagnosis Procedure

INFOID:0000000008285544

1. CHECK AWD WARNING LAMP

Turn the ignition switch ON.

Does AWD warning lamp turn ON?

YES >> GO TO 2.

NO >> Proceed to diagnosis procedure. Refer to [DLN-50, "Diagnosis Procedure"](#).

2. CRUISE TEST

Drive the vehicle for a period of time.

Does any symptom occur?

YES >> Replace electric controlled coupling for mechanical malfunction (mechanical engagement of clutch is not possible). Refer to [DLN-75, "Exploded View"](#).

NO >> Check each harness connector pin terminal for disconnection.

AWD WARNING LAMP BLINKS QUICKLY

Description

INFOID:0000000008285545

While driving, AWD warning lamp blinks 2 times in 1 second and it turns OFF after 1 minute.

NOTE:

- This symptom protects drivetrain parts when a heavy load is applied to the electric controlled coupling and multiple disc clutch temperature increases. Also, optional distribution of torque sometimes becomes rigid before lamp blinks quickly. Both cases are not malfunction. Refer to [DLN-21, "Protection Function"](#).
- When this symptom occurs, stop vehicle and allow it to idle for some times. Blinking will stop and system will be restored.

AWD WARNING LAMP BLINKS SLOWLY

Description

INFOID:0000000008285546

AWD warning lamp blinks at approximately 2 seconds intervals while driving.

Diagnosis Procedure

INFOID:0000000008285547

1. CHECK TIRE

Check the following.

- Tire pressure
- Wear condition
- Front and rear tire size (There is no difference between front and rear tires.)

DLN

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace error-detected parts. And then, drive the vehicle at speed of 20 km/h (12 MPH) or more for 5 seconds or more. Improper size information is initialized accordingly.

2. CHECK INPUT SIGNAL OF TIRE DIAMETER

With CONSULT

1. Start the engine.
2. Drive at 20 km/h (12 MPH) or more for approximately 4 minutes.
3. Check "DIS-TIRE MONI" of CONSULT "DATA MONITOR" for "ALL MODE AWD/4WD".

Does the item on "DATA MONITOR" indicate "0 - 4 mm"?

YES >> INSPECTION END

NO >> GO TO 3.

3. TERMINAL INSPECTION

Check AWD control unit harness connector for disconnection.

Is the inspection result normal?

YES >> Replace AWD control unit. Refer to [DLN-58, "Removal and Installation"](#).

NO >> Repair or replace the error-detected parts.

NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

< SYMPTOM DIAGNOSIS >

[TRANSFER: ETX13C]

NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

NVH Troubleshooting Chart

INFOID:0000000008285548

Use the chart below to find the cause of the symptom. The numbers indicate the order of the inspection. If necessary, repair or replace these parts.

Reference		<u>DLN-57. "Inspection"</u>				<u>DLN-65. "Exploded View"</u>				<u>DLN-78. "Inspection"</u>				<u>DLN-73. "Inspection"</u>			
SUSPECTED PARTS (Possible cause)		TRANSFER FLUID (Level low)	TRANSFER FLUID (Wrong)	TRANSFER FLUID (Level too high)	LIQUID GASKET (Damaged)	OIL SEAL (Worn or damaged)	GEAR (Worn or damaged)	BEARING (Worn or damaged)	TRANSFER CASE (Damaged)								
Symptom	Noise	1	2				3	3	3								
	Transfer fluid leakage		4	1	2	2									3		

< PERIODIC MAINTENANCE >

PERIODIC MAINTENANCE

TRANSFER FLUID

Inspection

INFOID:000000008285549

FLUID LEAKAGE

Check transfer surrounding area (oil seal, drain plug, and filler plug etc.) for fluid leakage.

FLUID LEVEL

1. Remove filler plug (1) and gasket. Then check that fluid is filled up from mounting hole for the filler plug.


CAUTION:

Never start engine while checking fluid level.

2. Set a new gasket onto filler plug, and install it on transfer and tighten to the specified torque. Refer to [DLN-65. "Exploded View"](#).

CAUTION:

Never reuse gasket.

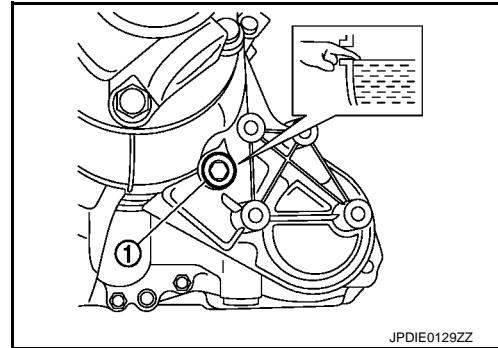

JPDI0129ZZ


Draining

INFOID:000000008285550

1. Run the vehicle to warm up the transfer unit sufficiently.
2. Stop the engine, and remove the drain plug (1) to drain the transfer fluid.
3. Set a new gasket onto the drain plug, and install it on the transfer and tighten to the specified torque. Refer to [DLN-65. "Exploded View"](#).

CAUTION:

Never reuse gasket.

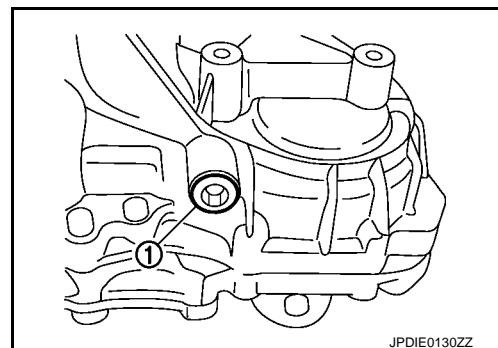

JPDI0130ZZ

Refilling

INFOID:000000008285551

1. Remove filler plug (1) and gasket. Then fill fluid up to mounting hole for the filler plug.

Fluid and viscosity

: Refer to [MA-10. "Fluids and Lubricants"](#).

Fluid capacity

: Refer to [DLN-84. "General Specifications"](#).


CAUTION:

Carefully fill the fluid. (Fill up for approximately 3 minutes.)

2. Leave the vehicle for 3 minutes, and check the fluid level again.
3. Set a new gasket onto filler plug, and install it on transfer and tighten to the specified torque. Refer to [DLN-65. "Exploded View"](#).

CAUTION:

Never reuse gasket.

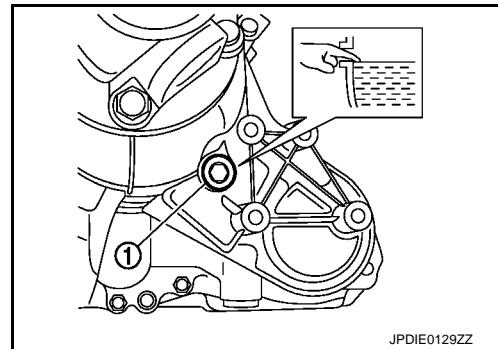

JPDI0129ZZ

REMOVAL AND INSTALLATION


AWD CONTROL UNIT

Removal and Installation

INFOID:0000000008285552

REMOVAL

1. Remove the glove box assembly. Refer to [IP-13, "Removal and Installation"](#).
2. Disconnect AWD control unit harness connector.
3. Remove AWD control unit (1) mounting nuts.
4. Remove AWD control unit.

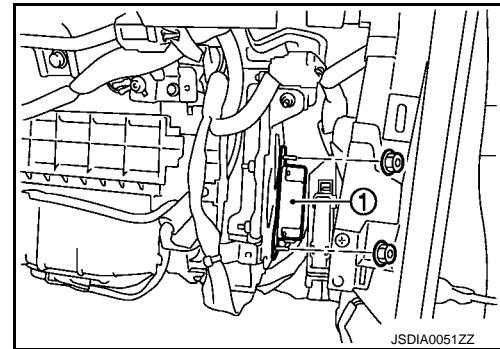

INSTALLATION

Install in the reverse order of removal.


< REMOVAL AND INSTALLATION >

FRONT OIL SEAL

Exploded View

INFOID:0000000008285553

SEC. 331

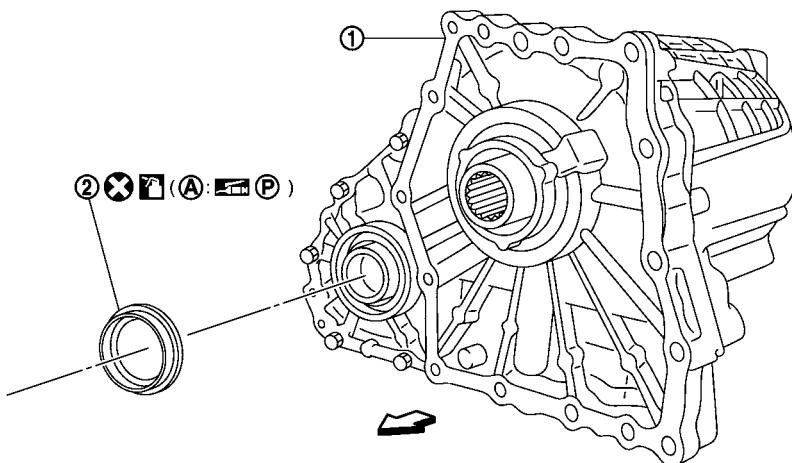

JPDIE0097ZZ

1. Transfer assembly 2. Front oil seal

A. Oil seal lip

←: Vehicle front

汲: Apply transfer fluid. Refer to [MA-10, "Fluids and Lubricants"](#).

■: Apply petroleum jelly.

Refer to [GI-4, "Components"](#) for symbols not described above.

A

B

C

DLN

E

F

G

H

I

J

K

L

M

N

O

P

Removal and Installation

INFOID:0000000008285554

REMOVAL


1. Remove the drain plug to drain the transfer fluid. Refer to [DLN-57, "Draining"](#).
2. Remove the front propeller shaft. Refer to [DLN-88, "Removal and Installation"](#).
3. Remove front oil seal.

CAUTION:

Never damage the front case and front drive shaft.

INSTALLATION

1. Apply transfer fluid to outside of front oil seal, install it with a drift (A) [SST: ST27862000 (—)] until the end face of front case.
CAUTION:
 - Never reuse front oil seal.
 - Apply petroleum jelly to oil seal lip.
 - When installing, never incline front oil seal.
2. Install front propeller shaft. Refer to [DLN-88, "Removal and Installation"](#).
3. Fill with new transfer fluid, check fluid level and for fluid leakage. Refer to [DLN-57, "Inspection"](#).

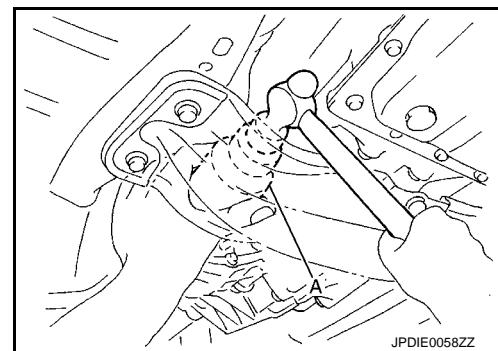


JPDIE0058ZZ

REAR OIL SEAL

Exploded View

INFOID:0000000008285555

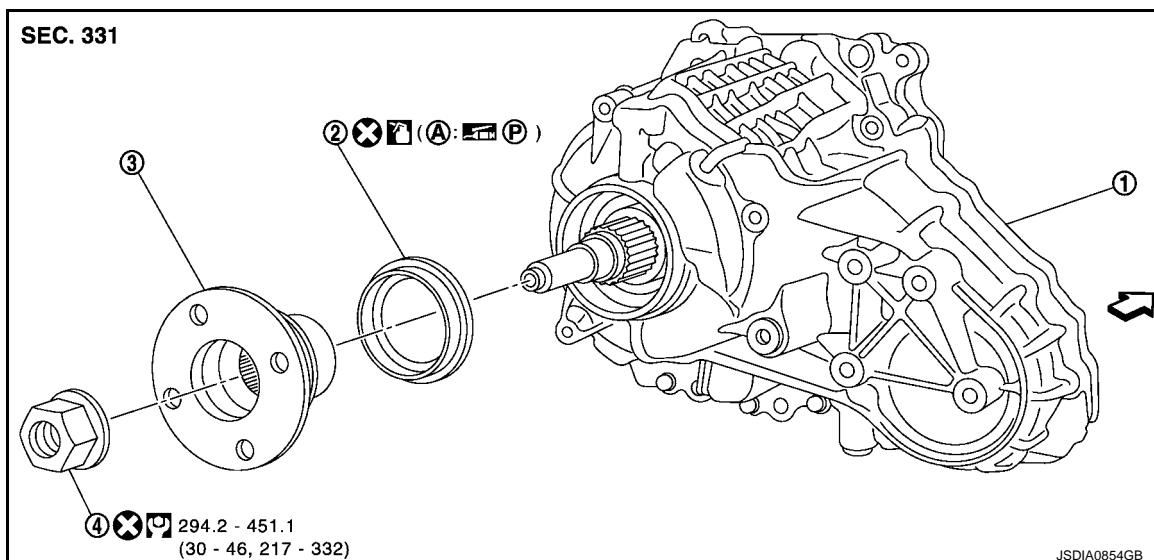

- 1. Transfer assembly
- 2. Rear oil seal
- 3. Companion flange
- 4. Self-lock nut

A. Oil seal lip

: Vehicle front

: Apply transfer fluid. Refer to [MA-10, "Fluids and Lubricants"](#).

: Apply petroleum jelly.

Refer to [GI-4, "Components"](#) for symbols not described above.

Removal and Installation


INFOID:0000000008285556

REMOVAL

1. Remove the rear propeller shaft. Refer to [DLN-104, "Removal and Installation"](#).
2. Remove self-lock nut of companion flange with a flange wrench (commercial service tool).
3. Put matching mark (A) on the end of the main shaft. The mark should be in line with the mark (B) on the companion flange.

CAUTION:

For matching mark, use paint. Never damage main shaft.

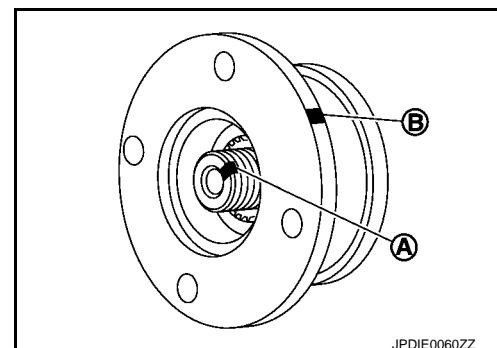

REAR OIL SEAL


[TRANSFER: ETX13C]

< REMOVAL AND INSTALLATION >

4. Remove the companion flange with a puller (A) (commercial service tool).

CAUTION:


Never damage the companion flange.

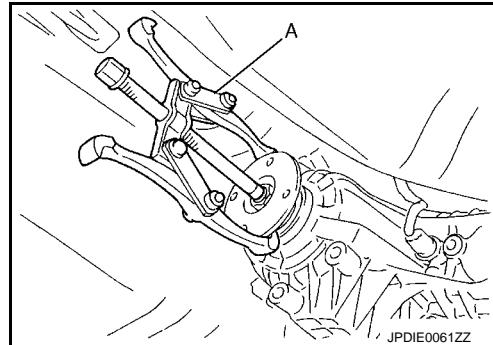

5. Remove the rear oil seal with the puller (A) [SST: KV381054S0 (J-34286)].

CAUTION:

Never damage the rear case.

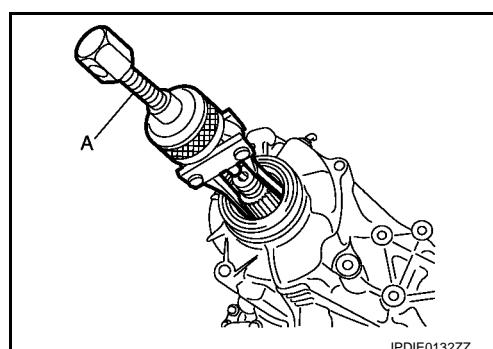

INSTALLATION


1. Apply transfer fluid to rear oil seal, install it with the drifts (A and B) within the dimension (L) shown as follows.

A : Drift [SST: ST30720000 (J-25405)]
B : Drift [SST: KV40104830 (—)]


L : 6.7 – 7.3 mm (0.264 – 0.287 in)

CAUTION:

- Never reuse rear oil seal.
- Apply petroleum jelly to oil seal lip.
- When installing, never incline rear oil seal.

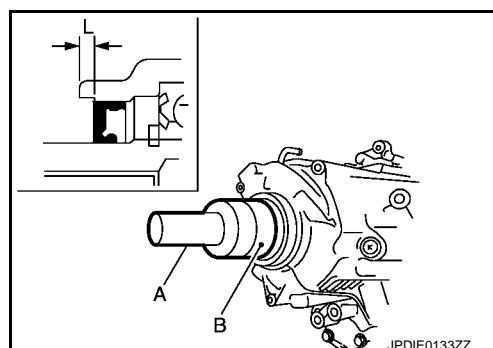

2. Align the matching mark (A) of main shaft with the mark (B) of companion flange, then install the companion flange.

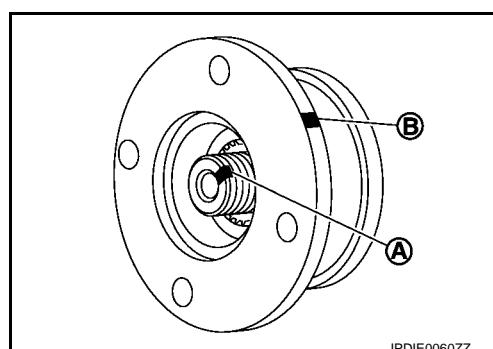


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

REAR OIL SEAL

[TRANSFER: ETX13C]

< REMOVAL AND INSTALLATION >

3. Using a flange wrench (A) (commercial service tool), install the self-lock nut of companion flange and tighten to the specified torque. Refer to [DLN-60, "Exploded View"](#).
- CAUTION:**
Never reuse self-lock nut.
4. Install the rear propeller shaft. Refer to [DLN-104, "Removal and Installation"](#).
5. Check fluid level. Refer to [DLN-57, "Inspection"](#).

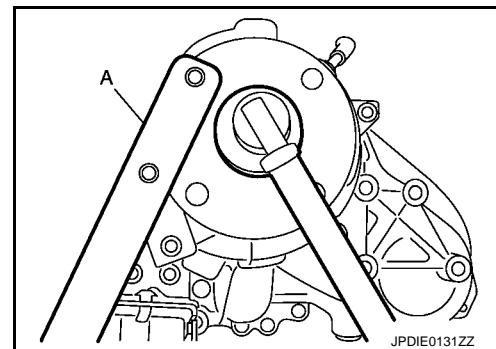


UNIT REMOVAL AND INSTALLATION

TRANSFER ASSEMBLY

Exploded View

INFOID:000000008285557

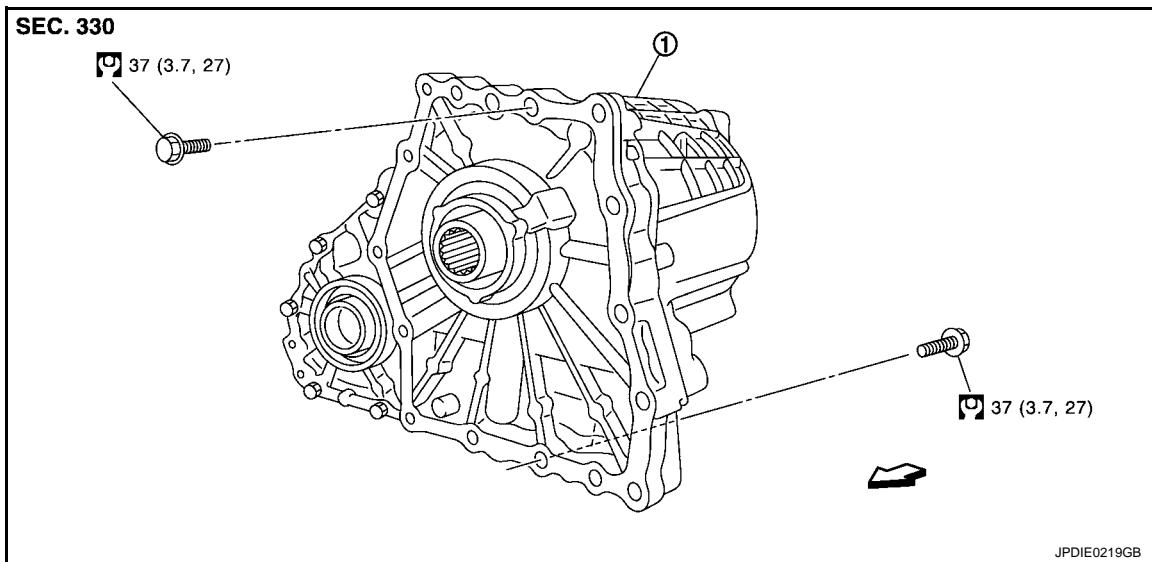

1. Transfer assembly

◀: Vehicle front

Refer to [GI-4, "Components"](#) for symbols in the figure.

Removal and Installation

INFOID:000000008285558

REMOVAL

1. Remove rear propeller shaft. Refer to [DLN-104, "Removal and Installation"](#).
2. Remove front propeller shaft. Refer to [DLN-88, "Removal and Installation"](#).
3. Disconnect AWD solenoid harness connector and separate harness from transfer assembly.
4. Remove transfer breather hose.
5. Remove control rod. Refer to [TM-184, "Removal and Installation"](#).
6. Support transfer assembly and transmission assembly with a jack.

CAUTION:
Secure transfer assembly and transmission assembly to a jack.

7. Remove rear engine mounting member and engine mounting insulator with power tool. Refer to [EM-74, "AWD : Removal and Installation"](#).
8. Lower jack to the position where the top transfer mounting bolts can be removed.
9. Remove transfer mounting bolts with power tool and separate transfer from transmission.

INSTALLATION

Note the following, and install in the reverse order of removal.

TRANSFER ASSEMBLY

< UNIT REMOVAL AND INSTALLATION >


[TRANSFER: ETX13C]

- When installing the transfer to the transmission, install the mounting bolts following the standard below, tighten bolts to the specified torque.

Bolt No.	A	B	C	D
Quantity	4	3	4	2
Bolt length "L" mm (in)	75 (2.95)	45 (1.77)	40 (1.57)	30 (1.18)


●:Transfer to transmission.

○:Transmission to transfer.

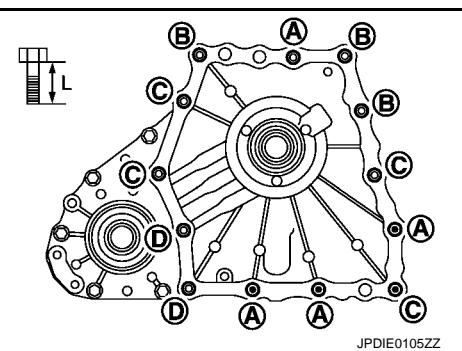


JPDIE0105ZZ

- When installing transfer breather hose, make sure there are no pinched or restricted areas on the transfer breather hose caused by bending or winding.
- Set transfer breather hose (1) of transmission side with the paint mark (A) facing upward, and insert breather hose to breather tube until hose end reaches the tube bend R portion.

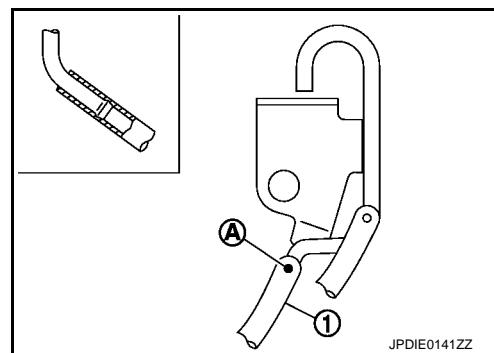


JPDIE0141ZZ

- Be sure to insert air breather hose (1) of transfer side to air breather tube (2) until hose end reaches the tube bend R portion.

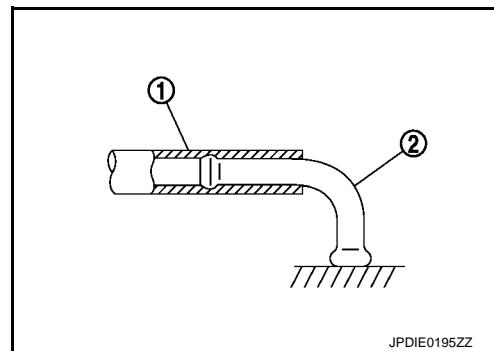

JPDIE0195ZZ

- Be sure to fix air breather hose in (A) parts of transmission and transfer.
- After the installation, check the fluid level, fluid leakage and the A/T positions. Refer to [DLN-57, "Inspection"](#).

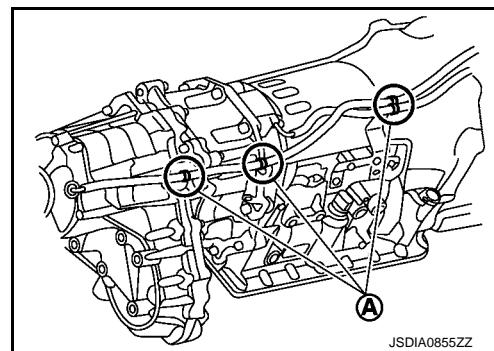


JSDIA0855ZZ

UNIT DISASSEMBLY AND ASSEMBLY

FRONT CASE AND REAR CASE

Exploded View

INFOID:0000000008285559

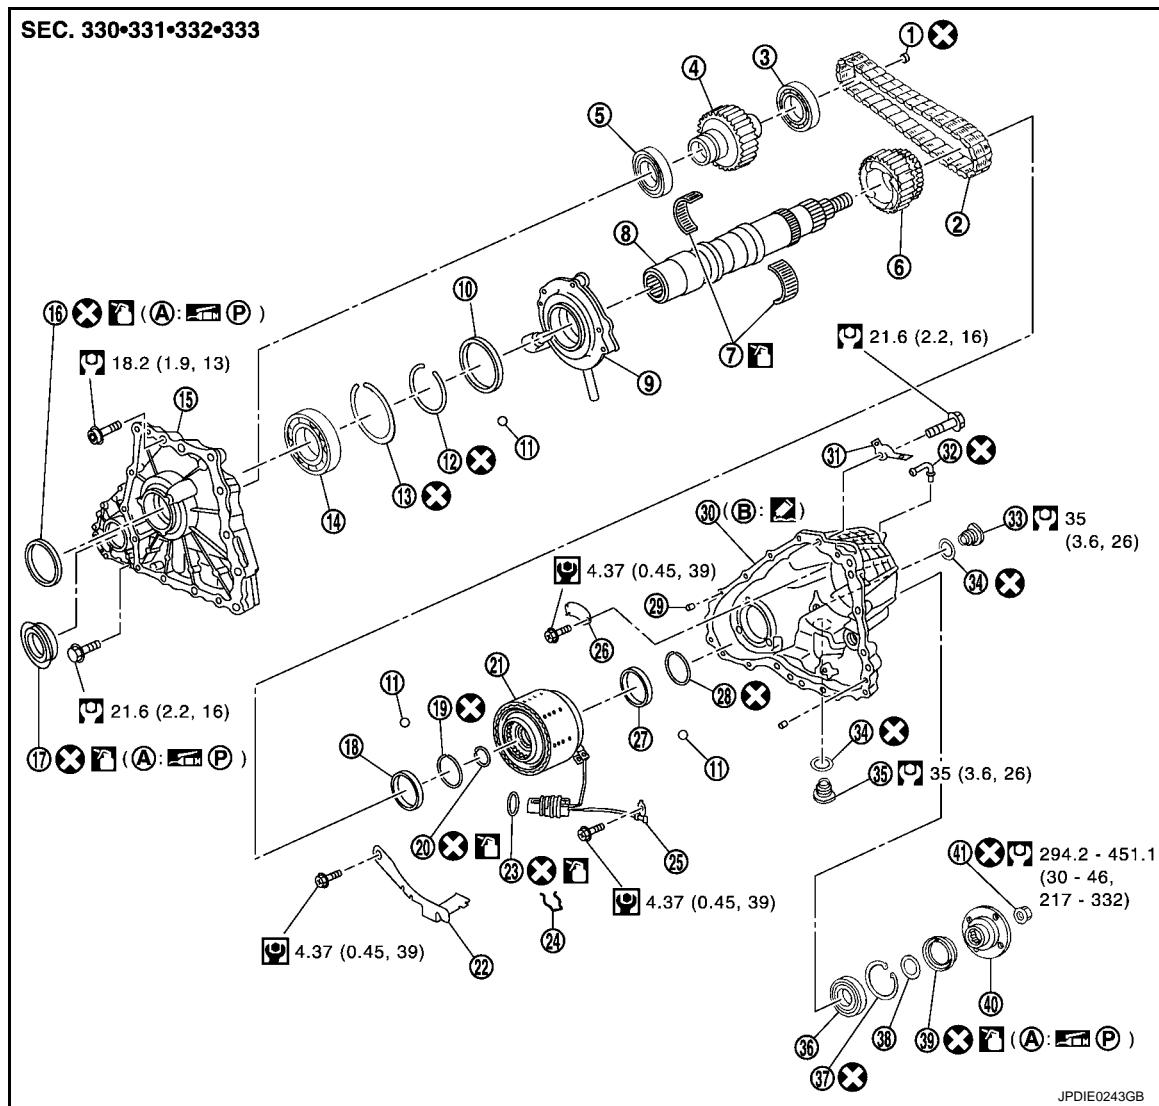

1. Plug
2. Drive chain
3. Front drive shaft rear bearing
4. Front drive shaft
5. Front drive shaft front bearing
6. Sprocket
7. Needle bearing
8. Main shaft
9. Oil pump
10. Spacer
11. Steel ball
12. Snap ring
13. Snap ring
14. Main shaft bearing
15. Front case
16. Main shaft oil seal
17. Snap ring (A: □ P: □)
18. Spacer
19. Snap ring
20. Circlip
21. Electric controlled coupling
22. Oil cover
23. O-ring
24. Retainer
25. Transfer fluid temperature sensor
26. Baffle plate
27. Spacer
28. Snap ring
29. Dowel pin
30. Rear case
31. Harness bracket
32. Breather tube
33. Filler plug
34. Gasket
35. Drain plug
36. Rear bearing
37. Snap ring
38. Spacer
39. Snap ring (A: □ P: □)
40. Companion flange
41. Self-lock nut
- A. Oil seal lip
- B. Matching surface

A

B

C

DLN

E

F

G

H

I

J

K

L

M

N

O

P

FRONT CASE AND REAR CASE

< UNIT DISASSEMBLY AND ASSEMBLY >

[TRANSFER: ETX13C]

 Apply Genuine Anaerobic Liquid Gasket or equivalent. Refer to [GI-22, "Recommended Chemical Products and Sealants"](#).

 Apply petroleum jelly.


 Apply transfer fluid. Refer to [MA-10, "Fluids and Lubricants"](#).

Refer to [GI-4, "Components"](#) for symbols not described above.

Disassembly

INFOID:000000008285560


1. Remove drain plug and filler plug.
2. Remove harness brackets.
3. Remove main shaft oil seal from front case.
CAUTION:
Never damage the front case and main shaft.
4. Remove front oil seal from front case.
CAUTION:
Never damage the front case and front drive shaft.
5. Remove self-lock nut.
6. Put a matching mark (A) on the end of main shaft. The mark should be in line with the mark (B) on the companion flange.
CAUTION:
For the matching mark, use paint. Never damage main shaft.

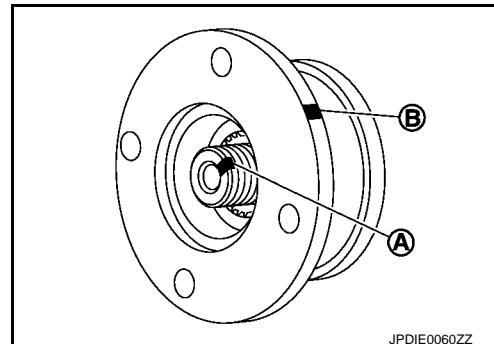

7. Remove companion flange with a puller (A) (commercial service tool).

CAUTION:

Never damage the companion flange.

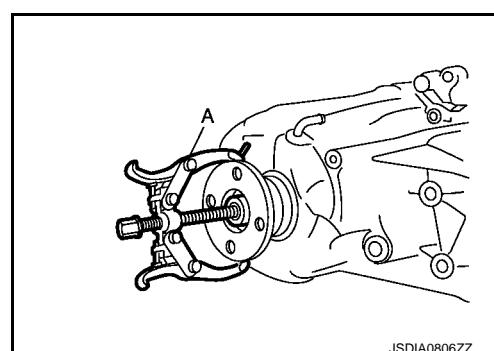


8. Remove rear oil seal from rear case with the puller (A) [SST: KV381054S0 (J-34286)].

CAUTION:

Never damage the rear case.

9. Remove spacer from main shaft.

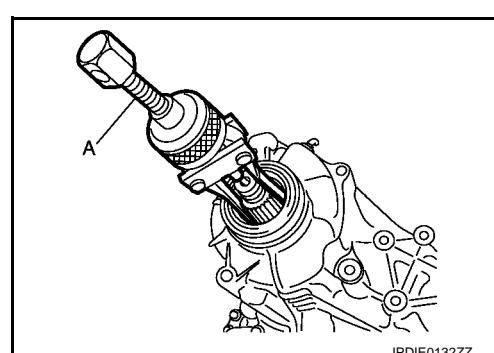

FRONT CASE AND REAR CASE


< UNIT DISASSEMBLY AND ASSEMBLY >

[TRANSFER: ETX13C]

10. Remove front case and rear case fixing bolts, then remove harness bracket.

Bolts symbol	Quantity
A	14
T (TORX bolt)	1


*: With harness bracket.

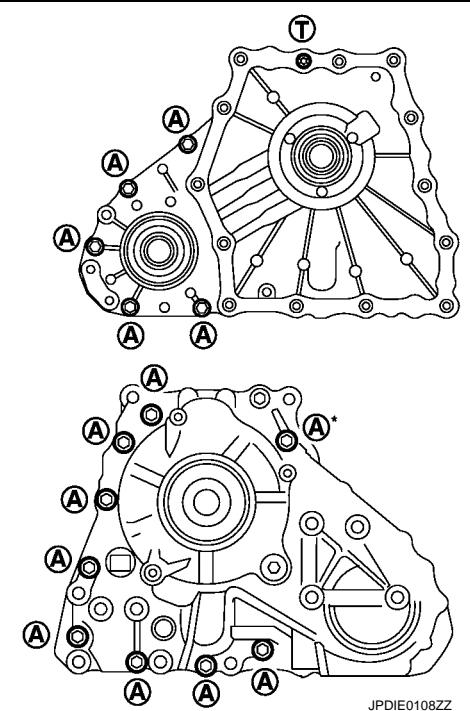

11. Remove front case (1) from rear case by levering it up with a suitable tool.

CAUTION:

Never damage the mating surface.

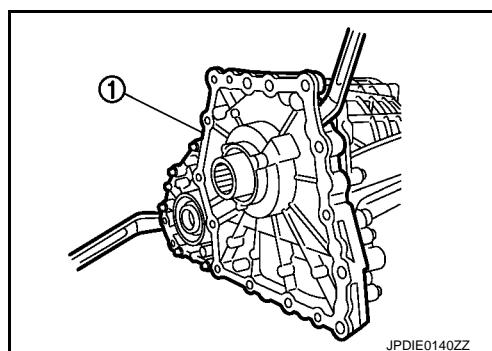

12. Remove snap ring (1) from front case.


CAUTION:

Never damage front case.

13. Remove main shaft bearing from front case.

CAUTION:


Never use tools. Always remove by hand.

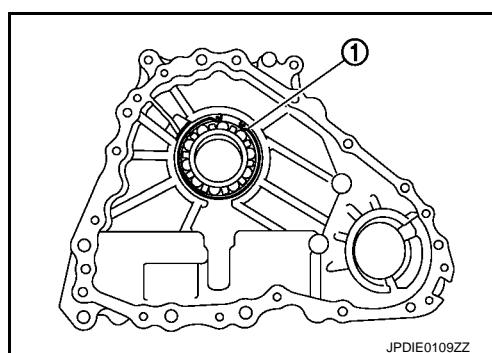

14. Remove snap ring (1) from main shaft.

CAUTION:

Never damage main shaft.

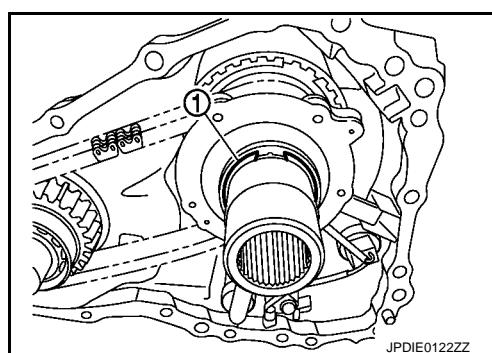

A
B
C
DLN
E
F
G
H
I
J
K
L
M
N
O
P

FRONT CASE AND REAR CASE

< UNIT DISASSEMBLY AND ASSEMBLY >

[TRANSFER: ETX13C]

15. Remove spacer (1) and steel ball (2) from main shaft.

CAUTION:


Be careful not to drop the steel ball.

16. Remove Oil pump from main shaft.

17. Remove drive chain and front drive shaft.


CAUTION:

Never use tools. Always remove by hand.

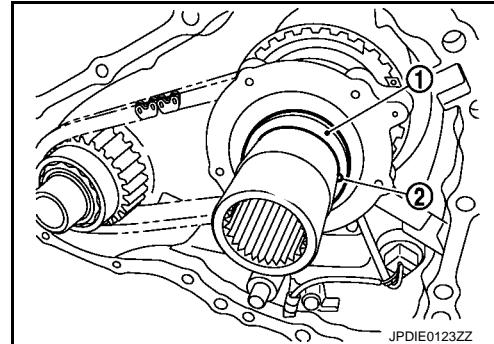

18. Remove transfer fluid temperature sensor bolt from rear case.

And then, remove transfer fluid temperature sensor (1).

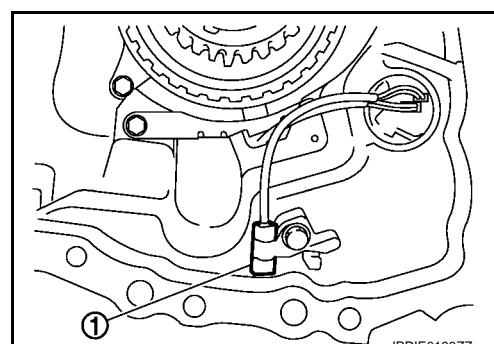


19. Remove oil cover bolts from rear case. And then, remove oil cover (1).


20. Remove retainer from AWD solenoid harness connector.

21. Remove AWD solenoid harness connector from rear case.

22. Remove O-ring from AWD solenoid harness connector.

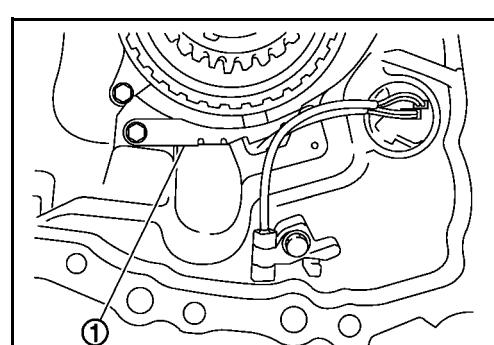

23. Remove main shaft assembly from rear case with the drift (A) [SST: ST33052000 (—)].

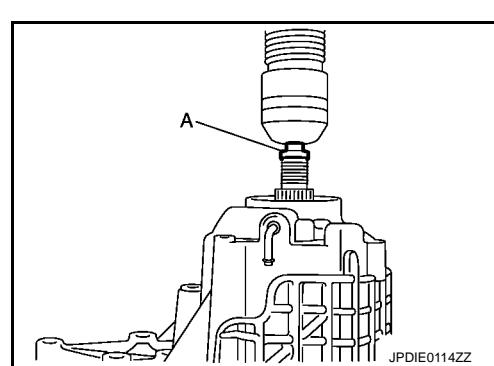


24. Remove snap ring (1) from rear case.

25. Remove rear bearing from rear case.

CAUTION:

Never use tools. Always remove by hand.

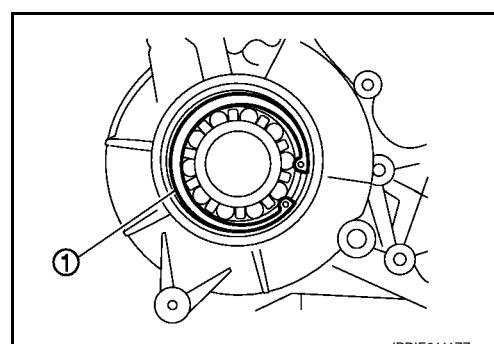


FRONT CASE AND REAR CASE

< UNIT DISASSEMBLY AND ASSEMBLY >

[TRANSFER: ETX13C]

26. Remove baffle plate (1) from rear case.
27. Remove breather tube from rear case.
28. Perform inspection after disassembly. Refer to [DLN-73, "Inspection"](#).

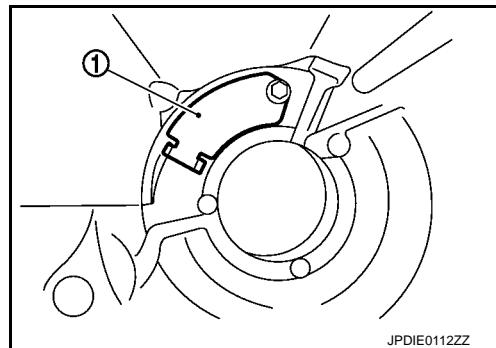

INFOID:00000000828561

DLN


Assembly

1. Install breather tube to rear case within the angle (A) shown as follows.

Angle (A) : 80 – 100°

CAUTION:

Never reuse breather tube.

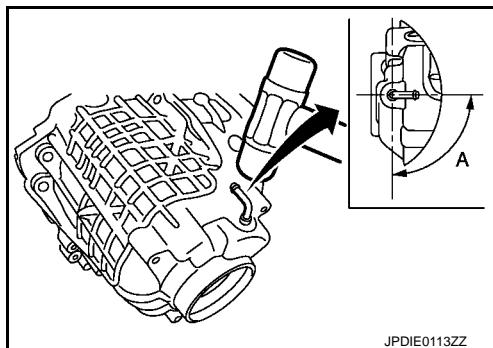


JPDIE0113ZZ

2. Install baffle plate to rear case.

3. Install rear bearing to rear case.

CAUTION:

Never use tools. Always install by hand.

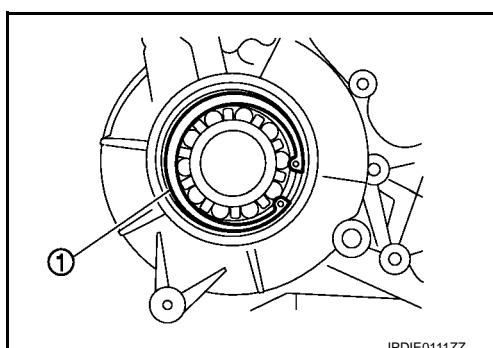


JPDIE0111ZZ

4. Install snap ring (1) to rear case.

CAUTION:

Never reuse snap ring.

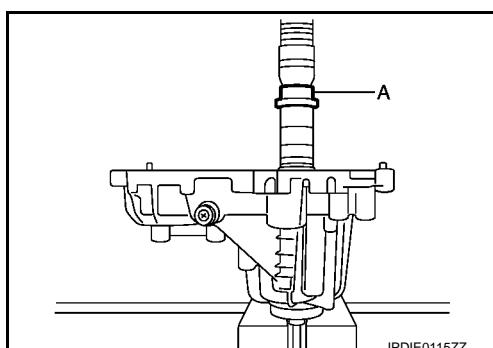

JPDIE0115ZZ

5. Install main shaft assembly to rear case with the drift (A) [SST: ST35321000 (—)].

CAUTION:

Apply transfer fluid to the sliding surface of main shaft and needle bearing.

6. Install O-ring to AWD solenoid harness connector.

CAUTION:

- **Never reuse O-ring.**
- **Apply transfer fluid to O-ring.**

7. Install AWD solenoid harness connector into rear case.


8. Install retainer to AWD solenoid harness connector.

FRONT CASE AND REAR CASE


< UNIT DISASSEMBLY AND ASSEMBLY >

[TRANSFER: ETX13C]

9. Hold electric controlled coupling harness (1) with oil cover hold plate (2), install oil cover (3) to rear case (4).

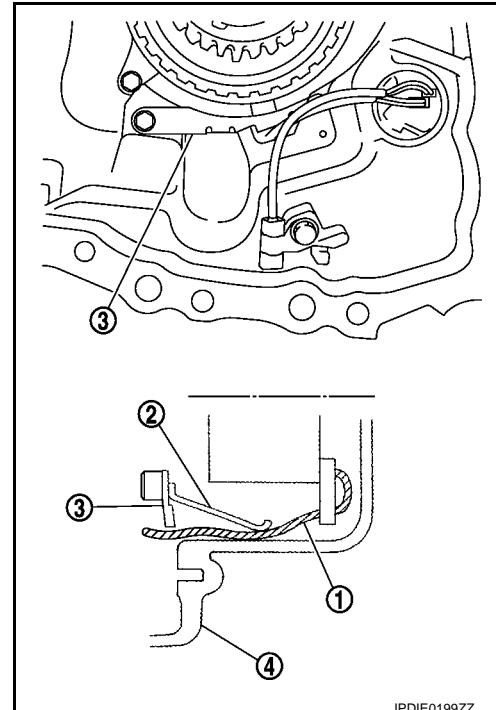

10. Install transfer fluid temperature sensor (1) to rear case.

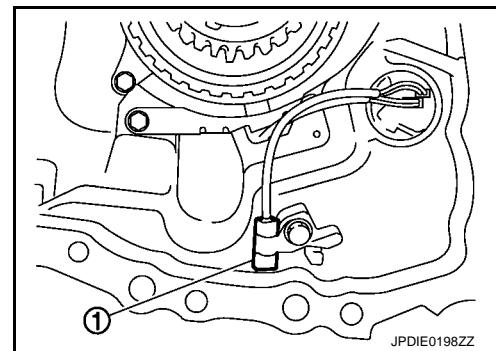

11. Set drive chain to front drive shaft.

CAUTION:


Identification mark (A) of drive chain should be in the side of front bearing (1) of front drive shaft.

12. Install drive chain to main shaft, and then install front drive shaft.

CAUTION:

Never use tools. Always install by hand.

13. Install oil pump to main shaft.

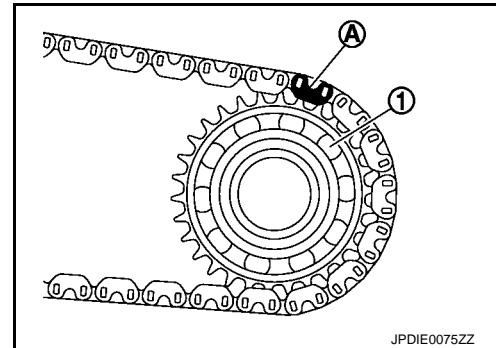


FRONT CASE AND REAR CASE

< UNIT DISASSEMBLY AND ASSEMBLY >

[TRANSFER: ETX13C]

14. Install spacer (1) and steel ball (2) to main shaft.

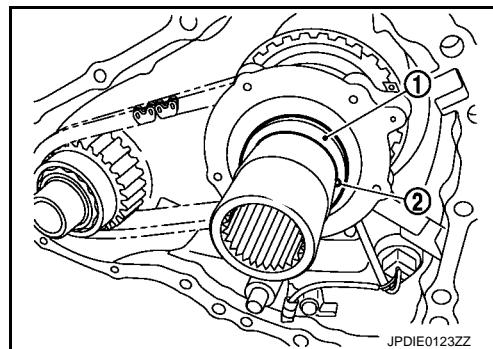

15. Install snap ring (1) to main shaft.


CAUTION:

- Never reuse snap ring.
- Never damage main shaft.

16. Install main shaft bearing to front case.

CAUTION:


Never use tools. Always install by hand.

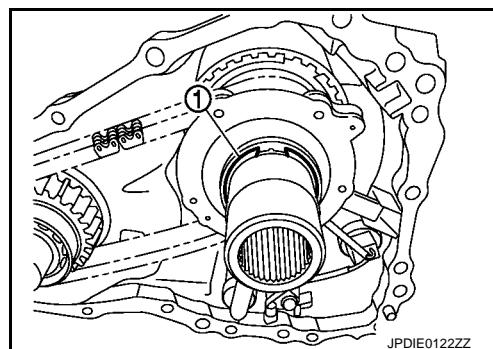

17. Install snap ring (1) to front case.

CAUTION:

- Never reuse snap ring.
- Never damage front case.

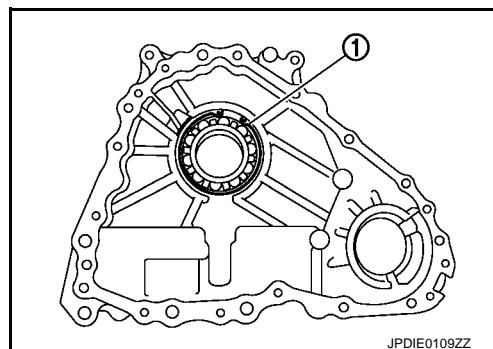

18. Apply liquid gasket (1) to mating surface of rear case.

Use Genuine Anaerobic Liquid Gasket or equivalent. Refer to [GI-22, "Recommended Chemical Products and Sealants"](#).


CAUTION:

Remove old sealant adhering to mounting surfaces. Also remove any moisture, oil, or foreign material adhering to application and mounting surfaces.

19. Set front case to rear case.

CAUTION:

Never damage the mating surface transmission side.

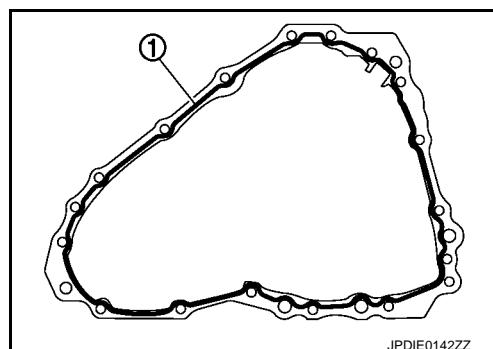

A
B
C
DLN
E
F
G
H
I
J
K
L
M
N
O
P

FRONT CASE AND REAR CASE

< UNIT DISASSEMBLY AND ASSEMBLY >

[TRANSFER: ETX13C]

20. Tighten front case and rear case fixing bolts.


Bolts symbol	Quantity
A	14
T (TORX bolt)	1

*: With harness bracket.

21. Install spacer to main shaft.

CAUTION:

Apply transfer fluid to spacer.

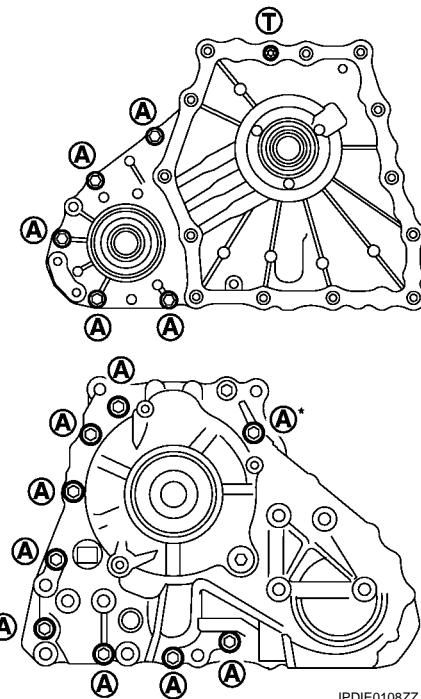

22. Apply transfer fluid to outside of rear oil seal, and install rear oil seal to rear case with the drifts (A and B) within the dimension (L) shown as follows.


A : Drift [SST: ST30720000 (J-25405)]

B : Drift [SST: KV40104830 (—)]


L : 6.7 – 7.3 mm (0.264 – 0.287 in)

CAUTION:

- Never reuse rear oil seal.
- Apply petroleum jelly to oil seal lip.
- When installing, never incline rear oil seal.

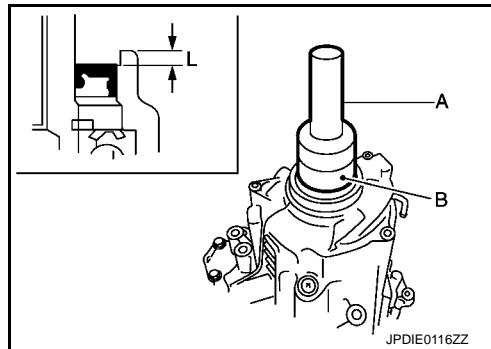

23. Install companion flange while aligning the matching mark (A) of main shaft with the mark (B) of companion flange.

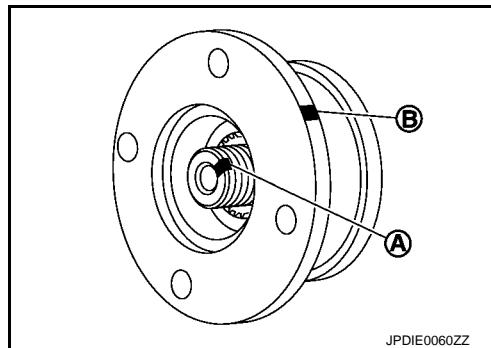

FRONT CASE AND REAR CASE


< UNIT DISASSEMBLY AND ASSEMBLY >

[TRANSFER: ETX13C]

24. Tighten self-lock nut to the specified torque with flange wrench (A) (commercial service tool).

CAUTION:


Never reuse self-lock nut.

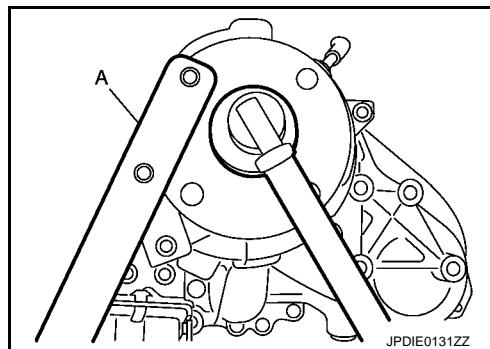

25. Apply transfer fluid to outside of main shaft oil seal, and install main shaft oil seal until it is flush with the end face of front case with the drift (A) [SST: ST30720000 (J-25405)].

CAUTION:

- Never reuse main shaft oil seal.
- Apply petroleum jelly to oil seal lip.
- When installing, never incline main shaft oil seal.

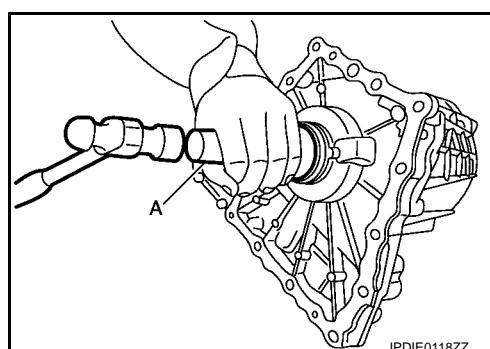

26. Apply transfer fluid to outside of front oil seal, and install front oil seal until it is flush with the end face of front case with the drift (A) [SST: ST27862000 (—)].

CAUTION:

- Never reuse front oil seal.
- Apply petroleum jelly to oil seal lip.
- When installing, never incline front oil seal.

27. Set gasket to drain plug. Install it to rear case.


CAUTION:

Never reuse gasket.

28. Set gasket to filler plug. Install it to rear case.

CAUTION:

- Never reuse gasket.
- After oil is filled, tighten filler plug to specified torque.

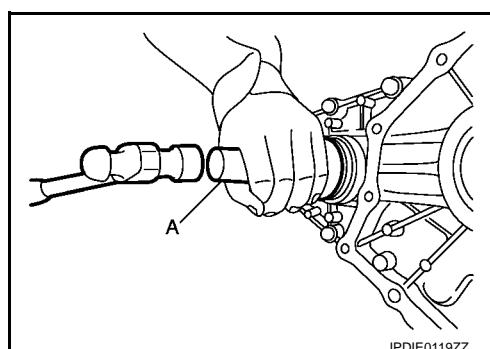

Inspection


INFOID:0000000008285562

INSPECTION AFTER DISASSEMBLY

Check items below. If necessary, replace them with new ones.

Cases

- Contact surfaces of bearing for wear, damage, etc.
- Damage and cracks of case.

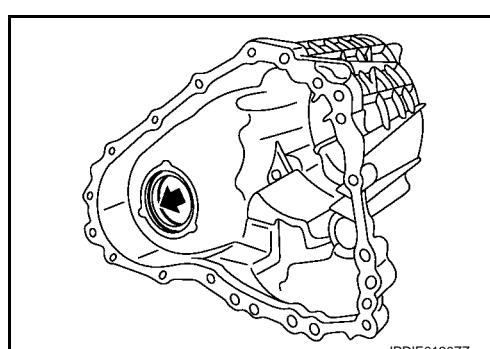


Bearing

FRONT CASE AND REAR CASE

< UNIT DISASSEMBLY AND ASSEMBLY >


[TRANSFER: ETX13C]

Damage and rough rotation of bearing.

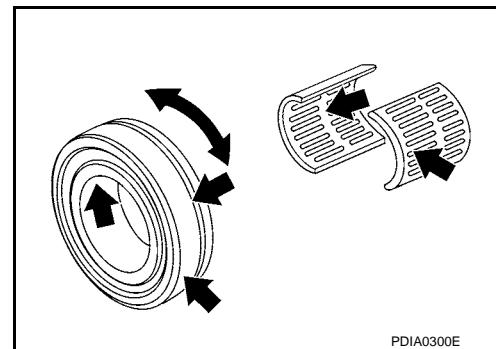


Shaft

Damage, peeling, dent, uneven wear, bending, etc. of shaft.

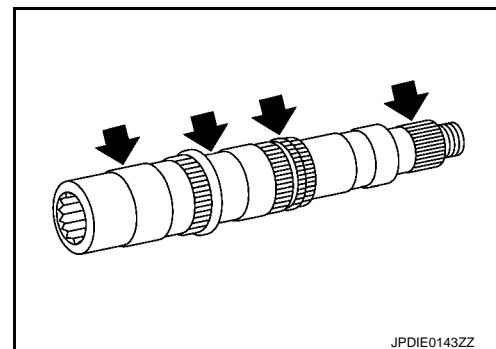

Gears and Chain

- Excessive wear, damage, peeling, etc. of gear and chain.
- Cracks, damage, wear, etc of drive chain.

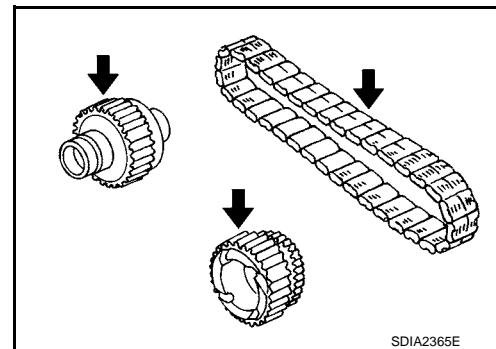

MAIN SHAFT


[TRANSFER: ETX13C]

< UNIT DISASSEMBLY AND ASSEMBLY >

MAIN SHAFT

Exploded View

INFOID:0000000008285563

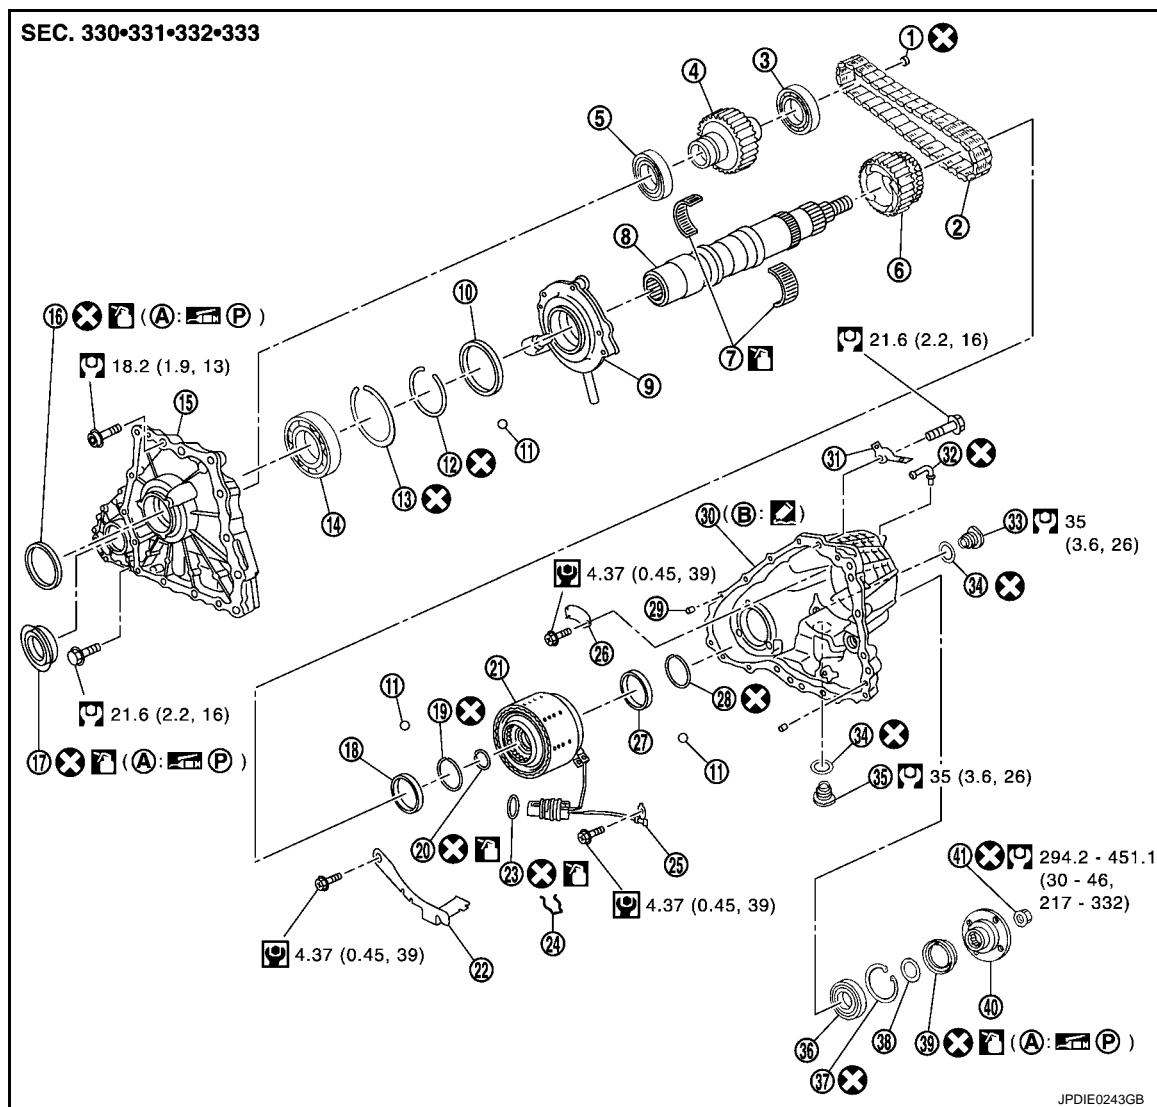

1. Plug	2. Drive chain	3. Front drive shaft rear bearing
4. Front drive shaft	5. Front drive shaft front bearing	6. Sprocket
7. Needle bearing	8. Main shaft	9. Oil pump
10. Spacer	11. Steel ball	12. Snap ring
13. Snap ring	14. Main shaft bearing	15. Front case
16. Main shaft oil seal	17. Front oil seal	18. Spacer
19. Snap ring	20. Circlip	21. Electric controlled coupling
22. Oil cover	23. O-ring	24. Retainer
25. Transfer fluid temperature sensor	26. Baffle plate	27. Spacer
28. Snap ring	29. Dowel pin	30. Rear case
31. Harness bracket	32. Breather tube	33. Filler plug
34. Gasket	35. Drain plug	36. Rear bearing
37. Snap ring	38. Spacer	39. Rear oil seal
40. Companion flange	41. Self-lock nut	
A. Oil seal lip	B. Matching surface	

Apply Genuine Anaerobic Liquid Gasket or equivalent. Refer to [GI-22, "Recommended Chemical Products and Sealants"](#).

A

B

C

DLN

E

F

G

H

I

J

K

L

M

N

O

P

Ⓐ: Apply petroleum jelly.


Ⓑ: Apply transfer fluid. Refer to [MA-10, "Fluids and Lubricants"](#).

Refer to [GI-4, "Components"](#) for symbols not described above.

Disassembly

INFOID:000000008285564


1. Separate front case and rear case, then remove main shaft assembly. Refer to [DLN-66, "Disassembly"](#).
2. Remove snap ring (1) from main shaft.

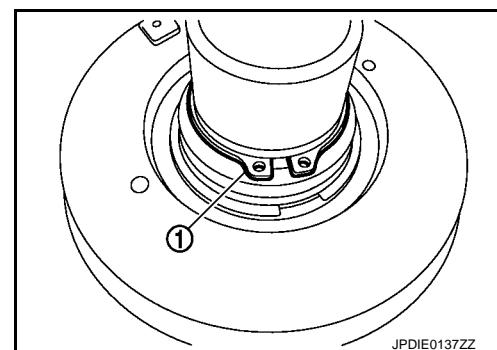


3. Remove spacer (1) and steel ball (2) from main shaft.

CAUTION:

Be careful not to drop the steel ball.

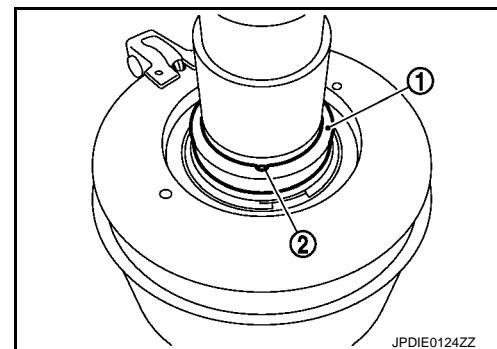

4. Using a press, remove electric controlled coupling from main shaft.

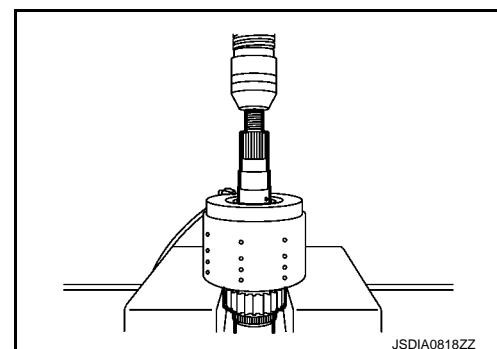


5. Remove circlip (1) from notch (A) of electric controlled coupling.

←: Front side

CAUTION:

- Never remove the circlip from the electric controlled coupling rear side.
- Never damage electric control coupling spline, bush, etc.

6. Remove snap ring from main shaft.

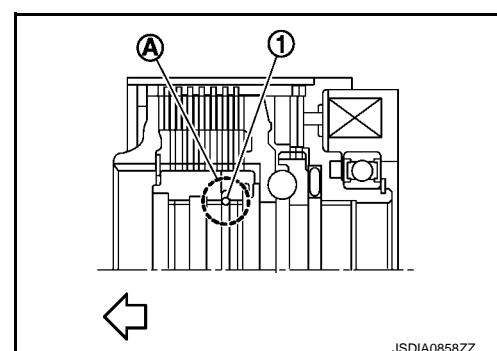


MAIN SHAFT

[TRANSFER: ETX13C]

< UNIT DISASSEMBLY AND ASSEMBLY >

7. Remove spacer (1) and steel ball (2) from main shaft.
CAUTION:
Be careful not to drop the steel ball.
8. Remove sprocket from main shaft.
9. Remove needle bearing from main shaft.
10. Perform inspection after disassembly. Refer to [DLN-78, "Inspection"](#).

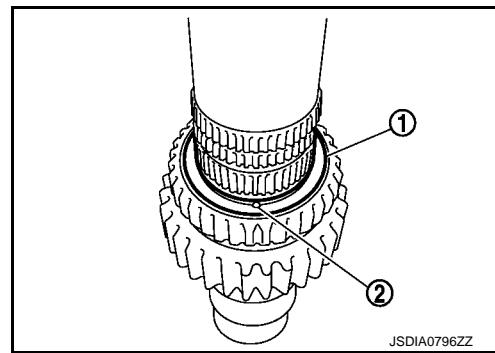


INFOID:000000008285565

DLN

Assembly

1. Install needle bearing to main shaft.
CAUTION:
Apply transfer fluid to the periphery of needle bearing.
2. Install sprocket to main shaft.
3. Install spacer (1) and steel ball (2) to main shaft.
CAUTION:
Be careful not to drop the steel ball.
4. Install snap ring to main shaft.
CAUTION:
Never reuse snap ring.

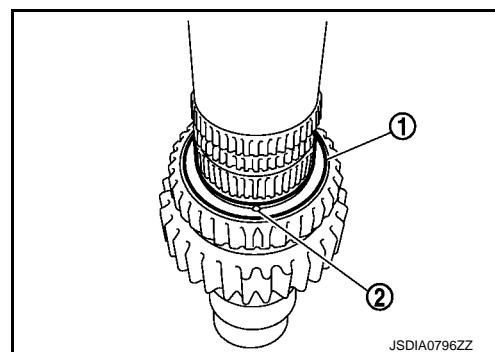


5. Install circlip (1) to notch (A) of the electric controlled coupling.

◀:Front side

CAUTION:

- Never install the circlip to the notches other than notch (A).
- Never install the circlip from the electric controlled coupling rear side.
- Never reduce the outer diameter of circlip to less than 43.2 mm (1.701 in).
- Never damage electric control coupling spline, bush, etc.
- Never reuse circlip.

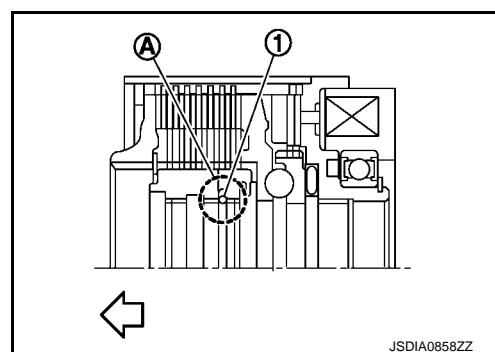

6. Install electric controlled coupling to main shaft.


CAUTION:

Securely insert it until locked.

7. Install spacer (1) and steel ball (2) to main shaft.

CAUTION:

Be careful not to drop the steel ball.

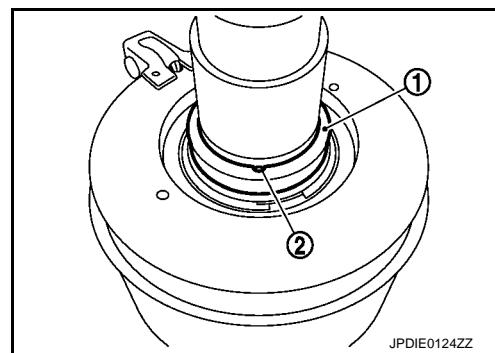


MAIN SHAFT

< UNIT DISASSEMBLY AND ASSEMBLY >

[TRANSFER: ETX13C]

8. Install snap ring (1) to main shaft.
- CAUTION:**
Never reuse snap ring.
9. Install main shaft assembly to rear case, then install front case and rear case. Refer to [DLN-69, "Assembly"](#).

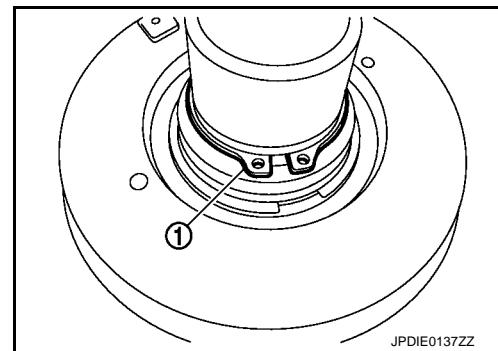

INFOID:0000000008285566


Inspection

INSPECTION AFTER DISASSEMBLY

Check items below. If necessary, replace them with new ones.


Cases

- Contact surfaces of bearing for wear, damage, etc.
- Damage and cracks of case.

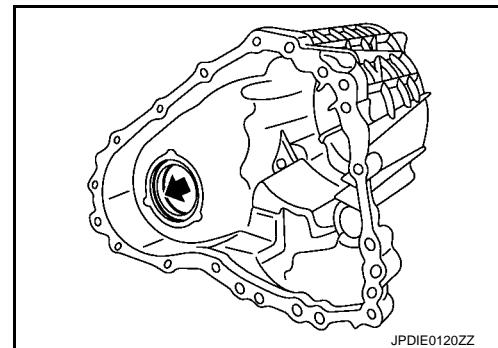


Bearing

Damage and rough rotation of bearing.

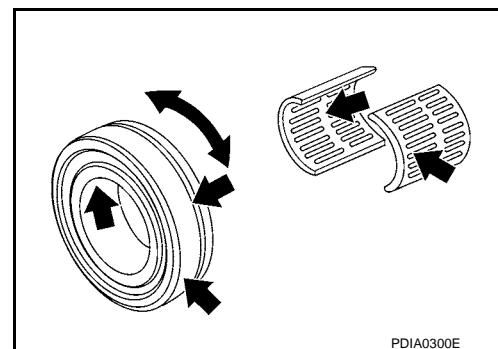

Shaft

Damage, peeling, dent, uneven wear, bending, etc. of shaft.

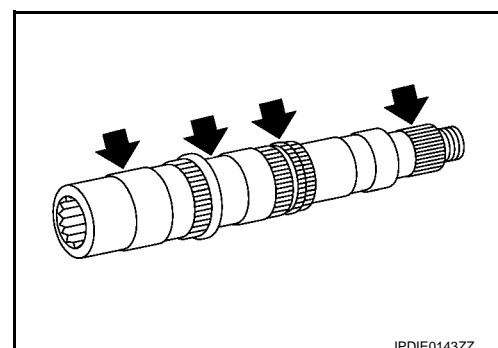


Gears and Chain

MAIN SHAFT

< UNIT DISASSEMBLY AND ASSEMBLY >

[TRANSFER: ETX13C]

- Excessive wear, damage, peeling, etc. of gear and chain.
- Cracks, damage, wear, etc of drive chain.

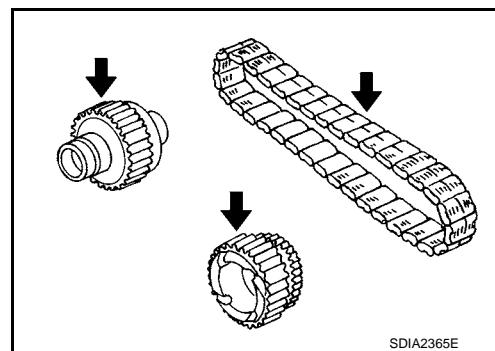

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
DLN

FRONT DRIVE SHAFT AND DRIVE CHAIN


< UNIT DISASSEMBLY AND ASSEMBLY >

[TRANSFER: ETX13C]

FRONT DRIVE SHAFT AND DRIVE CHAIN

Exploded View

INFOID:0000000008285567

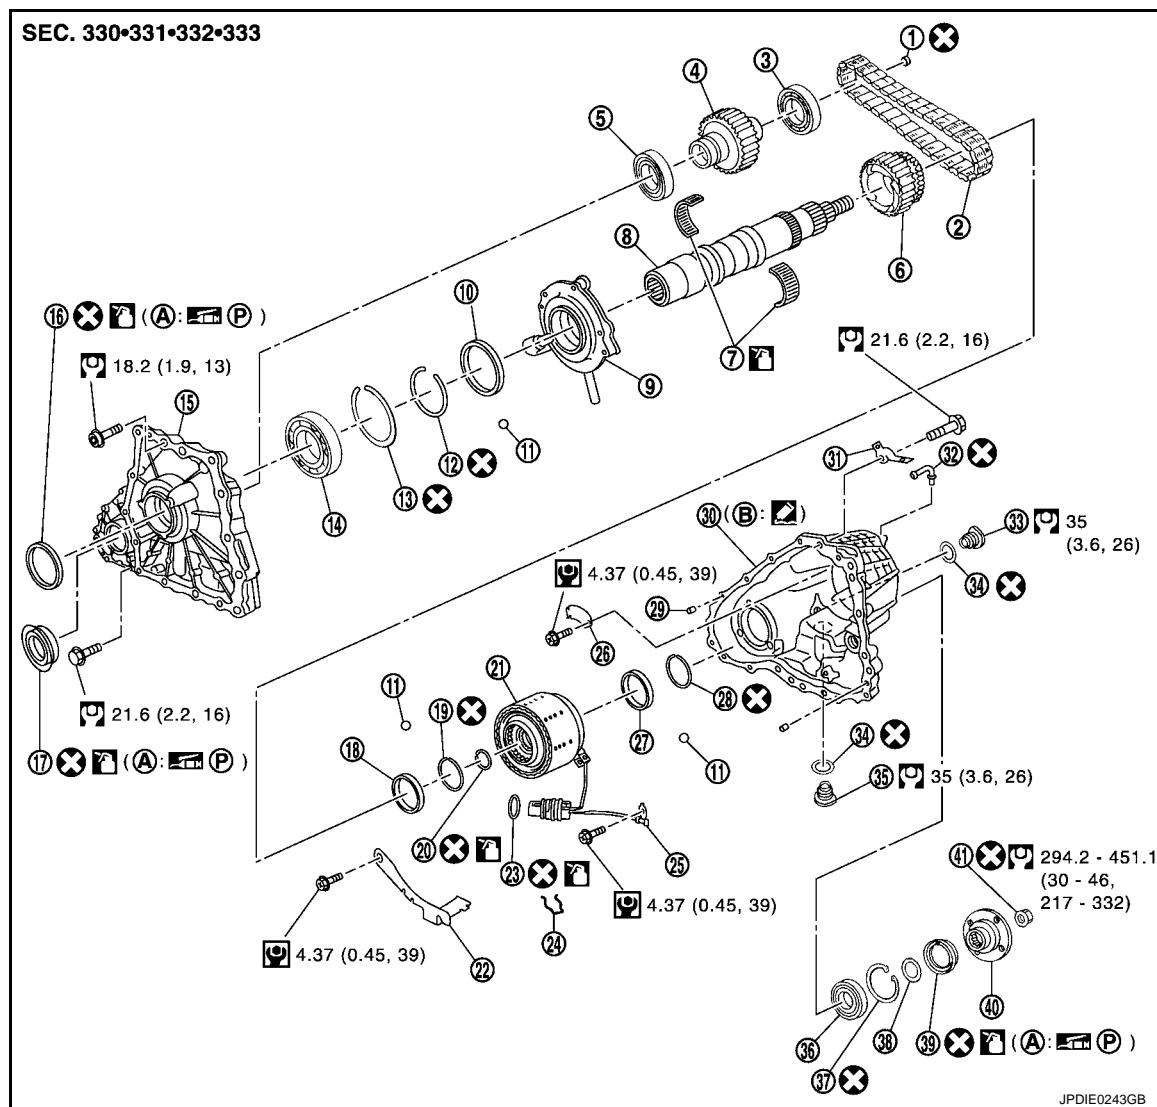

1. Plug	2. Drive chain	3. Front drive shaft rear bearing
4. Front drive shaft	5. Front drive shaft front bearing	6. Sprocket
7. Needle bearing	8. Main shaft	9. Oil pump
10. Spacer	11. Steel ball	12. Snap ring
13. Snap ring	14. Main shaft bearing	15. Front case
16. Main shaft oil seal	17. Front oil seal	18. Spacer
19. Snap ring	20. Circlip	21. Electric controlled coupling
22. Oil cover	23. O-ring	24. Retainer
25. Transfer fluid temperature sensor	26. Baffle plate	27. Spacer
28. Snap ring	29. Dowel pin	30. Rear case
31. Harness bracket	32. Breather tube	33. Filler plug
34. Gasket	35. Drain plug	36. Rear bearing
37. Snap ring	38. Spacer	39. Rear oil seal
40. Companion flange	41. Self-lock nut	
A. Oil seal lip	B. Matching surface	

Apply Genuine Anaerobic Liquid Gasket or equivalent. Refer to [GI-22, "Recommended Chemical Products and Sealants"](#).

 ⑧: Apply petroleum jelly.

: Apply transfer fluid. Refer to [MA-10, "Fluids and Lubricants"](#).

Refer to [GI-4, "Components"](#) for symbols not described above.


Disassembly

INFOID:000000008285568

1. Separate front case and rear case. Refer to [DLN-66, "Disassembly"](#).
2. Remove drive chain and front drive shaft.
3. Remove front drive shaft front bearing with the drift (A) and replacer (B).

A: Drift [SST: ST31214000 (J-25269-B)]


B: Replacer (commercial service tool)

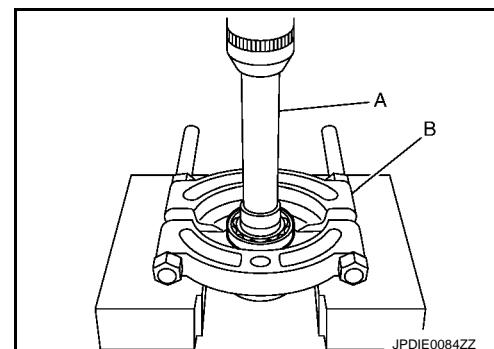

4. Remove front drive shaft rear bearing with the drift (A) and replacer (B).
5. Remove plug from front drive shaft.
6. Perform inspection after disassembly. Refer to [DLN-82, "Inspection"](#).

A: Drift [SST: ST31214000 (J-25269-B)]

B: Replacer (commercial service tool)

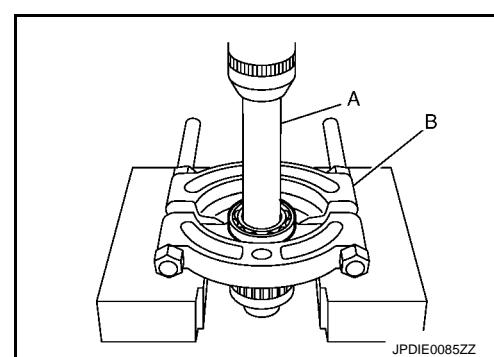

Assembly


INFOID:000000008285569

1. Install plug to front drive shaft.

CAUTION:

Never reuse plug.

2. Install front drive shaft front bearing with the drift (A) [SST: ST33200000 (J-26082)].

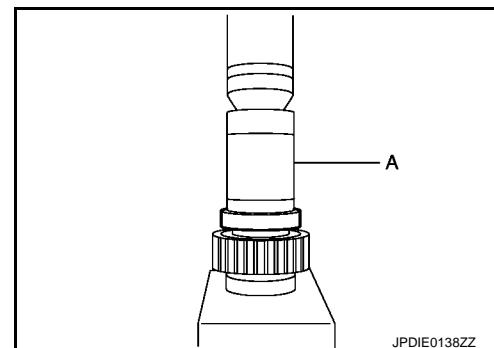


FRONT DRIVE SHAFT AND DRIVE CHAIN

< UNIT DISASSEMBLY AND ASSEMBLY >

[TRANSFER: ETX13C]

3. Install front drive shaft rear bearing with the drift (A) [SST: KV38104010 (—)].

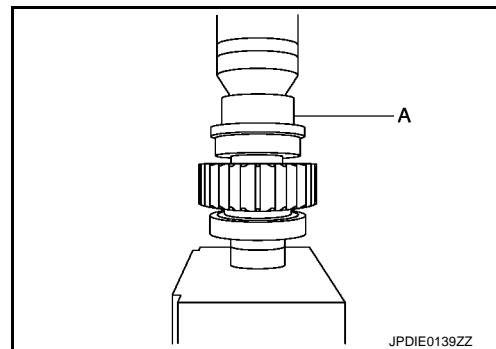

4. Set drive chain to front drive shaft.

CAUTION:


Identification mark (A) of drive chain should be in the side of front bearing (1) of front drive shaft.

5. Install drive chain to main shaft, and then install front drive shaft.

CAUTION:

Never use tools. Always install by hand.

6. Install front case to rear case. Refer to [DLN-69, "Assembly"](#).

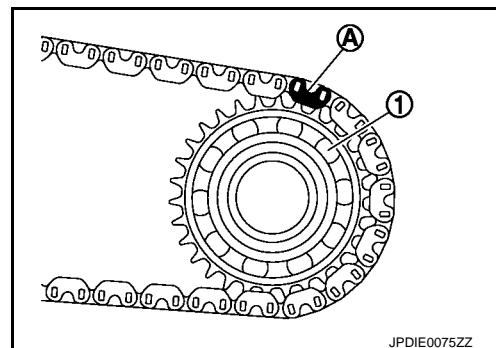

Inspection


INFOID:000000008285570

INSPECTION AFTER DISASSEMBLY

Check items below. If necessary, replace them with new ones.


Cases

- Contact surfaces of bearing for wear, damage, etc.
- Damage and cracks of case.

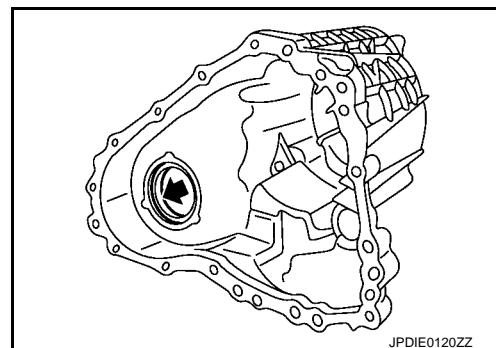

Bearing

Damage and rough rotation of bearing.

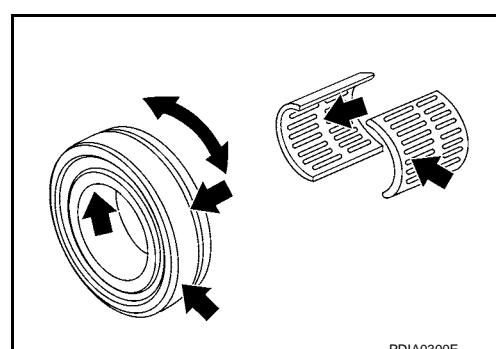


Shaft

FRONT DRIVE SHAFT AND DRIVE CHAIN

< UNIT DISASSEMBLY AND ASSEMBLY >

[TRANSFER: ETX13C]

Damage, peeling, dent, uneven wear, bending, etc. of shaft.

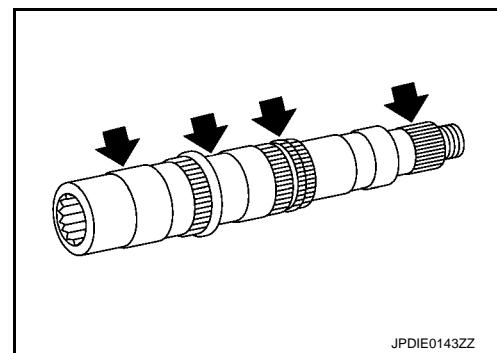


JPDIE0143ZZ

A
B
C

DLN

Gears and Chain

- Excessive wear, damage, peeling, etc. of gear and chain.
- Cracks, damage, wear, etc of drive chain.

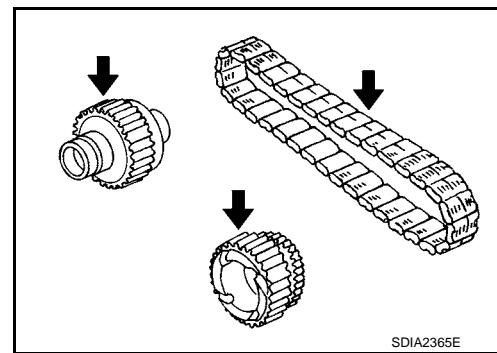

SDIA2365E

E
F
G

H
I
J

K
L
M
N

O
P

SERVICE DATA AND SPECIFICATIONS (SDS)

<SERVICE DATA AND SPECIFICATIONS (SDS)

[TRANSFER: ETX13C]

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

General Specifications

INFOID:000000008285571

Applied model	AWD
	VQ37VHR
	A/T
Transfer model	ETX13C
Fluid capacity (Approx.)	ℓ (US pt, Imp pt)
	1.0 (2-1/8, 1-3/4)

SYMPTOM DIAGNOSIS

NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

NVH Troubleshooting Chart

INFOID:0000000008285572


Use the chart below to find the cause of the symptom. If necessary, repair or replace these parts.

Reference		Possible cause and SUSPECTED PARTS												DLN	
		Uneven rotating torque	Center bearing improper installation	Excessive center bearing axial end play	Center bearing mounting (insulator) cracks, damage or deterioration	Excessive joint angle	Rotation imbalance	Excessive runout	DIFFERENTIAL	AXLE AND SUSPENSION	TIRE	ROAD WHEEL	DRIVE SHAFT	BRAKE	
Symptom	Noise	×	×	×	×	×	×	×	×	×	×	×	×	×	×
	Shake		×												—
	Vibration	×	×	×	×	×	×	×		×	×	×	×	×	—

x: Applicable

A B C D E F G H I J K L M N O P Z O P

PREPARATION**PREPARATION****Commercial Service Tools***INFOID:000000008285573*

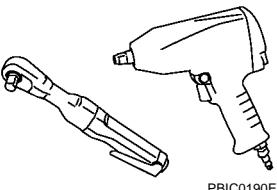Tool name	Description
Power tool	 PBIC0190E

PERIODIC MAINTENANCE

FRONT PROPELLER SHAFT

Inspection

INFOID:000000008285574

APPEARANCE AND NOISE

- Check the propeller shaft tube surface for dents or cracks. If damaged, replace propeller shaft assembly.
- If center bearing is noisy or damaged, replace propeller shaft assembly.

VIBRATION


If vibration is present at high speed, inspect propeller shaft runout first.

- With a dial indicator, measure propeller shaft runout at runout measuring points by rotating final drive companion flange with hands.

↖ : Vehicle Front

Propeller shaft runout

: Refer to [DLN-91, "Propeller Shaft Runout"](#).

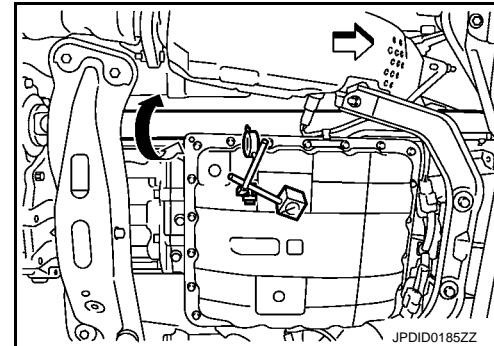


- Propeller shaft runout measuring point (Point "△")

Dimension

A: 381.5 mm (15.02 in)

- If runout still exceeds specifications, separate propeller shaft at final drive companion flange; then change the phase between companion flange and propeller shaft by the one bolt hole at a time and install propeller shaft.
- Check runout again. If runout still exceeds specifications, replace propeller shaft assembly.
- Check the vibration by driving vehicle.

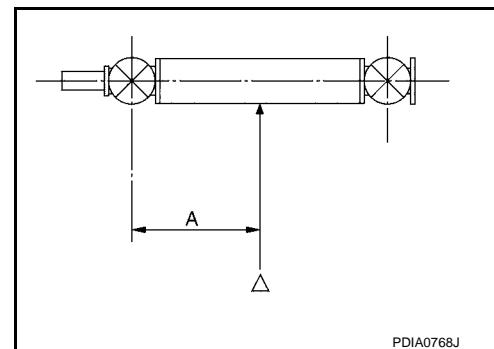


REMOVAL AND INSTALLATION

FRONT PROPELLER SHAFT

Exploded View

INFOID:000000008285575

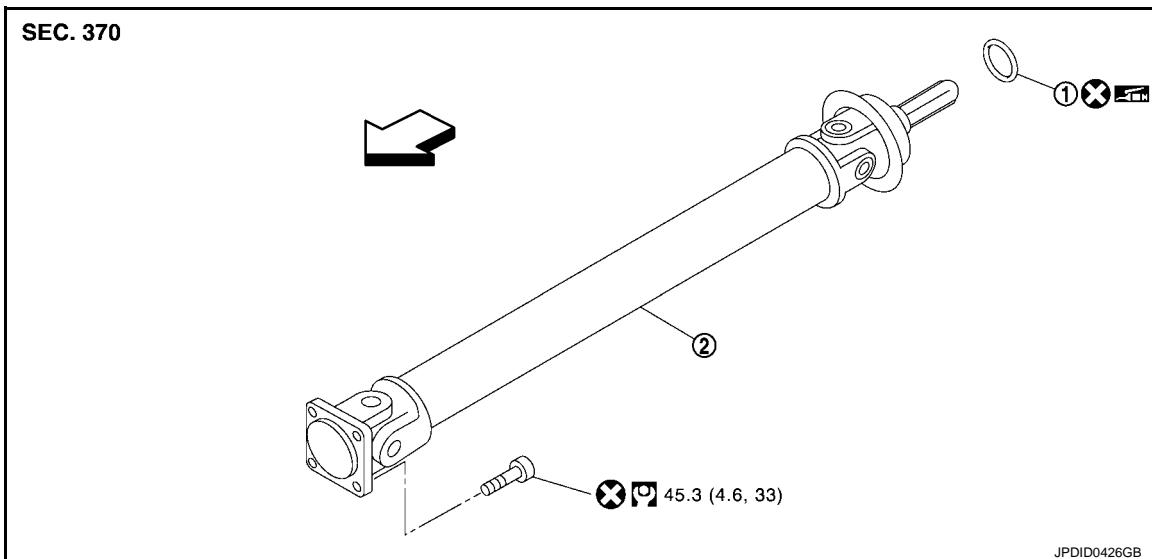

1. O-ring
2. Propeller shaft assembly

←: Vehicle front

Refer to [GI-4, "Components"](#) for symbols in the figure.

Removal and Installation

INFOID:0000000008385576

REMOVAL


1. Shift the transmission to the neutral position, and then release the parking brake.
2. Remove engine undercover with a power tool.
3. Remove front cross bar.
4. Remove the three-way catalyst (right bank) with a power tool. Refer to [EX-5, "Exploded View"](#).
5. Put matching mark onto propeller shaft flange yoke and final drive companion flange.


CAUTION:
For matching mark, use paint. Never damage propeller shaft flange and final drive companion flange.

6. Remove the propeller shaft assembly fixing bolts.
7. Remove propeller shaft assembly from the front final drive and transfer.

CAUTION:
Never damage the transfer front oil seal.

8. Hang steering hydraulic line not to interfere with work. Refer to [ST-52, "AWD : Exploded View"](#).
9. Remove propeller shaft assembly from O-ring.

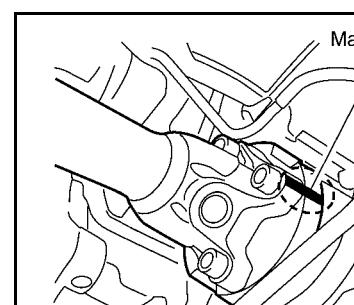

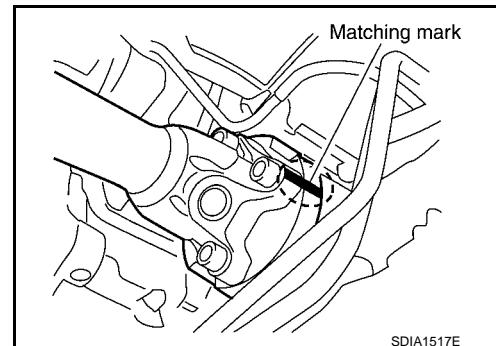

SDIA1517E

INSTALLATION

Note the following, and install in the reverse order of removal.

FRONT PROPELLER SHAFT


< REMOVAL AND INSTALLATION >

[FRONT PROPELLER SHAFT: 2S56A]

- Align matching mark to install propeller shaft assembly to final drive companion flange.
- Perform inspection after installation. Refer to [DLN-89, "Inspection"](#).

CAUTION:

- Never damage the transfer front oil seal.
- Never reuse O-ring.
- Apply multi-purpose grease onto O-ring.

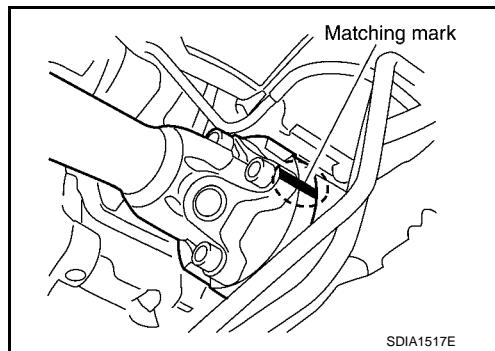

INFOID:0000000008285577

DLN

Inspection

INSPECTION AFTER REMOVAL

Appearance


Check propeller shaft for bend and damage. If damage is detected, replace propeller shaft assembly.

Propeller Shaft Runout

Check propeller shaft runout at measuring point with a dial indicator. If runout exceeds specifications, replace propeller shaft assembly.

Propeller shaft runout

: Refer to [DLN-91, "Propeller Shaft Runout"](#).

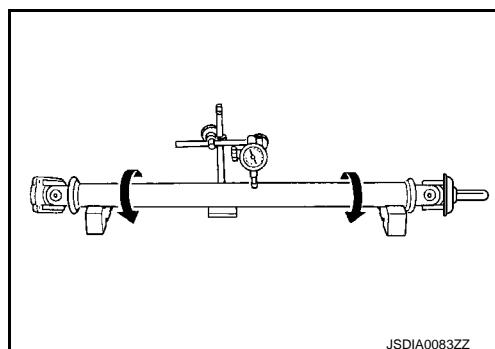


JSDIA0083ZZ

- Propeller shaft runout measuring point (Point “ Δ ”)

Dimension

A: 381.5 mm (15.02 in)

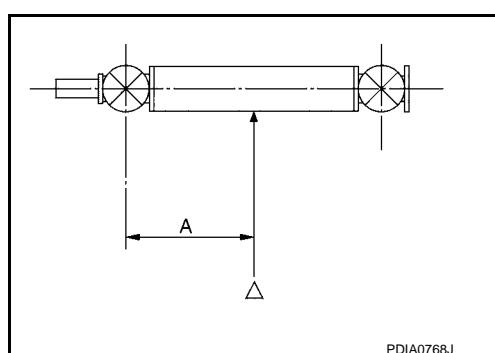

PDIA0768J

Journal Axial Play


As shown in the figure, while fixing yoke on one side, check axial play of joint. If it is outside the standard, replace propeller shaft assembly.

Journal axial play

: Refer to [DLN-91, "Journal Axial Play"](#).

CAUTION:

Never disassemble joints.

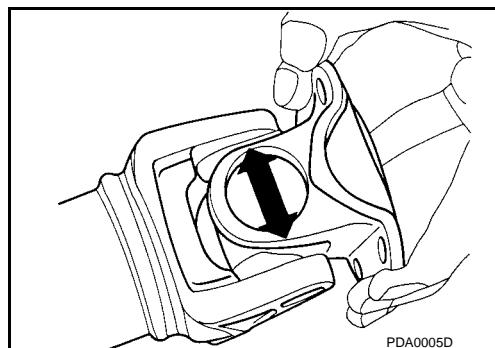

PDA0005D

INSPECTION AFTER INSTALLATION

After assembly, perform a driving test to check propeller shaft vibration. If vibration occurred, separate propeller shaft from final drive. Reinstall companion flange by changing the phase between companion flange and

FRONT PROPELLER SHAFT

< REMOVAL AND INSTALLATION >

[FRONT PROPELLER SHAFT: 2S56A]

propeller shaft by the one bolt hole at a time. Then perform driving test and check propeller shaft vibration again at each point.

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[FRONT PROPELLER SHAFT: 2S56A]

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

General Specifications

INFOID:000000008285578

Applied model	AWD
	VQ37VHR
	A/T
Propeller shaft model	2S56A
Number of joints	2
Type of journal bearings (Non-disassembly type)	Shell type
Coupling method with transfer	Sleeve type
Coupling method with front final drive	Flange type
Shaft length (Spider to spider)	763 mm (30.04 in)
Shaft outer diameter	42.7 mm (1.681 in)

Propeller Shaft Runout

INFOID:000000008285579

Item	Limit	Unit: mm (in)
Propeller shaft runout	0.8 (0.031)	

Journal Axial Play

INFOID:000000008285580

Item	Standard	Unit: mm (in)
Journal axial play	0 (0)	

SYMPTOM DIAGNOSIS**NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING****NVH Troubleshooting Chart**

INFOID:0000000008285581

Use the chart below to find the cause of the symptom. If necessary, repair or replace these parts.

Reference		Uneven rotating torque	Center bearing improper installation	Excessive center bearing axial end play	Center bearing mounting (insulator) cracks, damage or deterioration	Excessive joint angle	Rotation imbalance	Excessive runout	Differential	Axle and suspension	Tire	Road wheel	Drive shaft	Brake	Steering
Possible cause and SUSPECTED PARTS		DLN-94, "Inspection"	DLN-98, "Inspection"	—	DLN-98, "Inspection"	—	DLN-98, "Inspection"	—	NVH of REAR FINAL DRIVE in this section.	NVH in FAX, RAX, FSU and RSU section.	NVH in WT section.	NVH in WT section.	NVH in RAX section.	NVH in BR section.	NVH in ST section.
Symptom	Noise	×	×	×	×	×	×	×	×	×	×	×	×	×	×
	Shake		×	×		×	×	×		×	×	×	×	×	×
	Vibration	×	×	×	×	×	×	×		×	×	×	×	×	×

x: Applicable

PREPARATION

< PREPARATION >

[REAR PROPELLER SHAFT: 3S80A-R]

PREPARATION

PREPARATION

Commercial Service Tools

INFOID:000000008285582

A

B

C

DLN

E

F

G

H

I

J

K


L

M

N

O

P

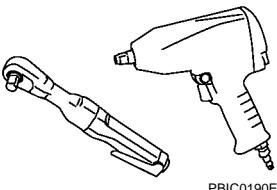Tool name	Description
Power tool	 <p>Loosening bolts and nuts</p>

PERIODIC MAINTENANCE

REAR PROPELLER SHAFT

Inspection

INFOID:0000000008285583

APPEARANCE AND NOISE

- Check the propeller shaft tube surface for dents or cracks. If damaged, replace propeller shaft assembly.
- If center bearing is noisy or damaged, replace propeller shaft assembly.


VIBRATION

If vibration is present at high speed, inspect propeller shaft runout first.

- With a dial indicator, measure propeller shaft runout at runout measuring points by rotating final drive companion flange with hands.

Propeller shaft runout

: Refer to [DLN-100, "Propeller Shaft Runout"](#).

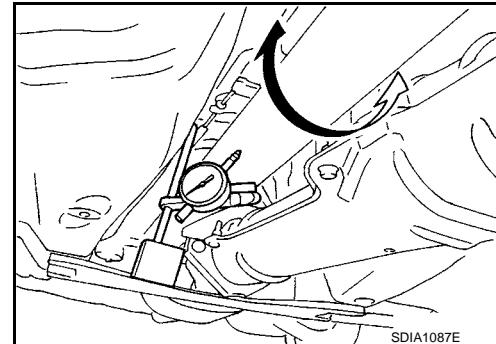

- Propeller shaft runout measuring point (Point “ Δ ”)


◀ : Vehicle Front

Dimension

A: 192 mm (7.56 in)

B: 172 mm (6.77 in)

C: 172 mm (6.77 in)

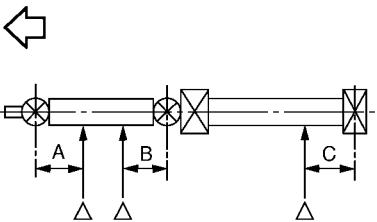

JSDIA0169ZZ


- If runout still exceeds specifications, separate propeller shaft at final drive companion flange; then change the phase between companion flange and propeller shaft by the one bolt hole at a time and install propeller shaft.
- Check runout again. If runout still exceeds specifications, replace propeller shaft assembly.
- Check the vibration by driving vehicle.

REMOVAL AND INSTALLATION

REAR PROPELLER SHAFT

Exploded View

INFOID:000000008285584

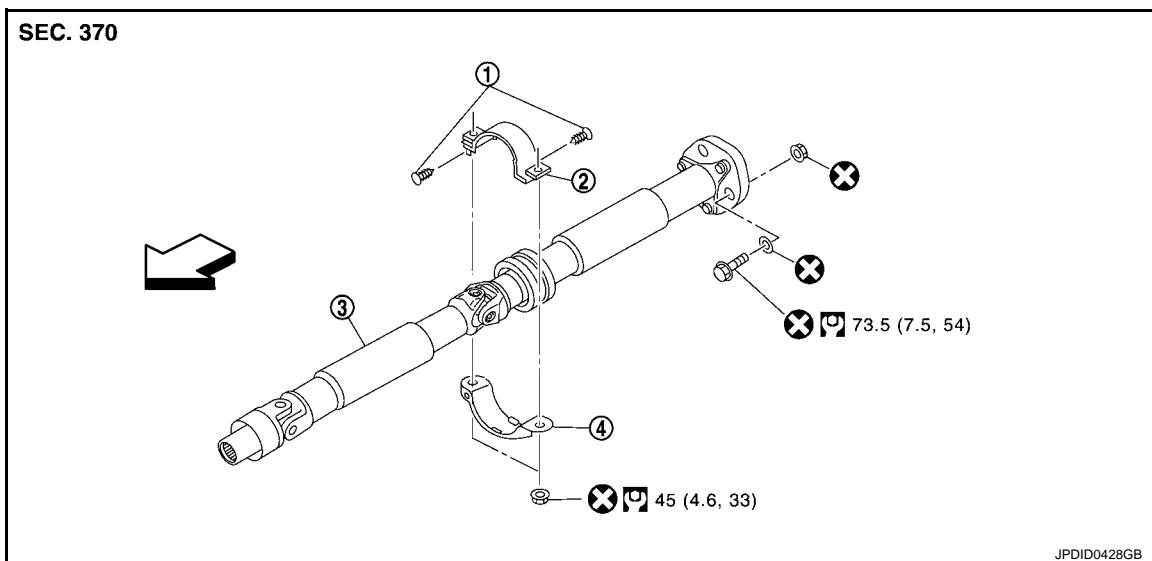

1. Clip
2. Center bearing mounting bracket (upper)
3. Propeller shaft assembly
4. Center bearing mounting bracket (lower)

◀: Vehicle front


Refer to [GI-4, "Components"](#) for symbols in the figure.

Removal and Installation

INFOID:000000008285585

REMOVAL

1. Shift the transmission to the neutral position, and then release the parking brake.
2. Remove the floor reinforcement.
3. Remove the center muffler with power tool. Refer to [EX-5, "Exploded View"](#).
4. Remove the heat insulator (1).

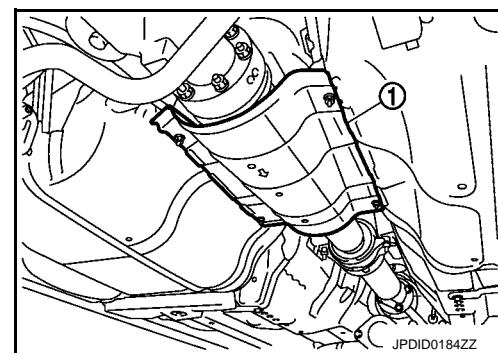

REAR PROPELLER SHAFT


< REMOVAL AND INSTALLATION >

[REAR PROPELLER SHAFT: 3S80A-R]

5. Put matching marks (➡) onto propeller shaft rubber coupling and final drive companion flange.

CAUTION:

For matching marks, use paint. Never damage propeller shaft rubber coupling and final drive companion flange.

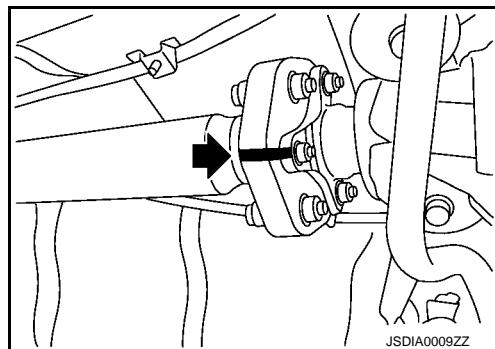


6. Loosen mounting nuts (1) of center bearing mounting brackets (upper/lower).

➡ : Vehicle front

CAUTION:


Tighten mounting nuts temporarily.

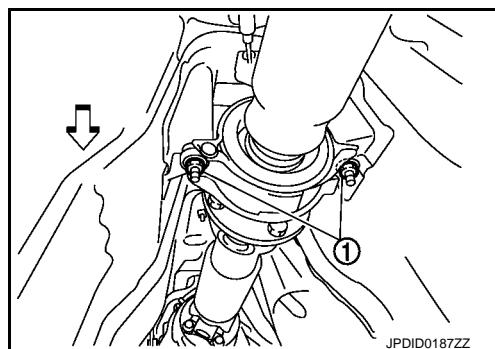

7. Remove propeller shaft assembly fixing bolts and nuts (➡).

CAUTION:


Never remove the rubber coupling from the propeller shaft assembly.

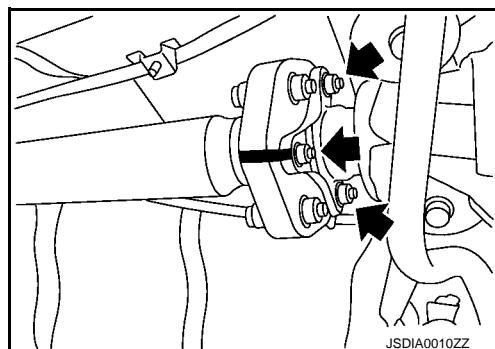

8. Slightly separate the rubber coupling (1) from the final drive companion flange (2).

CAUTION:

Never damage the final drive companion flange and rubber coupling.

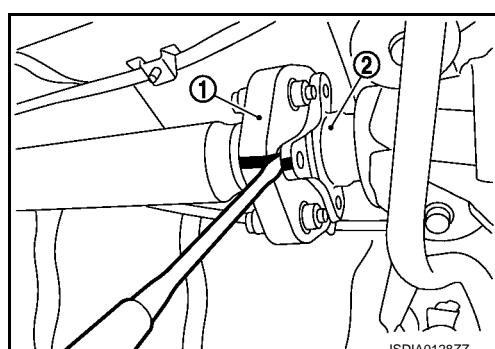


9. Remove center bearing mounting bracket fixing nuts.

CAUTION:

- The angle (A), which the third axis rubber coupling (1) forms with the final drive companion flange (2), must be 5° or less.
- Never damage the grease seal (3).
- Never damage the rubber coupling.

10. Slide the propeller shaft in the vehicle forward direction slightly. Separate the propeller shaft from the final drive companion flange.

CAUTION:

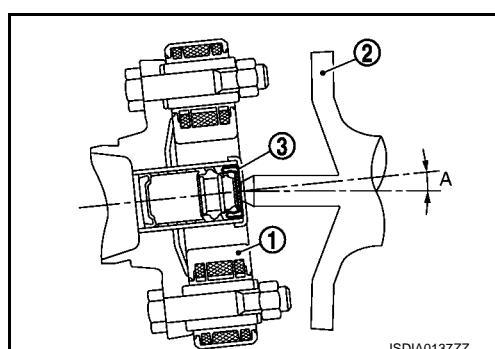

REAR PROPELLER SHAFT

< REMOVAL AND INSTALLATION >

[REAR PROPELLER SHAFT: 3S80A-R]

- The angle, which the third axis rubber coupling forms with the final drive companion flange, must be 5° or less.
- Never damage the grease seal.
- Never damage the rubber coupling.

11. Remove the propeller shaft assembly from the vehicle.

CAUTION:


Never damage the rear oil seal of transmission.

12. Remove clip and center bearing mounting bracket (upper/lower).


INSTALLATION

Note the following, and install in the reverse order of removal.


- Install center bearing mounting bracket (upper) (1) with its arrow mark (A) facing forward.
- Adjust position of center bearing mounting bracket (upper), center bearing mounting bracket (lower) (2) sliding back and forth to prevent play in thrust direction of center bearing insulator (3). Install center bearing mounting bracket (upper/lower) to vehicle.

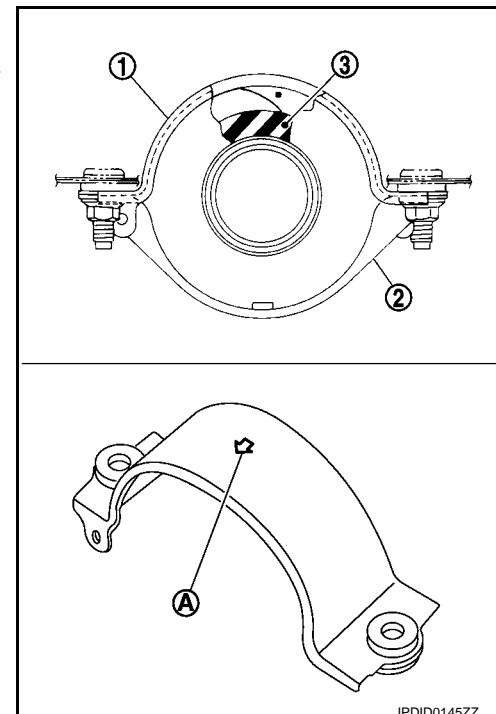

- Align matching marks to install propeller shaft rubber coupling to final drive companion flange.
- Perform inspection after installation. Refer to [DLN-98, "Inspection"](#).

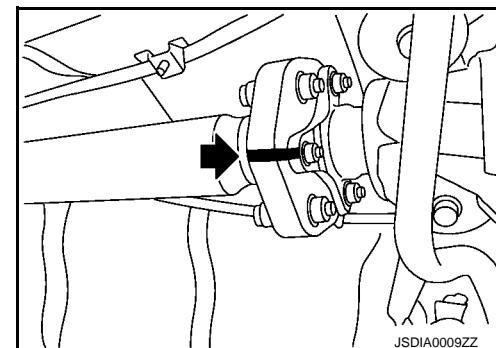

- If propeller shaft or final drive has been replaced, connect them as follows:
- Install the propeller shaft (1) while aligning its matching mark (A) with the matching mark (B) on the joint as close as possible.

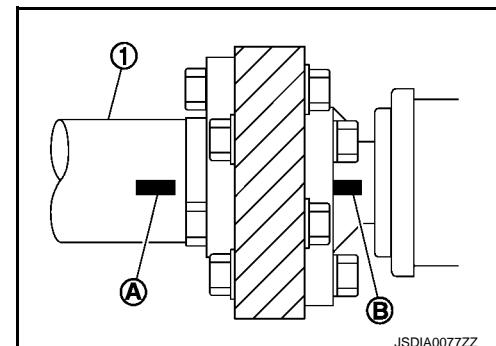


REAR PROPELLER SHAFT

< REMOVAL AND INSTALLATION >

[REAR PROPELLER SHAFT: 3S80A-R]

CAUTION:

- The angle (A), which the third axis rubber coupling (1) forms with the final drive companion flange (2), must be 5° or less.
- Never damage the grease seal (3).
- Never damage the rubber coupling.
- Never damage the rear oil seal of transmission.
- Never damage the rubber coupling, protect it with a shop towel or equivalent.

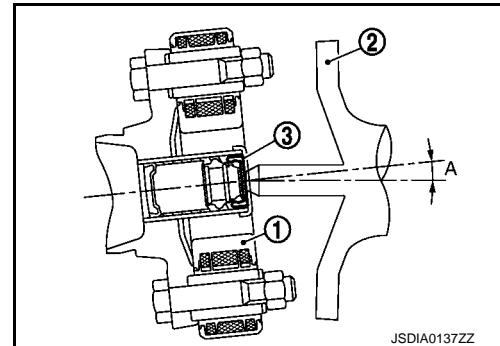

JSDIA0137ZZ

INFOID:0000000008285586

Inspection

INSPECTION AFTER REMOVAL

Appearance


Check propeller shaft for bend and damage. If damage is detected, replace propeller shaft assembly.

Propeller Shaft Runout

Check propeller shaft runout at measuring points with a dial indicator. If runout exceeds specifications, replace propeller shaft assembly.

Propeller shaft runout

: Refer to [DLN-100, "Propeller Shaft Runout"](#).

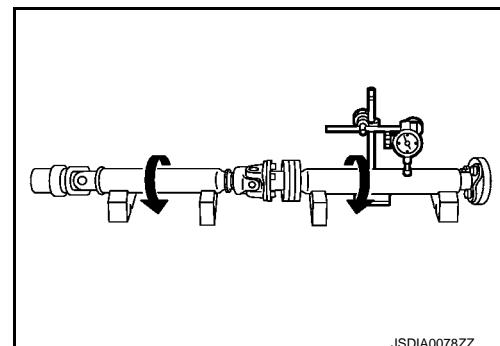

JSDIA0078ZZ

- Propeller shaft runout measuring point (Point "Δ")


↖ : Vehicle Front

Dimension

A: 192 mm (7.56 in)

B: 172 mm (6.77 in)

C: 172 mm (6.77 in)

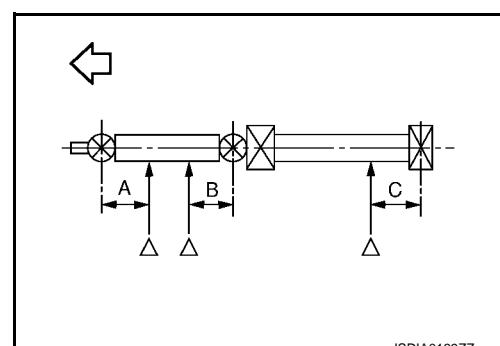

JSDIA0169ZZ

Journal Axial Play


As shown in the figure, while fixing yoke on one side, check axial play of joint. If it is outside the standard, replace propeller shaft assembly.

Journal axial play

: Refer to [DLN-100, "Journal Axial Play"](#).

CAUTION:

Never disassemble joints.

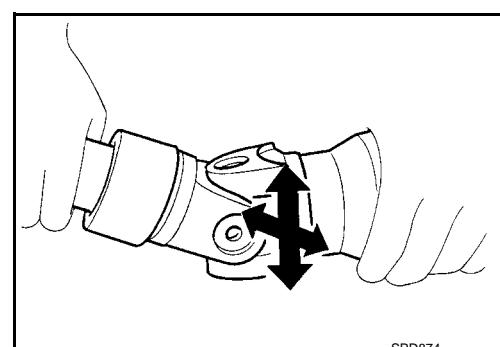

SPD874

Center Bearing

Check center bearing for noise and damage. If noise or damage is detected, replace propeller shaft assembly.

CAUTION:

REAR PROPELLER SHAFT

< REMOVAL AND INSTALLATION >

[REAR PROPELLER SHAFT: 3S80A-R]

Never disassemble center bearing.

INSPECTION AFTER INSTALLATION

After assembly, perform a driving test to check propeller shaft vibration. If vibration occurred, separate propeller shaft from final drive. Reinstall companion flange by changing the phase between companion flange and propeller shaft by the one bolt hole at a time. Then perform driving test and check propeller shaft vibration again at each point.

A

B

C

DLN

E

F

G

H

I

J

K

L

M

N

O

P

SERVICE DATA AND SPECIFICATIONS (SDS)

<SERVICE DATA AND SPECIFICATIONS (SDS)

[REAR PROPELLER SHAFT: 3S80A-R]

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

General Specifications

INFOID:000000008285587

Applied model		2WD
		VQ37VHR
		A/T
Propeller shaft model		3S80A-R
Number of joints		3
Type of journal bearings (Non-disassembly type)	1st joint	Shell type
	2nd joint	Shell type
	3rd joint	Rubber coupling type
Coupling method with transmission		Sleeve type
Coupling method with rear final drive		Rubber coupling type
Shaft length	1st (Spider to spider)	697 mm (27.44 in)
	2nd (Spider to rubber coupling center)	722 mm (28.43 in)
Shaft outer diameter	1st	82.6 mm (3.252 in)
	2nd	75.0 mm (2.953 in)

Propeller Shaft Runout

INFOID:000000008285588

Unit: mm (in)

Item	Limit
Propeller shaft runout	0.8 (0.031)

Journal Axial Play

INFOID:000000008285589

Unit: mm (in)

Item	Standard
Journal axial play	0 (0)

SYMPTOM DIAGNOSIS

NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

NVH Troubleshooting Chart

INFOID:0000000008285590

Use the chart below to find the cause of the symptom. If necessary, repair or replace these parts.

Reference	Possible cause and SUSPECTED PARTS	Uneven rotating torque	DLN-103. "Inspection"	Center bearing improper installation	DLN-107. "Inspection"	Excessive center bearing axial end play	—	Center bearing mounting (insulator) cracks, damage or deterioration	DLN-107. "Inspection"	Excessive joint angle	DLN-107. "Inspection"	Rotation imbalance	DLN-107. "Inspection"	Excessive runout	DLN-107. "Inspection"	DIFFERENTIAL	AXLE AND SUSPENSION	TIRES	ROAD WHEEL	DRIVE SHAFT	BRAKE	STEERING	DLN
		×	Uneven rotating torque	×	Center bearing improper installation	×	Excessive center bearing axial end play	—	Center bearing mounting (insulator) cracks, damage or deterioration	—	Excessive joint angle	—	Rotation imbalance	—	Excessive runout	—	DIFFERENTIAL	AXLE AND SUSPENSION	TIRES	ROAD WHEEL	DRIVE SHAFT	BRAKE	STEERING
Symptom		Noise	×	Center bearing improper installation	—	Excessive center bearing axial end play	—	Center bearing mounting (insulator) cracks, damage or deterioration	—	Excessive joint angle	—	Rotation imbalance	—	Excessive runout	—	DIFFERENTIAL	AXLE AND SUSPENSION	TIRES	ROAD WHEEL	DRIVE SHAFT	BRAKE	STEERING	DLN
	Shake	×	Center bearing improper installation	—	Excessive center bearing axial end play	—	Center bearing mounting (insulator) cracks, damage or deterioration	—	Excessive joint angle	—	Rotation imbalance	—	Excessive runout	—	DIFFERENTIAL	AXLE AND SUSPENSION	TIRES	ROAD WHEEL	DRIVE SHAFT	BRAKE	STEERING	DLN	
	Vibration	×	Center bearing improper installation	—	Excessive center bearing axial end play	—	Center bearing mounting (insulator) cracks, damage or deterioration	—	Excessive joint angle	—	Rotation imbalance	—	Excessive runout	—	DIFFERENTIAL	AXLE AND SUSPENSION	TIRES	ROAD WHEEL	DRIVE SHAFT	BRAKE	STEERING	DLN	

x: Applicable

A B C D E F G H I J K L M N O P Z O P

PREPARATION

[REAR PROPELLER SHAFT: 3F80A-1VL107]


<PREPARATION>

PREPARATION

PREPARATION

Commercial Service Tools

INFOID:000000008285591

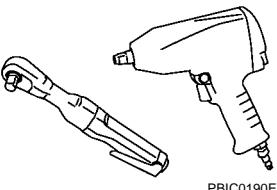Tool name	Description
Power tool	 Loosening bolts and nuts

PERIODIC MAINTENANCE

REAR PROPELLER SHAFT

Inspection

INFOID:000000008285592

APPEARANCE AND NOISE

- Check the propeller shaft tube surface for dents or cracks. If damaged, replace propeller shaft assembly.
- If center bearing is noisy or damaged, replace propeller shaft assembly.


VIBRATION

If vibration is present at high speed, inspect propeller shaft runout first.

- With a dial indicator, measure propeller shaft runout at runout measuring points by rotating final drive companion flange with hands.

Propeller shaft runout

: Refer to [DLN-109, "Propeller Shaft Runout"](#).

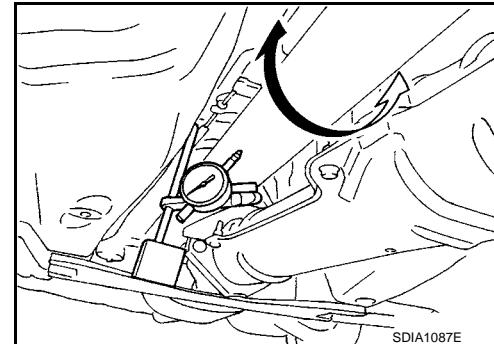

- Propeller shaft runout measuring point (Point "Δ")


↖ : Vehicle Front

Dimension

A: 162 mm (6.38 in)

B: 245 mm (9.65 in)


C: 185 mm (7.28 in)

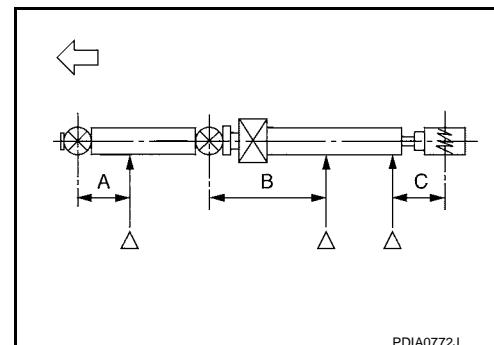

- If runout still exceeds specifications, separate propeller shaft at final drive companion flange or transfer companion flange; then change the phase between companion flange and propeller shaft by the one bolt hole at a time and install propeller shaft.
- Check runout again. If runout still exceeds specifications, replace propeller shaft assembly.
- Check the vibration by driving vehicle.

REMOVAL AND INSTALLATION**REAR PROPELLER SHAFT****Exploded View**

INFOID:000000008285593

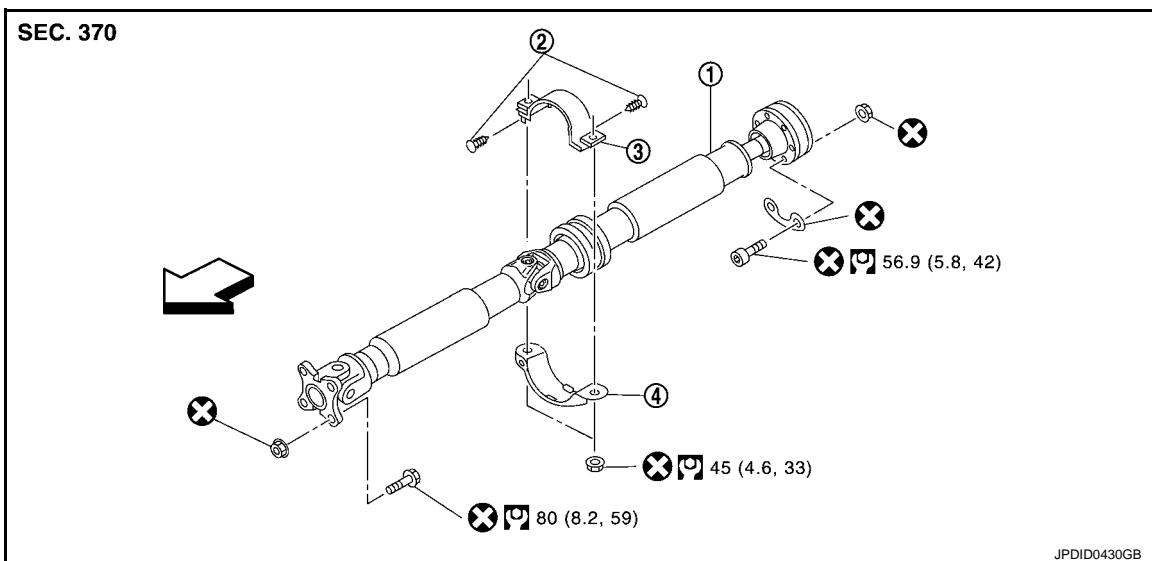

JPIDID0430GB

- 1. Propeller shaft assembly
- 2. Clip
- 3. Center bearing mounting bracket (upper)
- 4. Center bearing mounting bracket (lower)

◀: Vehicle front


Refer to [GI-4, "Components"](#) for symbols in the figure.

Removal and Installation

INFOID:000000008285594

REMOVAL

1. Shift the transmission to the neutral position, and release the parking brake.
2. Remove the floor reinforcement.
3. Remove the center muffler with power tool. Refer to [EX-5, "Exploded View"](#).
4. Remove the heat insulator (1).

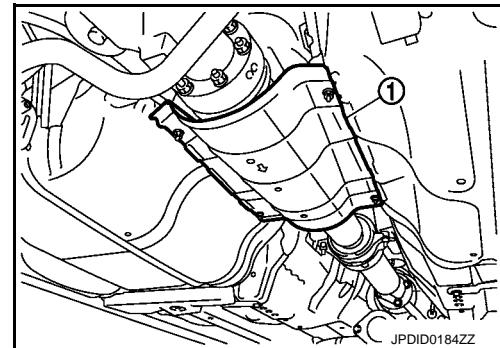

REAR PROPELLER SHAFT


< REMOVAL AND INSTALLATION >

[REAR PROPELLER SHAFT: 3F80A-1VL107]

5. Put matching marks (A) on propeller shaft flange yoke and transfer companion flange.

CAUTION:

For matching marks, use paint. Never damage propeller shaft flange yoke and transfer companion flange.

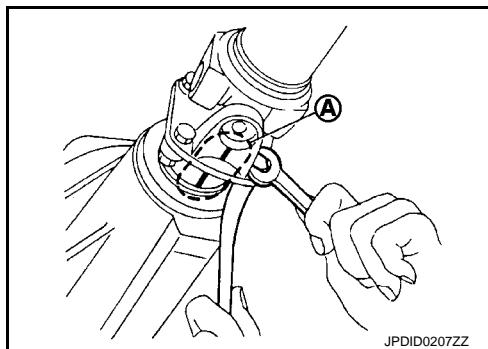


JP DID 0207ZZ

6. Put matching marks (A) on propeller shaft rebro joint and final drive companion flange.

CAUTION:

For matching marks, use paint. Never damage propeller shaft rebro joint and final drive companion flange.

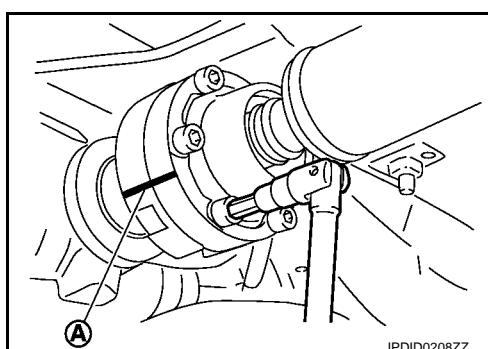

JP DID 0208ZZ

7. Loosen mounting nuts (1) of center bearing mounting brackets (upper/lower).

CAUTION:


Tighten mounting nuts temporarily.

◀ : Vehicle front

8. Remove propeller shaft assembly fixing bolts and nuts.
9. Remove center bearing mounting bracket fixing nuts.
10. Remove propeller shaft assembly.

CAUTION:

If constant velocity joint was bent during propeller shaft assembly removal, installation, or transportation, its boot may be damaged. Wrap boot interference area to metal part with shop cloth or rubber to protect boot from breakage.

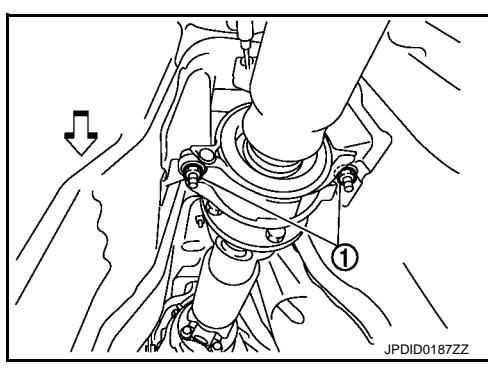

JP DID 0187ZZ

INSTALLATION

Note the following, and install in the reverse order of removal.

A

B

C

DLN

E

F

G

H

I

J

K

L

M

N

O


P

REAR PROPELLER SHAFT


< REMOVAL AND INSTALLATION >

[REAR PROPELLER SHAFT: 3F80A-1VL107]


- Install center bearing mounting bracket (upper) (1) with its arrow mark (A) facing forward.
- Adjust position of center bearing mounting bracket (upper), center bearing mounting bracket (lower) (2) sliding back and forth to prevent play in thrust direction of center bearing insulator (3). Install center bearing mounting bracket (upper/lower) to vehicle.

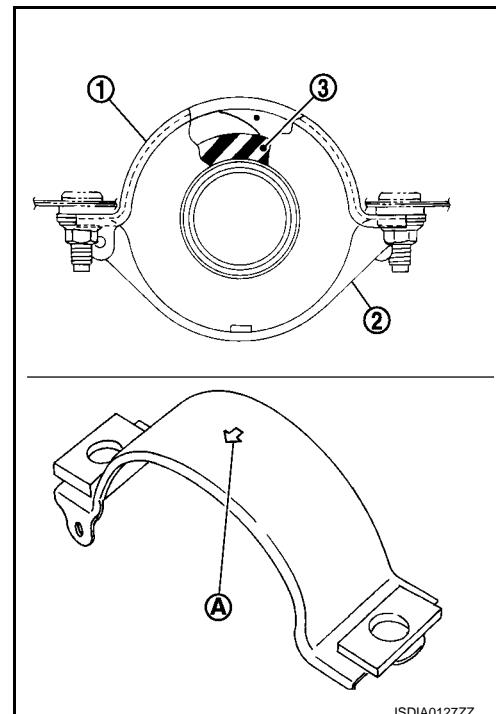

- Align matching marks (A) to install propeller shaft flange yoke and transfer companion flange.

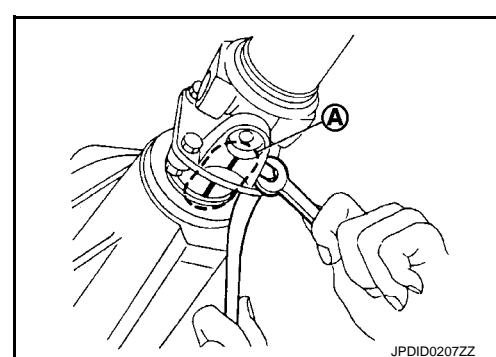

- Align matching marks (A) to install propeller shaft rebro joint and final drive companion flange.

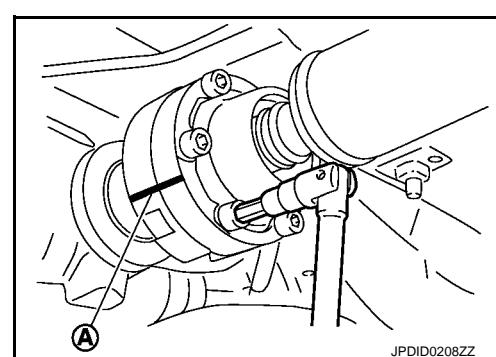

CAUTION:


REAR PROPELLER SHAFT

< REMOVAL AND INSTALLATION >

[REAR PROPELLER SHAFT: 3F80A-1VL107]

Tighten mounting bolt and nut in the order shown in the figure.

- Perform inspection after removal. Refer to [DLN-107, "Inspection"](#).

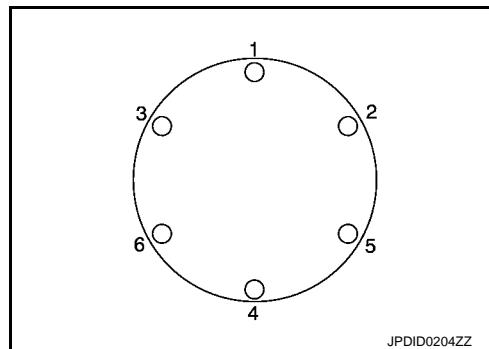


• If propeller shaft or final drive has been replaced, connect them as follows:

- Install the propeller shaft while aligning its matching mark (A) with the matching mark (B) on the joint as close as possible.

CAUTION:

Avoid damaging the rebro joint boot, protect it with a shop towel or equivalent.

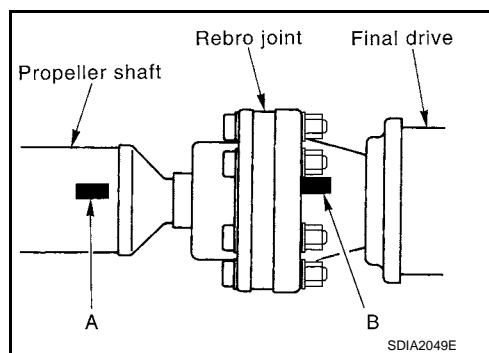

Inspection

INFOID:000000008285595

INSPECTION AFTER REMOVAL

Appearance


Check propeller shaft for bend and damage. If damage is detected, replace propeller shaft assembly.

Propeller Shaft Runout

Check propeller shaft runout at measuring points with a dial indicator. If runout exceeds specifications, replace propeller shaft assembly.

Propeller shaft runout

: Refer to [DLN-109, "Propeller Shaft Runout"](#).

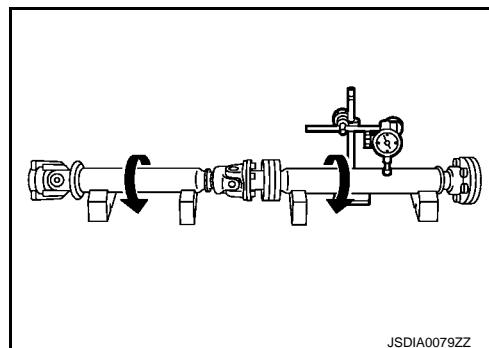

- Propeller shaft runout measuring point (Point "Δ")


↖ : Vehicle Front

Dimension

A: 162 mm (6.38 in)

B: 245 mm (9.65 in)

C: 185 mm (7.28 in)

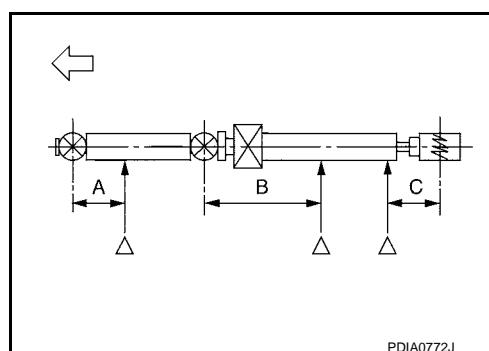

Journal Axial Play

REAR PROPELLER SHAFT

< REMOVAL AND INSTALLATION >

[REAR PROPELLER SHAFT: 3F80A-1VL107]


As shown in the figure, while fixing yoke on one side, check axial play of joint. If it is outside the standard, replace propeller shaft assembly.

Journal axial play

: Refer to [DLN-109, "Journal Axial Play"](#).

CAUTION:

Never disassemble joints.

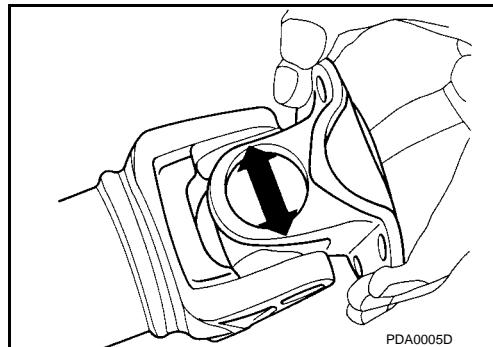

Center Bearing

Check center bearing for noise and damage. If noise or damage is detected, replace propeller shaft assembly.

CAUTION:

Never disassemble center bearing.

INSPECTION AFTER INSTALLATION

After assembly, perform a driving test to check propeller shaft vibration. If vibration occurred, separate propeller shaft from final drive or transfer. Reinstall companion flange by changing the phase between companion flange and propeller shaft by the one bolt hole at a time. Then perform driving test and check propeller shaft vibration again at each point.

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[REAR PROPELLER SHAFT: 3F80A-1VL107]

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

General Specifications

INFOID:000000008285596

Applied model	AWD	A
	VQ37VHR	B
	A/T	C
Propeller shaft model	3F80A-1VL107	DLN
Number of joints	3	
Type of journal bearings (Non-disassembly type)	1st joint	Shell type
	2nd joint	Shell type
	3rd joint	Rebro joint type
Coupling method with transmission	Flange type	
Coupling method with rear final drive	Rebro joint type	
Shaft length	1st (Spider to spider)	435 mm (17.12 in)
	2nd (Spider to spider)	706 mm (27.80 in)
Shaft outer diameter	1st	82.6 mm (3.252 in)
	2nd	75.0 mm (2.953 in)

Propeller Shaft Runout

INFOID:000000008285597

Item	Limit	Unit: mm (in)
Propeller shaft runout	0.8 (0.031)	

Journal Axial Play

INFOID:000000008285598

Item	Standard	Unit: mm (in)
Journal axial play	0 (0)	

FRONT FINAL DRIVE ASSEMBLY

< SYSTEM DESCRIPTION >

[FRONT FINAL DRIVE: F160A]


SYSTEM DESCRIPTION

FRONT FINAL DRIVE ASSEMBLY

System Diagram

INFOID:0000000008285599

CROSS-SECTIONAL VIEW

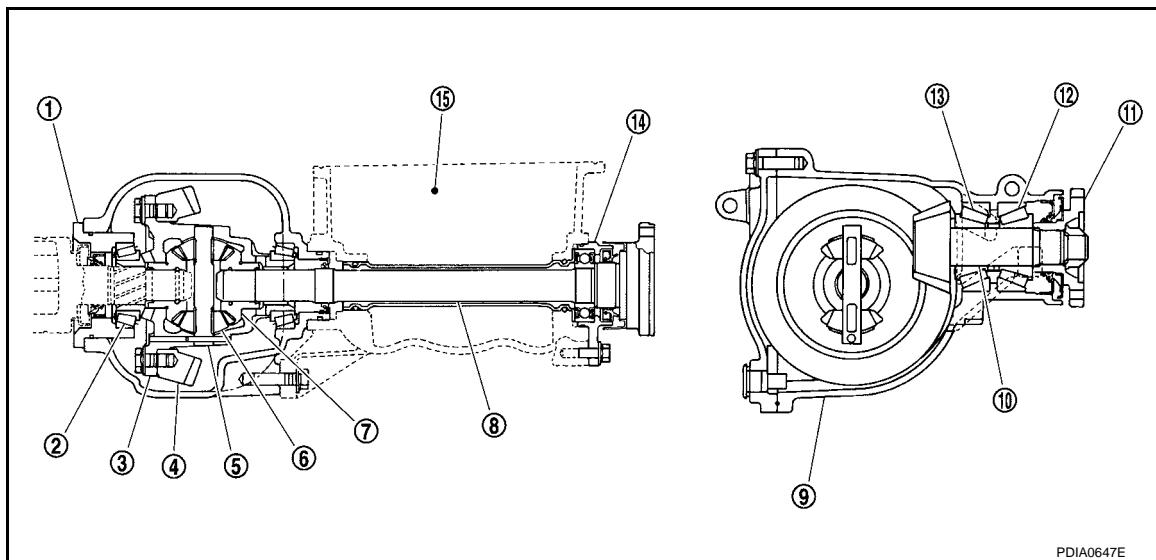

1. Side retainer	2. Side bearing	3. Differential case
4. Drive gear	5. Pinion mate shaft	6. Pinion mate gear
7. Side gear	8. Side shaft	9. Gear carrier
10. Drive pinion	11. Companion flange	12. Pinion front bearing
13. Pinion rear bearing	14. Extension tube retainer	15. Engine assembly

SYMPTOM DIAGNOSIS

NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

NVH Troubleshooting Chart

INFOID:0000000008285600

Use the chart below to find the cause of the symptom. If necessary, repair or replace these parts.

Reference	Possible cause and SUSPECTED PARTS												DLN	
	Gear tooth rough	Gear contact improper	Tooth surfaces worn	Backlash incorrect	Companion flange excessive runout	Gear oil improper	PROPELLER SHAFT	AXLE AND SUSPENSION	TIRE	ROAD WHEEL	DRIVE SHAFT	BRAKE	STEERING	
	×	×	×	×	×	×			×	×	×	×	×	

Symptom

Noise

x: Applicable

A

B

C

DLN

M

T

G

I

U

K

L

M

Z

O

P

PRECAUTION

PRECAUTIONS

Service Notice or Precautions for Front Final Drive

INFOID:0000000008285601

- Check for the correct installation status prior to removal or disassembly. If matching marks are required, be certain they never interfere with the function of the parts when applied.
- Overhaul should be done in a clean work area, it is preferable to work in dustproof area.
- Before disassembly, using steam or white gasoline, completely remove sand and mud from the exterior of the unit, preventing them from entering into the unit during disassembly or assembly.
- Check appearance of the disassembled parts for damage, deformation, and unusual wear. Replace them with new ones if necessary.
- Gaskets, seals and O-rings should be replaced any time when the unit is disassembled.
- In principle, tighten bolts or nuts gradually in several steps working diagonally from inside to outside. If tightening sequence is specified, observe it.
- Clean and flush the parts sufficiently and blow-dry them.
- Be careful not to damage sliding surfaces and mating surfaces.
- When applying sealant, remove the old sealant from the mounting surface; then remove any moisture, oil, and foreign materials from the application and mounting surfaces.
- Always use shop paper for cleaning the inside of components.
- Avoid using cotton gloves or shop rags to prevent entering of lint.
- During assembly, observe the specified tightening torque, and apply new gear oil, petroleum jelly, or multi-purpose grease as specified for each vehicle, if necessary.

NOTE:

Front oil seal cannot be replaced on vehicle, because there is not enough room.

< PREPARATION >

PREPARATION

PREPARATION

Special Service Tools

INFOID:0000000008285602

A

B

C

DLN

E

F

G

H

I

J

K





L

M

N

O







P

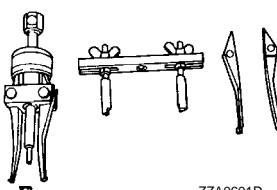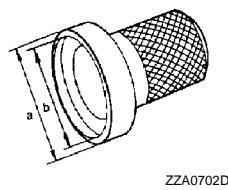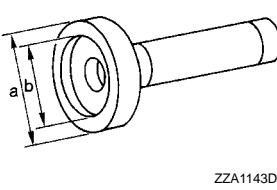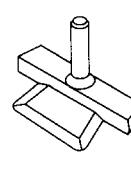Tool number (TechMate No.) Tool name	Description
KV381054S0 (J-34286) Puller	<ul style="list-style-type: none"> • Removing side oil seal (right side) • Removing side bearing outer race 
ST33400001 (J-26082) Drift a: 60 mm (2.36 in) dia. b: 47 mm (1.85 in) dia.	<ul style="list-style-type: none"> • Installing side oil seal (right side) • Installing front oil seal 
KV38102100 (J-25803-01) Drift a: 44 mm (1.73 in) dia. b: 36 mm (1.42 in) dia. c: 24.5 mm (0.965 in) dia.	Installing side oil seal (left side)
KV38100200 (—) Drift a: 65 mm (2.56 in) dia. b: 49 mm (1.93 in) dia.	Installing side shaft oil seal
ST30032000 (J-26010-01) Drift a: 80 mm (3.15 in) dia. b: 38 mm (1.50 in) dia. c: 31 mm (1.22 in) dia.	<ul style="list-style-type: none"> • Installing side shaft • Installing pinion rear bearing inner race 
KV10111100 (J-37228) Seal cutter	Removing carrier cover
	

PREPARATION

< PREPARATION >

[FRONT FINAL DRIVE: F160A]

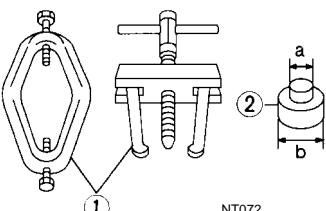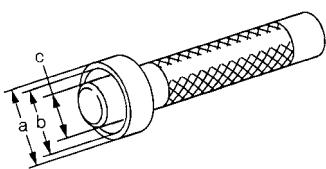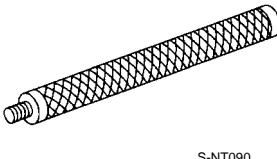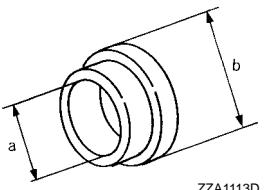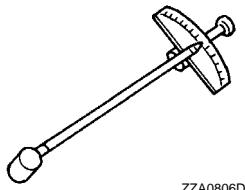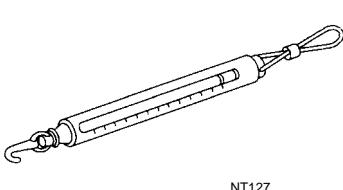Tool number (TechMate No.) Tool name	Description
<p>ST3306S001 (J-22888-D) Differential side bearing puller set 1: ST33051001 (J-22888-20) Puller 2: ST33061000 (J-8107-2) Base a: 28.5 mm (1.122 in) dia. b: 38 mm (1.50 in) dia.</p>  <p>NT072</p>	Removing and installing side bearing inner race
<p>ST33230000 (J-25805-01) Drift a: 51 mm (2.01 in) dia. b: 41 mm (1.61 in) dia. c: 28.5 mm (1.122 in) dia.</p>  <p>ZZA1046D</p>	Installing side bearing inner race
<p>ST30611000 (J-25742-1) Drift bar</p>  <p>S-NT090</p>	Installing side bearing outer race (Use with KV31103000)
<p>KV31103000 (J-38982) Drift a: 49 mm (1.93 in) dia. b: 70 mm (2.76 in) dia.</p>  <p>ZZA1113D</p>	Installing side bearing outer race
<p>ST3127S000 (J-25765-A) Preload gauge</p>  <p>ZZA0806D</p>	Measuring pinion bearing preload and total preload
<p>(J-8129) Spring gauge</p>  <p>NT127</p>	Measuring turning torque

PREPARATION

< PREPARATION >

[FRONT FINAL DRIVE: F160A]

Tool number (TechMate No.) Tool name	Description	
ST37820000 (—) Drift a: 39 mm (1.54 in) dia. b: 72 mm (2.83 in) dia.	Installing pinion front and rear bearing outer race	A B C
KV38102510 (—) Drift a: 71 mm (2.80 in) dia. b: 65 mm (2.56 in) dia.	Installing front oil seal	DLN E F

Commercial Service Tools

INFOID:0000000008285603

Tool name	Description	
Flange wrench	Removing and installing drive pinion lock nut	G H
Replacer	Removing pinion rear bearing inner race	I J K L
Spacer a: 60 mm (2.36 in) dia. b: 36 mm (1.42 in) dia. c: 30 mm (1.18 in)	Installing pinion front bearing inner race	M N O P
Power tool	Loosening bolts and nuts	

PERIODIC MAINTENANCE

FRONT DIFFERENTIAL GEAR OIL

Inspection

INFOID:000000008285604

OIL LEAKAGE

Make sure that oil is not leaking from final drive assembly or around it.

OIL LEVEL

- Remove filler plug (1) and check oil level from filler plug mounting hole as shown in the figure.


CAUTION:

Never start engine while checking oil level.

- Set a gasket on filler plug and install it on final drive assembly. Refer to [DLN-122, "Exploded View"](#).

CAUTION:

Never reuse gasket.

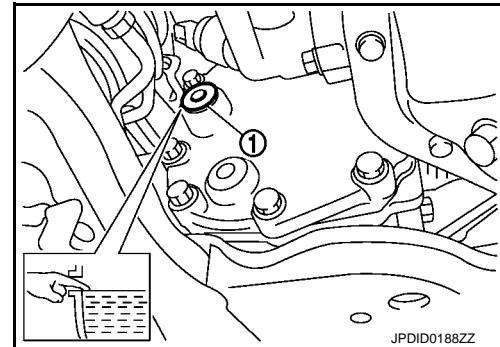


INFOID:000000008285605

Draining

- Stop engine.
- Remove drain plug (1) and drain gear oil.
- Set a gasket on drain plug and install it to final drive assembly and tighten to the specified torque. Refer to [DLN-122, "Exploded View"](#).

CAUTION:

Never reuse gasket.

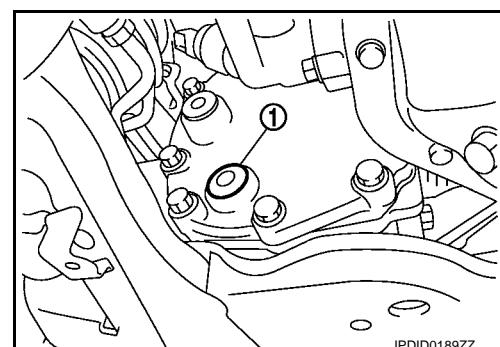

INFOID:000000008285606

Refilling

- Remove filler plug (1). Fill with new gear oil until oil level reaches the specified level near filler plug mounting hole.

Oil grade and Viscosity

: Refer to [MA-10, "Fluids and Lubricants"](#).


Oil capacity

: Refer to [DLN-147, "General Specifications"](#).

- After refilling oil, check oil level. Set a gasket to filler plug, then install it to final drive assembly. Refer to [DLN-122, "Exploded View"](#).

CAUTION:

Never reuse gasket.

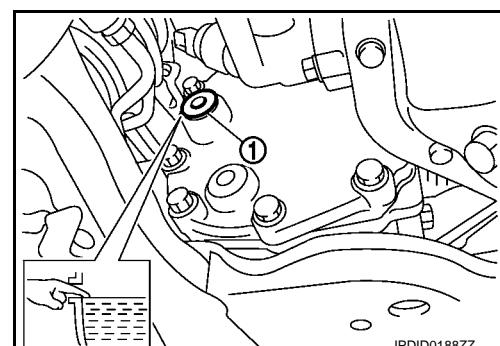


REMOVAL AND INSTALLATION

SIDE OIL SEAL

RIGHT SIDE

RIGHT SIDE : Exploded View

INFOID:0000000008285607

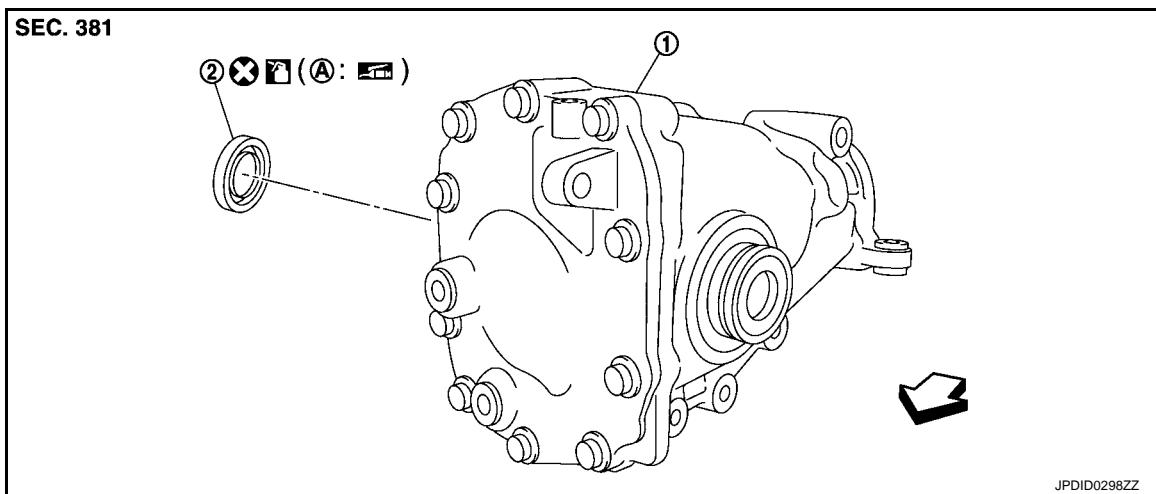

1. Front final drive assembly 2. Side oil seal (right side)

A: Oil seal lip

◀: Vehicle front

שמן: Apply gear oil.

טיטון: Apply multi-purpose grease.

Refer to [GI-4, "Components"](#) for symbols not described above.

RIGHT SIDE : Removal and Installation


INFOID:0000000008285608

REMOVAL

1. Remove the front drive shaft. Refer to [FAX-23, "Exploded View"](#).
2. Remove the side oil seal using a puller (A) [SST: KV381054S0 (J-34286)].

CAUTION:

Never damage gear carrier.

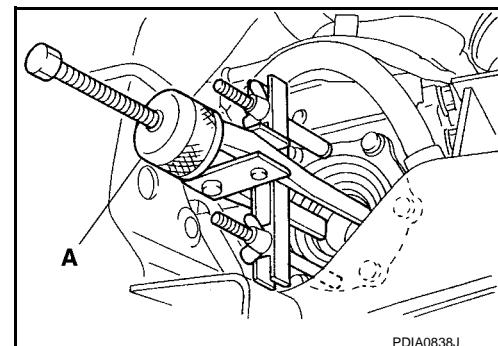

INSTALLATION

SIDE OIL SEAL

< REMOVAL AND INSTALLATION >


[FRONT FINAL DRIVE: F160A]

1. Using the drift (A) [SST: ST33400001 (J-26082)], press-fit side oil seal so that its surface comes face-to-face with the end surface of the side retainer.

CAUTION:

- Apply multi-purpose grease to sealing lips of side oil seal.
- Never reuse oil seal.
- When installing, never incline oil seal.

2. Install the front drive shaft. Refer to [FAX-23, "Exploded View"](#).
3. When oil leaks while removing, check oil level after the installation. Refer to [DLN-116, "Inspection"](#).

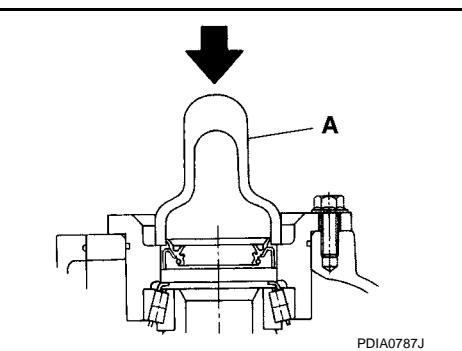


PDIA0787J

LEFT SIDE

LEFT SIDE : Exploded View

INFOID:000000008285609

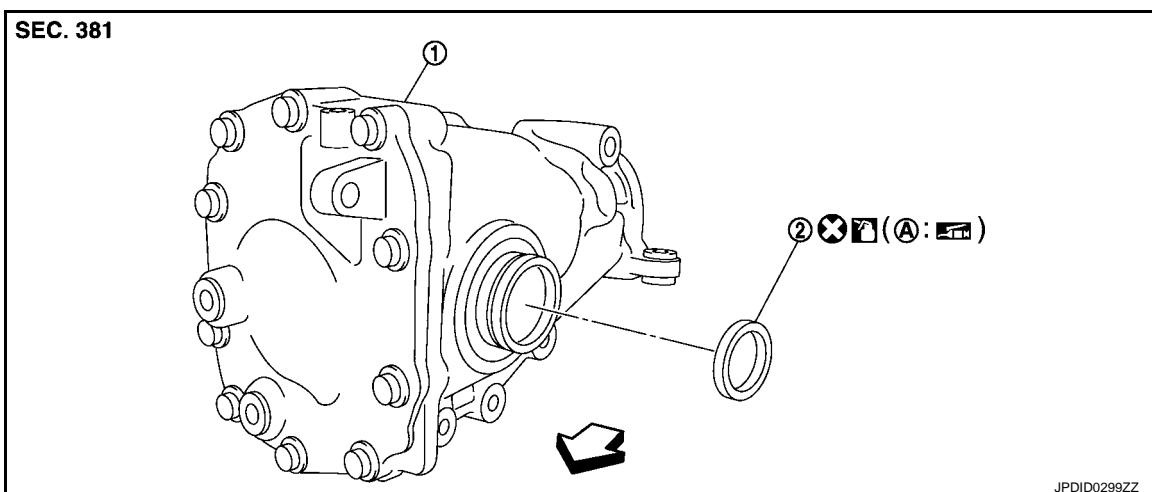

JPDID0299ZZ

1. Front final drive assembly
2. Side oil seal (left side)

A: Oil seal lip

←: Vehicle front

שמן: Apply gear oil.

טבקה: Apply multi-purpose grease.

Refer to [GI-4, "Components"](#) for symbols not described above.

LEFT SIDE : Removal and Installation

INFOID:000000008285610

REMOVAL

1. Remove the front final drive assembly from vehicle with power tool. Refer to [DLN-120, "Exploded View"](#).

NOTE:

Left side oil seal is attached to engine assembly. Replace it after removing front final drive assembly from vehicle.

2. Remove the side oil seal using a flat-bladed screwdriver.

CAUTION:

Never damage gear carrier.

INSTALLATION

1. Apply multi-purpose grease to sealing lips of side oil seal.

SIDE OIL SEAL

< REMOVAL AND INSTALLATION >

[FRONT FINAL DRIVE: F160A]

2. Using the drift (A) [SST: KV38102100 (J-25803-01)], press-fit side oil seal so that its surface comes face-to-face with the end surface of the gear carrier.


CAUTION:

- Never reuse oil seal.
- When installing, never incline oil seal.

3. Install the front final drive assembly on vehicle. Refer to [DLN-120, "Exploded View"](#).

4. Install the front drive shaft. Refer to [FAX-23, "Exploded View"](#).

5. When oil leaks while removing, check oil level after the installation. Refer to [DLN-116, "Inspection"](#).

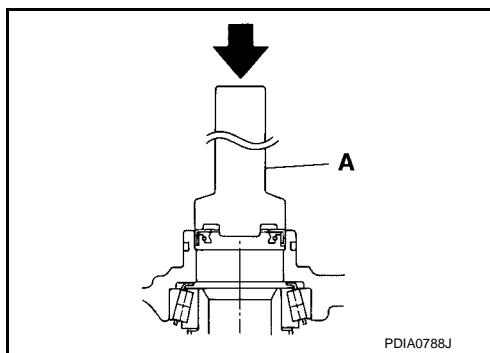

A
B
C
DLN


E
F
G
H
I
J
K
L
M
N
O
P

UNIT REMOVAL AND INSTALLATION

FRONT FINAL DRIVE ASSEMBLY

Exploded View

INFOID:000000008285611

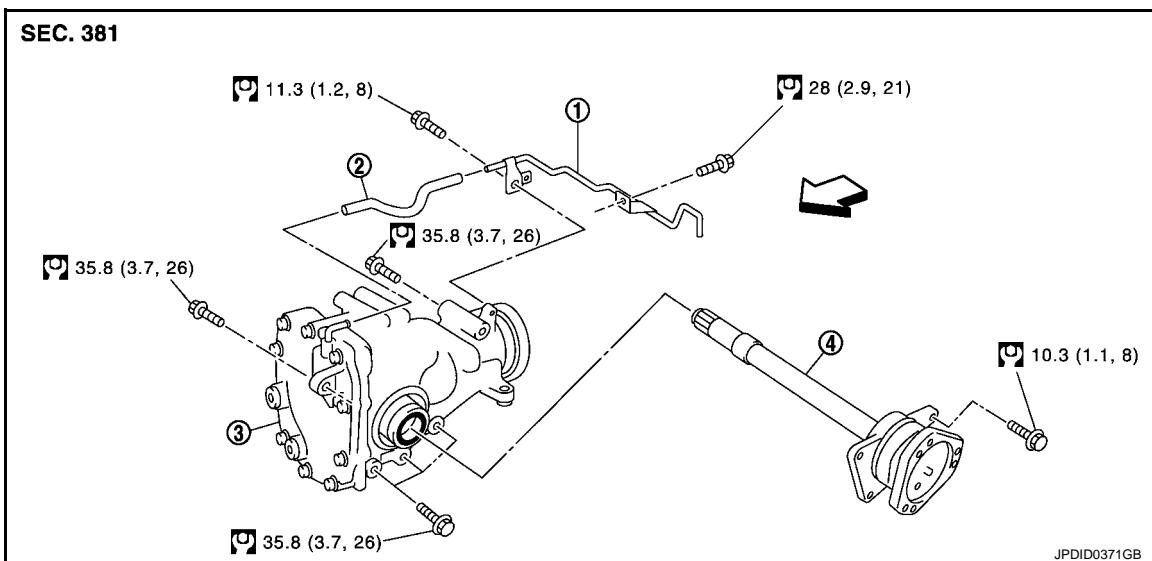

- 1. Breather tube
- 2. Breather hose
- 3. Front final drive assembly
- 4. Side shaft

⇨: Vehicle front

Refer to [GI-4, "Components"](#) for symbols in the figure.

Removal and Installation

INFOID:000000008285612

REMOVAL

1. Remove both front drive shaft. Refer to [FAX-23, "Exploded View"](#).
2. Remove front crossbar with power tool.
3. Separate steering outer socket and steering knuckle. Refer to [ST-34, "AWD : Exploded View"](#).
4. Remove side shaft.
5. Remove three way catalyst (right bank) with power tool. Refer to [EX-5, "Exploded View"](#).
6. Remove front propeller shaft. Refer to [DLN-88, "Exploded View"](#).
7. Separate power steering solenoid valve connector.
8. Separate power steering hydraulic line. Refer to [ST-52, "AWD : Exploded View"](#).
9. Remove stabilizer assembly with power tool. Refer to [FSU-36, "Exploded View"](#).
10. Separate steering lower joint and steering gear assembly. Refer to [ST-34, "AWD : Exploded View"](#).
11. Set a suitable jack to engine.
12. Remove front suspension member with power tool. Refer to [FSU-37, "Exploded View"](#).
13. Remove breather hose and tube.
14. Remove engine mounting bracket (RH) (Lower) and engine mounting insulator (RH) with power tool. Refer to [EM-73, "AWD : Exploded View"](#).
15. Remove final drive assembly mounting bolts with power tool and separate front final drive assembly from engine.

INSTALLATION

Note the following, install in the reverse order of removal.

FRONT FINAL DRIVE ASSEMBLY


< UNIT REMOVAL AND INSTALLATION >

[FRONT FINAL DRIVE: F160A]

- When installing the side shaft, apply multi-purpose grease to contact surface of side shaft and side shaft oil seal.
- Tighten mounting bolts in the order described below when installing front final drive assembly: side of gear carrier (1), upper side of gear carrier (2), part of carrier cover (3).

CAUTION:

Align the mating faces of gear carrier and oil pan for installation.

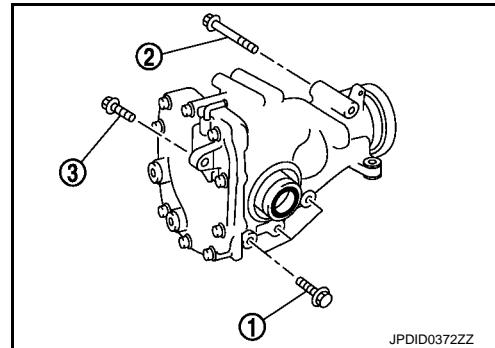


A
B
C
DLN

- When installing breather hose (1) and tube (2), refer to the figure.

CAUTION:

Make sure there are no pinched or restricted areas on the breather hose caused by bending or winding when installing it.

- Make sure the paint mark facing up (➡).
- Securely install the hose until it seats the rounded portion of the tube. (➡) (front final drive side).
- Securely install the hose until it to paint mark of the tube. (➡) (vehicle rear side).
- Face the bend of the breather hose (➡) to the engine.
- When oil leaks while removing final drive assembly, check oil level after the installation. Refer to [DLN-116, "Inspection"](#).

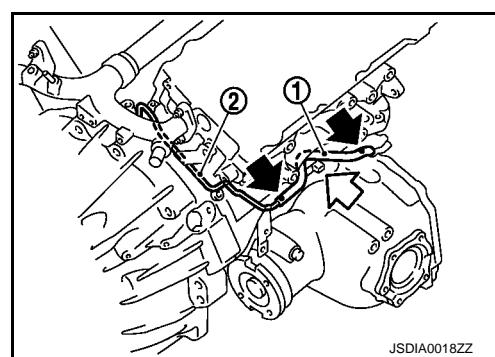


E
F
G
H
I
J
K
L
M
N
O
P

UNIT DISASSEMBLY AND ASSEMBLY

SIDE SHAFT

Exploded View

INFOID:0000000008285613

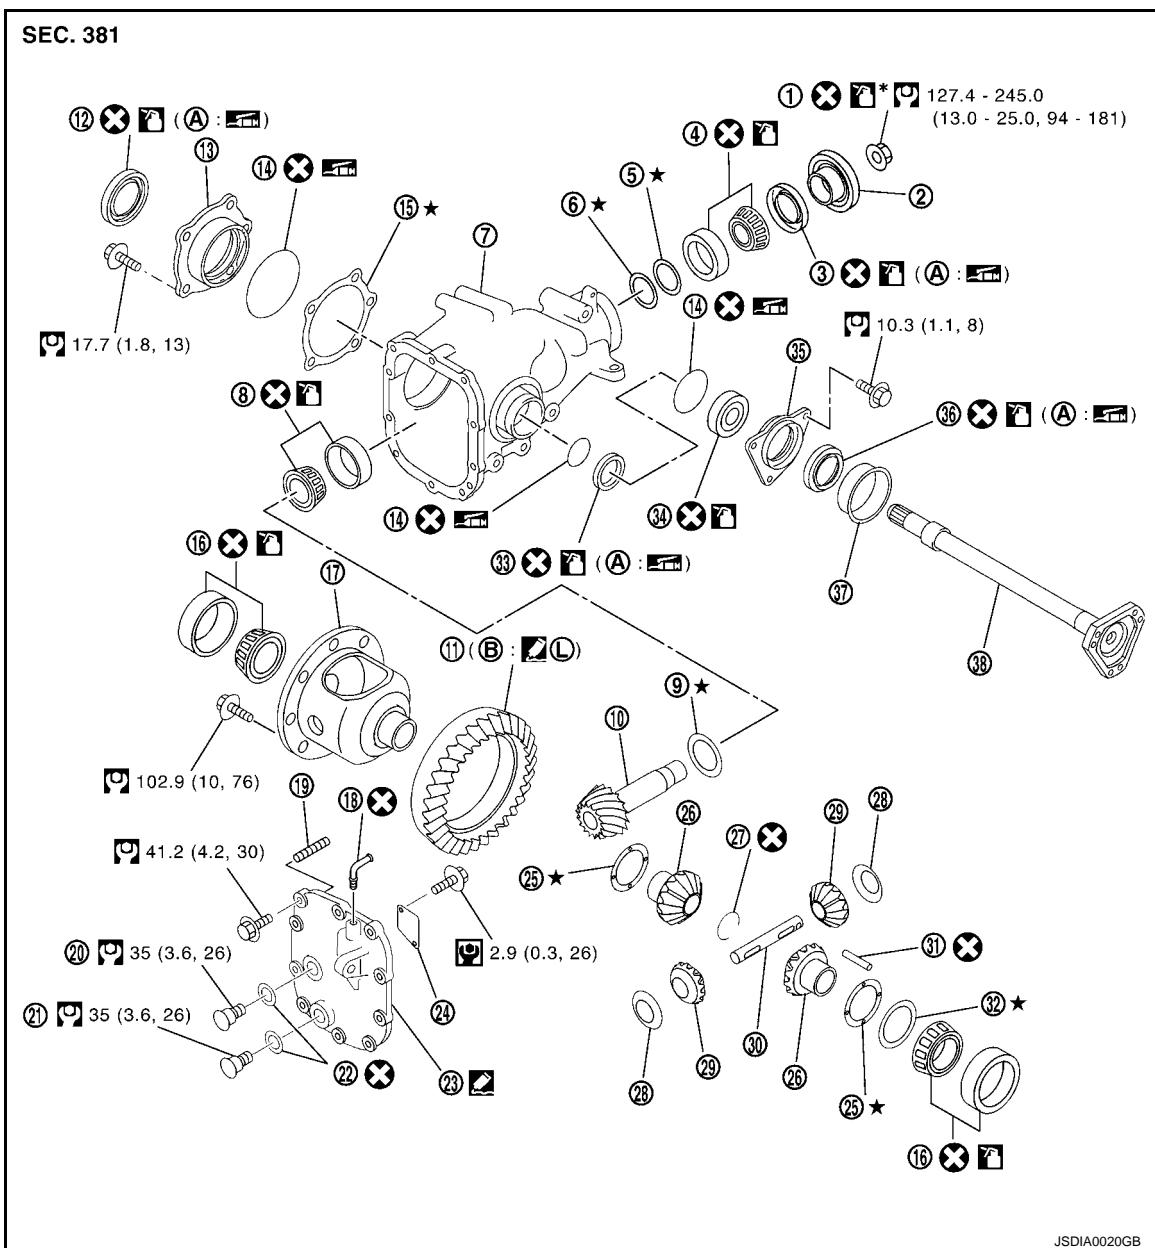

SIDE SHAFT

< UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: F160A]

31. Lock pin	32. Side bearing adjusting washer
34. Side shaft bearing	35. Extension tube retainer
37. Dust seal	38. Side shaft
A: Oil seal lip	B: Screw hole

33. Side oil seal (left side)
36. Side shaft oil seal

 Apply gear oil.

 Apply anti-corrosion oil.

 Apply Genuine Silicone RTV or equivalent. Refer to [GI-22, "Recommended Chemical Products and Sealants"](#).

 Apply Genuine Medium Strength Thread Locking Sealant or equivalent. Refer to [GI-22, "Recommended Chemical Products and Sealants"](#)

Refer to [GI-4, "Components"](#) for symbols not described above.

A

B

C

DLN

E

F

G

H

I

J

K

L

M

N


O

P

Disassembly

INFOID:0000000008285614

1. Hold extension tube retainer with puller, then press out side shaft using a press.

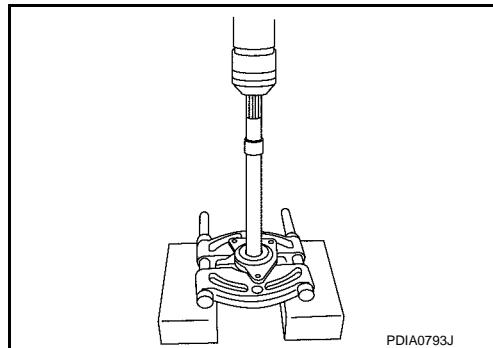


2. Remove side shaft oil seal (1) from extension tube retainer with a suitable tool.

CAUTION:

Never damage extension tube retainer.

3. Remove side shaft bearing from extension tube retainer.
4. Remove O-ring from extension tube retainer.
5. Remove dust seal from side shaft.

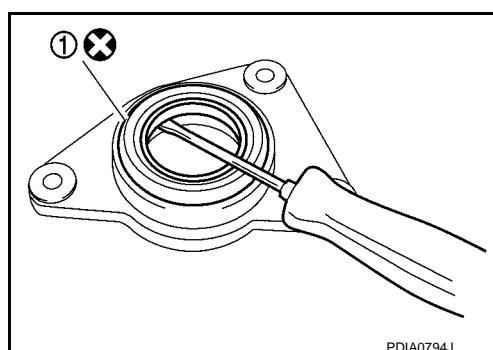

Assembly


INFOID:0000000008285615

1. Using the drift (A) [SST: KV38100200 (—)], install side shaft oil seal.

CAUTION:

- Never reuse oil seal.
- When installing, never incline oil seal.
- Apply multi-purpose grease onto oil seal lips, and gear oil onto the circumference of oil seal.

2. Install dust seal.

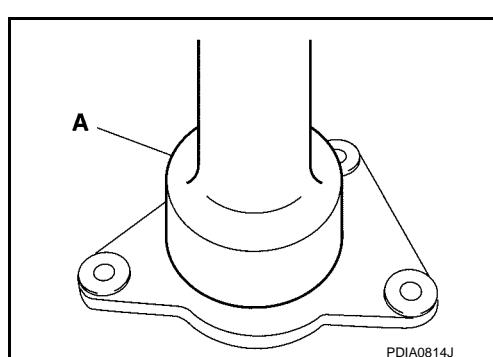

SIDE SHAFT


< UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: F160A]

3. Support side shaft bearing with the drift (A) [SST: ST30032000 (J-26010-01)], then press side shaft (1) into the side shaft bearing using a press.
4. Apply multi-purpose grease to O-ring, and install it to extension tube retainer.

CAUTION:

Never reuse O-ring.

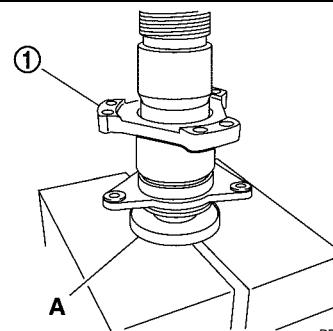

INFOID:000000008285616

Inspection After Disassembly

DRIVE GEAR AND DRIVE PINION

- Clean up the disassembled parts.
- If the gear teeth never mesh or line-up correctly, determine the cause and adjust or replace as necessary.
- If the gears are worn, cracked, damaged, pitted or chipped (by friction) noticeably, replace with new drive gear and drive pinion as a set.

BEARING

- Clean up the disassembled parts.
- If any chipped (by friction), pitted, worn, rusted or scratched marks, or unusual noise from the bearing is observed, replace as a bearing assembly (as a new set).

SIDE GEAR AND PINION MATE GEAR

- Clean up the disassembled parts.
- If any cracks or damage on the surface of the tooth is found, replace.
- If any worn or chipped mark on the contact sides of the thrust washer is found, replace.

SIDE GEAR THRUST WASHER AND PINION MATE THRUST WASHER

- Clean up the disassembled parts.
- If it is chipped (by friction), damaged, or unusually worn, replace.

OIL SEAL

- Whenever disassembled, replace.
- If wear, deterioration of adherence (sealing force lips), or damage is detected on the lips, replace them.

DIFFERENTIAL CASE

- Clean up the disassembled parts.
- If any wear or crack on the contact sides of the differential case is found, replace.

COMPANION FLANGE

- Clean up the disassembled parts.
- If any chipped mark [about 0.1 mm, (0.004 in)] or other damage on the contact sides of the lips of the companion flange is found, replace.

DIFFERENTIAL ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: F160A]

DIFFERENTIAL ASSEMBLY

Exploded View

INFOID:0000000008285617

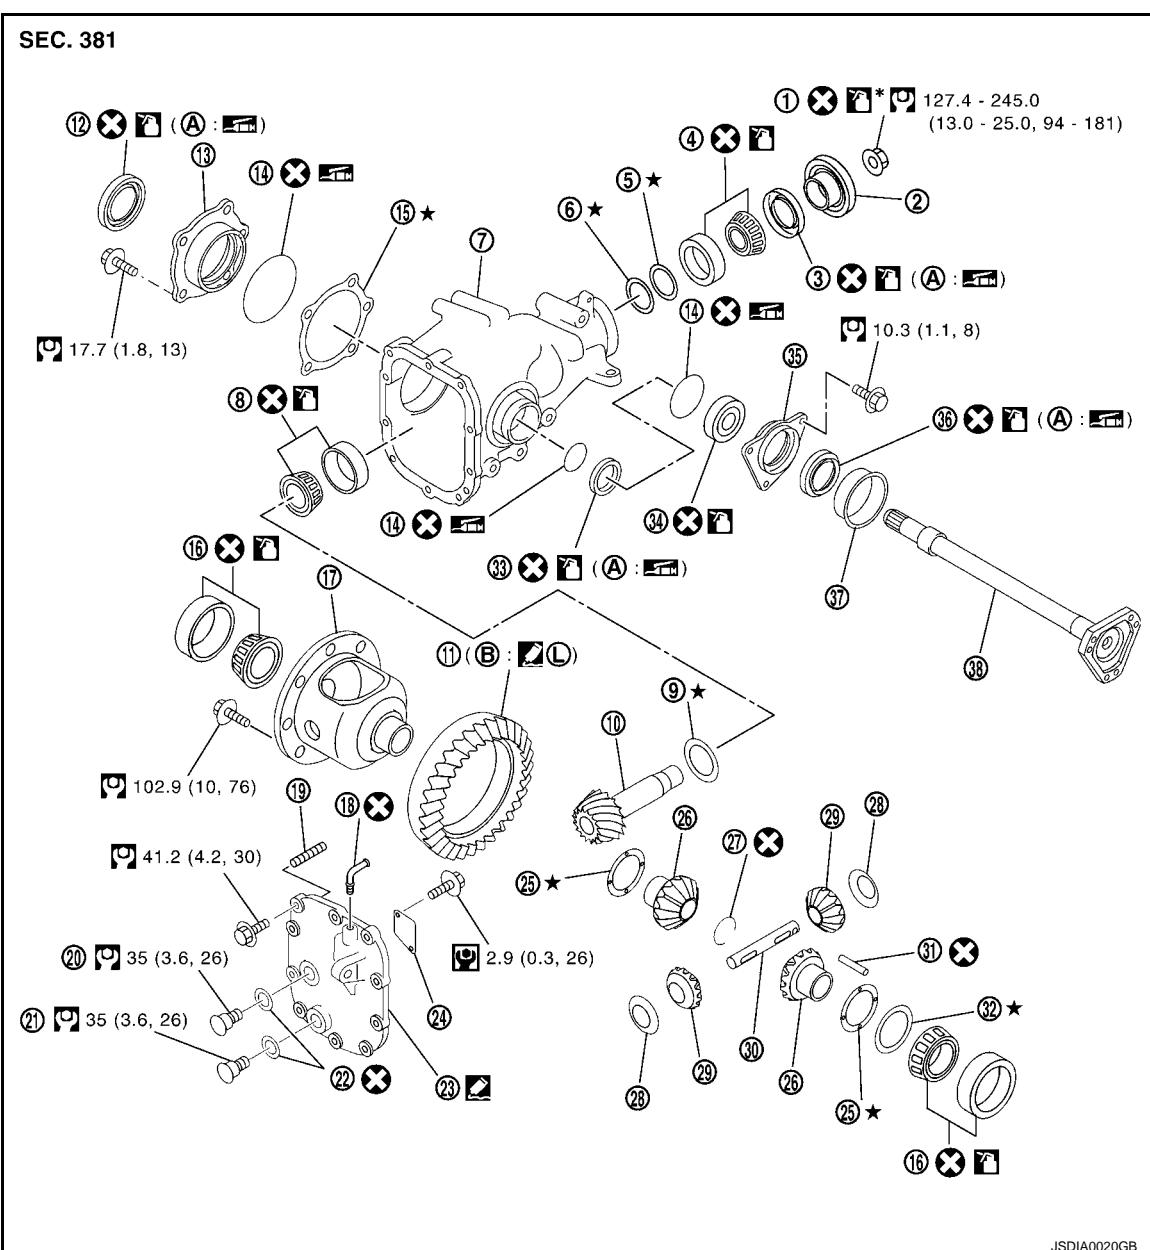

1. Drive pinion lock nut
2. Companion flange
3. Front oil seal
4. Pinion front bearing
5. Drive pinion bearing adjusting washer
6. Drive pinion adjusting washer
7. Gear carrier
8. Pinion rear bearing
9. Pinion height adjusting washer
10. Drive pinion
11. Drive gear
12. Side oil seal (right side)
13. Side retainer
14. O-ring
15. Side bearing adjusting shim
16. Side bearing
17. Differential case
18. Breather connector
19. Dowel pin
20. Filler plug
21. Drain plug
22. Gasket
23. Carrier cover
24. Gear oil defense
25. Side gear thrust washer
26. Side gear
27. Circular clip
28. Pinion mate thrust washer
29. Pinion mate gear
30. Pinion mate shaft
31. Lock pin
32. Side bearing adjusting washer
33. Side oil seal (left side)

A

B

C

DLN

E

F

G

H

I

J

K

L

M

N

O

P

DIFFERENTIAL ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: F160A]

34. Side shaft bearing	35. Extension tube retainer	36. Side shaft oil seal
37. Dust seal	38. Side shaft	
A: Oil seal lip	B: Screw hole	

 Apply gear oil.

 Apply anti-corrosion oil.

 Apply Genuine Silicone RTV or equivalent. Refer to [GI-22, "Recommended Chemical Products and Sealants"](#).

  (L) Apply Genuine Medium Strength Thread Locking Sealant or equivalent. Refer to [GI-22, "Recommended Chemical Products and Sealants"](#)

Refer to [GI-4, "Components"](#) for symbols not described above.


Disassembly

INFOID:0000000008285618


1. Drain gear oil, if necessary.
2. Remove carrier cover mounting bolts.
3. Remove carrier cover to insert the seal cutter (A) [SST: KV10111100 (J-37228)] between gear carrier and carrier cover.

CAUTION:


- Never damage the mating surface.
- Never insert flat-bladed screwdriver, this may damage the mating surface.

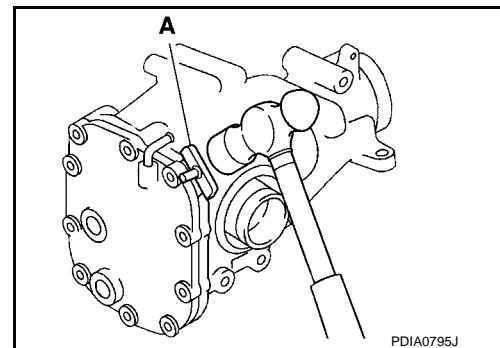

4. Remove side retainer.
5. Remove side bearing adjusting shim.
6. Remove O-ring from side retainer.

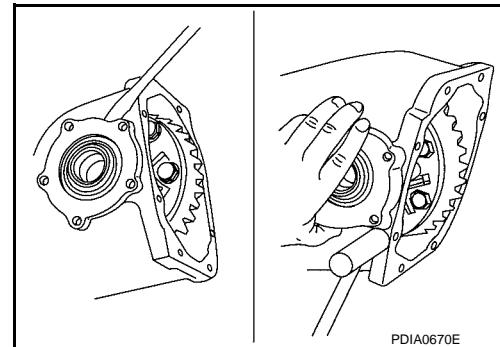

7. Remove differential case assembly from gear carrier.

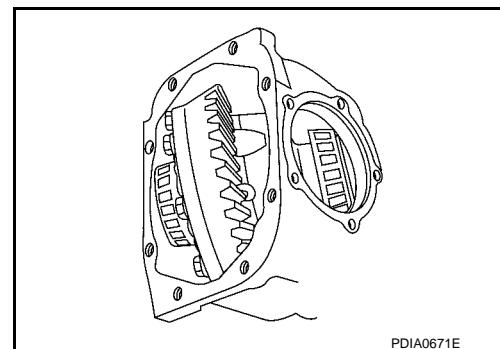


DIFFERENTIAL ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >


[FRONT FINAL DRIVE: F160A]

8. Remove side oil seal (right side) from side retainer.

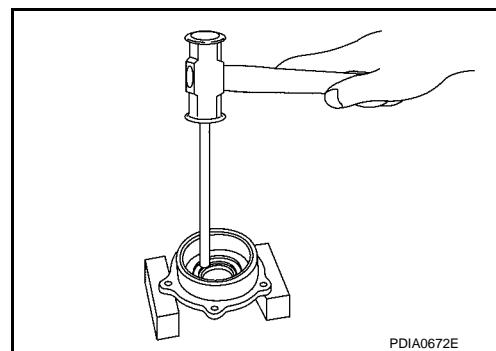

PDIA0672E


9. Remove side bearing outer race with puller (A) [SST: KV381054S0 (J-34286)].

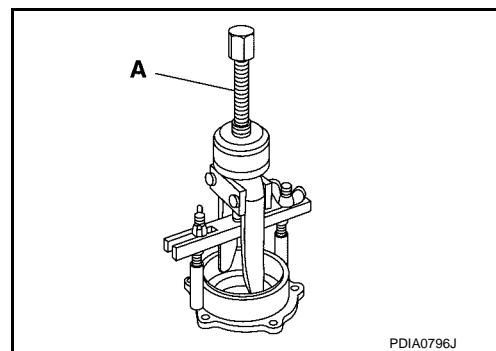

PDIA0796J


10. Remove O-ring from gear carrier.

11. Remove side oil seal (left side) from gear carrier.

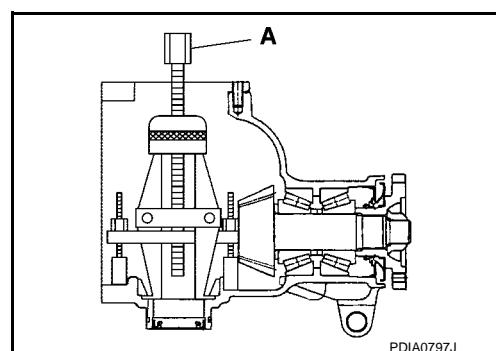

PDIA0797J

12. Remove side bearing outer race with puller (A) [SST: KV381054S0 (J-34286)].

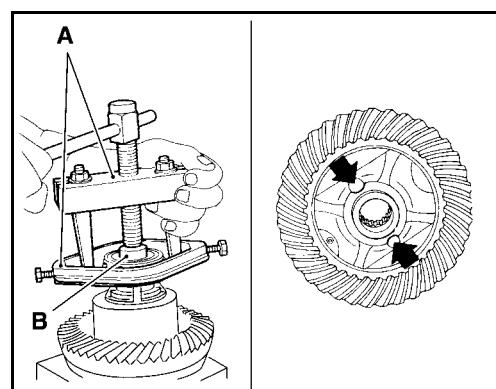


A: Puller [SST: ST33051001 (J-22888-20)]

B: Base [SST: ST33061000 (J-8107-2)]

CAUTION:

- To prevent damage to the side bearing and drive gear, place copper plates between these parts and vise.
- It is not necessary to remove side bearing inner race except if it is replaced.

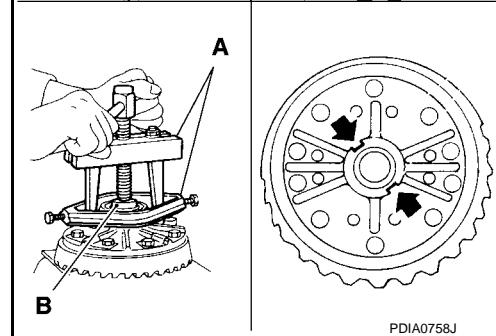

PDIA0758J

A
B
C
DLN
E
F
G
H
I
J
K

M
N
O
P

DIFFERENTIAL ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: F160A]

14. For proper reinstallation, paint matching marks on one differential case assembly.

CAUTION:


For matching marks, use paint. Never damage differential case and drive gear.

15. Remove drive gear mounting bolts.


16. Tap drive gear off differential case assembly with a soft hammer.

CAUTION:


Tap evenly all around to keep drive gear from bending.

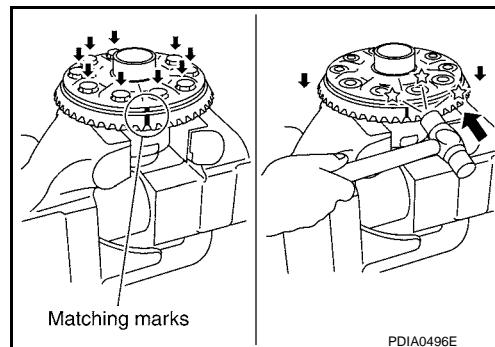


17. Remove lock pin of pinion mate shaft with a punch from drive gear side.

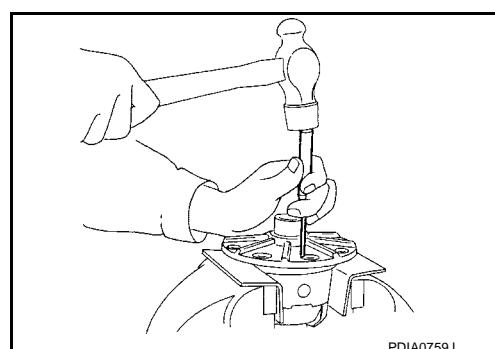

18. Remove pinion mate shaft.

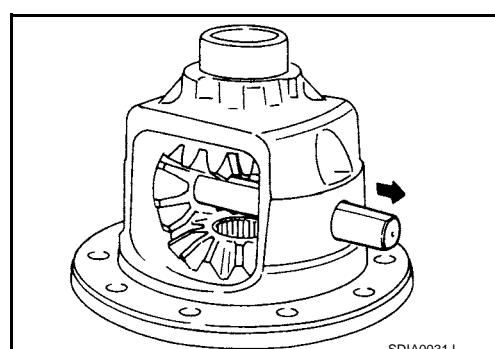

19. Turn pinion mate gear, then remove pinion mate gears, pinion mate thrust washers, side gears and side gear thrust washers from differential case.

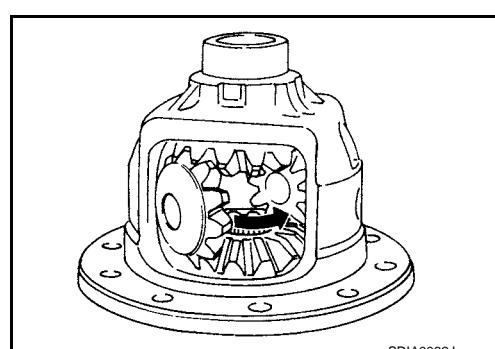

DIFFERENTIAL ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: F160A]

Assembly

INFOID:000000008285619

1. Install side gear thrust washers with the same thickness as the ones installed prior to disassembly or reinstall the old ones on the side gears.

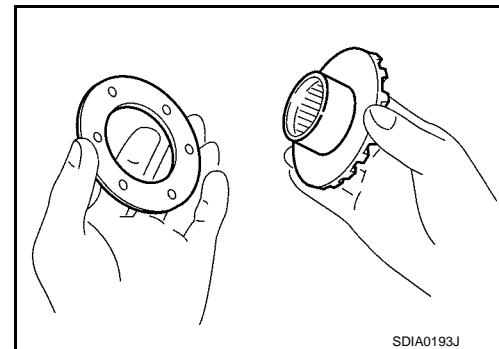


A
B
C
DLN

2. Install side gears and thrust washers into differential case.

CAUTION:


- **Never reuse circular clip.**
- **Make sure that the circular clip is installed to side gear (side retainer side).**

3. Align 2 pinion mate gears in diagonally opposite positions, then rotate and install them into differential case after installing thrust washer to pinion mate gear.

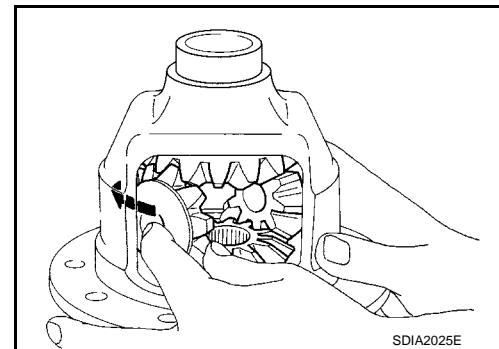

E
F
G
H


4. Align the lock pin holes on differential case with shaft, and install pinion mate shaft.

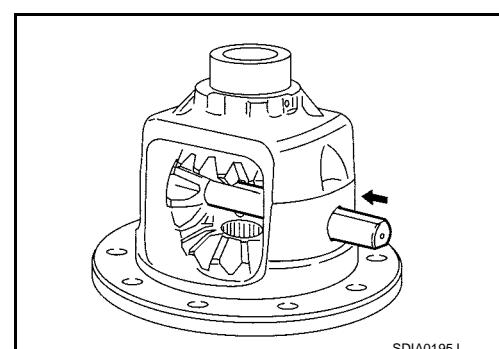

I
J
K
L

5. Measure side gear end play. If necessary, select the appropriate side gear thrust washers.

- a. Place differential case straight up so that side gear to be measured comes upward.

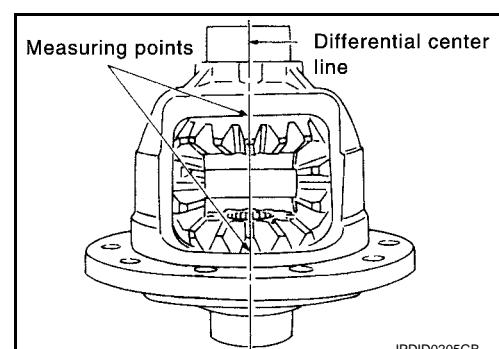

M
N
O
P

DIFFERENTIAL ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: F160A]

b. Using feeler gauge, measure the clearance between side gear back and differential case at 3 different points, while rotating side gear. Average the 3 readings, and then measure the clearance of the other side as well.

Side gear back clearance

: Refer to [DLN-147, "Differential Side Gear Clearance".](#)

CAUTION:

To prevent side gear from tilting, insert feeler gauges with the same thickness from both sides.

c. If the back clearance is outside the specification, use a thicker/thinner side gear thrust washer to adjust. For selecting thrust washer, refer to the latest parts information.

When the back clearance is large:

Use a thicker thrust washer.

When the back clearance is small:

Use a thinner thrust washer.


CAUTION:

Select a side gear thrust washer for right and left individually.


6. Drive a lock pin into pinion mate shaft, using a punch. Make sure lock pin is flush with differential case.

CAUTION:

Never reuse lock pin.

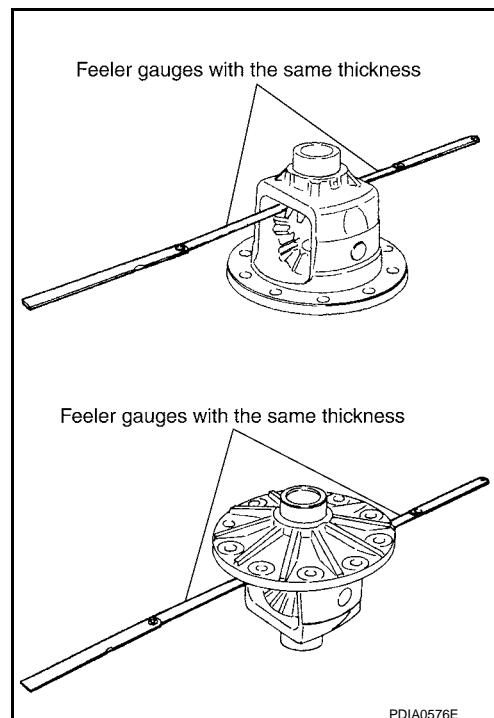


PDIA0576E

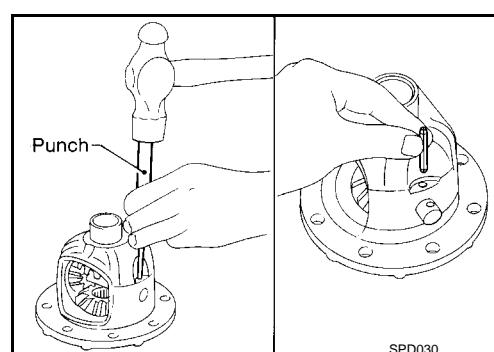

SPD030

7. Align the matching mark of drive gear with the mark of differential case, then place drive gear.

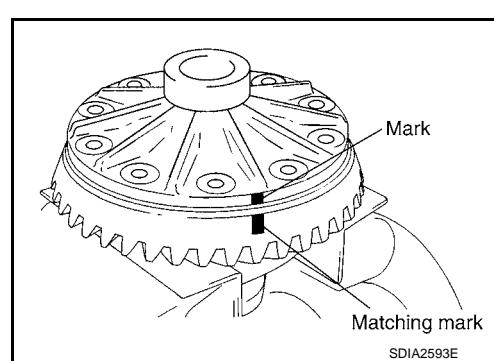


SDIA2593E

8. Apply thread locking sealant into the thread hole of drive gear.

- Use Genuine Medium Strength Thread Locking Sealant or equivalent. Refer to [GI-22, "Recommended Chemical Products and Sealants".](#)

CAUTION:

Drive gear back and threaded holes must be cleaned and degreased sufficiently.

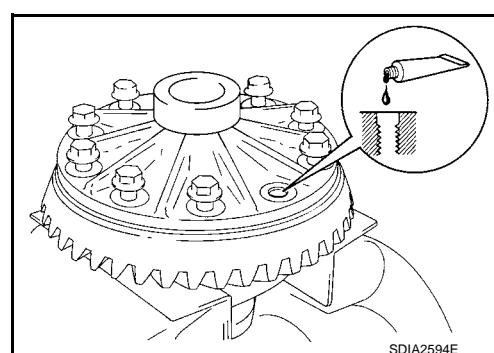

SDIA2594E

DIFFERENTIAL ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: F160A]

9. Install drive gear on the mounting bolts.

CAUTION:

Tighten bolts in a crisscross fashion.

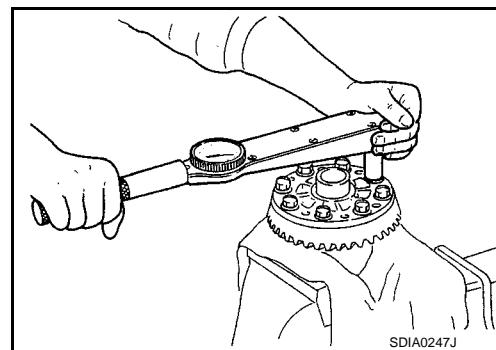


10. Press side bearing inner races to differential case, using the drift (A) and the base (B).

A: Drift [SST: ST33230000 (J-25805-01)]

B: Base [SST: ST33061000 (J-8107-2)]

CAUTION:

Never reuse side bearing inner race.

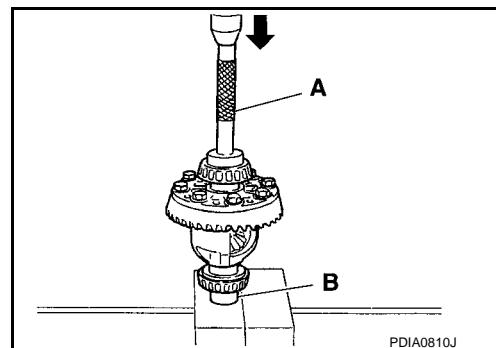


11. Press-fit side bearing outer race into side retainer with the drift bar (A) and the drift (B).

A: Drift bar [SST: ST30611000 (J-25742-1)]

B: Drift [SST: KV31103000 (J-38982)]

CAUTION:

- At first, using a hammer, tap bearing outer race until it becomes flat to side retainer.
- Never reuse side bearing outer race.

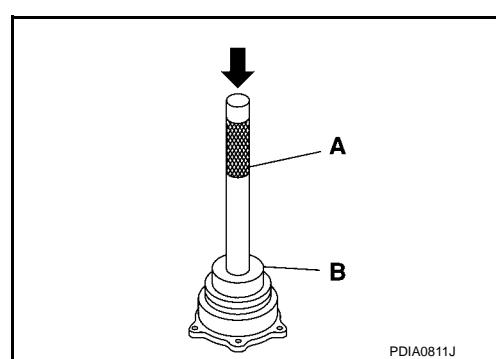


12. Press-fit side bearing outer race into gear carrier with the drift bar (A) and the drift (B).

A: Drift bar [SST: ST30611000 (J-25742-1)]

B: Drift [SST: KV31103000 (J-38982)]


CAUTION:

- At first, using a hammer, tap bearing outer race until it becomes flat to gear carrier.
- Never reuse side bearing outer race.

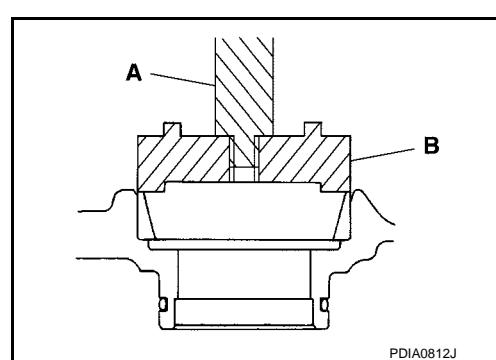

13. Place the differential case assembly into gear carrier.

14. Measure side bearing preload. If necessary, select the appropriate side bearing adjusting shim. Refer to [DLN-133, "Adjustment"](#).

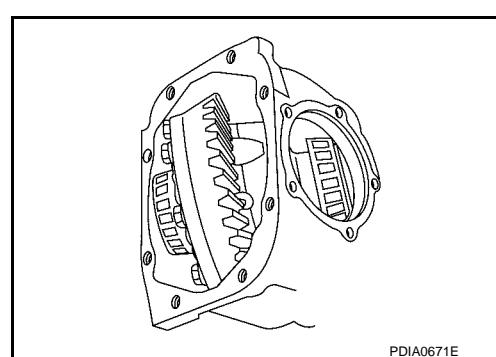

A
B
C
DLN
E
F
G
H
I
J
K
L
M
N
O
P

DIFFERENTIAL ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: F160A]

15. Install selected side bearing adjusting shim (1). Refer to [DLN-133, "Adjustment"](#).


2: O-ring

16. Apply multi-purpose grease to O-ring, and install it to side retainer.

CAUTION:


Never reuse O-ring.

17. Install side retainer assembly to gear carrier.

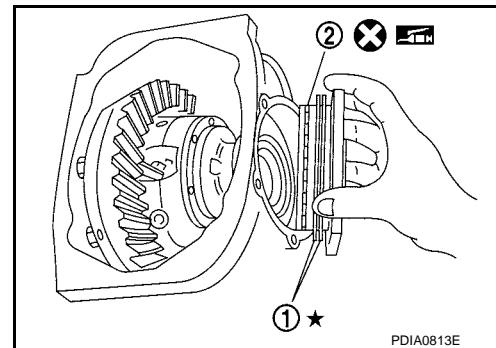

PDIA0813E

18. Install side retainer mounting bolts.

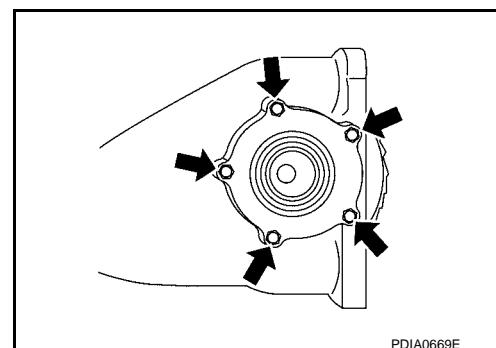


PDIA0669E

19. Using the drift (A) [SST: ST33400001 (J-26082)], press-fit side oil seal so that its surface comes face-to-face with the end surface of the side retainer.

CAUTION:

- Never reuse oil seal.
- When installing, never incline oil seal.
- Apply multi-purpose grease onto oil seal lips, and gear oil onto the circumference of oil seal.

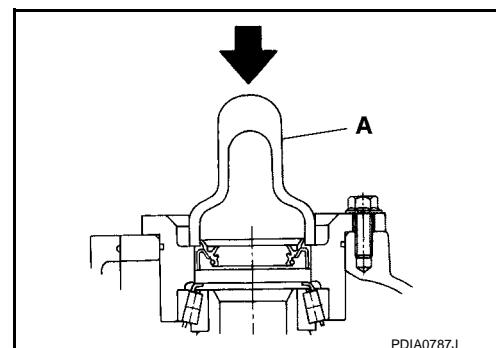

PDIA0787J

20. Using the drift (A) [SST: KV38102100 (J-25803-01)], press-fit side oil seal so that its surface comes face-to-face with the end surface of gear carrier.


CAUTION:

- Never reuse oil seal.
- When installing, never incline oil seal.
- Apply multi-purpose grease onto oil seal lips, and gear oil onto the circumference of oil seal.

21. Apply multi-purpose grease to O-ring, and install it to gear carrier.

CAUTION:

Never reuse O-ring.

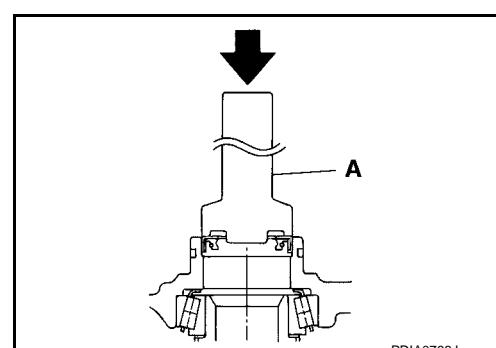

PDIA0788J

22. Check and adjust drive gear runout, tooth contact, drive gear to drive pinion backlash, and total preload torque. Refer to [DLN-133, "Adjustment"](#).

Recheck above items. Readjust as described above, if necessary.

DIFFERENTIAL ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >


[FRONT FINAL DRIVE: F160A]

23. Apply sealant to mating surface of carrier cover.


- Use Genuine Silicone RTV or equivalent. Refer to [GI-22, "Recommended Chemical Products and Sealants"](#).

CAUTION:

Remove old sealant adhering to mounting surfaces. Also remove any moisture, oil, or foreign material adhering to application and mounting surfaces.

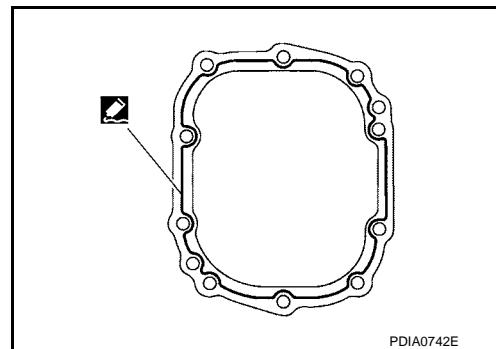

24. Install carrier cover on gear carrier and tighten mounting bolts.

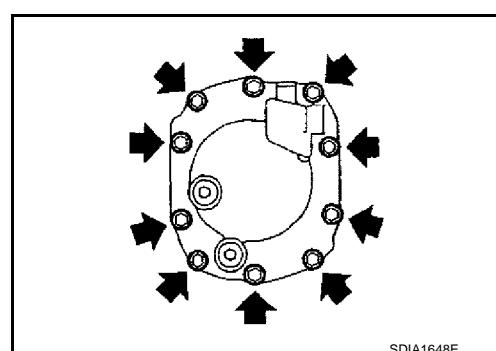


25. Set breather connector angle (A) as shown in the figure.

↖: Vehicle front

A

: 0 – 30°

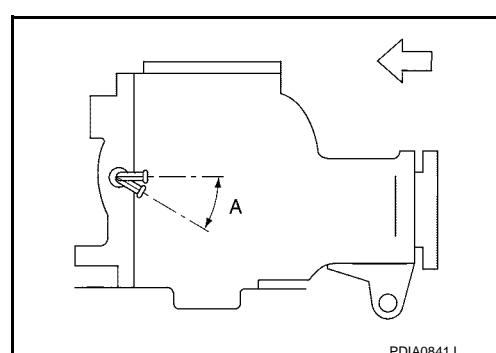

Adjustment

INFOID:000000008285620

TOTAL PRELOAD TORQUE

- Before inspection and adjustment, drain gear oil.
- 1. Rotate drive pinion back and forth 2 to 3 times to check for unusual noise and rotation malfunction.
- 2. Rotate drive pinion at least 20 times to check for smooth operation of the bearing.
- 3. Measure total preload with preload gauge (A) [SST: ST3127S000 (J-25765-A)].

Total preload torque


: Refer to [DLN-147, "Preload Torque"](#).

NOTE:

Total preload torque = Pinion bearing preload torque + Side bearing preload torque

- If measured value is out of the specification, disassemble it to check and adjust each part. Adjust the pinion bearing preload and side bearing preload.

Adjust the pinion bearing preload first, then adjust the side bearing preload.

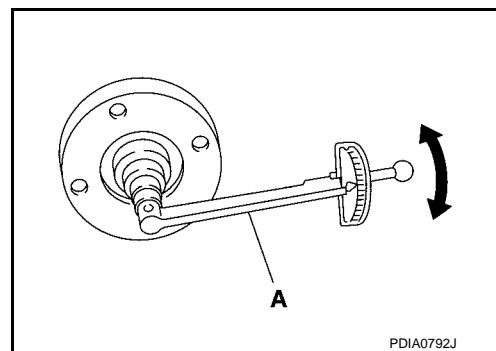

When the preload torque is large

On pinion bearings: Decrease the drive pinion bearing adjusting washer and drive pinion adjusting washer thickness. For selecting adjusting washer, refer to the latest parts information.

On side bearings: Increase the side bearing adjusting shim thickness. For select parts refer to parts information. For selecting adjusting washer, refer to the latest parts information.

When the preload torque is small


On pinion bearings: Increase the drive pinion bearing adjusting washer and drive pinion adjusting washer thickness. For selecting adjusting washer, refer to the latest parts information.

On side bearings: Decrease the side bearing adjusting shim thickness. For select parts refer to parts information. For selecting adjusting washer, refer to the latest parts information.

SIDE BEARING PRELOAD

- Before inspection and adjustment, drain gear oil.

1. Remove carrier cover and side retainer. Refer to [DLN-126, "Disassembly"](#).
2. Make sure all parts are clean. Also, make sure the bearings are well lubricated with gear oil.
3. Place the differential case assembly into gear carrier.

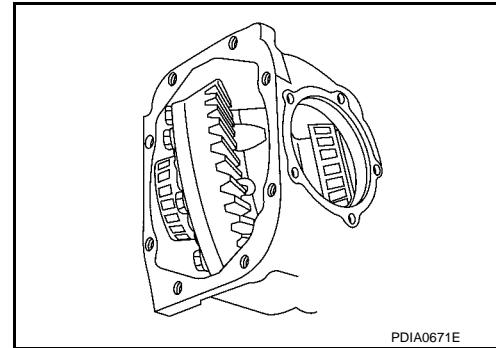


PDIA0671E

4. Install side bearing adjusting shim before disassembling or shim which thickness is the same as the one before disassembling.
5. Install side retainer assembly to gear carrier.


CAUTION:

Never install O-ring.

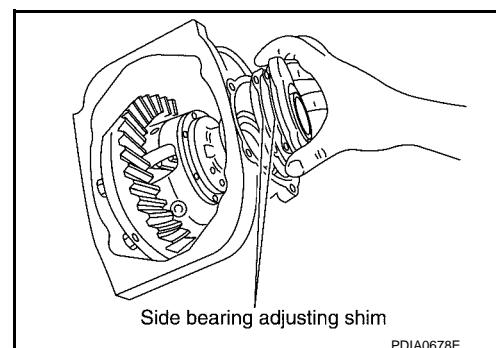

PDIA0678E

6. Install side retainer mounting bolts to the specified torque.

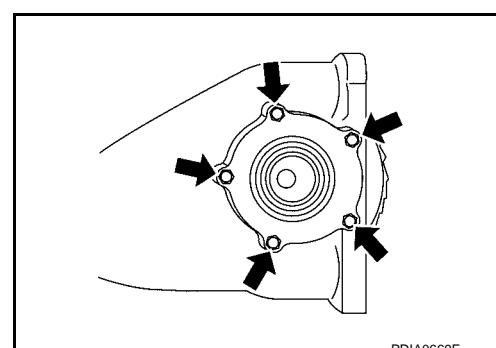

PDIA0669E

DIFFERENTIAL ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: F160A]

7. Measure the turning torque of the gear carrier at the drive gear mounting bolts with a spring gauge [SST: — (J-8129)].

Specification

: 34.2 – 39.2 N (3.5 – 4.0 kg, 7.7 – 8.8 lb) of pulling force at the drive gear bolt

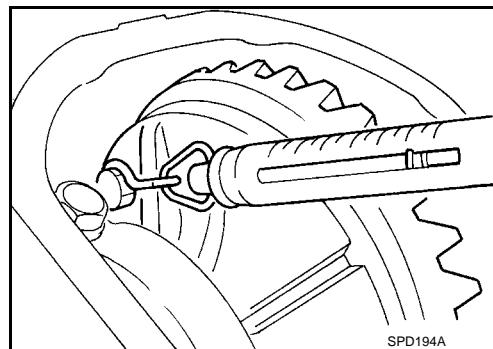

8. If the turning torque is outside the specification, use a thicker/thinner side bearing adjusting shim to adjust. For selecting adjusting shim, refer to the latest parts information.


If the turning torque is less than the specified range:

Decrease the side bearing adjusting shim thickness.

If the turning torque is greater than the specification:

Increase the side bearing adjusting shim thickness.

9. Record the total amount of shim thickness required for the correct carrier side bearing preload.

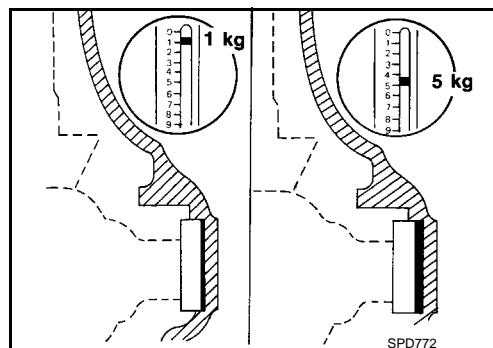

DRIVE GEAR RUNOUT

1. Remove carrier cover. Refer to [DLN-126, "Disassembly"](#).
2. Fit a dial indicator to the drive gear back face.
3. Rotate the drive gear to measure runout.


Drive gear runout

: Refer to [DLN-147, "Drive Gear Runout"](#).

- If the runout is outside of the repair limit, check drive gear assembly condition; foreign material may be caught between drive gear and differential case, or differential case or drive gear may be deformed, etc.

CAUTION:

Replace drive gear and drive pinion gear as a set.

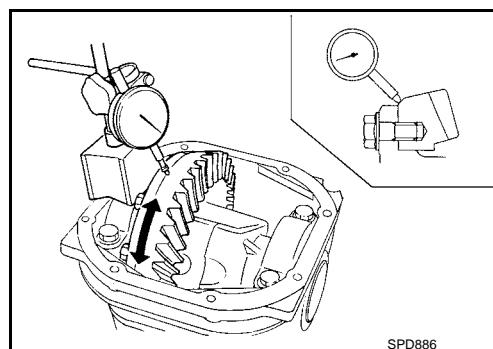


TOOTH CONTACT

Before inspection and adjustment, drain gear oil.

1. Remove carrier cover. Refer to [DLN-126, "Disassembly"](#).
2. Apply red lead to drive gear.

CAUTION:

Apply red lead to both the faces of 3 to 4 gears at 4 locations evenly spaced on drive gear.

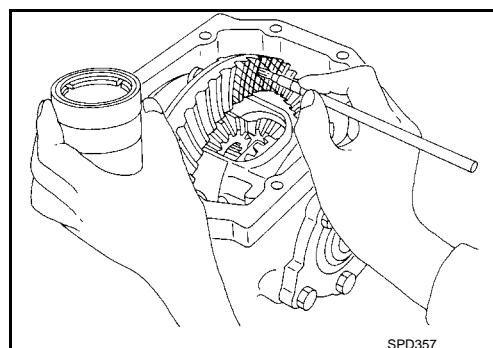

A
B
C
DLN
E
F
G

H
I
J
K
L
M
N
O
P

DIFFERENTIAL ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: F160A]

3. Rotate drive gear back and forth several times, check drive pinion gear to drive gear tooth contact.

CAUTION:

Check tooth contact on drive side and reverse side.

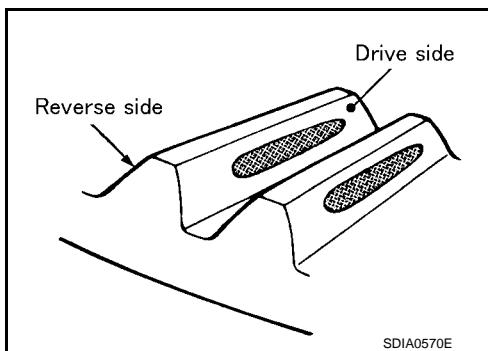

SDIA0570E

Tooth contact pattern				Pinion height adjusting washer selection value [mm (in)]	Adjustment requirement (Yes/No)		
Back side		Drive side					
Heel side	Toe side	Toe side	Heel side				
				+0.15 (+0.0059)	Yes		
				+0.12 (+0.0047)			
				+0.09 (+0.0035)			
				+0.06 (+0.0024)			
				+0.03 (+0.0012)			
				0	No		
				-0.03 (-0.0012)			
				-0.06 (-0.0024)			
				-0.09 (-0.0035)	Yes		
				-0.12 (-0.0047)			
				-0.15 (-0.0059)			


PDIA0667E

DIFFERENTIAL ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: F160A]


4. If tooth contact is improperly adjusted, follow the procedure below to adjust the pinion height [dimension (X)].

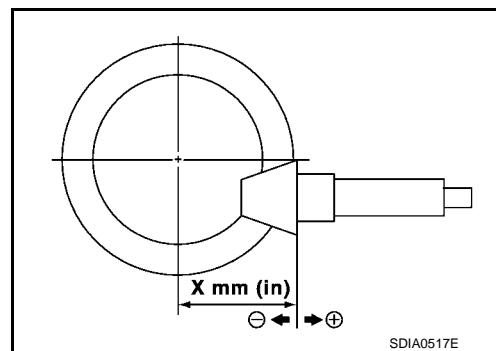

A
B
C
DLN
E
F
G
H
I
J
K
L
M
N
O
P


- If the tooth contact is near the face (face contact), or near the heel (heel contact), thicken pinion height adjusting washers to move drive pinion closer to drive gear.

For selecting adjusting washer, refer to the latest parts information.

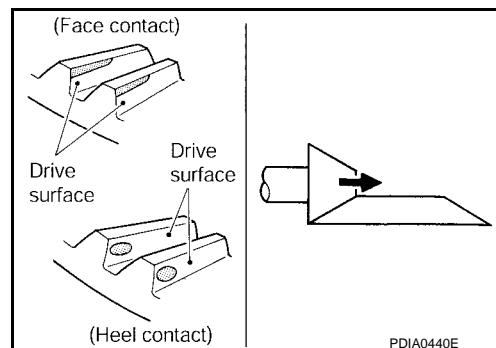

- If the tooth contact is near the flank (flank contact), or near the toe (toe contact), thin pinion height adjusting washers to move drive pinion farther from drive gear.

For selecting adjusting washer, refer to the latest parts information.

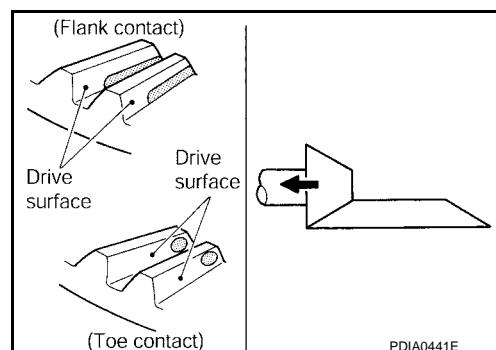

BACKLASH

Before inspection and adjustment, drain gear oil.

- Remove carrier cover. Refer to [DLN-126, "Disassembly"](#).
- Fit a dial indicator to the drive gear face to measure the backlash.

Backlash

: Refer to [DLN-147, "Backlash"](#).

- If the backlash is outside of the specified value, change the thickness of side bearing adjusting washer.


When the backlash is large:

Decrease side bearing adjusting washer thickness.

For selecting adjusting washer, refer to the latest parts information.

When the backlash is small:

Increase side bearing adjusting washer thickness. For selecting adjusting washer, refer to the latest parts information.

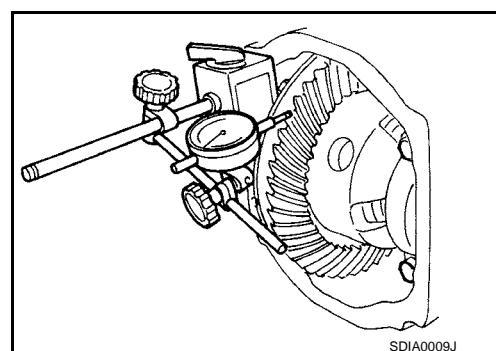

DIFFERENTIAL ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: F160A]

Inspection After Disassembly

INFOID:0000000008285621

DRIVE GEAR AND DRIVE PINION

- Clean up the disassembled parts.
- If the gear teeth never mesh or line-up correctly, determine the cause and adjust or replace as necessary.
- If the gears are worn, cracked, damaged, pitted or chipped (by friction) noticeably, replace with new drive gear and drive pinion as a set.

BEARING

- Clean up the disassembled parts.
- If any chipped (by friction), pitted, worn, rusted or scratched marks, or unusual noise from the bearing is observed, replace as a bearing assembly (as a new set).

SIDE GEAR AND PINION MATE GEAR

- Clean up the disassembled parts.
- If any cracks or damage on the surface of the tooth is found, replace.
- If any worn or chipped mark on the contact sides of the thrust washer is found, replace.

SIDE GEAR THRUST WASHER AND PINION MATE THRUST WASHER

- Clean up the disassembled parts.
- If it is chipped (by friction), damaged, or unusually worn, replace.

OIL SEAL

- Whenever disassembled, replace.
- If wear, deterioration of adherence (sealing force lips), or damage is detected on the lips, replace them.

DIFFERENTIAL CASE

- Clean up the disassembled parts.
- If any wear or crack on the contact sides of the differential case is found, replace.

COMPANION FLANGE

- Clean up the disassembled parts.
- If any chipped mark [about 0.1 mm, (0.004 in)] or other damage on the contact sides of the lips of the companion flange is found, replace.

DRIVE PINION


< UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: F160A]

DRIVE PINION

Exploded View

INFOID:0000000008285622

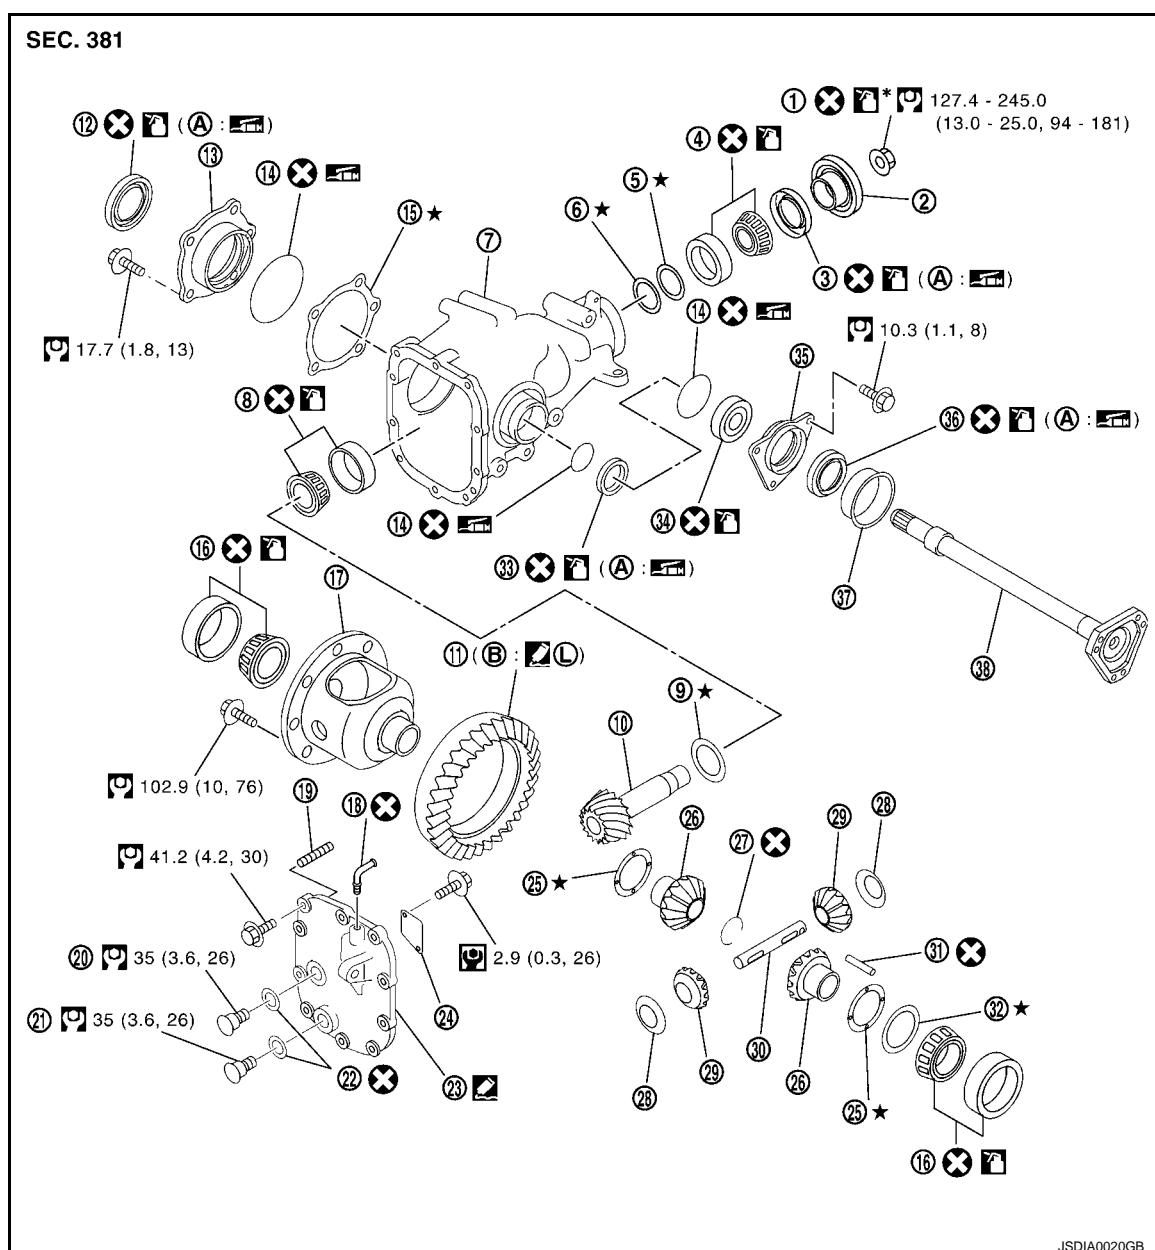

1. Drive pinion lock nut
2. Companion flange
3. Front oil seal
4. Pinion front bearing
5. Drive pinion bearing adjusting washer
6. Drive pinion adjusting washer
7. Gear carrier
8. Pinion rear bearing
9. Pinion height adjusting washer
10. Drive pinion
11. Drive gear
12. Side oil seal (right side)
13. Side retainer
14. O-ring
15. Side bearing adjusting shim
16. Side bearing
17. Differential case
18. Breather connector
19. Dowel pin
20. Filler plug
21. Drain plug
22. Gasket
23. Carrier cover
24. Gear oil defense
25. Side gear thrust washer
26. Side gear
27. Circular clip
28. Pinion mate thrust washer
29. Pinion mate gear
30. Pinion mate shaft
31. Lock pin
32. Side bearing adjusting washer
33. Side oil seal (left side)

A

B

C

DLN

E

F

G

H

I

J

K

L

M

N

O

P

DRIVE PINION

< UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: F160A]

34. Side shaft bearing	35. Extension tube retainer	36. Side shaft oil seal
37. Dust seal	38. Side shaft	
A: Oil seal lip	B: Screw hole	

 Apply gear oil.

 Apply anti-corrosion oil.

 Apply Genuine Silicone RTV or equivalent. Refer to [GI-22, "Recommended Chemical Products and Sealants"](#).


  (L) Apply Genuine Medium Strength Thread Locking Sealant or equivalent. Refer to [GI-22, "Recommended Chemical Products and Sealants"](#).

Refer to [GI-4, "Components"](#) for symbols not described above.

Disassembly

INFOID:000000008285623

1. Remove differential case assembly. Refer to [DLN-126, "Disassembly"](#).
2. Remove drive pinion lock nut with a flange wrench (commercial service tool).

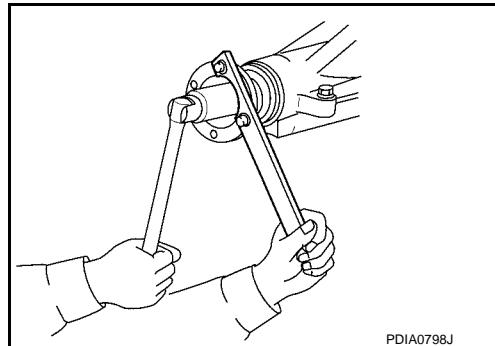

3. Put matching mark (B) on the end of drive pinion. The matching mark should be in line with the matching mark (A) on companion flange (1).


CAUTION:

For matching mark, use paint. Never damage companion flange and drive pinion.


NOTE:

The matching mark on the final drive companion flange indicates the maximum vertical runout position.

When replacing companion flange, matching mark is not necessary.

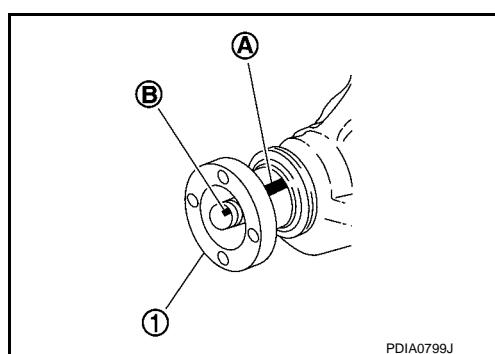

4. Remove companion flange using the suitable puller (commercial service tool).

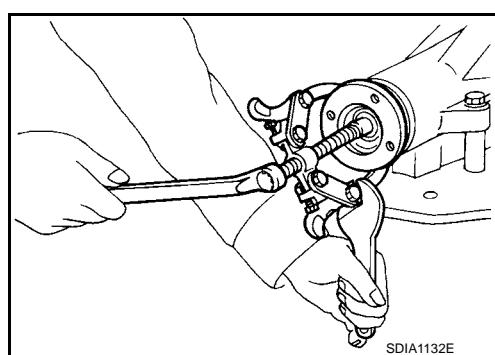


DRIVE PINION


< UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: F160A]

5. Press drive pinion assembly out of gear carrier.
CAUTION:
Never drop drive pinion assembly.
6. Remove front oil seal.
7. Remove pinion front bearing inner race.
8. Remove drive pinion bearing adjusting washer and drive pinion adjusting washer.

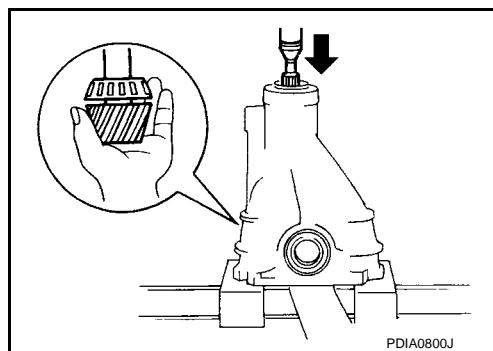


9. Remove pinion rear bearing inner race and pinion height adjusting washer with replacer (A) (commercial service tool).

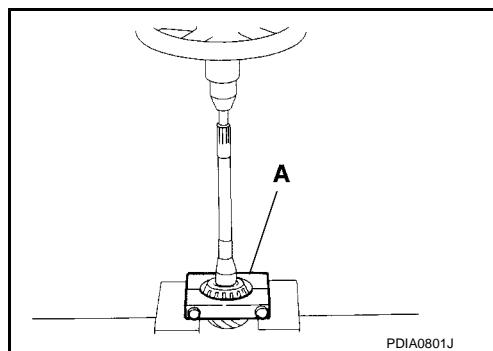

10. Tap pinion front/rear bearing outer races uniformly a brass rod or equivalent to removed.

CAUTION:

Never damage gear carrier.

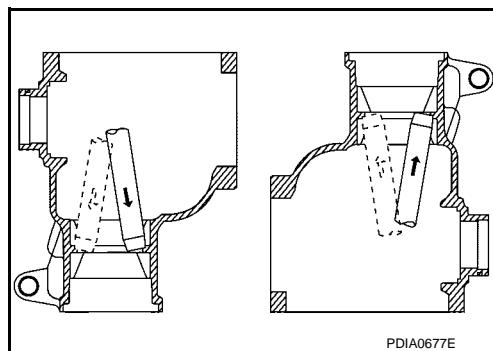


INFOID:0000000008285624

Assembly

1. Install pinion front and rear bearing outer races using drift (A) [SST: ST37820000 (—)].

CAUTION:

- At first, using a hammer, tap bearing outer race until it becomes flat to gear carrier.
- Never reuse pinion front and rear bearing outer race.

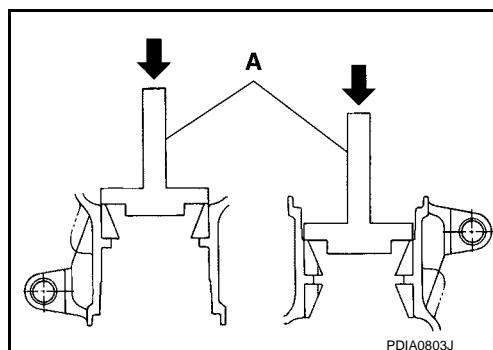

DRIVE PINION

< UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: F160A]


- Temporarily install pinion height adjusting washer (1).

When hypoid gear set has been replaced

- Select pinion height adjusting washer. Refer to [DLN-143, "Adjustment"](#).

When hypoid gear set has been reused

- Temporarily install the removed pinion height adjusting washer or same thickness washer to drive pinion.

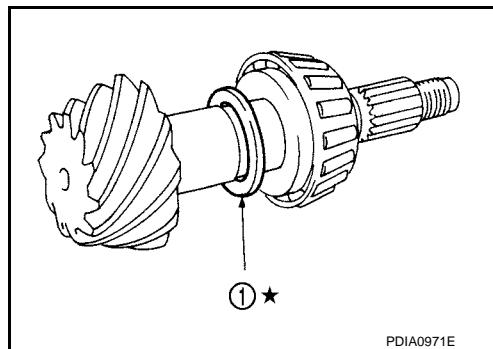


PDIA0971E

- Install selected pinion height adjusting washer (2) to drive pinion. Press pinion rear bearing inner race (1) to it, using drift (A) [SST: ST30032000 (J-26010-01)].

CAUTION:

- Pay attention to the direction of pinion height adjusting washer. (Assemble as shown in the figure.)**
- Never reuse pinion rear bearing inner race.**

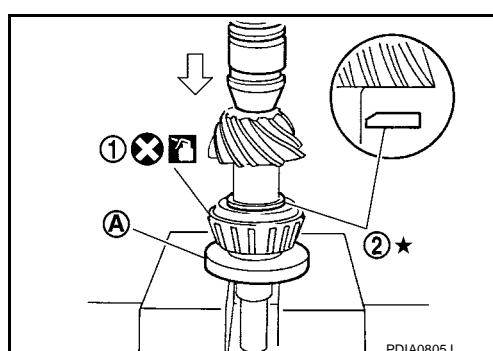

PDIA0805J


- Temporarily assemble removed drive pinion adjusting washer and drive pinion bearing adjusting washer or same thickness of them to drive pinion.

- Apply gear oil to pinion rear bearing, and assemble drive pinion into gear carrier.

- Apply gear oil to pinion front bearing, and assemble pinion front bearing inner race to drive pinion assembly.

CAUTION:


- Never reuse pinion front bearing inner race.**

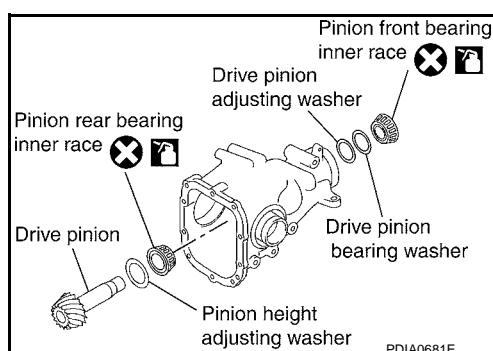

PDIA0681E

- Using suitable spacer (A) (commercial service tool), press the pinion front bearing inner race to drive pinion as far as drive pinion nut can be tightened.

- Adjust pinion bearing preload. If necessary, select the appropriate drive pinion adjusting washer and drive pinion bearing adjusting washer. Refer to [DLN-143, "Adjustment"](#).

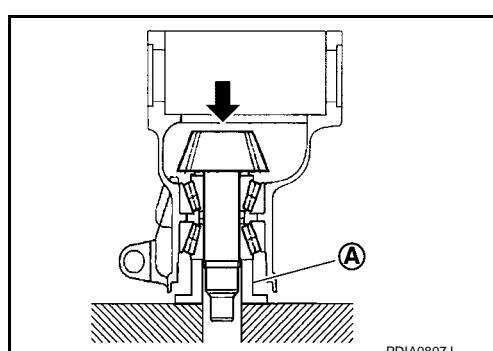

PDIA0807J


- Using the drifts (A and B), install front oil seal as shown in figure.

A: Drift [SST: ST33400001 (J-26082)]

B: Drift [SST: KV38102510 (—)]

CAUTION:

- Never reuse oil seal.**
- When installing, never incline oil seal.**
- Apply multi-purpose grease onto oil seal lips, and gear oil onto the circumference of oil seal.**

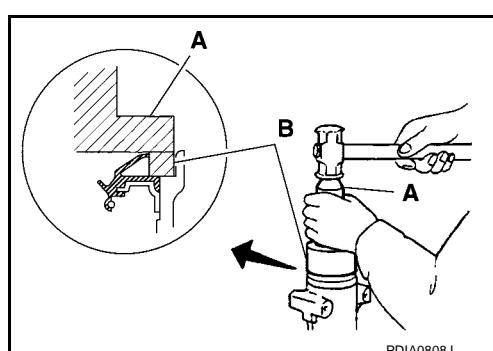


PDIA0808J

10. Install companion flange.

NOTE:

When reusing drive pinion, align the matching mark (B) of drive pinion with the matching mark (A) of companion flange, and then install companion flange (1).

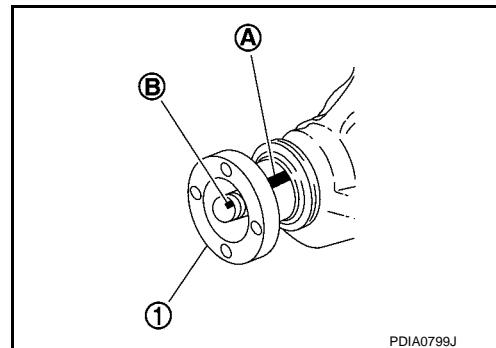

PDIA0799J

A
B
C
DLN

11. Apply anti-corrosion oil to the thread and seat of new drive pinion lock nut, and temporarily tighten drive pinion lock nut to drive pinion, using flange wrench (commercial service tool).

A: Preload gauge [SST: ST3127S000 (J-25765-A)]

CAUTION:

Never reuse drive pinion lock nut.

12. Tighten to drive pinion lock nut, while adjusting pinion bearing preload torque, using preload gauge [SST: ST3127S000 (J-25765-A)].

Pinion bearing preload

: Refer to [DLN-147, "Pre-load Torque"](#).

CAUTION:

- Adjust to the lower limit of the drive pinion lock nut tightening torque first.
- After adjustment, rotate drive pinion back and forth 2 to 3 times to check for unusual noise, rotation malfunction, and other malfunctions.

13. Install differential case assembly. Refer to [DLN-129, "Assembly"](#).

CAUTION:

Never install carrier cover yet.

14. Check and adjust drive gear runout, tooth contact, drive gear to drive pinion backlash, and companion flange runout. Refer to [DLN-133, "Adjustment"](#) and [DLN-143, "Adjustment"](#).
Recheck above items. Readjust the above description, if necessary.

15. Check total preload torque. Refer to [DLN-133, "Adjustment"](#).

16. Install carrier cover. Refer to [DLN-129, "Assembly"](#).

Adjustment

INFOID:0000000008285625

N
O
P

PINION GEAR HEIGHT

If the hypoid gear set has been replaced, select the pinion height adjusting washer.

DRIVE PINION

< UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: F160A]

1. Use the formula below to calculate pinion height adjusting washer thickness.

Washer selection equation:


$$T = T_0 + (t_1 - t_2)$$

T: Correct washer thickness

T₀: Removed washer thickness

t₁: Old drive pinion head letter "H × 0.01"
(“H”: machined tolerance 1/100 mm × 100)

t₂: New drive pinion head letter "H × 0.01"
(“H”: machined tolerance 1/100 mm × 100)

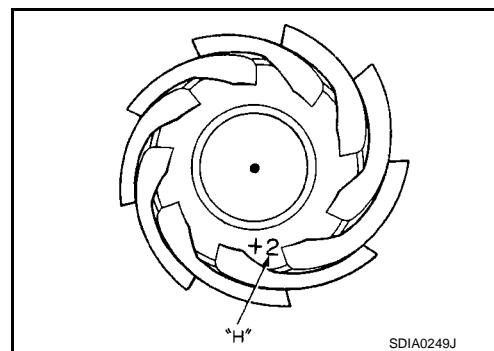

Example:

$$T = 3.21 + [(2 \times 0.01) - (-1 \times 0.01)] = 3.24$$

T₀: 3.21

t₁: +2

t₂: -1

2. Select the proper pinion height adjusting washer. For selecting adjusting washer, refer to the latest parts information.
If unable to find a washer of desired thickness, use a washer with thickness closest to the calculated value.

Example:

Calculated value... T = 3.22 mm

Used washer... T = 3.21 mm


PINION BEARING PRELOAD

Assemble the drive pinion parts if they are disassembled. Refer to [DLN-141, "Assembly"](#).

1. Make sure all parts are clean. Also, make sure the bearings are well lubricated with gear oil.
2. Install companion flange.

NOTE:

When reusing drive pinion, align the matching mark (B) of drive pinion with the matching mark (A) of companion flange, and then install companion flange (1).

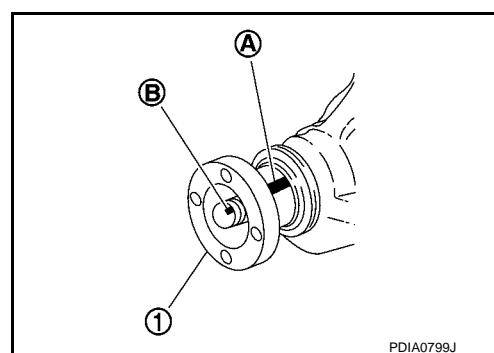

DRIVE PINION

< UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: F160A]

- Temporarily tighten removed drive pinion lock nut to drive pinion, using flange wrench (commercial service tool).

A: Preload gauge [SST: ST3127S000 (J-25765-A)]

NOTE:

Use removed drive pinion lock nut only for the preload measurement.

- Rotate drive pinion at least 20 times to check for smooth operation of the bearing.
- Tighten to drive pinion lock nut, while adjust pinion bearing preload torque, using preload gauge [SST: ST3127S000 (J-25765-A)].

Pinion bearing preload : Refer to [DLN-147, "Preload Torque"](#).

CAUTION:

- Adjust to the lower limit of the drive pinion lock nut tightening torque first.
- After adjustment, rotate drive pinion back and forth 2 to 3 times to check for unusual noise, rotation malfunction, and other malfunctions.

- If the pinion bearing preload torque is outside the specification, use a thicker/thinner drive pinion bearing adjusting washer and drive pinion adjusting washer to adjust.

When the preload torque is large:

Decrease the drive pinion bearing adjusting washer and drive pinion adjusting washer thickness. For selecting adjusting washer, refer to the latest parts information.

When the preload is small:

Increase the drive pinion bearing adjusting washer and drive pinion adjusting washer thickness. For selecting adjusting washer, refer to the latest parts information.

- Remove companion flange, after adjustment.

COMPANION FLANGE RUNOUT


- Fit a dial indicator onto the companion flange face (inner side of the propeller shaft mounting bolt holes).
- Rotate companion flange to check for runout.

Companion flange runout : Refer to [DLN-147, "Companion Flange Runout"](#).


- Fit a test indicator to the inner side of companion flange (socket diameter).
- Rotate companion flange to check for runout.

Companion flange runout : Refer to [DLN-147, "Companion Flange Runout"](#).

- If the runout value is outside the runout limit, follow the procedure below to adjust.
 - Check for runout while changing the phase between companion flange and drive pinion by 90° step, and search for the position where the runout is the minimum.
 - If the runout value is still outside of the limit after the phase has been changed, possible cause will be an assembly malfunction of drive pinion and pinion bearing and malfunction of pinion bearing. Check for these items and repair if necessary.
 - If the runout value is still outside of the limit after the check and repair, replace companion flange.

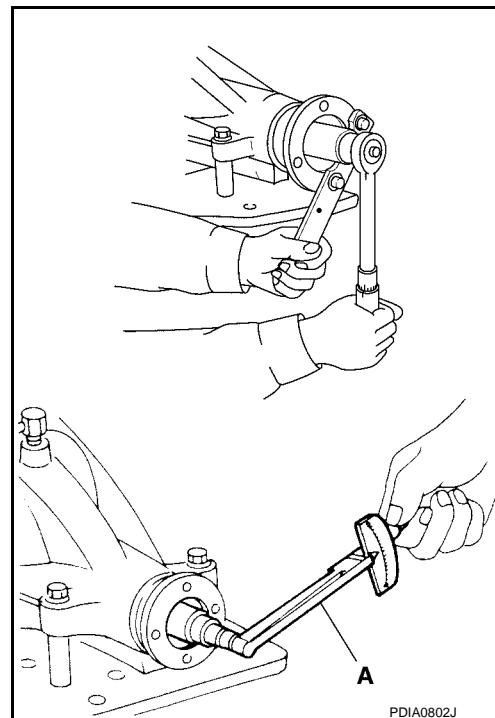

PDIA0802J

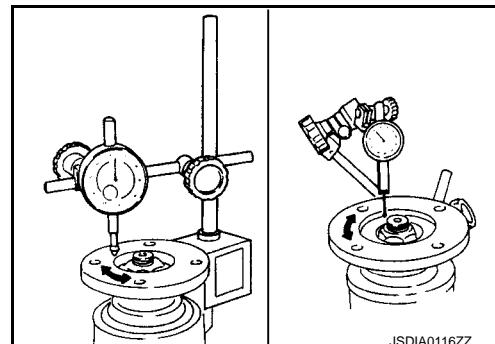

JSDIA0116ZZ

Inspection After Disassembly

INFOID:0000000008285626

DRIVE GEAR AND DRIVE PINION

- Clean up the disassembled parts.
- If the gear teeth never mesh or line-up correctly, determine the cause and adjust or replace as necessary.
- If the gears are worn, cracked, damaged, pitted or chipped (by friction) noticeably, replace with new drive gear and drive pinion as a set.

BEARING

- Clean up the disassembled parts.
- If any chipped (by friction), pitted, worn, rusted or scratched marks, or unusual noise from the bearing is observed, replace as a bearing assembly (as a new set).

SIDE GEAR AND PINION MATE GEAR

- Clean up the disassembled parts.
- If any cracks or damage on the surface of the tooth is found, replace.
- If any worn or chipped mark on the contact sides of the thrust washer is found, replace.

SIDE GEAR THRUST WASHER AND PINION MATE THRUST WASHER

- Clean up the disassembled parts.
- If it is chipped (by friction), damaged, or unusually worn, replace.

OIL SEAL

- Whenever disassembled, replace.
- If wear, deterioration of adherence (sealing force lips), or damage is detected on the lips, replace them.

DIFFERENTIAL CASE

- Clean up the disassembled parts.
- If any wear or crack on the contact sides of the differential case is found, replace.

COMPANION FLANGE

- Clean up the disassembled parts.
- If any chipped mark [about 0.1 mm, (0.004 in)] or other damage on the contact sides of the lips of the companion flange is found, replace.

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[FRONT FINAL DRIVE: F160A]

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

General Specifications

INFOID:0000000008285627

Applied model	AWD
	VQ37VHR
	A/T
Final drive model	F160A
Gear ratio	3.133
Number of teeth (Drive gear/Drive pinion)	47/15
Oil capacity (Approx.) ℓ (US pt, Imp pt)	0.65 (1-3/8, 1-1/8)
Number of pinion gears	2
Drive pinion adjustment spacer type	Solid

Drive Gear Runout

INFOID:0000000008285628

Item	Limit	Unit: mm (in)
Drive gear back face runout	0.05 (0.0020)	

Differential Side Gear Clearance

INFOID:0000000008285629

Item	Standard	Unit: mm (in)
Side gear backlash (Clearance between side gear and differential case)	0.2 (0.008) or less (Each gear should rotate smoothly without excessive resistance during differential motion.)	

Preload Torque

INFOID:0000000008285630

Item	Standard	Unit: N·m (kg·m, in·lb)
Pinion bearing (P1)	0.78 – 1.57 (0.08 – 0.16, 7 – 13)	
Side bearing (P2)	0.78 – 1.08 (0.08 – 0.11, 7 – 9)	
Side bearing to pinion bearing (Total preload) (Total preload = P1 + P2)	1.56 – 2.65 (0.16 – 0.27, 14 – 23)	

Backlash

INFOID:0000000008285631

Item	Standard	Unit: mm (in)
Drive gear to drive pinion gear	0.10 – 0.15 (0.0039 – 0.0059)	

Companion Flange Runout

INFOID:0000000008285632

Item	Limit	Unit: mm (in)
Companion flange face runout	0.18 (0.0071)	
Inner side of the companion flange runout	0.13 (0.0051)	

SYSTEM DESCRIPTION


REAR FINAL DRIVE ASSEMBLY

System Diagram

INFOID:0000000008285633

CROSS-SECTORIAL VIEW

2WD

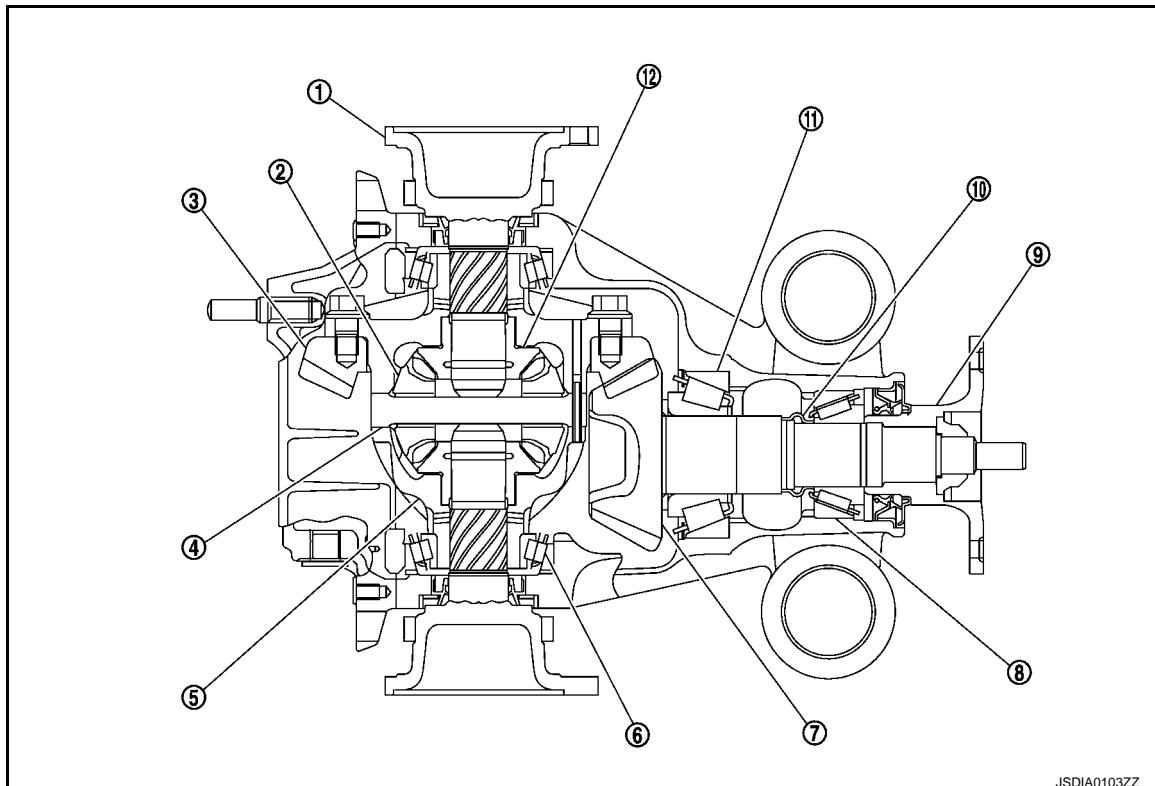

JSDIA0103ZZ


1. Side flange	2. Pinion mate gear	3. Drive gear
4. Pinion mate shaft	5. Differential case	6. Side bearing
7. Drive pinion	8. Pinion front bearing	9. Companion flange
10. Collapsible spacer	11. Pinion rear bearing	12. Side gear

REAR FINAL DRIVE ASSEMBLY

< SYSTEM DESCRIPTION >

[REAR FINAL DRIVE: R200]

AWD

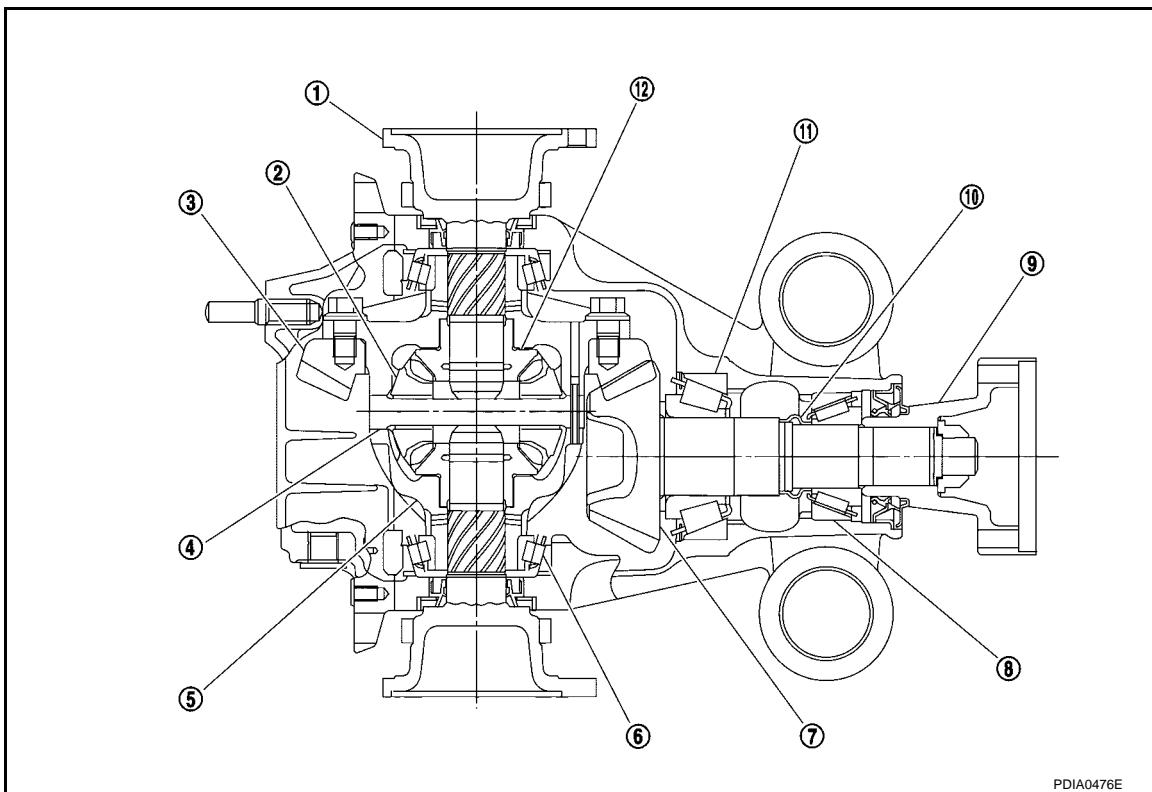

1. Side flange	2. Pinion mate gear	3. Drive gear
4. Pinion mate shaft	5. Differential case	6. Side bearing
7. Drive pinion	8. Pinion front bearing	9. Companion flange
10. Collapsible spacer	11. Pinion rear bearing	12. Side gear

A
B
C
DLN
E
F
G
H
I
J
K
L
M
N
O
P

SYMPTOM DIAGNOSIS**NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING****NVH Troubleshooting Chart**

INFOID:0000000008285634

2WD

Use the chart below to find the cause of the symptom. If necessary, repair or replace these parts.

Reference													
Possible cause and SUSPECTED PARTS													

Symptom	Noise
x: Applicable	

x: Applicable

AWD

NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

< SYMPTOM DIAGNOSIS >

[REAR FINAL DRIVE: R200]

Use the chart below to find the cause of the symptom. If necessary, repair or replace these parts.

A

B

C

DLN

E

1

H

14

L

M

Revision: 2013 December

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Service Notice or Precautions for Rear Final Drive

INFOID:000000008285635


 


 

- Check for the correct installation status prior to removal or disassembly. If matching marks are required, be certain they never interfere with the function of the parts when applied.
- Overhaul should be done in a clean work area, it is preferable to work in dustproof area.
- Before disassembly, using steam or white gasoline, completely remove sand and mud from the exterior of the unit, preventing them from entering into the unit during disassembly or assembly.
- Check appearance of the disassembled parts for damage, deformation, and unusual wear. Replace them with new ones, if necessary.
- Gaskets, seals and O-rings should be replaced any time when the unit is disassembled.
- In principle, tighten bolts or nuts gradually in several steps working diagonally from inside to outside. If tightening sequence is specified, observe it.
- Clean and flush the parts sufficiently and blow-dry them.
- Be careful not to damage sliding surfaces and mating surfaces.
- When applying sealant, remove the old sealant from the mounting surface; then remove any moisture, oil, and foreign materials from the application and mounting surfaces.
- Always use shop paper for cleaning the inside of components.
- Never use cotton gloves or shop rags to prevent entering of lint.
- During assembly, observe the specified tightening torque, and apply new gear oil, petroleum jelly, or multi-purpose grease as specified for each vehicle, if necessary.

< PREPARATION >

PREPARATION**PREPARATION****Special Service Tools**

INFOID:000000008285636







The actual shapes of TechMate tools may differ from those of special service tools illustrated here.

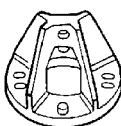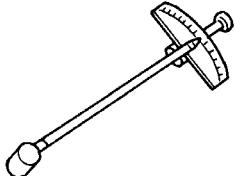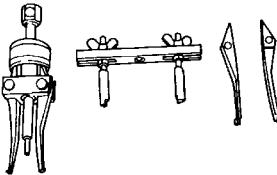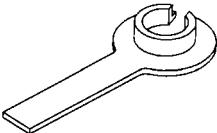Tool number (TechMate No.) Tool name	Description	
KV40104100 (—) Attachment	Removing side flange	DLN
	 ZZA0804D	
ST36230000 (J-25840-A) Sliding hammer	Removing side flange	E
	 ZZA0803D	
ST3127S000 (J-25765-A) Preload gauge	Measuring pinion bearing preload and total preload	I
	 ZZA0806D	
KV381054S0 (J-34286) Puller	Removing front oil seal	K
	 ZZA0601D	
ST30720000 (J-25405) Drift a: 77 mm (3.03 in) dia. b: 55.5 mm (2.185 in) dia.	<ul style="list-style-type: none"> Installing front oil seal Installing pinion rear bearing outer race 	N
	 ZZA0811D	
KV38107900 (J-39352) Protector	Installing side flange	P
	 S-NT129	

PREPARATION

< PREPARATION >






[REAR FINAL DRIVE: R200]

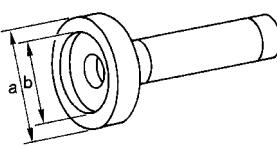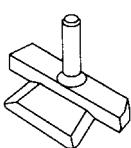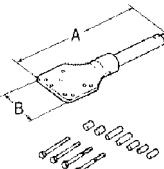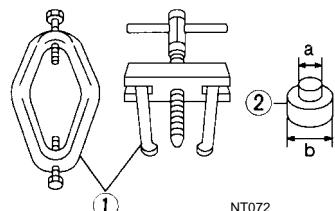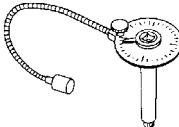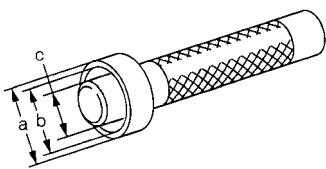Tool number (TechMate No.) Tool name	Description
KV38100200 (J-26233) Drift a: 65 mm (2.56 in) dia. b: 49 mm (1.93 in) dia.	Installing side oil seal  ZZA1143D
KV10111100 (J-37228) Seal cutter	Removing rear cover  S-NT046
KV38100800 (J-25604-01) Attachment A: 541 mm (21.30 in) B: 200 mm (7.87 in)	Fixing unit assembly  SDIA0267E
ST3306S001 (J-22888-D) Differential side bearing puller set 1: ST33051001 (J-22888-20) Puller 2: ST33061000 (J-8107-2) Base a: 28.5 mm (1.122 in) dia. b: 38 mm (1.50 in) dia.	Removing and installing side bearing inner race  NT072
KV10112100 (BT-8653-A) Angle wrench	Tightening the drive gear mounting bolt  ZZA0120D
KV38100300 (J-25523) Drift a: 54 mm (2.13 in) dia. b: 46 mm (1.81 in) dia. c: 32 mm (1.26 in) dia.	Installing side bearing inner race  ZZA1046D

PREPARATION

< PREPARATION >

 [REAR FINAL DRIVE: R200]

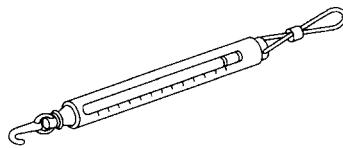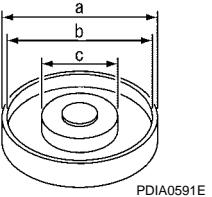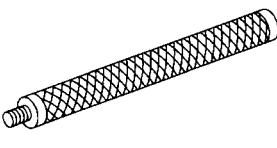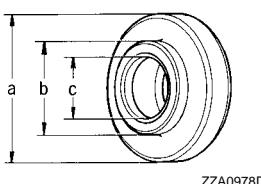Tool number (TechMate No.) Tool name	Description	
(J-8129) Spring gauge	Measuring turning torque	A B C
	 NT127	
KV40105230 (—) Drift a: 92 mm (3.62 in) dia. b: 86 mm (3.39 in) dia. c: 45 mm (1.77 in) dia.	Installing pinion rear bearing outer race	DLN E F
	 PDIA0591E	
ST30611000 (J-25742-1) Drift bar	Installing pinion front bearing outer race (Use with ST30613000)	G H
	 S-NT090	
ST30613000 (J-25742-3) Drift a: 72 mm (2.83 in) dia. b: 48 mm (1.89 in) dia.	Installing pinion front bearing outer race	I J K
	 ZZA1000D	
ST30901000 (J-26010-01) Drift a: 79 mm (3.11 in) dia. b: 45 mm (1.77 in) dia. c: 35.2 mm (1.386 in) dia.	Installing pinion rear bearing inner race	L M N
	 ZZA0978D	






Commercial Service Tools

INFOID:000000008285637

PREPARATION

< PREPARATION >

[REAR FINAL DRIVE: R200]

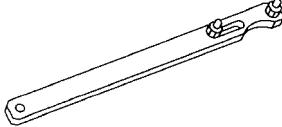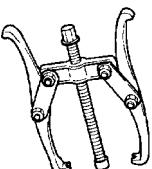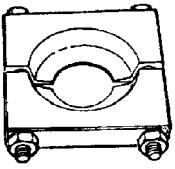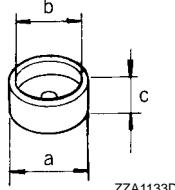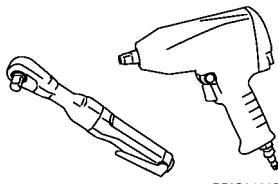Tool name	Description
Flange wrench	Removing and installing drive pinion lock nut
	 NT035
Puller	Removing companion flange
	 ZZA0119D
Sliding hammer	Removing differential case assembly
	 NT125
Replacer	Removing pinion rear bearing inner race
	 ZZA0700D
Spacer a: 60 mm (2.36 in) dia. b: 36 mm (1.42 in) dia. c: 30 mm (1.18 in)	Installing pinion front bearing inner race
	 ZZA1133D
Power tool	Loosening bolts and nuts
	 PBIC0190E

PERIODIC MAINTENANCE

REAR DIFFERENTIAL GEAR OIL

Inspection

INFOID:000000008285638

OIL LEAKAGE

- Make sure that oil is not leaking from final drive assembly or around it.

OIL LEVEL

- Remove filler plug (1) and check oil level from filler plug mounting hole as shown in the figure.


CAUTION:

Never start engine while checking oil level.

- Set a gasket on filler plug and install it on final drive assembly. Refer to [DLN-176, "2WD : Exploded View"](#) (2WD), [DLN-188, "AWD : Exploded View"](#) (AWD).

CAUTION:

Never reuse gasket.

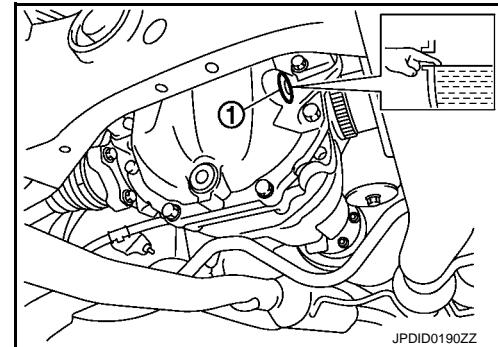


INFOID:000000008285639

Draining

1. Stop engine.
2. Remove drain plug (1) and drain gear oil.
3. Set a gasket on drain plug and install it to final drive assembly and tighten to the specified torque. Refer to [DLN-176, "2WD : Exploded View"](#) (2WD), [DLN-188, "AWD : Exploded View"](#) (AWD).

CAUTION:

Never reuse gasket.

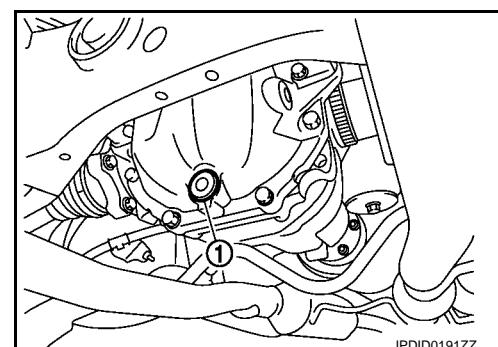

INFOID:000000008285640

Refilling

1. Remove filler plug (1). Fill with new gear oil until oil level reaches the specified level near filler plug mounting hole.


Oil grade and viscosity : Refer to [MA-10, "Fluids and Lubricants"](#).

Oil capacity : Refer to [DLN-217, "General Specification"](#).

2. After refilling oil, check oil level. Set a gasket to filler plug, then install it to final drive assembly. Refer to [DLN-176, "2WD : Exploded View"](#) (2WD), [DLN-188, "AWD : Exploded View"](#) (AWD).

CAUTION:

Never reuse gasket.

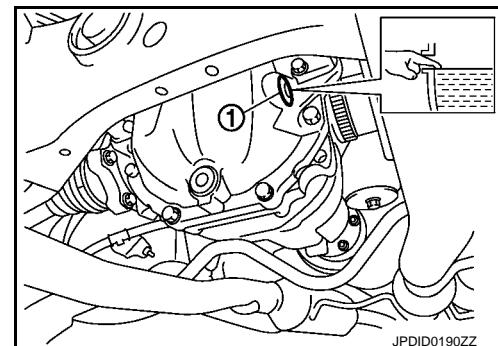


REMOVAL AND INSTALLATION**FRONT OIL SEAL**

2WD

2WD : Exploded View

INFOID:0000000008285641

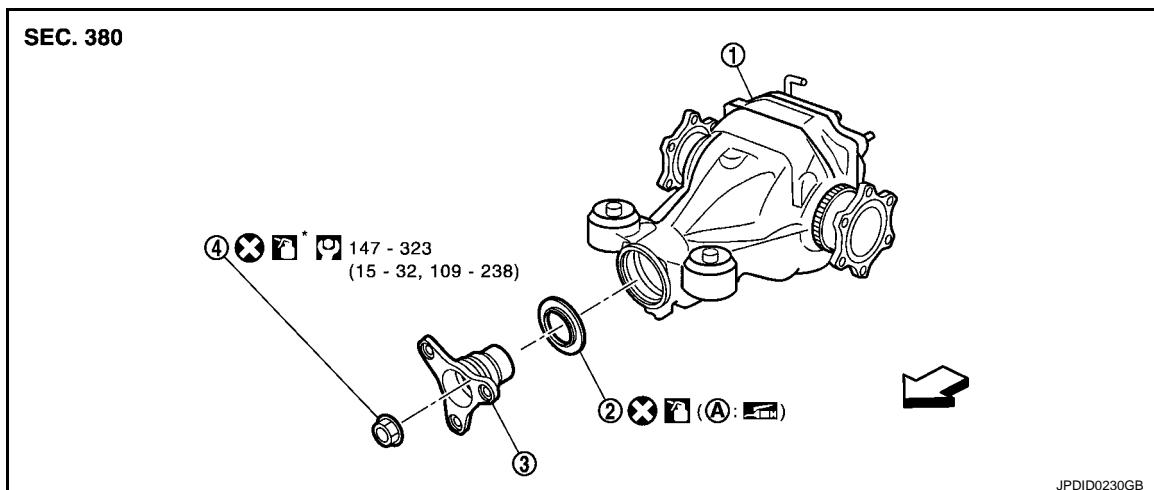

1. Final drive assembly
2. Front oil seal
3. Companion flange
4. Drive pinion lock nut

A. Oil seal lip

⇨: Vehicle front

⇨: Apply gear oil.

⇨*: Apply anti-corrosion oil.

Refer to [GI-4, "Components"](#) for symbols not described above.

2WD : Removal and Installation

INFOID:0000000008285642

REMOVAL**CAUTION:**

Verify identification stamp of replacement frequency put in the lower part of gear carrier to determine replacement for collapsible spacer when replacing front oil seal. Refer to "Identification stamp of replacement frequency of front oil seal". If collapsible spacer replacement is necessary, remove final drive assembly and disassemble it to replace front oil seal and collapsible spacer. Refer to [DLN-172, "2WD : Removal and Installation"](#) and [DLN-177, "2WD : Disassembly"](#).

NOTE:

The reuse of collapsible spacer is prohibited in principle. However, it is reusable on a one-time basis only in cases when replacing front oil seal.

Identification stamp of replacement frequency of front oil seal


FRONT OIL SEAL

< REMOVAL AND INSTALLATION >

[REAR FINAL DRIVE: R200]

- The diagonally shaded area in the figure shows stamping point for replacement frequency of front oil seal.
- The following table shows if collapsible spacer replacement is needed before replacing front oil seal.
When collapsible spacer replacement is required, disassemble final drive assembly to replace collapsible spacer and front oil seal. Refer to [DLN-177, "2WD : Disassembly"](#).

Stamp	collapsible spacer replacement
No stamp	Not required
"0" or "0" on the far right of stamp	Required
"01" or "1" on the far right of stamp	Not required

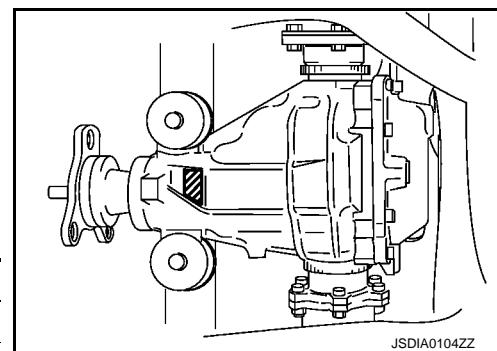

A
B
C
DLN
E
F
G
H
I
J
K
L
M
N
O

CAUTION:

Make a stamping after replacing front oil seal.

- After replacing front oil seal, make a stamping on the stamping point in accordance with the table below in order to identify replacement frequency.

CAUTION:

Make a stamping from left to right.

Stamp before stamping	Stamping on the far right	Stamping
No stamp	0	0
"0" (Front oil seal was replaced once.)	1	01
"01" (Collapsible spacer and front oil seal were replaced last time.)	0	010
"0" is on the far right. (Only front oil seal was replaced last time.)	1	...01
"1" is on the far right. (Collapsible spacer and front oil seal were replaced last time.)	0	...010


1. Drain gear oil. Refer to [DLN-157, "Draining"](#).
2. Make a judgment if a collapsible spacer replacement is required.
3. Remove center muffler with a power tool. Refer to [EX-5, "Exploded View"](#).
4. Remove rear wheel sensor. Refer to [BRC-130, "REAR WHEEL SENSOR : Exploded View"](#).
5. Remove drive shaft from final drive. Then suspend it by wire, etc. Refer to [RAX-10, "Exploded View"](#).
6. Install attachment (A) to side flange, and then pull out the side flange with the sliding hammer (B).

A : Attachment [SST: KV40104100 (—)]
B : Sliding hammer [SST: ST36230000 (J-25840-A)]

NOTE:

Circular clip installation position: Final drive side

7. Remove rear propeller shaft. Refer to [DLN-95, "Exploded View"](#).

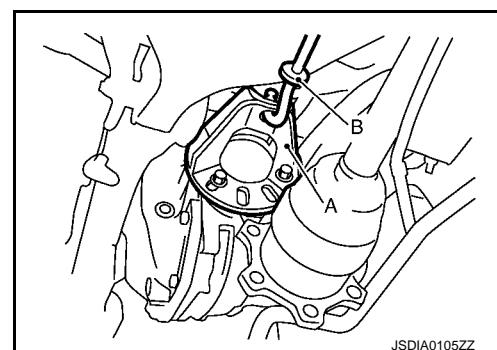

FRONT OIL SEAL


< REMOVAL AND INSTALLATION >

[REAR FINAL DRIVE: R200]

8. Measure the total preload with the preload gauge (A) [SST: ST3127S000 (J-25765-A)].

NOTE:

Record the preload measurement.

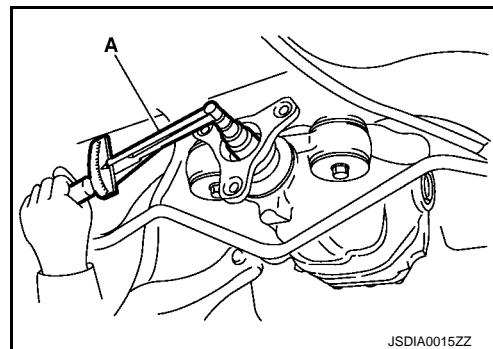

JSDIA0015ZZ


9. Put matching mark (B) on the end of the drive pinion. The matching mark should be in line with the matching mark (A) on companion flange (1).

CAUTION:

For matching mark, use paint. Never damage companion flange and drive pinion.


NOTE:

The matching mark on the final drive companion flange indicates the maximum vertical runout position.

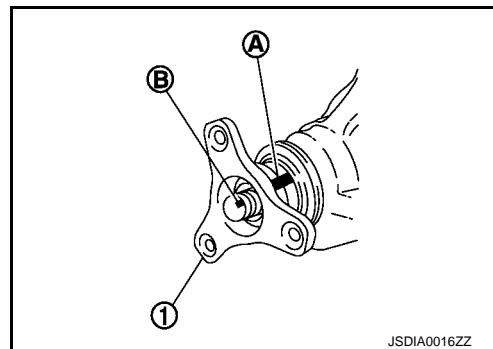


JSDIA0016ZZ

10. Remove drive pinion lock nut, using the flange wrench (commercial service tool).

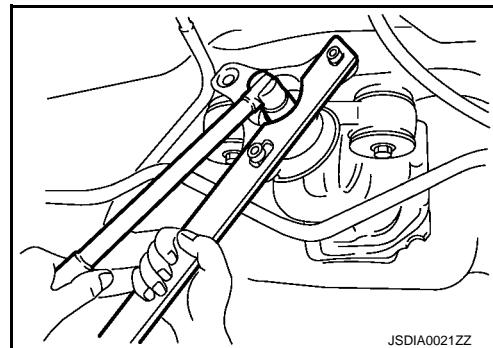


JSDIA0021ZZ

11. Remove companion flange using puller (commercial service tool).

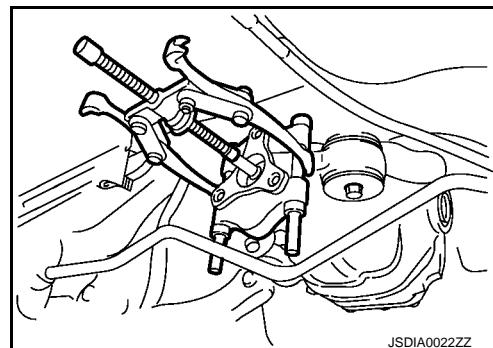

JSDIA0022ZZ

12. Remove front oil seal using the puller (A) [SST: KV381054S0 (J-34286)].

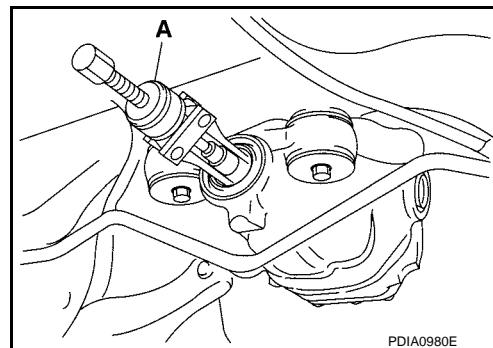

PDIA0980E

FRONT OIL SEAL

< REMOVAL AND INSTALLATION >


[REAR FINAL DRIVE: R200]

INSTALLATION


1. Apply multi-purpose grease to front oil seal lips.
2. Install front oil seal using the drift (A) [SST: ST30720000 (J-25405)] as shown in figure.

CAUTION:

- Never reuse oil seal.
- Never incline oil seal when installing.

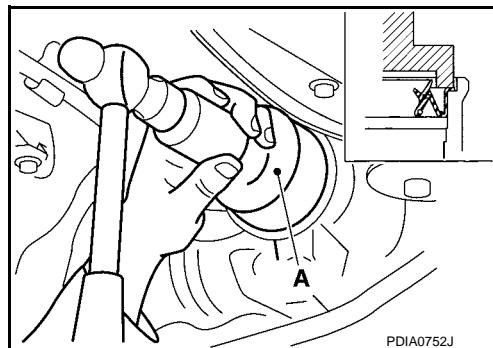

3. Align the matching mark (B) of drive pinion with the matching mark (A) of companion flange (1), and then install the companion flange.

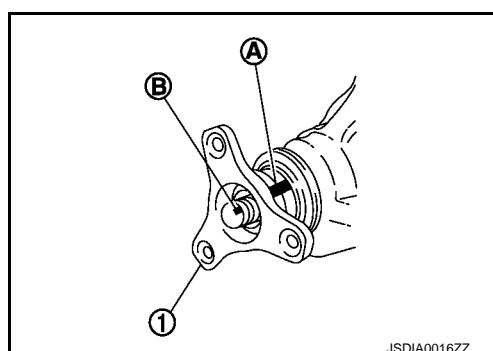

4. Apply anti-corrosion oil to the thread and seat of new drive pinion lock nut, and temporarily tighten drive pinion lock nut to drive pinion, using flange wrench (commercial service tool).

A : Preload gauge [SST: ST3127S000 (J-25765-A)]

CAUTION:


Never reuse drive pinion lock nut.

5. Tighten drive pinion lock nut within the limits of specified torque so as to keep the pinion bearing preload within a standard values, using preload gauge [SST: ST3127S000 (J-25765-A)].

Standard


Total preload torque

: A value that add 0.1 – 0.4 N·m (0.01 – 0.04 kg·m) to the measured value when removing.

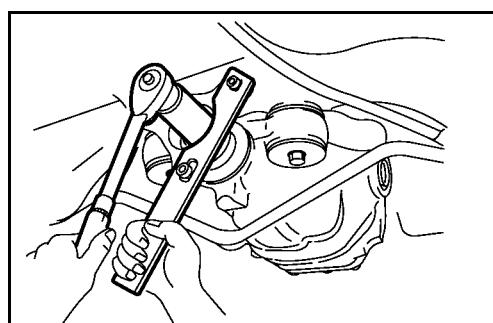

CAUTION:

- Adjust to the lower limit of the drive pinion lock nut tightening torque first.
- If the preload torque exceeds the specified value, replace collapsible spacer and tighten it again to adjust. Never loosen drive pinion lock nut to adjust the preload torque.

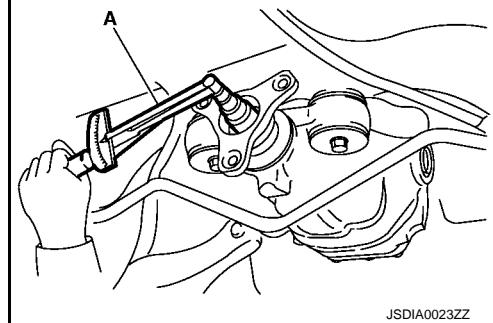

FRONT OIL SEAL

< REMOVAL AND INSTALLATION >

[REAR FINAL DRIVE: R200]


- Set a dial indicator (A) vertically to the tip of the drive pinion.
- Rotate drive pinion to check for runout.

Drive pinion runout

: Refer to [DLN-217, "Drive Pinion Runout \(2WD\)".](#)

- If the runout value is still outside of the limit after the phase has been changed, possible causes are an assembly malfunction of drive pinion and pinion bearing and malfunction of pinion bearing. Check for these items and repair if necessary.

- Make a stamping for identification of front oil seal replacement frequency. Refer to "Identification stamp of replacement frequency of front oil seal".

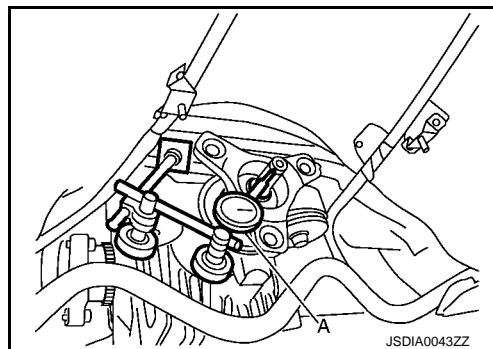


CAUTION:

Make a stamping after replacing front oil seal.

- Install rear propeller shaft. Refer to [DLN-95, "Exploded View".](#)

- Install side flange with the following procedure.

- Attach the protector [SST: KV38107900 (J-39352)] to side oil seal.
- After the side flange is inserted and the serrated part of side gear has engaged the serrated part of flange, remove the protector.
- Put a suitable drift on the center of side flange, then drive it until sound changes.

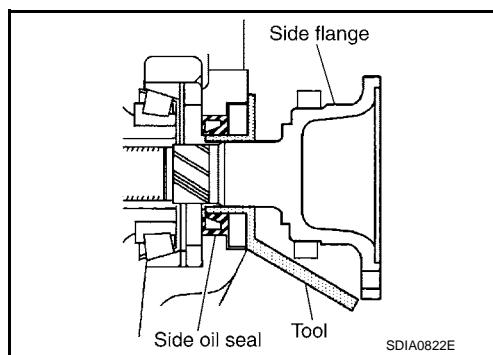

NOTE:


When installation is completed, driving sound of the side flange turns into a sound that seems to affect the whole final drive.

- Confirm that the dimension of the side flange (1) installation measurement (A) in the figure comes into the following.

Standard

A : 326 – 328 mm (12.83 – 12.91 in)

- Install drive shaft. Refer to [RAX-10, "Exploded View".](#)
- Install rear wheel sensor. Refer to [BRC-130, "REAR WHEEL SENSOR : Exploded View".](#)
- Install center muffler. Refer to [EX-5, "Exploded View".](#)
- Refill gear oil to the final drive and check oil level. Refer to [DLN-157, "Refilling".](#)
- Check the final drive for oil leakage. Refer to [DLN-157, "Inspection".](#)

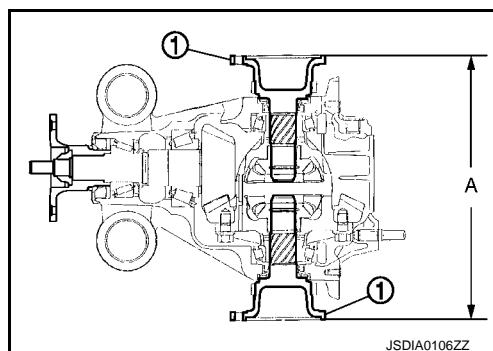

AWD


FRONT OIL SEAL

< REMOVAL AND INSTALLATION >

[REAR FINAL DRIVE: R200]

AWD : Exploded View

INFOID:000000008285643

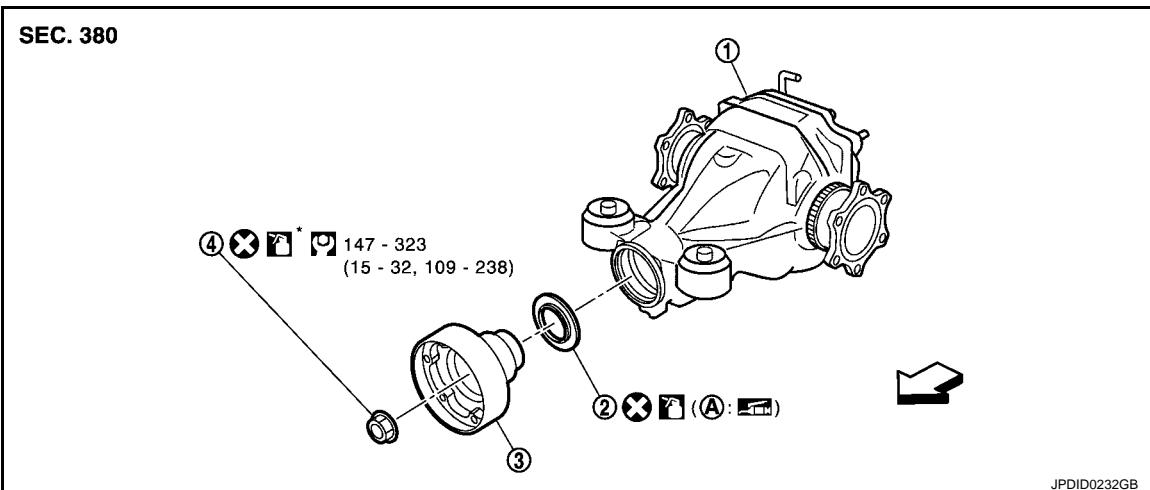

1. Final drive assembly 2. Front oil seal 3. Companion flange

4. Drive pinion lock nut

A. Oil seal lip

: Vehicle front

: Apply gear oil.

: Apply anti-corrosion oil.

Refer to [GI-4, "Components"](#) for symbols not described above.

AWD : Removal and Installation

INFOID:000000008285644

REMOVAL

CAUTION:

Verify identification stamp of replacement frequency put in the lower part of gear carrier to determine replacement for collapsible spacer when replacing front oil seal. Refer to "Identification stamp of replacement frequency of front oil seal". If collapsible spacer replacement is necessary, remove final drive assembly and disassemble it to replace front oil seal and collapsible spacer. Refer to [DLN-174, "AWD : Removal and Installation"](#) and [DLN-189, "AWD : Disassembly"](#).

NOTE:


The reuse of collapsible spacer is prohibited in principle. However, it is reusable on a one-time basis only in cases when replacing front oil seal.

Identification stamp of replacement frequency of front oil seal

- The diagonally shaded area in the figure shows stamping point for replacement frequency of front oil seal.
- The following table shows if collapsible spacer replacement is needed before replacing front oil seal.

When collapsible spacer replacement is required, disassemble final drive assembly to replace collapsible spacer and front oil seal. Refer to [DLN-189, "AWD : Disassembly"](#).

Stamp	collapsible spacer replacement
No stamp	Not required
"0" or "0" on the far right of stamp	Required
"01" or "1" on the far right of stamp	Not required

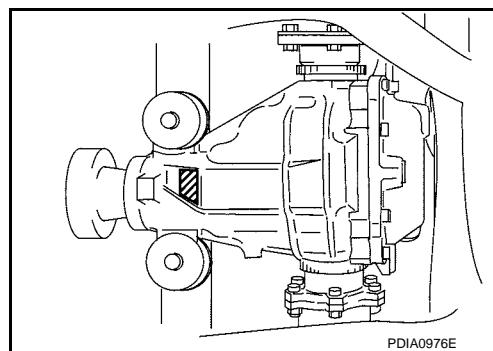

CAUTION:

Make a stamping after replacing front oil seal.

FRONT OIL SEAL

< REMOVAL AND INSTALLATION >

[REAR FINAL DRIVE: R200]

- After replacing front oil seal, make a stamping on the stamping point in accordance with the table below in order to identify replacement frequency.


CAUTION:

Make a stamping from left to right.

Stamp before stamping	Stamping on the far right	Stamping
No stamp	0	0
"0" (Front oil seal was replaced once.)	1	01
"01" (Collapsible spacer and front oil seal were replaced last time.)	0	010
"0" is on the far right. (Only front oil seal was replaced last time.)	1	...01
"1" is on the far right. (Collapsible spacer and front oil seal were replaced last time.)	0	...010

1. Drain gear oil. Refer to [DLN-157, "Draining"](#).
2. Make a judgment if a collapsible spacer replacement is required.
3. Remove center muffler with a power tool. Refer to [EX-5, "Exploded View"](#).
4. Remove rear wheel sensor. Refer to [BRG-130, "REAR WHEEL SENSOR : Exploded View"](#).
5. Remove drive shaft from final drive. Then suspend it by wire, etc. Refer to [RAX-10, "Exploded View"](#).
6. Install attachment (A) to side flange, and then pull out the side flange with the sliding hammer (B).


A : Attachment [SST: KV40104100 (—)]
B : Sliding hammer [SST: ST36230000 (J-25840-A)]

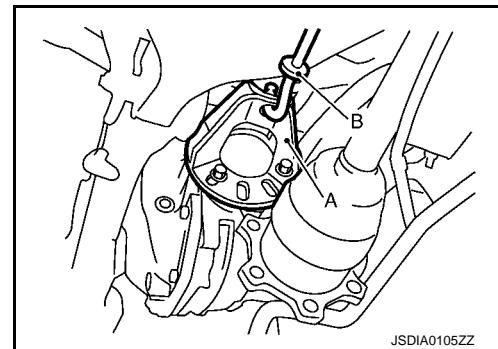

JSDIA0105ZZ

NOTE:
Circular clip installation position: Final drive side

7. Remove rear propeller shaft. Refer to [DLN-104, "Exploded View"](#).

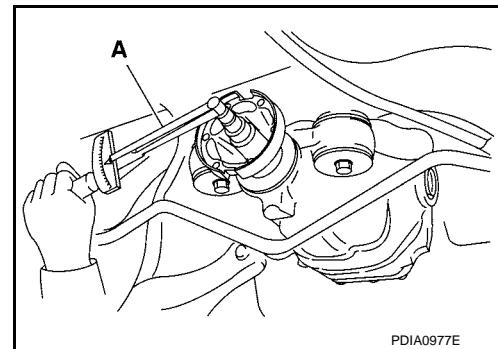


PDIA0977E

8. Measure the total preload with the preload gauge (A) [SST: ST3127S000 (J-25765-A)].

NOTE:

Record the preload measurement.

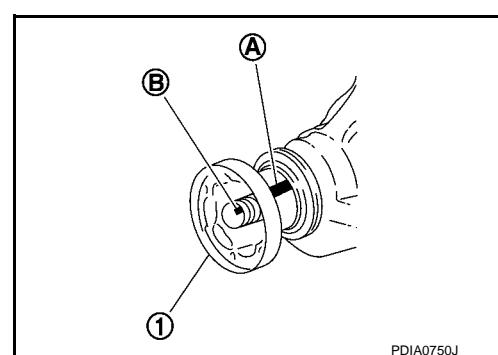

PDIA0750J

CAUTION:

For matching mark, use paint. Never damage companion flange and drive pinion.

NOTE:


The matching mark on the final drive companion flange indicates the maximum vertical runout position.

FRONT OIL SEAL


< REMOVAL AND INSTALLATION >

[REAR FINAL DRIVE: R200]


10. Remove drive pinion lock nut using the flange wrench (commercial service tool).

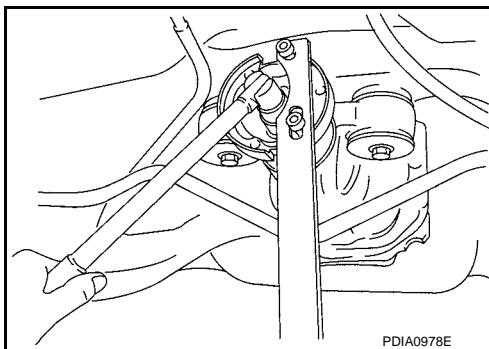

11. Remove companion flange using puller (commercial service tool).

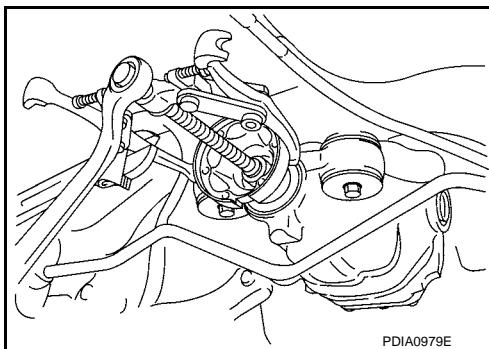

12. Remove front oil seal using the puller (A) [SST: KV381054S0 (J-34286)].

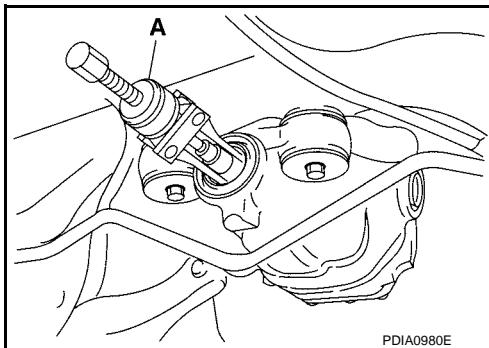


INSTALLATION

1. Apply multi-purpose grease to front oil seal lips.
2. Install front oil seal using the drift (A) [SST: ST30720000 (J-25405)] as shown in figure.

CAUTION:

- Never reuse oil seal.
- Never incline oil seal when installing.

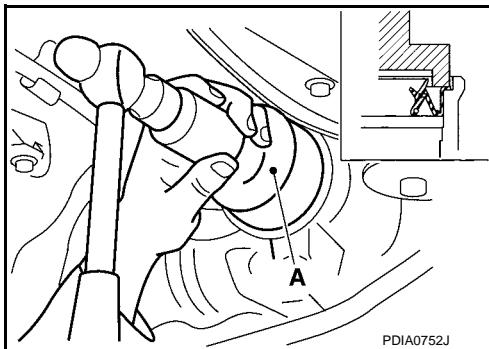


FRONT OIL SEAL

< REMOVAL AND INSTALLATION >

[REAR FINAL DRIVE: R200]

- Align the matching mark (B) of drive pinion with the matching mark (A) of companion flange (1), and then install the companion flange.

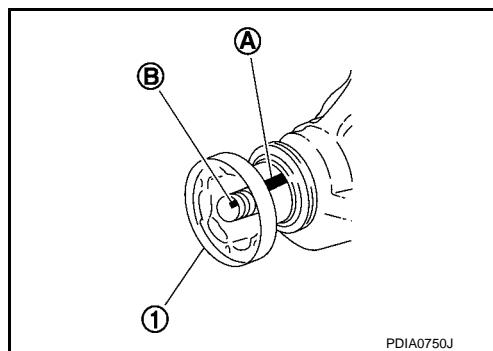

PDIA0750J

- Apply anti-corrosion oil to the thread and seat of new drive pinion lock nut, and temporarily tighten drive pinion lock nut to drive pinion, using flange wrench (commercial service tool).

A : Preload gauge [SST: ST3127S000 (J-25765-A)]

CAUTION:


Never reuse drive pinion lock nut.

- Tighten drive pinion lock nut within the limits of specified torque so as to keep the pinion bearing preload within a standard values, using preload gauge [SST: ST3127S000 (J-25765-A)].

Standard

Total preload torque

: A value that add 0.1 – 0.4 N·m (0.01 – 0.04 kg·m) to the measured value when removing.

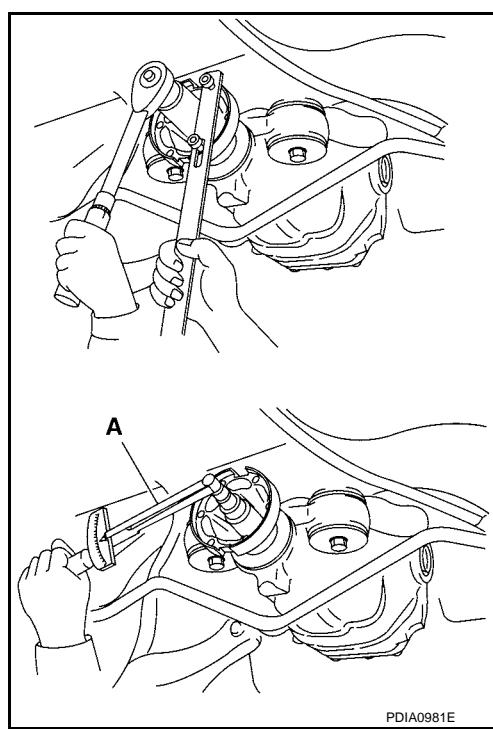

PDIA0981E

CAUTION:

- Adjust to the lower limit of the drive pinion lock nut tightening torque first.
- If the preload torque exceeds the specified value, replace collapsible spacer and tighten it again to adjust. Never loosen drive pinion lock nut to adjust the preload torque.

- Fit a test indicator to the inner side of companion flange (socket diameter).
- Rotate companion flange to check for runout.

Companion flange runout : Refer to [DLN-218, "Companion Flange Runout \(AWD\)"](#).


- If the runout value is outside the runout limit, follow the procedure below to adjust.
- Check for runout while changing the phase between companion flange and drive pinion by 90° step, and search for the position where the runout is the minimum.
- If the runout value is still outside of the limit after the phase has been changed, possible cause will be an assembly malfunction of drive pinion and pinion bearing and malfunction of pinion bearing. Check for these items and repair if necessary.
- If the runout value is still outside of the limit after the check and repair, replace companion flange.

- Make a stamping for identification of front oil seal replacement frequency. Refer to "Identification stamp of replacement frequency of front oil seal".

CAUTION:

Make a stamping after replacing front oil seal.

- Install rear propeller shaft. Refer to [DLN-104, "Exploded View"](#).

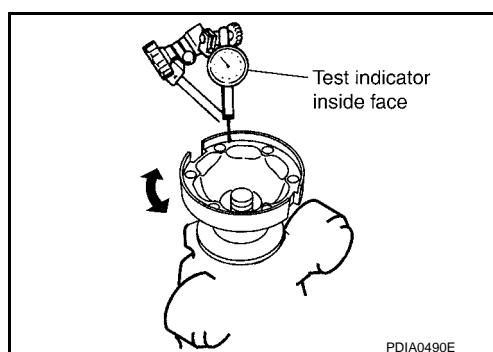

PDIA0490E

FRONT OIL SEAL

< REMOVAL AND INSTALLATION >



[REAR FINAL DRIVE: R200]

10. Install side flange with the following procedure.
 - a. Attach the protector [SST: KV38107900 (J-39352)] to side oil seal.
 - b. After the side flange is inserted and the serrated part of side gear has engaged the serrated part of flange, remove the protector.
 - c. Put a suitable drift on the center of side flange, then drive it until sound changes.
- NOTE:**
When installation is completed, driving sound of the side flange turns into a sound that seems to affect the whole final drive.
- d. Confirm that the dimension of the side flange installation measurement (A) in the figure comes into the following.

Standard

A : 326 – 328 mm (12.83 – 12.91 in)

11. Install drive shaft. Refer to [RAX-10, "Exploded View"](#).
12. Install rear wheel sensor. Refer to [BRC-130, "REAR WHEEL SENSOR : Exploded View"](#).
13. Install center muffler. Refer to [EX-5, "Exploded View"](#).
14. Refill gear oil to the final drive and check oil level. Refer to [DLN-157, "Refilling"](#).
15. Check the final drive for oil leakage. Refer to [DLN-157, "Inspection"](#).

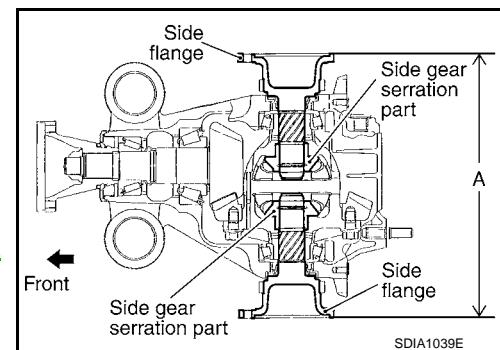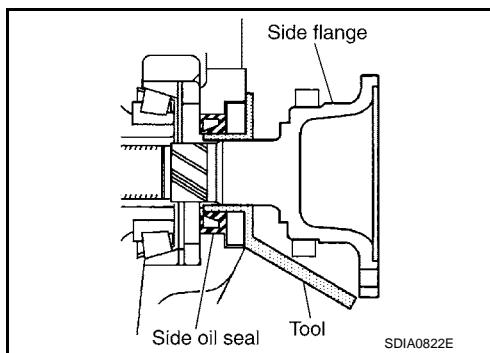


SIDE OIL SEAL

2WD

2WD : Exploded View

INFOID:0000000008285645

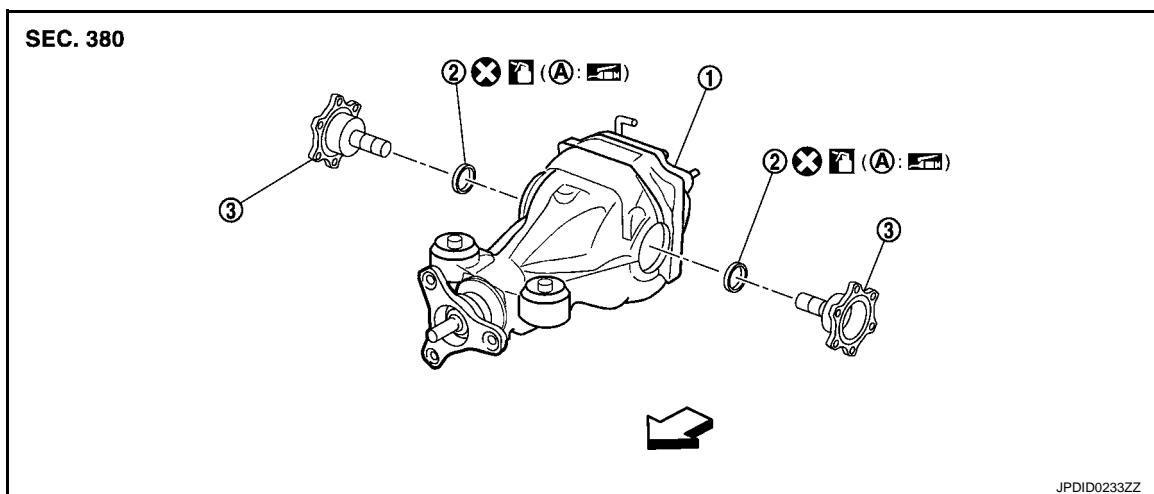

1. Final drive assembly 2. Side oil seal 3. Side flange

A. Oil seal lip

⇨: Vehicle front

שמן: Apply gear oil.

Refer to [GI-4, "Components"](#) for symbols not described above.

2WD : Removal and Installation

INFOID:0000000008285646

REMOVAL


1. Remove center muffler with a power tool. Refer to [EX-5, "Exploded View"](#).
2. Remove rear wheel sensor. Refer to [BRG-130, "REAR WHEEL SENSOR : Exploded View"](#).
3. Remove drive shaft from final drive with a power tool. Then suspend it by wire, etc. Refer to [RAX-10, "Exploded View"](#).
4. Install attachment (A) to side flange, and then pull out the side flange with the sliding hammer (B).

A : Attachment [SST: KV40104100 (—)]

B : Sliding hammer [SST: ST36230000 (J-25840-A)]

NOTE:

Circular clip installation position: Final drive side

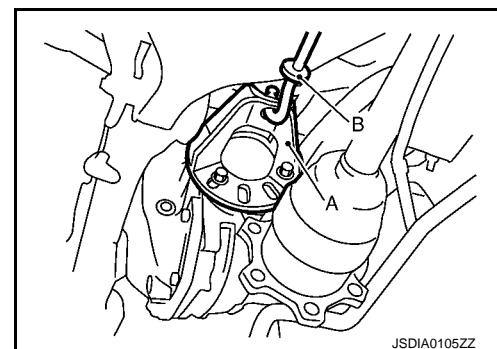

SIDE OIL SEAL


< REMOVAL AND INSTALLATION >

[REAR FINAL DRIVE: R200]

5. Remove side oil seal, using a suitable tool.

CAUTION:

Never damage gear carrier.

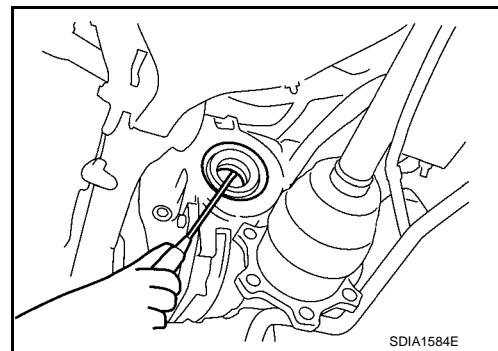


INSTALLATION


1. Apply multi-purpose grease to side oil seal lips.
2. Install side oil seal until it becomes flush with the case end, using the drift [SST: KV38100200 (J-26233)].

CAUTION:

- Never reuse oil seal.
- When installing, never incline oil seal.

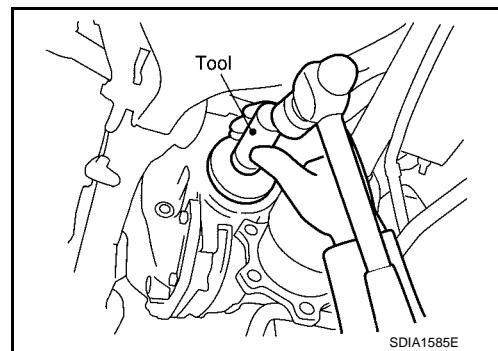

3. Install side flange with the following procedure.
 - a. Attach the protector [SST: KV38107900 (J-39352)] to side oil seal.
 - b. After the side flange is inserted and the serrated part of side gear has engaged the serrated part of flange, remove the protector.

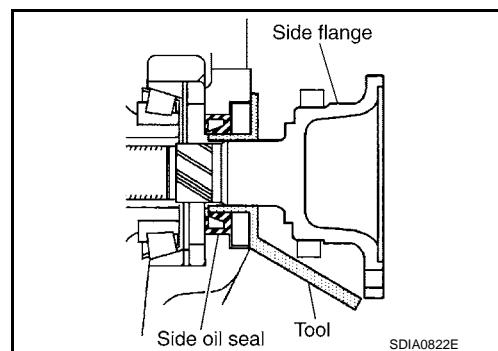

- c. Put a suitable drift on the center of side flange, then drive it until sound changes.

NOTE:


When installation is completed, driving sound of the side flange turns into a sound that seems to affect the whole final drive.

- d. Confirm that the dimension of the side flange (1) installation measurement (A) in the figure comes into the following.

Standard

A : 326 – 328 mm (12.83 – 12.91 in)

4. Install drive shaft. Refer to [RAX-10, "Exploded View"](#).
5. Install rear wheel sensor. Refer to [BRG-130, "REAR WHEEL SENSOR : Exploded View"](#).
6. Install center muffler. Refer to [EX-5, "Exploded View"](#).
7. When oil leaks while removing, check oil level after the installation. Refer to [DLN-157, "Inspection"](#).

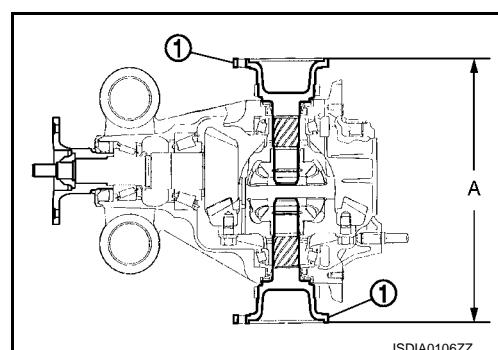

AWD


SIDE OIL SEAL

< REMOVAL AND INSTALLATION >

[REAR FINAL DRIVE: R200]

AWD : Exploded View

INFOID:0000000008285647

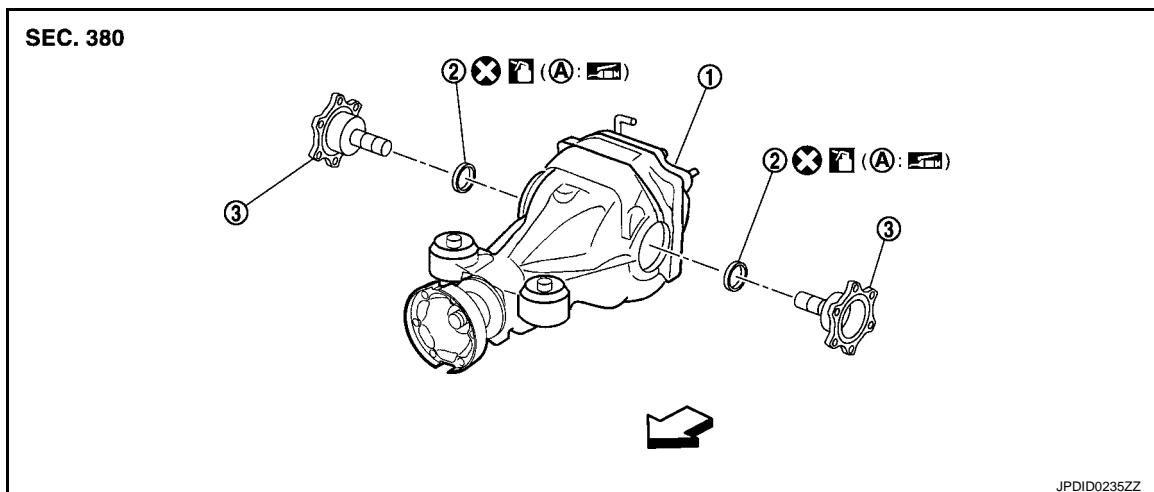

1. Final drive assembly
2. Side oil seal
3. Side flange

A. Oil seal lip

→: Vehicle front

שמן: Apply gear oil.

Refer to [GI-4, "Components"](#) for symbols not described above.

AWD : Removal and Installation

INFOID:0000000008285648

REMOVAL


1. Remove center muffler with a power tool. Refer to [EX-5, "Exploded View"](#).
2. Remove rear wheel sensor. Refer to [BRG-130, "REAR WHEEL SENSOR : Exploded View"](#).
3. Remove drive shaft from final drive with a power tool. Then suspend it by wire, etc. Refer to [RAX-10, "Exploded View"](#).
4. Install attachment (A) to side flange, and then pull out the side flange with the sliding hammer (B).

A : Attachment [SST: KV40104100 (—)]

B : Sliding hammer [SST: ST36230000 (J-25840-A)]

NOTE:


Circular clip installation position: Final drive side

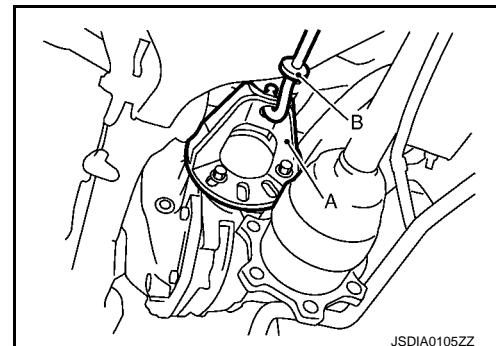

5. Remove side oil seal, using a suitable tool.

CAUTION:

Never damage gear carrier.

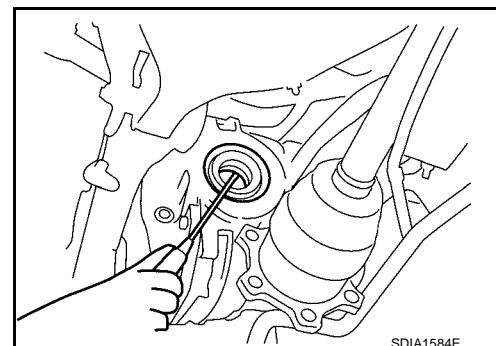


INSTALLATION

1. Apply multi-purpose grease to side oil seal lips.
2. Install side oil seal until it becomes flush with the case end, using the drift [SST: KV38100200 (J-26233)].


CAUTION:

- Never reuse oil seal.
- When installing, never incline oil seal.

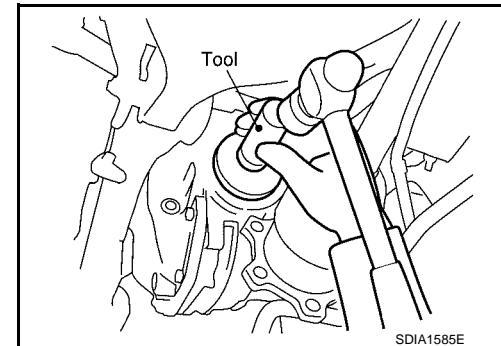

3. Install side flange with the following procedure.

 - a. Attach the protector [SST: KV38107900 (J-39352)] to side oil seal.
 - b. After the side flange is inserted and the serrated part of side gear has engaged the serrated part of flange, remove the protector.

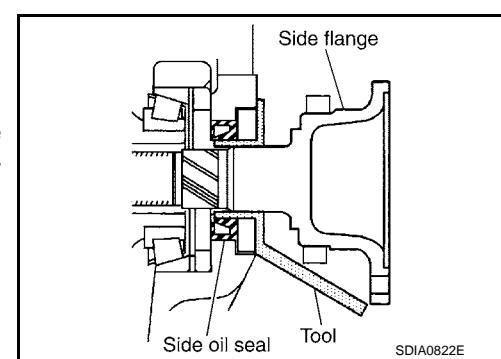

- c. Put a suitable drift on the center of side flange, then drive it until sound changes.

NOTE:


When installation is completed, driving sound of the side flange turns into a sound that seems to affect the whole final drive.

- d. Confirm that the dimension of the side flange installation measurement (A) in the figure comes into the following.

Standard

A : 326 – 328 mm (12.83 – 12.91 in)

4. Install drive shaft. Refer to [RAX-10, "Exploded View"](#).
5. Install rear wheel sensor. Refer to [BRG-130, "REAR WHEEL SENSOR : Exploded View"](#).
6. Install center muffler. Refer to [EX-5, "Exploded View"](#).
7. When oil leaks while removing, check oil level after the installation. Refer to [DLN-157, "Inspection"](#).

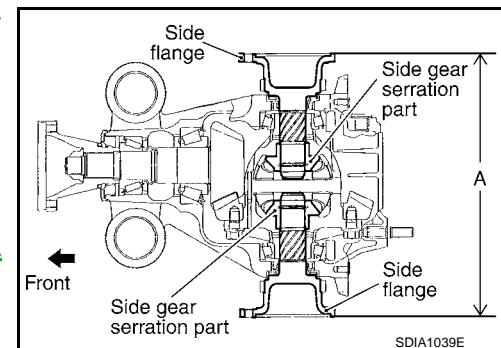


UNIT REMOVAL AND INSTALLATION**REAR FINAL DRIVE ASSEMBLY**

2WD

2WD : Exploded View

INFOID:0000000008285649

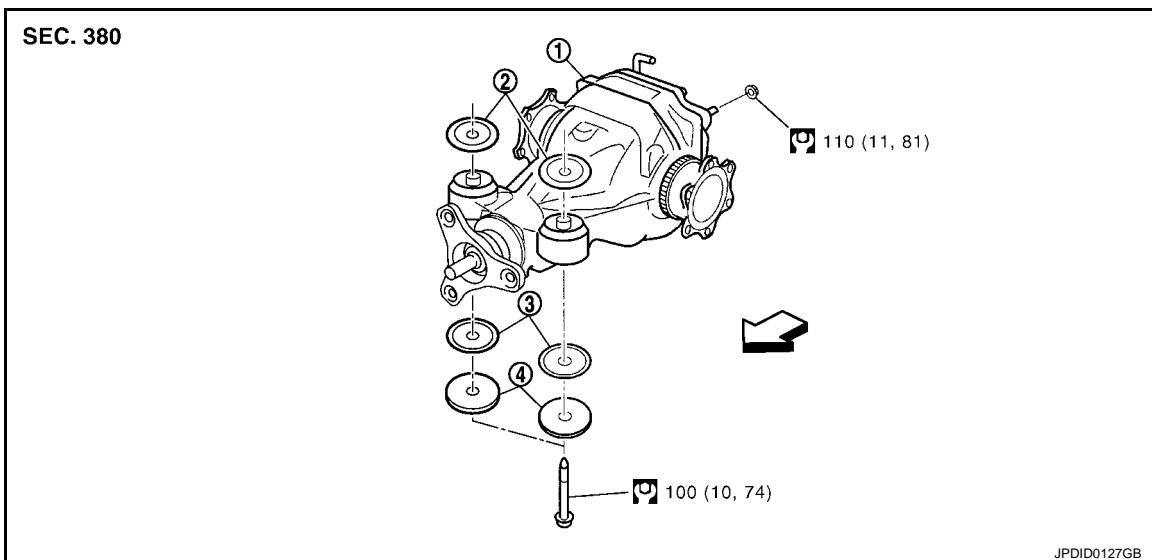

1. Rear final drive assembly
2. Upper stopper
3. Lower stopper
4. Washer

⇨: Vehicle front


Refer to [GI-4, "Components"](#) for symbols in the figure.

2WD : Removal and Installation

INFOID:0000000008285650

REMOVAL

1. Remove center muffler with a power tool. Refer to [EX-5, "Exploded View"](#).
2. Remove stabilizer bar with a power tool. Refer to [RSU-16, "Exploded View"](#).
3. Remove rear propeller shaft from the final drive. Refer to [DLN-95, "Exploded View"](#).
4. Remove drive shaft from final drive with a power tool. Then suspend it by wire, etc. Refer to [RAX-10, "Exploded View"](#).
5. Remove breather hose from the final drive.
6. Remove rear wheel sensor. Refer to [BRC-130, "REAR WHEEL SENSOR : Exploded View"](#).

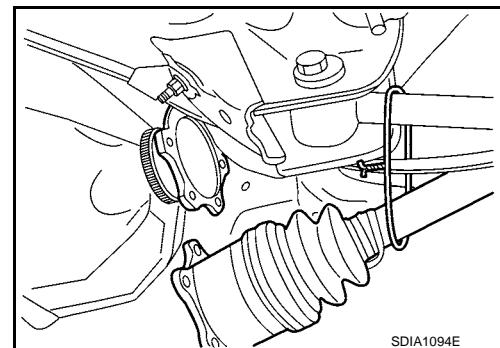

REAR FINAL DRIVE ASSEMBLY

< UNIT REMOVAL AND INSTALLATION >


[REAR FINAL DRIVE: R200]

7. Set a suitable jack to rear final drive assembly.

CAUTION:
Never place a jack on the rear cover (aluminum case).

8. Remove the mounting bolts and nuts connecting to the suspension member, and remove rear final drive assembly with a power tool.

CAUTION:
Secure rear final drive assembly to a suitable jack while removing it.

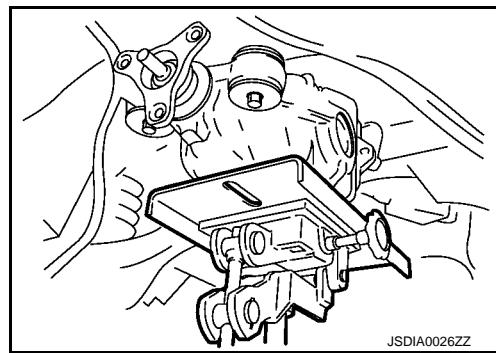

INSTALLATION

Note the following, and installation is in the reverse order of removal.


CAUTION:

Check that there are no pinched or restricted areas on the breather hose caused by bending or winding when installing it.

- Install the breather hose (1) to breather connector until dimension (A) shown as follows.

A:

Final drive side : 20 mm (0.79 in)
Suspension member side : 20.5 mm (0.807 in)

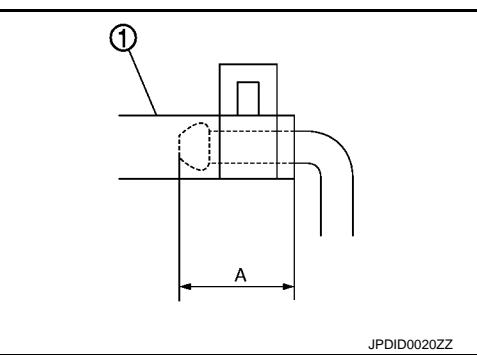

CAUTION:

- Never reuse hose clamp.
- Install the hose clamp at the final drive side, with the tab facing downward.
- Install the hose clamp at the suspension member side, with the tab facing downward.


- If remove breather connector, install breather hose (1) as shown in the figure.

2 : Suspension member

3 : Metal connector

⇨: Vehicle front

- For installation, insert the resin connector into rear suspension member. Install the metal connector in rear cover so that a paint mark becomes forward of the vehicle as shown in the figure. Arrange the breather hose then to pass by over wheel sensor harness.

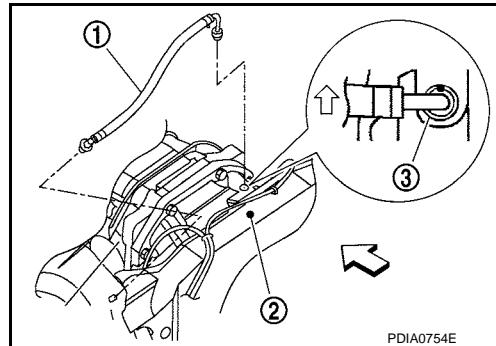

CAUTION:

Never reuse breather connector.

- When oil leaks while removing final drive assembly, check oil level after the installation. Refer to [DLN-157, "Inspection".](#)

AWD


REAR FINAL DRIVE ASSEMBLY

< UNIT REMOVAL AND INSTALLATION >

[REAR FINAL DRIVE: R200]

AWD : Exploded View

INFOID:0000000008285651

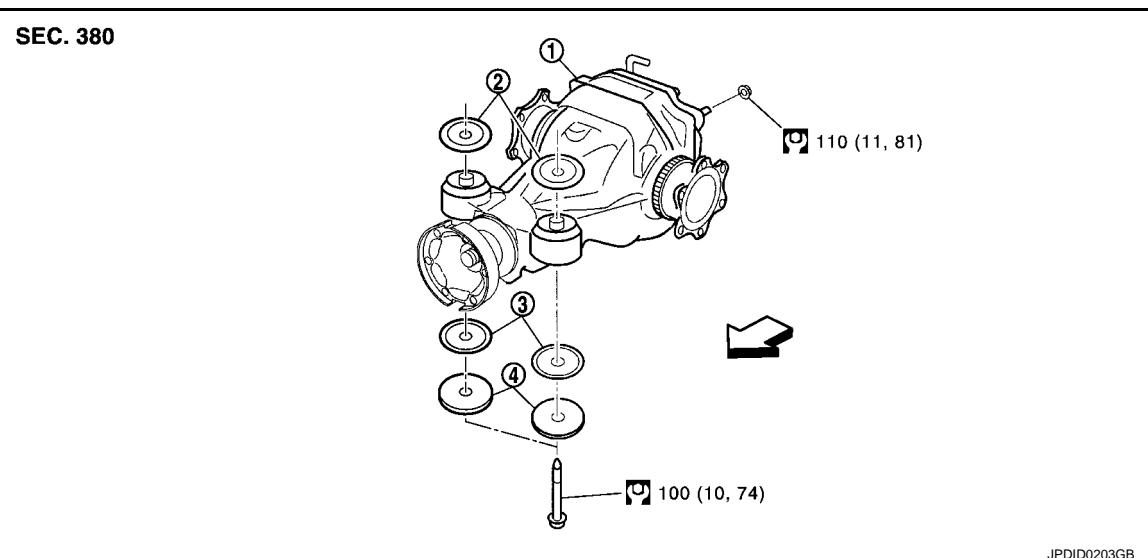

1. Rear final drive assembly
2. Upper stopper
3. Lower stopper
4. Washer

⇨: Vehicle front


Refer to [GI-4, "Components"](#) for symbols in the figure.

AWD : Removal and Installation

INFOID:0000000008285652

REMOVAL

1. Remove center muffler with a power tool. Refer to [EX-5, "Exploded View"](#).
2. Remove stabilizer bar with a power tool. Refer to [RSU-16, "Exploded View"](#).
3. Remove rear propeller shaft from the final drive. Refer to [DLN-104, "Exploded View"](#).
4. Remove drive shaft from final drive with a power tool. Then suspend it by wire, etc. Refer to [RAX-10, "Exploded View"](#).
5. Remove breather hose from the final drive.
6. Remove rear wheel sensor. Refer to [BRC-130, "REAR WHEEL SENSOR : Exploded View"](#).

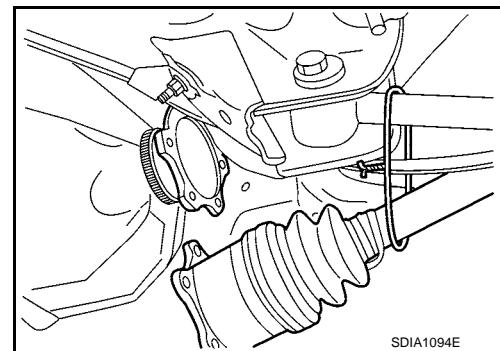

7. Set a suitable jack to rear final drive assembly.


CAUTION:

Never place a jack on the rear cover (aluminum case).

8. Remove the mounting bolts and nuts connecting to the suspension member, and remove rear final drive assembly with a power tool.

CAUTION:

Secure rear final drive assembly to a suitable jack while removing it.

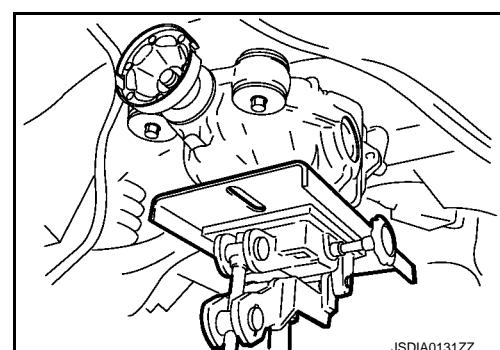

INSTALLATION

REAR FINAL DRIVE ASSEMBLY

< UNIT REMOVAL AND INSTALLATION >

[REAR FINAL DRIVE: R200]

Note the following, and installation is in the reverse order of removal.


CAUTION:

Check that there are no pinched or restricted areas on the breather hose caused by bending or winding when installing it.

- Install the breather hose (1) to breather connector until dimension (A) shown as follows.

A:

Final drive side : 20 mm (0.79 in)
Suspension member side : 20.5 mm (0.807 in)

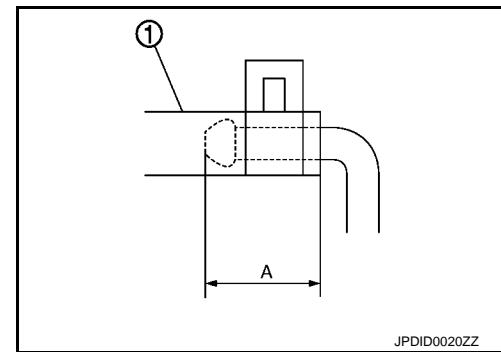

CAUTION:


- Never reuse hose clamp.
- Install the hose clamp at the final drive side, with the tab facing downward.
- Install the hose clamp at the suspension member side, with the tab facing downward.
- If remove breather connector, install breather hose (1) as shown in the figure.

2 : Suspension member

3 : Metal connector

◀ : Vehicle front

- For installation, insert the resin connector into rear suspension member. Install the metal connector in rear cover so that a paint mark becomes forward of the vehicle as shown in the figure. Arrange the breather hose then to pass by over wheel sensor harness.

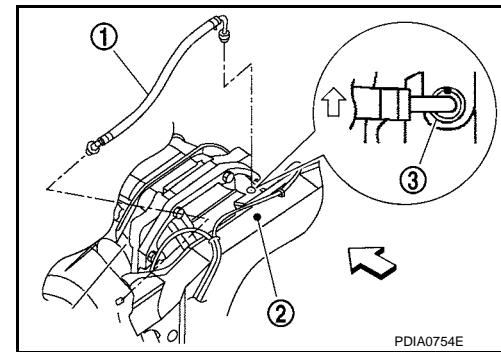

CAUTION:

Never reuse breather connector.

- When oil leaks while removing final drive assembly, check oil level after the installation. Refer to [DLN-157, "Inspection"](#).

DIFFERENTIAL ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]


UNIT DISASSEMBLY AND ASSEMBLY

DIFFERENTIAL ASSEMBLY

2WD

2WD : Exploded View

INFOID:0000000008285653

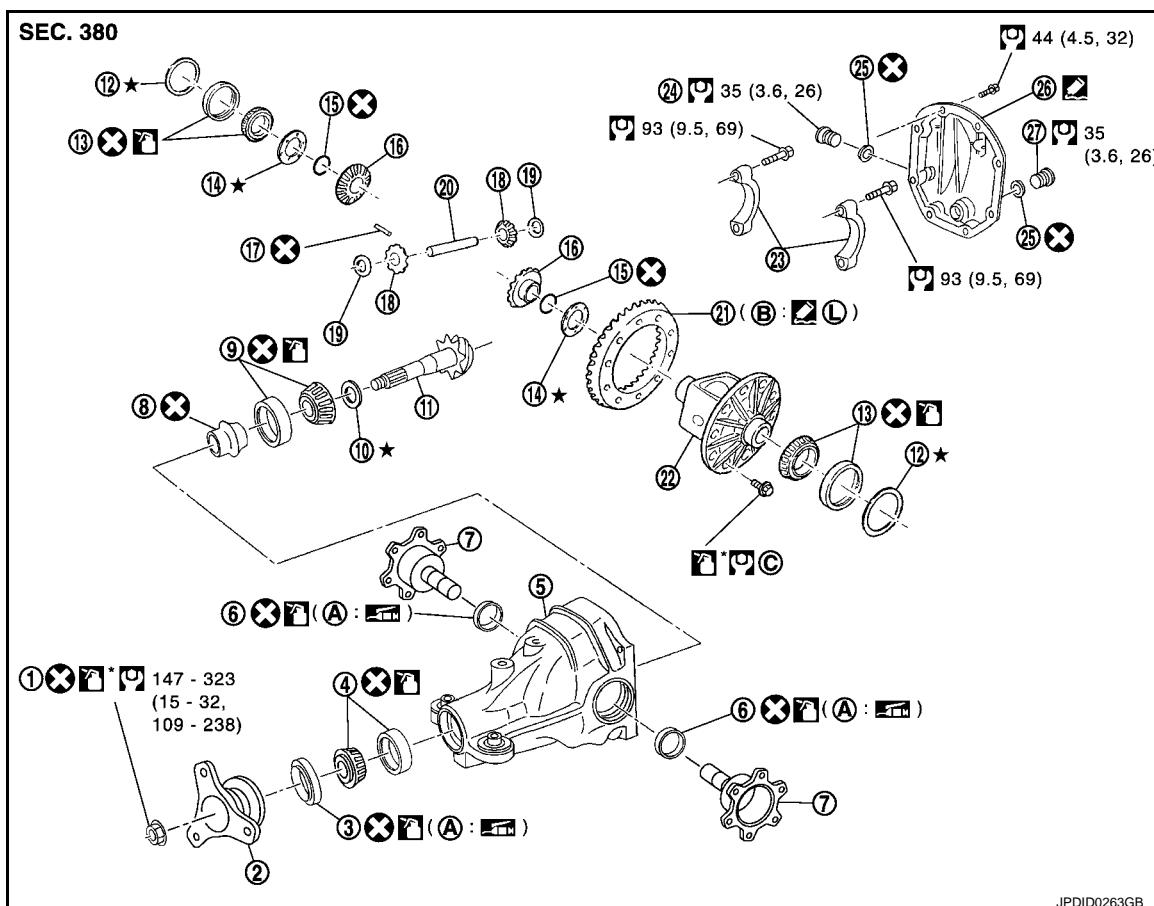

JPDID0263GB

1. Drive pinion lock nut	2. Companion flange	3. Front oil seal
4. Pinion front bearing	5. Gear carrier	6. Side oil seal
7. Side flange	8. Collapsible spacer	9. Pinion rear bearing
10. Pinion height adjusting washer	11. Drive pinion	12. Side bearing adjusting washer
13. Side bearing	14. Side gear thrust washer	15. Circular clip
16. Side gear	17. Lock pin	18. Pinion mate gear
19. Pinion mate thrust washer	20. Pinion mate shaft	21. Drive gear
22. Differential case	23. Bearing cap	24. Filler plug
25. Gasket	26. Rear cover	27. Drain plug
A. Oil seal lip	B. Screw hole	C. Comply with the assembly procedure when tightening. Refer to DLN-179, "2WD : Assembly" .

: Apply gear oil.

: Apply anti-corrosion oil.

: Apply Genuine Silicone RTV or equivalent. Refer to [GI-22, "Recommended Chemical Products and Sealants"](#).

DIFFERENTIAL ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]

 L: Apply Genuine High Strength Thread Locking Sealant or equivalent. Refer to [GI-22. "Recommended Chemical Products and Sealants"](#).

Refer to GI-4, "Components" for symbols not described above.


2WD : Disassembly

INFOID:0000000008285654

1. Drain gear oil, if necessary.
2. Remove side flange.
3. Remove rear cover mounting bolts.
4. Remove rear cover to insert the seal cutter (A) [SST: KV10111100 (J-37228)] between gear carrier and rear cover.


CAUTION:

- **Never damage the mating surface.**
- **Never insert flat-bladed screwdriver, this may damage the mating surface.**

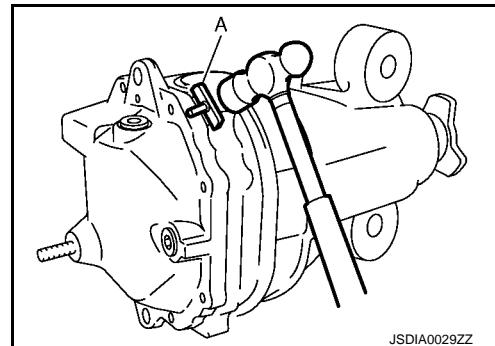

JSDIA0029ZZ

- Using two 45 mm (1.77 in) spacers, mount carrier on the attachment (A) [SST: KV38100800 (J-25604-01)].

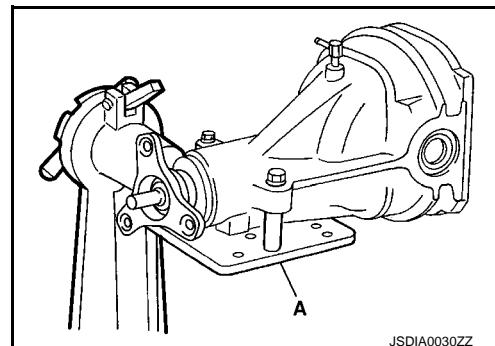


JSDIA003077

6. For proper reinstallation, paint matching marks on one side of the bearing cap.


CAUTION:

- For matching marks, use paint. Never damage bearing caps and gear carrier.
- Bearing caps are manufactured as integral molding. Use the matching marks to them in their original positions.

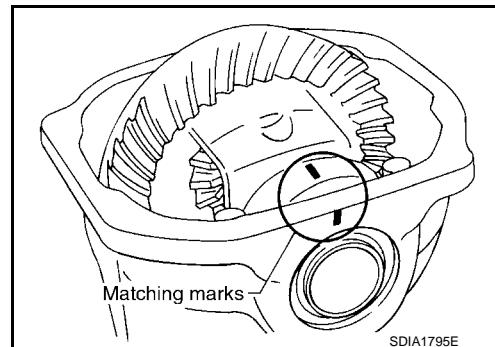

SDIA1795E

7. Remove bearing caps.

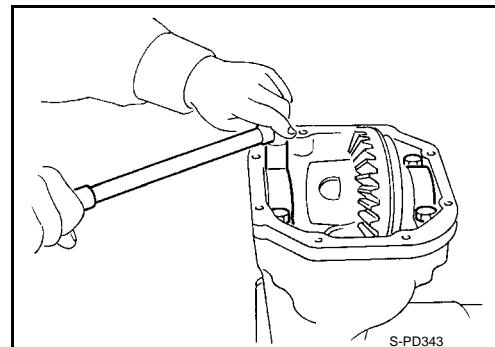


S-PD343

DIFFERENTIAL ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >


[REAR FINAL DRIVE: R200]

8. Lift differential case assembly out with a sliding hammer (commercial service tool).

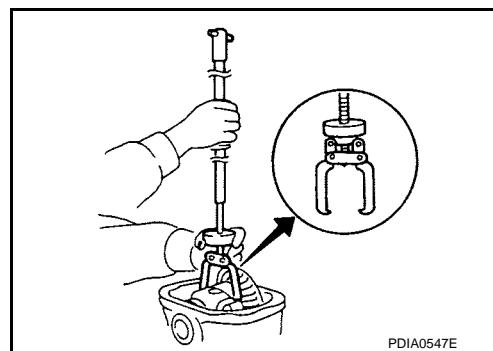

PDIA0547E

- Keep side bearing outer races together with inner race. Never mix them up.
Also, keep side bearing adjusting washers together with bearings.

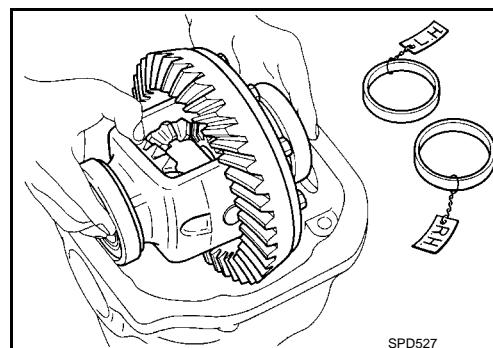

SPD527


9. Remove side bearing inner race with puller (A) and base (B). To prevent damage to bearing, engage puller jaws in groove (←).

A : Puller [SST: ST33051001 (J-22888-20)]

B : Base [SST: ST33061000 (J-8107-2)]

CAUTION:

- To prevent damage to the side bearing and drive gear, place copper plates between these parts and vise.
- It is not necessary to remove side bearing inner race except when it is replaced.

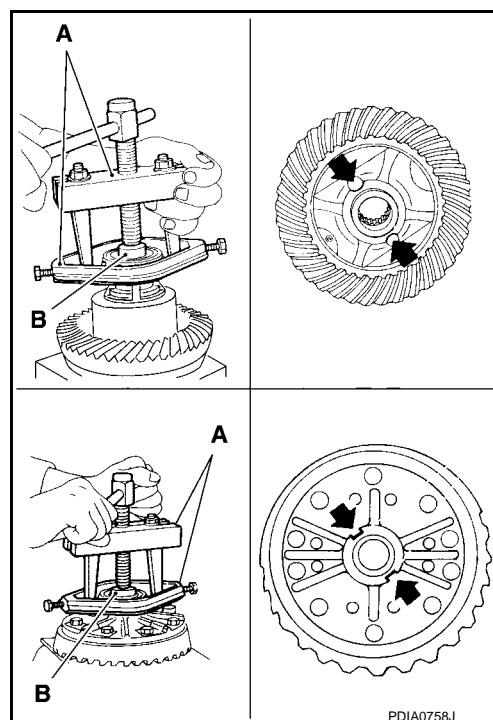

PDIA0758J

10. For proper reinstallation, paint matching marks on one differential case assembly.

CAUTION:


For matching marks, use paint. Never damage differential case and drive gear.

11. Remove drive gear mounting bolts.

12. Tap drive gear off differential case assembly with a soft hammer.

CAUTION:

Tap evenly all around to keep drive gear from bending.

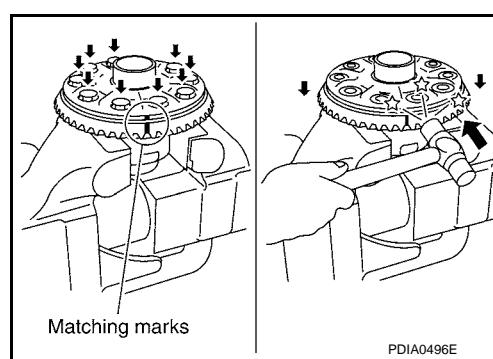


PDIA0496E

DIFFERENTIAL ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]

13. Remove lock pin of pinion mate shaft with a punch from drive gear side.

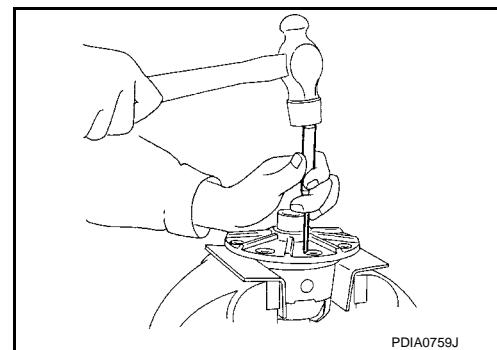

14. Remove pinion mate shaft.

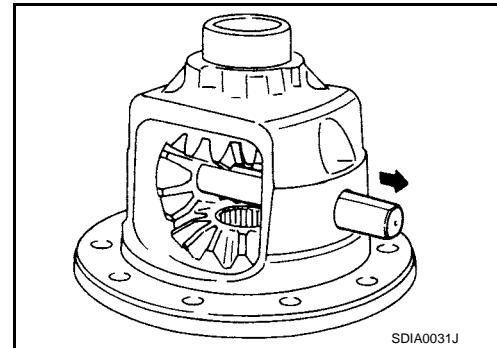


15. Turn pinion mate gear, then remove pinion mate gear, pinion mate thrust washer, side gear and side gear thrust washer from differential case.

16. Remove circular clip from side gear.

CAUTION:

Never damage side gear.

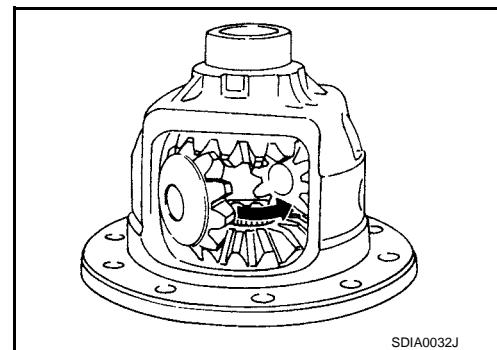

2WD : Assembly


INFOID:0000000008285655

1. Install circular clip to side gear.

CAUTION:

Never damage side gear.

2. Install side gear thrust washers with the same thickness as the ones installed prior to disassembly or reinstall the old ones on the side gears.

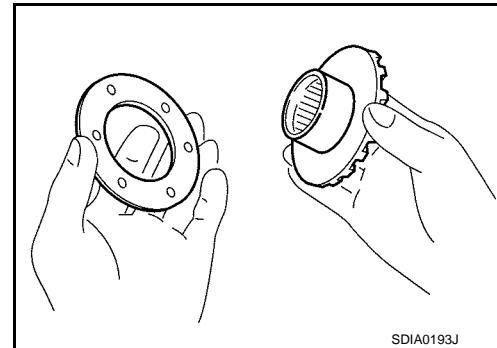


DIFFERENTIAL ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]


3. Install side gears and thrust washers into differential case.
CAUTION:
Make sure that the circular clip is installed to side gears.
4. Align 2 pinion mate gears in diagonally opposite positions, then rotate and install them into differential case after installing thrust washer to pinion mate gear.

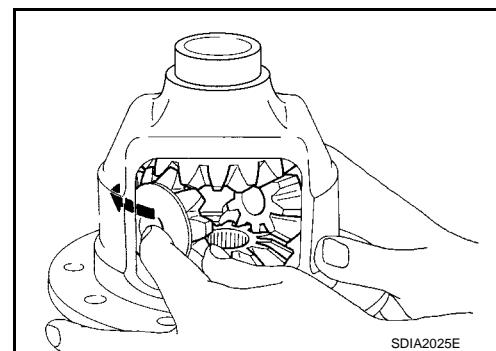

5. Align the lock pin holes on differential case with shaft, and install pinion mate shaft.

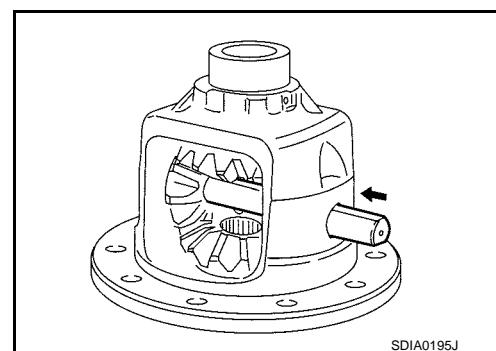

6. Measure side gear end play. If necessary, select the appropriate side gear thrust washers.
 - a. Place differential case straight up so that side gear to be measured comes upward.

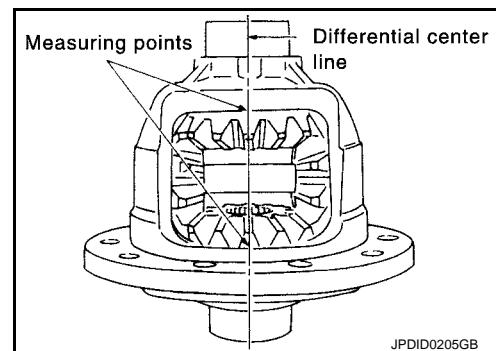

DIFFERENTIAL ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]

b. Using feeler gauge, measure the clearance between side gear back and differential case at 3 different points, while rotating side gear. Average the 3 readings, and then measure the clearance of the other side as well.

Side gear back clearance : Refer to [DLN-217, "Differential Side Gear Clearance".](#)

CAUTION:

To prevent side gear from tilting, insert feeler gauges with the same thickness from both sides.

c. If the back clearance is outside the specification, use a thicker/thinner side gear thrust washer to adjust. For selecting thrust washer, refer to the latest parts information.

When the back clearance is large: Use a thicker thrust washer.

When the back clearance is small: Use a thinner thrust washer.


CAUTION:

Select a side gear thrust washer for right and left individually.

7. Drive a lock pin into pinion mate shaft, using a punch. Make sure lock pin is flush with differential case.

CAUTION:

Never reuse lock pin.

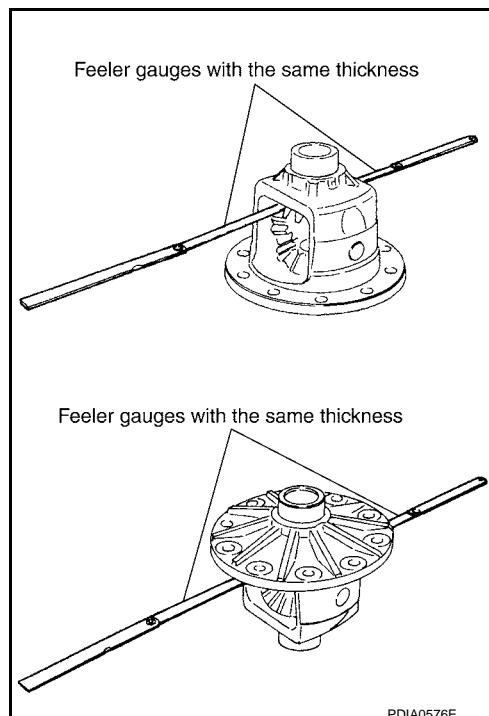

DLN

8. Apply thread locking sealant into the thread hole of drive gear. Use Genuine High Strength Thread Locking Sealant or equivalent. Refer to [GI-22, "Recommended Chemical Products and Sealants".](#)

CAUTION:

Clean and degrease drive gear back and threaded holes sufficiently.

9. Install the drive gear to differential case.

CAUTION:

Align the matching marks of differential case and drive gear.

10. Tighten the mounting bolts with the following procedure.


CAUTION:

Apply anti-corrosion oil to the thread and seat of mounting bolts.


a. Tighten the bolts in a crisscross fashion to the specified torque.

Drive gear mounting bolts tightening torque : 78.5 N·m (8.0 kg-m, 58 ft-lb)


b. Tighten the bolts additionally to the specified angle.

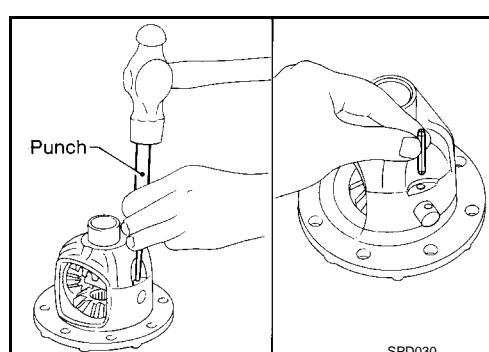

SPD030

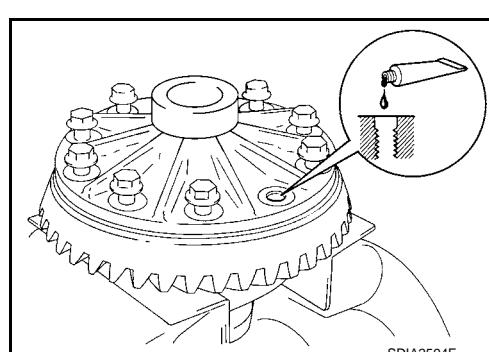

SDIA2594E

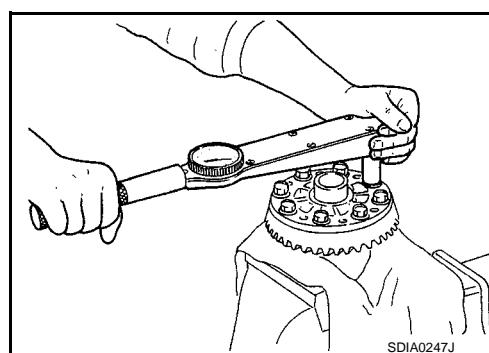

SDIA0247J

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

DIFFERENTIAL ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]

**Drive gear mounting
bolts tightening angle** : 31 to 36 degree

CAUTION:


Check the tightening angle using the angle wrench [SST: KV10112100 (BT-8653-A)]. Never make judgment by visual inspection.

11. Press side bearing inner races to differential case, using the drift (A) and the base (B).

A : Drift [SST: KV38100300 (J-25523)]
B : Base [SST: ST33061000 (J-8107-2)]

CAUTION:

Never reuse side bearing inner race.

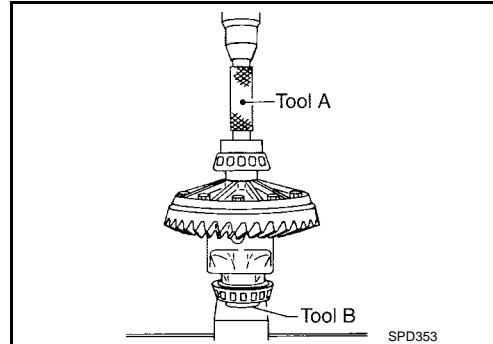


12. Set bearing outer races to differential case assembly, and install it with removed side bearing adjusting washer or same thickness washer into gear carrier.

CAUTION:


- Apply differential gear oil to the side bearings.
- Install side bearing and side bearing adjusting washer in correct location. (drive gear tooth side or drive gear back side)

13. Measure side bearing preload. If necessary, select the appropriate side bearing adjusting washers. Refer to [DLN-183, "2WD : Adjustment"](#).

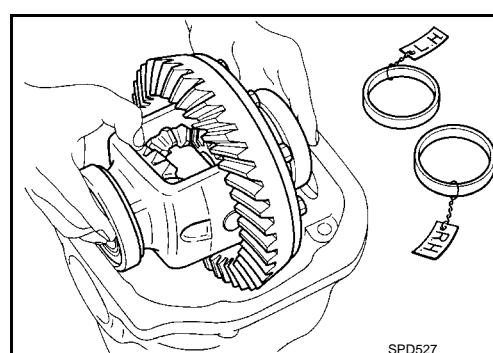

14. Align matching marks on bearing cap with that on gear carrier.

15. Install bearing caps and tighten bearing cap mounting bolts.

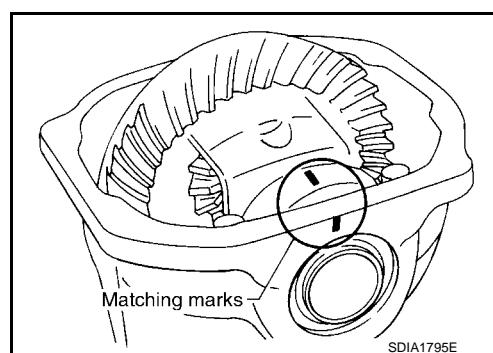


16. Using the drift [SST: KV38100200 (J-26233)], drive side oil seals until it becomes flush with the case end.

CAUTION:

- Never reuse oil seal.
- When installing, never incline oil seal.
- Apply multi-purpose grease onto oil seal lips, and gear oil onto the circumference of oil seal.

17. Check and adjust drive gear runout, tooth contact, drive gear to drive pinion backlash, and total preload torque. Refer to [DLN-183, "2WD : Adjustment"](#).

Recheck above items. Readjust the above description, if necessary.

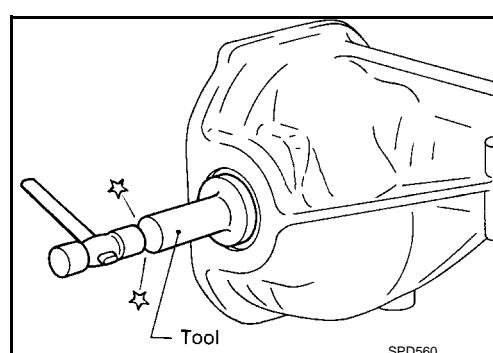

DIFFERENTIAL ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >


[REAR FINAL DRIVE: R200]

18. Apply sealant to mating surface of rear cover.
 • Use Genuine Silicone RTV or equivalent. Refer to [GI-22, "Recommended Chemical Products and Sealants".](#)

CAUTION:

Remove old sealant adhering to mounting surfaces. Also remove any moisture, oil, or foreign material adhering to application and mounting surfaces.

19. Install rear cover on gear carrier and tighten mounting bolts.

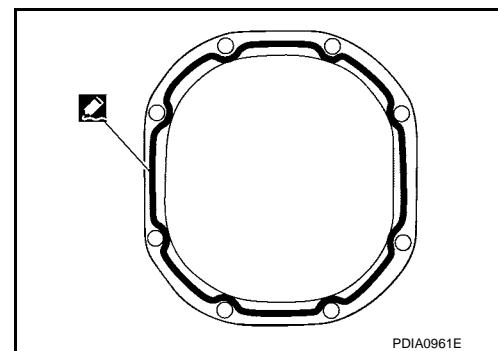

PDIA0961E

20. Install side flange with the following procedure.

- Attach the protector [SST: KV38107900 (J-39352)] to side oil seal.
- After the side flange is inserted and the serrated part of side gear has engaged the serrated part of flange, remove the protector.
- Put a suitable drift on the center of side flange, then drive it until sound changes.


NOTE:

When installation is completed, driving sound of the side flange turns into a sound that seems to affect the whole final drive.


- Confirm that the dimension of the side flange (1) installation measurement (A) in the figure comes into the following.

Standard

A : 326 – 328 mm (12.83 – 12.91 in)

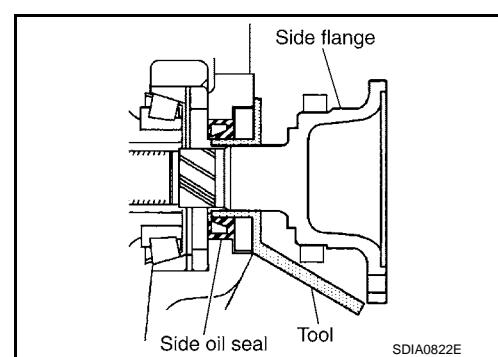

SDIA0822E

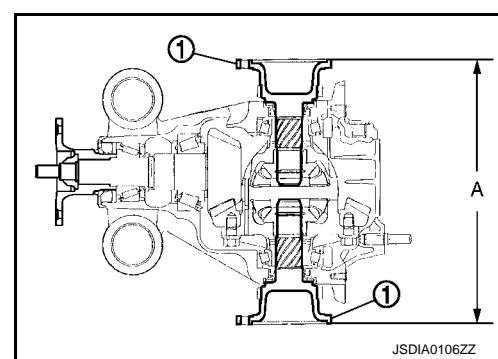

JSDIA0106ZZ

2WD : Adjustment

INFOID:0000000008285656

TOTAL PRELOAD TORQUE

Before inspection and adjustment, drain gear oil.

- Secure final drive assembly onto an attachment [SST: KV38100800 (J-25604-01)].
- Remove side flanges.
- Rotate drive pinion back and forth 2 to 3 times to check for unusual noise and rotation malfunction.
- Rotate drive pinion at least 20 times to check for smooth operation of the bearing.
- Measure total preload with the preload gauge (A) [SST: ST3127S000 (J-25765-A)].

Total preload torque


: Refer to [DLN-217, "Preload Torque".](#)

NOTE:

Total preload torque = Pinion bearing preload torque + Side bearing preload torque

- If measured value is out of the specification, disassemble it to check and adjust each part. Adjust the pinion bearing preload and side bearing preload.

Adjust the pinion bearing preload first, then adjust the side bearing preload.

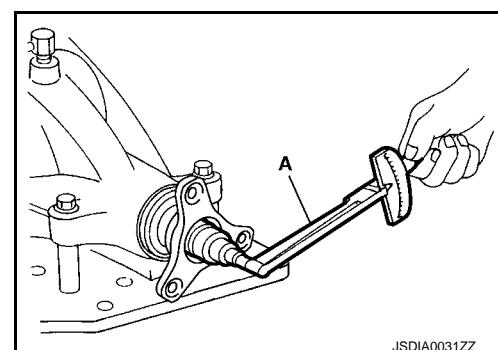

JSDIA0031ZZ

When the preload torque is large

On pinion bearings: Replace the collapsible spacer.

On side bearings: Use thinner side bearing adjusting washers by the same amount to each side. For selecting adjusting washer, refer to the latest parts information.

When the preload is small


On pinion bearings: Tighten the drive pinion lock nut.

On side bearings: Use thicker side bearing adjusting washers by the same amount to each side. For selecting adjusting washer, refer to the latest parts information.


SIDE BEARING PRELOAD

Before inspection and adjustment, drain gear oil.


1. Remove rear cover. Refer to [DLN-177, "2WD : Disassembly"](#).
2. Make sure all parts are clean. Also, make sure the bearings are well lubricated with gear oil.
3. Place the differential case, with side bearings and bearing races installed, into gear carrier.

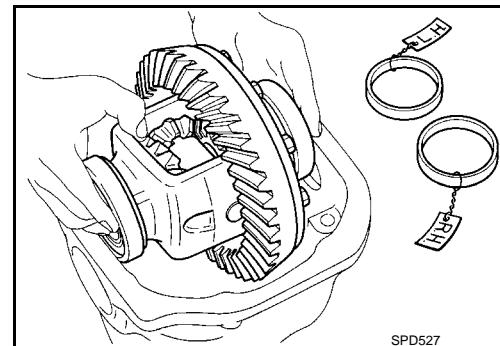

4. Insert left and right original side bearing adjusting washers in place between side bearings and gear carrier.

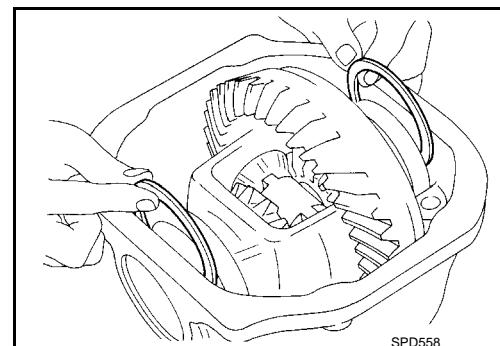

5. Install bearing caps in their correct locations and tighten bearing cap mounting bolts.
6. Turn the carrier several times to seat the bearings.

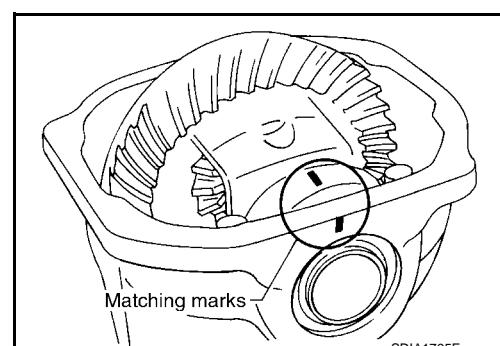

DIFFERENTIAL ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]

7. Measure the turning torque of the carrier at the drive gear mounting bolts with a spring gauge [SST: — (J-8129)].

Standard Specification


: 34.2 – 39.2 N (3.5 – 4.0 kg, 7.7 – 8.8 lb) of pulling force at the drive gear bolt

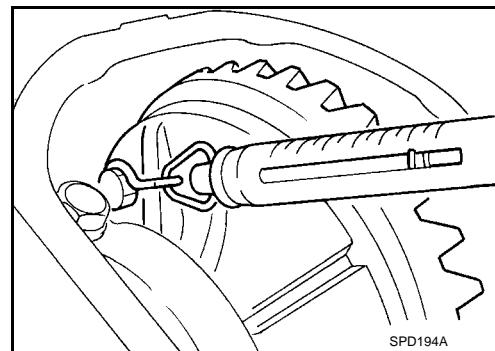

8. If the turning torque is outside the specification, use a thicker/thinner side bearing adjusting washer to adjust. For selecting adjusting washer, refer to the latest parts information.

If the turning torque is less than the specified range: Use a thicker adjusting washer.

If the turning torque is greater than the specification: Use a thinner adjusting washer.

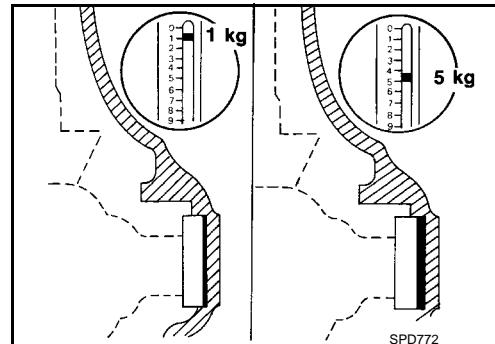

CAUTION:

Select a side bearing adjusting washer for right and left individually.

9. Record the total amount of washer thickness required for the correct carrier side bearing preload.

DRIVE GEAR RUNOUT

1. Remove rear cover. Refer to [DLN-177, "2WD : Disassembly"](#).
2. Fit a dial indicator to the drive gear back face.
3. Rotate the drive gear to measure runout.


Drive gear runout

: Refer to [DLN-217, "Drive Gear Runout"](#).

- If the runout is outside of the repair limit, check drive gear assembly condition; foreign material may be caught between drive gear and differential case, or differential case or drive gear may be deformed, etc.

CAUTION:

Replace drive gear and drive pinion gear as a set.

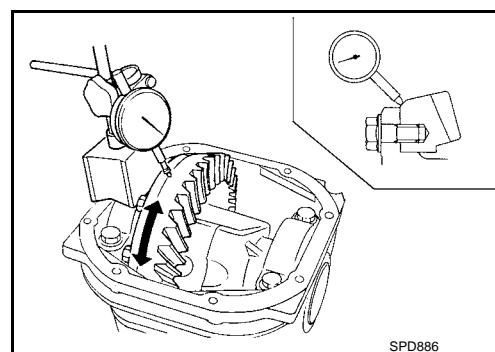


TOOTH CONTACT

Before inspection and adjustment, drain gear oil.

1. Remove rear cover. Refer to [DLN-177, "2WD : Disassembly"](#).
2. Apply red lead to drive gear.

CAUTION:

Apply red lead to both the faces of 3 to 4 gears at 4 locations evenly spaced on drive gear.

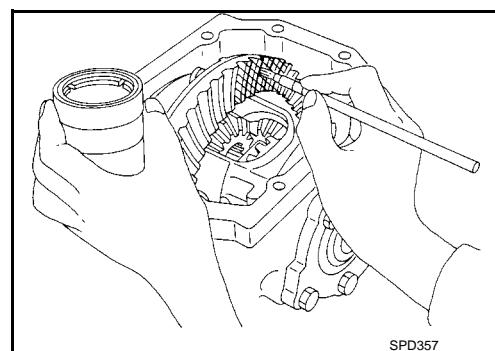

A
B
C
DLN
E
F
G
H
I
J
K
L
M
N
O
P

DIFFERENTIAL ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]

3. Rotate drive gear back and forth several times, check drive pinion gear to drive gear tooth contact.

CAUTION:

Check tooth contact on drive side and reverse side.

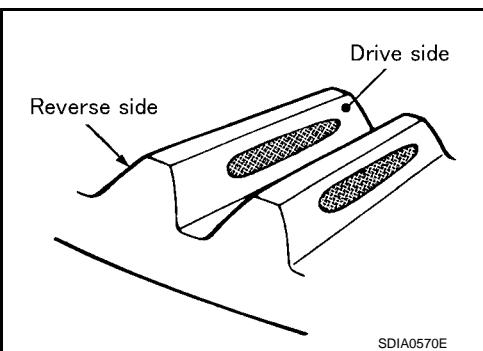


SDIA0570E

Tooth contact condition				Pinion height adjusting washer selection valve [mm (in)]	Adjustment (Yes/No)	Possible cause
Drive side	Back side					
Heel side	Toe side	Toe side	Heel side			
				+0.09 (+0.0035)	Yes	Occurrence of noise and scoring sound in all speed ranges.
				+0.06 (+0.0024)		Occurrence of noise when accelerating.
				+0.03 (+0.0012)	No	—
				0		—
				-0.03 (-0.0012)	Yes	Occurrence of noise at constant speed and decreasing speed.
				-0.06 (-0.0024)		Occurrence of noise and scoring sound in all speed ranges.
				-0.09 (-0.0035)		

SDIA0207E

4. If tooth contact is improperly adjusted, follow the procedure below to adjust the pinion height [dimension (X)].

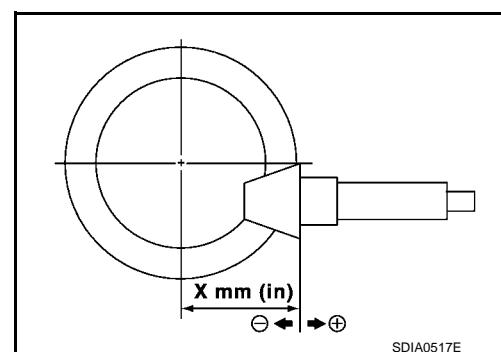

SDIA0517E


DIFFERENTIAL ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]

- If the tooth contact is near the face (face contact), or near the heel (heel contact), thicken pinion height adjusting washers to move drive pinion closer to drive gear.


For selecting adjusting washer, refer to the latest parts information.

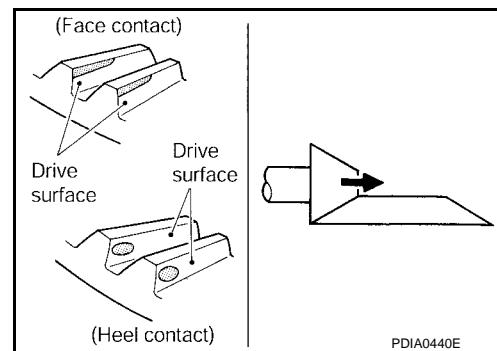

PDIA0440E

- If the tooth contact is near the flank (flank contact), or near the toe (toe contact), thin pinion height adjusting washers to move drive pinion farther from drive gear.

For selecting adjusting washer, refer to the latest parts information.

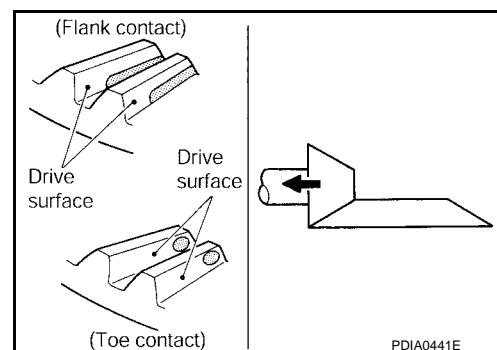

PDIA0441E

BACKLASH

Before inspection and adjustment, drain gear oil.

1. Remove rear cover. Refer to [DLN-177, "2WD : Disassembly"](#).
2. Fit a dial indicator to the drive gear face to measure the backlash.

Backlash

: Refer to [DLN-217, "Back-lash"](#).

- If the backlash is outside of the specified value, change the thickness of side bearing adjusting washer.

When the backlash is large:

Make drive gear back side adjusting washer thicker, and drive gear tooth side adjusting washer thinner by the same amount. For selecting adjusting washer, refer to the latest parts information.

When the backlash is small:

Make drive gear back side adjusting washer thinner, and drive gear tooth side adjusting washer thicker by the same amount. For selecting adjusting washer, refer to the latest parts information.

CAUTION:

Never change the total amount of washers as it changes the bearing preload.

2WD : Inspection After Disassembly

INFOID:0000000008285657

DRIVE GEAR AND DRIVE PINION

- Clean up the disassembled parts.
- If the gear teeth never mesh or line-up correctly, determine the cause and adjust or replace as necessary.
- If the gears are worn, cracked, damaged, pitted or chipped (by friction) noticeably, replace with new drive gear and drive pinion as a set.

BEARING

DIFFERENTIAL ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]

- Clean up the disassembled parts.
- If any chipped (by friction), pitted, worn, rusted or scratched marks, or unusual noise from the bearing is observed, replace as a bearing assembly (as a new set).

SIDE GEAR AND PINION MATE GEAR

- Clean up the disassembled parts.
- If any cracks or damage on the surface of the tooth is found, replace.
- If any worn or chipped mark on the contact sides of the thrust washer is found, replace.

SIDE GEAR THRUST WASHER AND PINION MATE THRUST WASHER

- Clean up the disassembled parts.
- If it is chipped (by friction), damaged, or unusually worn, replace.

OIL SEAL

- Whenever disassembled, replace.
- If wear, deterioration of adherence (sealing force lips), or damage is detected on the lips, replace them.

DIFFERENTIAL CASE

- Clean up the disassembled parts.
- If any wear or crack on the contact sides of the differential case is found, replace.


COMPANION FLANGE

- Clean up the disassembled parts.
- If any chipped mark [about 0.1 mm, (0.004 in)] or other damage on the contact sides of the lips of the companion flange is found, replace.

AWD

AWD : Exploded View

INFOID:0000000008285658

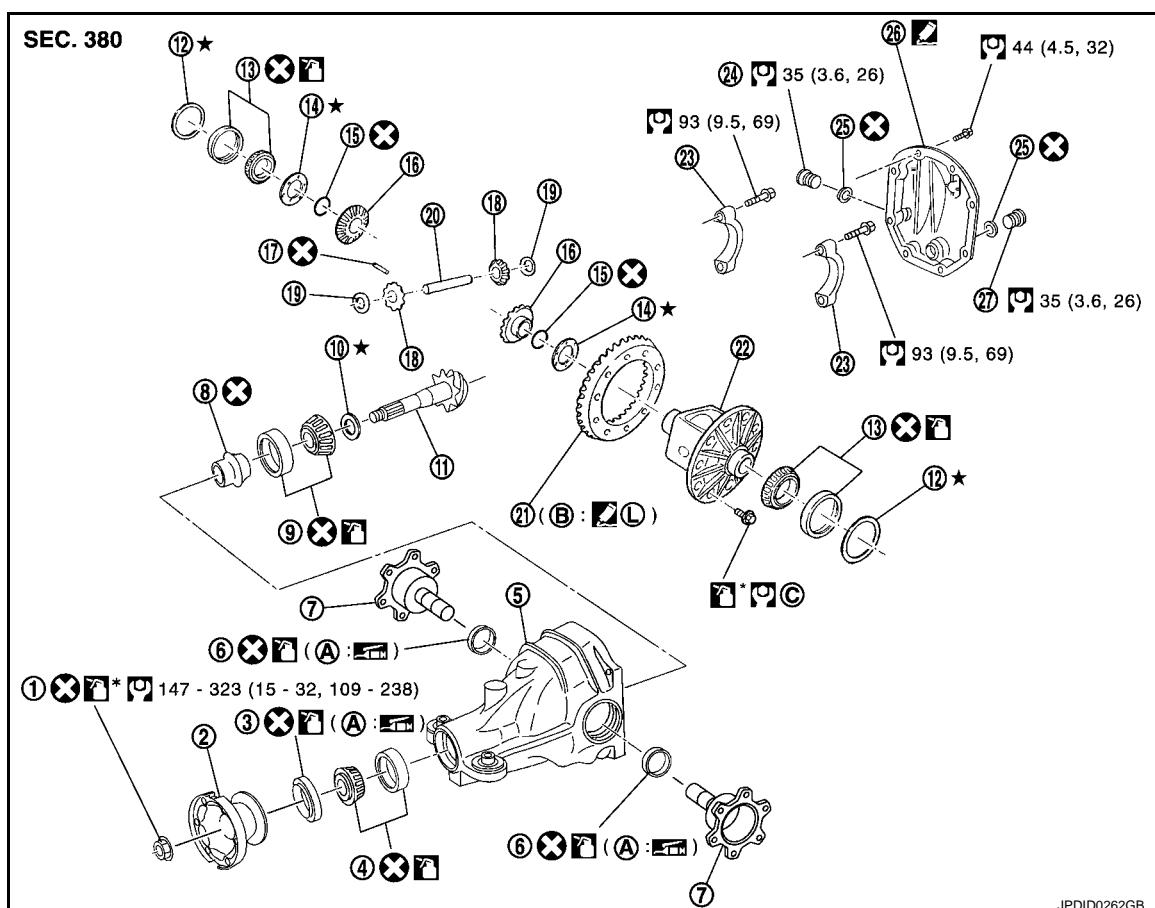

1. Drive pinion lock nut
2. Companion flange
3. Front oil seal
4. Pinion front bearing
5. Gear carrier
6. Side oil seal

JPDID0262GB

DIFFERENTIAL ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]

7. Side flange	8. Collapsible spacer	9. Pinion rear bearing
10. Pinion height adjusting washer	11. Drive pinion	12. Side bearing adjusting washer
13. Side bearing	14. Side gear thrust washer	15. Circular clip
16. Side gear	17. Lock pin	18. Pinion mate gear
19. Pinion mate thrust washer	20. Pinion mate shaft	21. Drive gear
22. Differential case	23. Bearing cap	24. Filler plug
25. Gasket	26. Rear cover	27. Drain plug
A. Oil seal lip	B. Screw hole	C. Comply with the assembly procedure when tightening. Refer to DLN-192, "AWD : Assembly" .

A

B

C

DLN

E

F

G

H

I

J

K

L

M

N

O

P

: Apply gear oil.

*: Apply anti-corrosion oil.

: Apply Genuine Silicone RTV or equivalent. Refer to [GI-22, "Recommended Chemical Products and Sealants"](#).

: Apply Genuine High Strength Thread Locking Sealant or equivalent. Refer to [GI-22, "Recommended Chemical Products and Sealants"](#).

Refer to [GI-4, "Components"](#) for symbols not described above.


AWD : Disassembly

INFOID:0000000008754171


1. Drain gear oil, if necessary.
2. Remove side flange.
3. Remove rear cover mounting bolts.
4. Remove rear cover to insert the seal cutter (A) [SST: KV10111100 (J-37228)] between gear carrier and rear cover.

CAUTION:

- **Never damage the mating surface.**
- **Never insert flat-bladed screwdriver, this may damage the mating surface.**

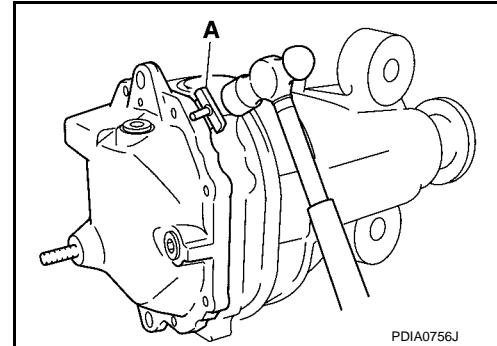

5. Using two 45 mm (1.77 in) spacers, mount carrier on the attachment (A) [SST: KV38100800 (J-25604-01)].

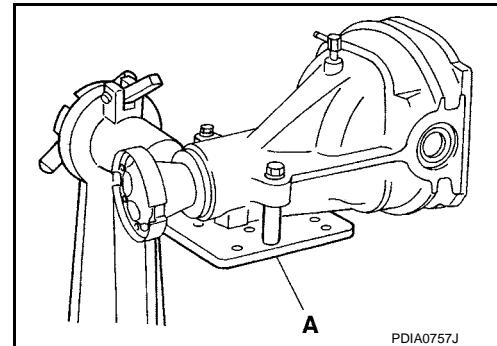

DIFFERENTIAL ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]


6. For proper reinstallation, paint matching marks on one side of the bearing cap.

CAUTION:


- For matching marks, use paint. Never damage bearing caps and gear carrier.
- Bearing caps are manufactured as integral molding. Use the matching marks to them in their original positions.

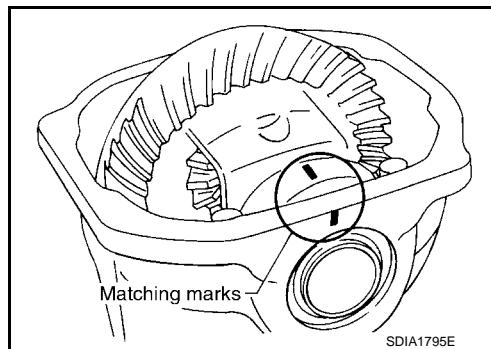


7. Remove bearing caps.

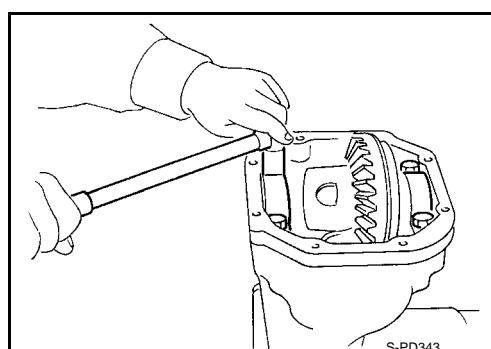

8. Lift differential case assembly out with a sliding hammer (commercial service tool).

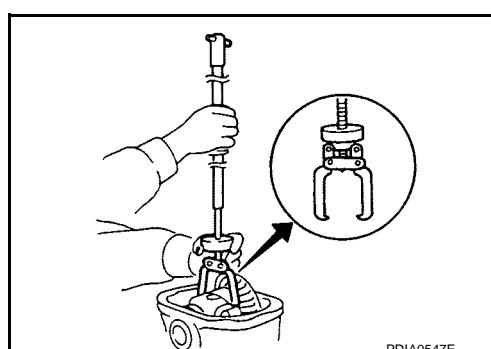

- Keep side bearing outer races together with inner race. Never mix them up.
- Also, keep side bearing adjusting washers together with bearings.

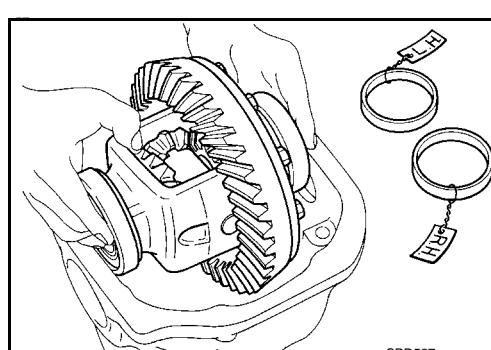

DIFFERENTIAL ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]


9. Remove side bearing inner race with puller (A) and base (B). To prevent damage to bearing, engage puller jaws in groove (➡).

A : Puller [SST: ST33051001 (J-22888-20)]


B : Base [SST: ST33061000 (J-8107-2)]

CAUTION:

- To prevent damage to the side bearing and drive gear, place copper plates between these parts and vise.
- It is not necessary to remove side bearing inner race except when it is replaced.

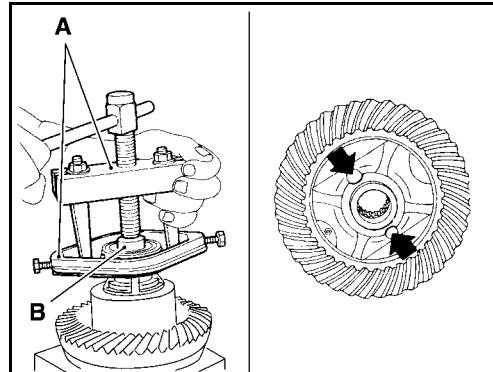

A
B
C
DLN
E
F
G
H
I
J
K
L
M
N
O
P

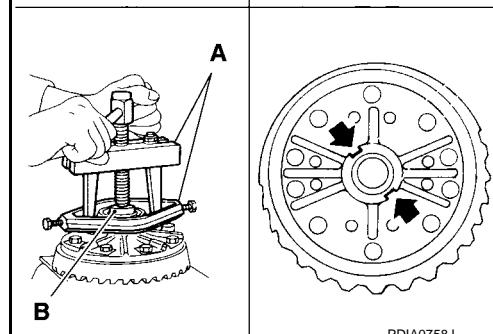

PDIA0758J

10. For proper reinstallation, paint matching marks on one differential case assembly.

CAUTION:


For matching marks, use paint. Never damage differential case and drive gear.

11. Remove drive gear mounting bolts.

12. Tap drive gear off differential case assembly with a soft hammer.

CAUTION:


Tap evenly all around to keep drive gear from bending.

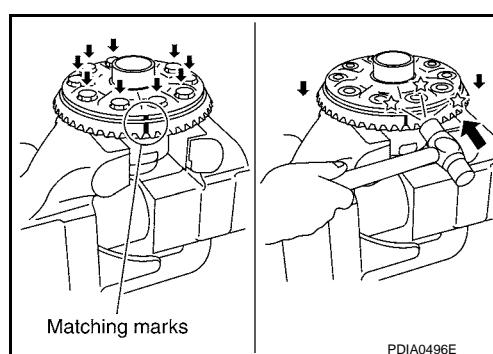

Matching marks


PDIA0496E

13. Remove lock pin of pinion mate shaft with a punch from drive gear side.

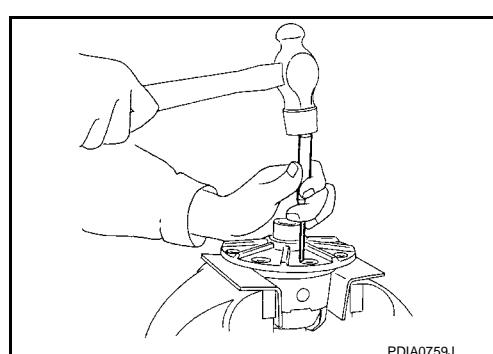

PDIA0759J

14. Remove pinion mate shaft.

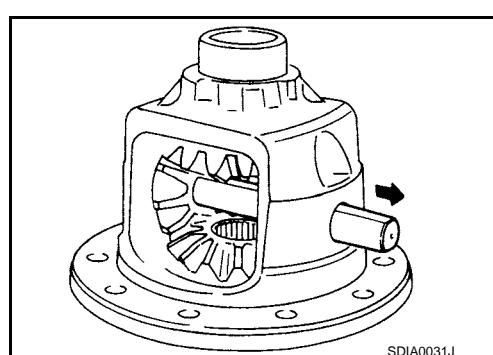

SDIA0031J

DIFFERENTIAL ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >


[REAR FINAL DRIVE: R200]

15. Turn pinion mate gear, then remove pinion mate gear, pinion mate thrust washer, side gear and side gear thrust washer from differential case.

16. Remove circular clip from side gear.

CAUTION:

Never damage side gear.

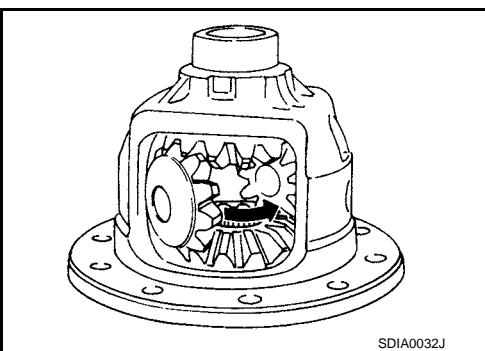

INFOID:0000000008285660


AWD : Assembly

1. Install circular clip to side gear.

CAUTION:

Never damage side gear.

2. Install side gear thrust washers with the same thickness as the ones installed prior to disassembly or reinstall the old ones on the side gears.

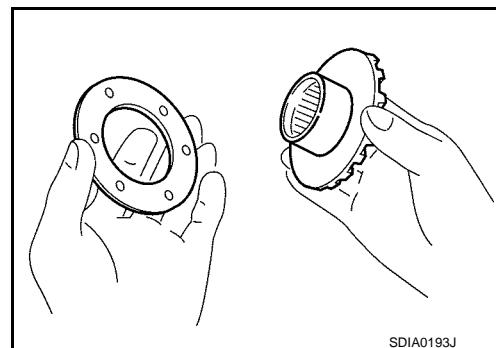


3. Install side gears and thrust washers into differential case.


CAUTION:

Make sure that the circular clip is installed to side gears.

4. Align 2 pinion mate gears in diagonally opposite positions, then rotate and install them into differential case after installing thrust washer to pinion mate gear.

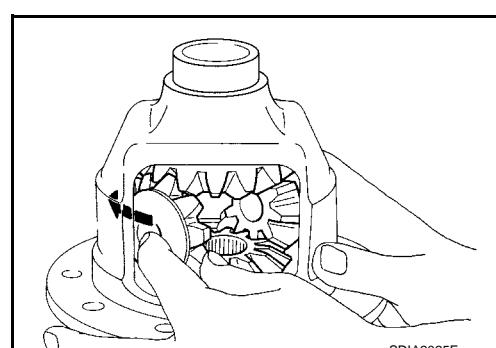

5. Align the lock pin holes on differential case with shaft, and install pinion mate shaft.

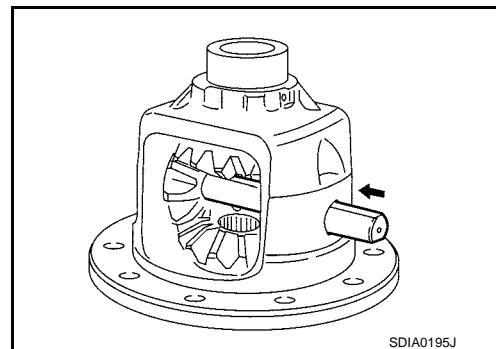


6. Measure side gear end play. If necessary, select the appropriate side gear thrust washers.

DIFFERENTIAL ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]

- a. Place differential case straight up so that side gear to be measured comes upward.

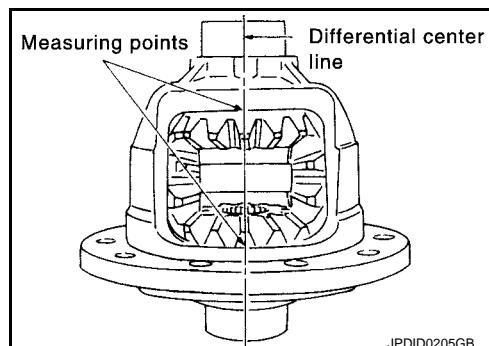

- b. Using feeler gauge, measure the clearance between side gear back and differential case at 3 different points, while rotating side gear. Average the 3 readings, and then measure the clearance of the other side as well.

Side gear back clearance : Refer to [DLN-217, "Differential Side Gear Clearance".](#)

CAUTION:

To prevent side gear from tilting, insert feeler gauges with the same thickness from both sides.

- c. If the back clearance is outside the specification, use a thicker/thinner side gear thrust washer to adjust. For selecting thrust washer, refer to the latest parts information.

When the back clearance is large: Use a thicker thrust washer.

When the back clearance is small: Use a thinner thrust washer.


CAUTION:

Select a side gear thrust washer for right and left individually.

7. Drive a lock pin into pinion mate shaft, using a punch. Make sure lock pin is flush with differential case.

CAUTION:

Never reuse lock pin.

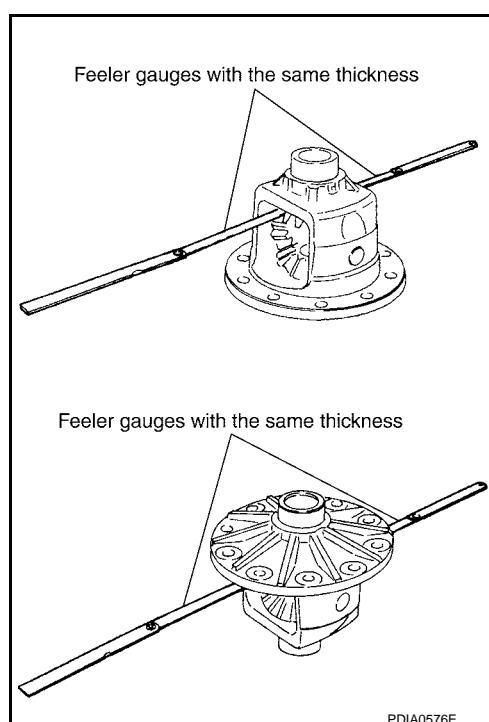

8. Apply thread locking sealant into the thread hole of drive gear. Use Genuine High Strength Thread Locking Sealant or equivalent. Refer to [GI-22, "Recommended Chemical Products and Sealants".](#)



CAUTION:

Clean and degrease drive gear back and threaded holes sufficiently.

9. Install the drive gear to differential case.

CAUTION:

Align the matching marks of differential case and drive gear.

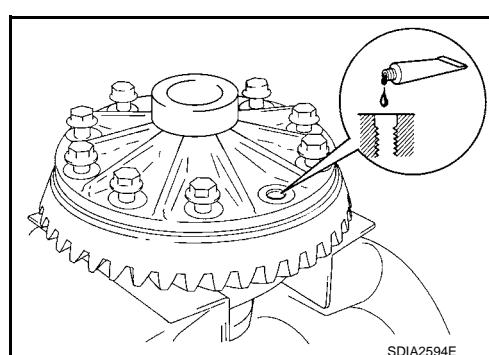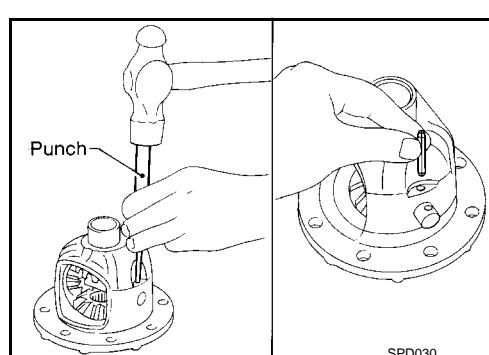

DIFFERENTIAL ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]

10. Tighten the mounting bolts with the following procedure.

CAUTION:


Apply anti-corrosion oil to the thread and seat of mounting bolts.

a. Tighten the bolts in a crisscross fashion to the specified torque.

Drive gear mounting bolts tightening torque : 78.5 N·m (8.0 kg-m, 58 ft-lb)

b. Tighten the bolts additionally to the specified angle.

Drive gear mounting bolts tightening angle : 31 to 36 degree

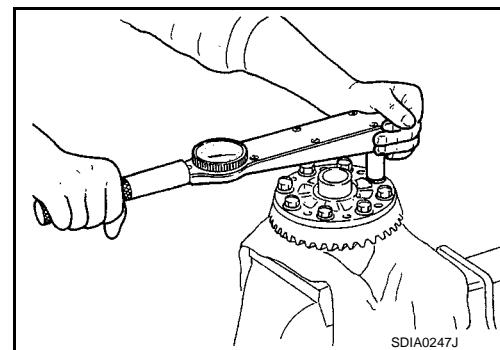

CAUTION:

Check the tightening angle using the angle wrench [SST: KV10112100 (BT-8653-A)]. Never make judgment by visual inspection.


11. Press side bearing inner races to differential case, using the drift (A) and the base (B).

A : Drift [SST: KV38100300 (J-25523)]

B : Base [SST: ST33061000 (J-8107-2)]

CAUTION:

Never reuse side bearing inner race.

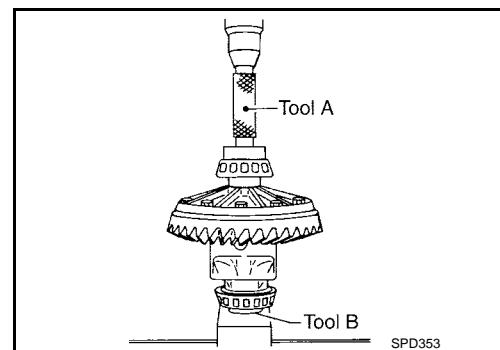


12. Set bearing outer races to differential case assembly, and install it with removed side bearing adjusting washer or same thickness washer into gear carrier.

CAUTION:


- Apply differential gear oil to the side bearings.
- Install side bearing and side bearing adjusting washer in correct location. (drive gear tooth side or drive gear back side)

13. Measure side bearing preload. If necessary, select the appropriate side bearing adjusting washers. Refer to [DLN-195, "AWD : Adjustment"](#).

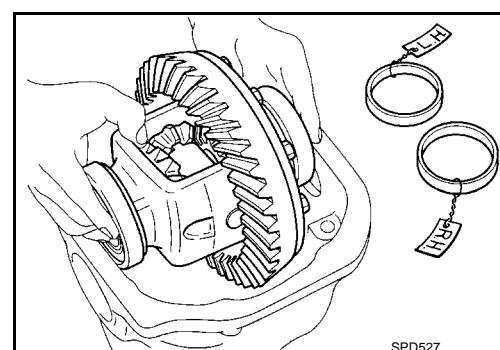

14. Align matching marks on bearing cap with that on gear carrier.

15. Install bearing caps and tighten bearing cap mounting bolts.

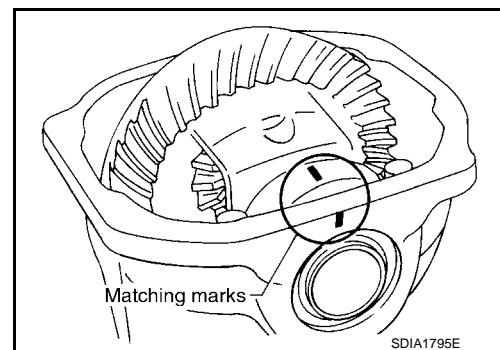

DIFFERENTIAL ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]


16. Using the drift (A) [SST: KV38100200 (J-26233)], drive side oil seals until it becomes flush with the case end.

CAUTION:

- Never reuse oil seal.
- When installing, never incline oil seal.
- Apply multi-purpose grease onto oil seal lips, and gear oil onto the circumference of oil seal.

17. Check and adjust drive gear runout, tooth contact, drive gear to drive pinion backlash, and total preload torque. Refer to [DLN-195. "AWD : Adjustment"](#).

Recheck above items. Readjust the above description, if necessary.

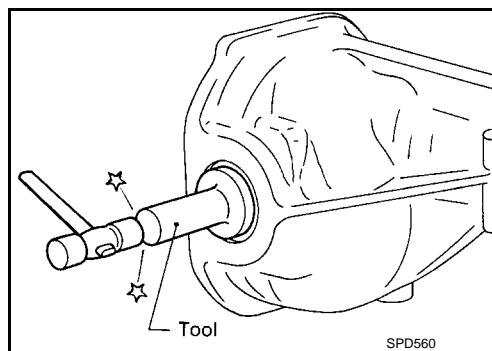

SPD560


18. Apply sealant to mating surface of rear cover.

- Use Genuine Silicone RTV or equivalent. Refer to [GI-22. "Recommended Chemical Products and Sealants"](#).

CAUTION:

Remove old sealant adhering to mounting surfaces. Also remove any moisture, oil, or foreign material adhering to application and mounting surfaces.

19. Install rear cover on gear carrier and tighten mounting bolts.

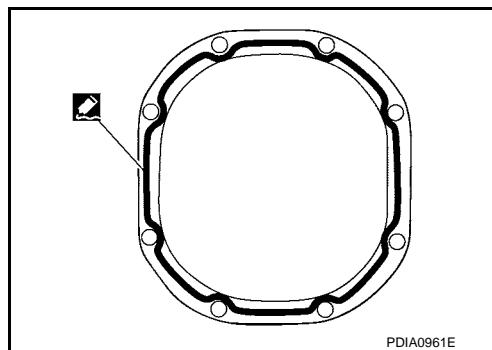


PDIA0961E

20. Install side flange with the following procedure.

- Attach the protector [SST: KV38107900 (J-39352)] to side oil seal.
- After the side flange is inserted and the serrated part of side gear has engaged the serrated part of flange, remove the protector.
- Put a suitable drift on the center of side flange, then drive it until sound changes.

NOTE:

When installation is completed, driving sound of the side flange turns into a sound that seems to affect the whole final drive.

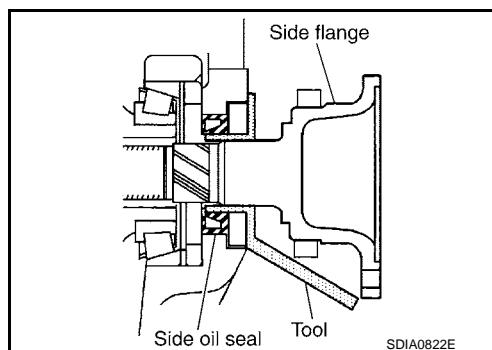


SDIA0822E

- Confirm that the dimension of the side flange installation measurement (A) in the figure comes into the following.

Standard

A : 326 – 328 mm (12.83 – 12.91 in)

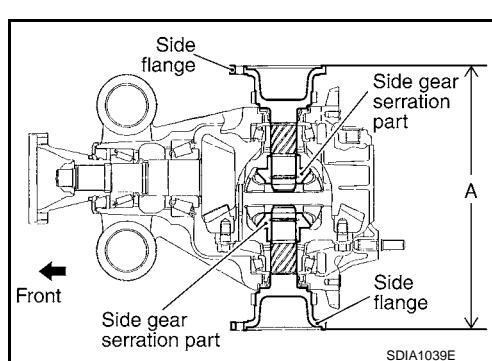

INFOID:0000000008285661

AWD : Adjustment

TOTAL PRELOAD TORQUE

Before inspection and adjustment, drain gear oil.

- Secure final drive assembly onto an attachment [SST: KV38100800 (J-25604-01)].
- Remove side flanges.
- Rotate drive pinion back and forth 2 to 3 times to check for unusual noise and rotation malfunction.
- Rotate drive pinion at least 20 times to check for smooth operation of the bearing.

A
B
C
DLN
E
F
G
H
I
J
K
L
M
N
O
P

DIFFERENTIAL ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]

- Measure total preload with the preload gauge (A) [SST: ST3127S000 (J-25765-A)].

Total preload torque


: Refer to [DLN-217, "Pre-load Torque"](#).

NOTE:

Total preload torque = Pinion bearing preload torque + Side bearing preload torque

- If measured value is out of the specification, disassemble it to check and adjust each part. Adjust the pinion bearing preload and side bearing preload.

Adjust the pinion bearing preload first, then adjust the side bearing preload.

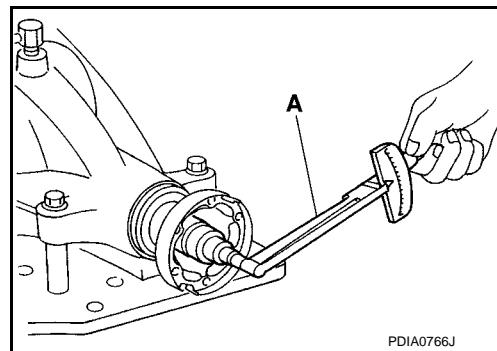

When the preload torque is large

On pinion bearings: Replace the collapsible spacer.

On side bearings: Use thinner side bearing adjusting washers by the same amount to each side. For selecting adjusting washer, refer to the latest parts information.

When the preload is small


On pinion bearings: Tighten the drive pinion lock nut.

On side bearings: Use thicker side bearing adjusting washers by the same amount to each side. For selecting adjusting washer, refer to the latest parts information.


SIDE BEARING PRELOAD

Before inspection and adjustment, drain gear oil.

- Remove rear cover. Refer to [DLN-189, "AWD : Disassembly"](#).
- Make sure all parts are clean. Also, make sure the bearings are well lubricated with gear oil.
- Place the differential case, with side bearings and bearing races installed, into gear carrier.

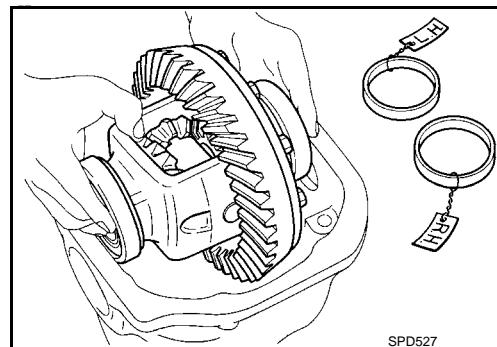

- Insert left and right original side bearing adjusting washers in place between side bearings and gear carrier.

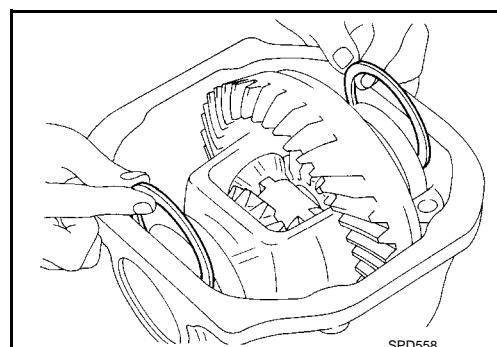


DIFFERENTIAL ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]


- Install bearing caps in their correct locations and tighten bearing cap mounting bolts.
- Turn the carrier several times to seat the bearings.

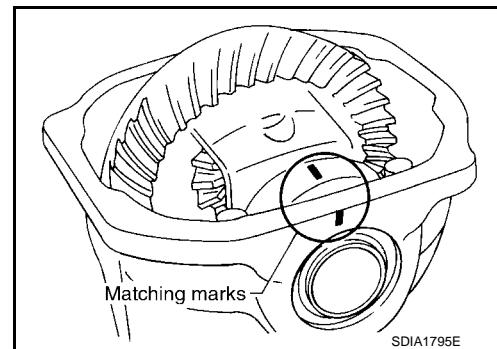

- Measure the turning torque of the carrier at the drive gear mounting bolts with a spring gauge [SST: — (J-8129)].

Standard Specification


: 34.2 – 39.2 N (3.5 – 4.0 kg, 7.7 – 8.8 lb) of pulling force at the drive gear bolt

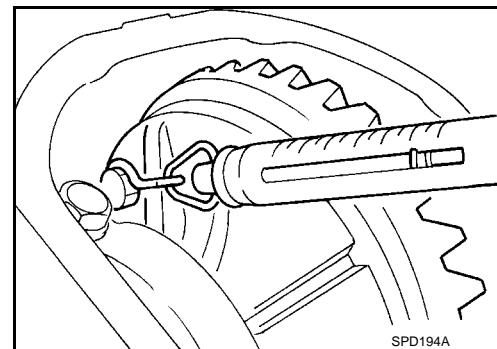

- If the turning torque is outside the specification, use a thicker/thinner side bearing adjusting washer to adjust. For selecting adjusting washer, refer to the latest parts information.

If the turning torque is less than the specified range: Use a thicker adjusting washer.

If the turning torque is greater than the specification: Use a thinner adjusting washer.

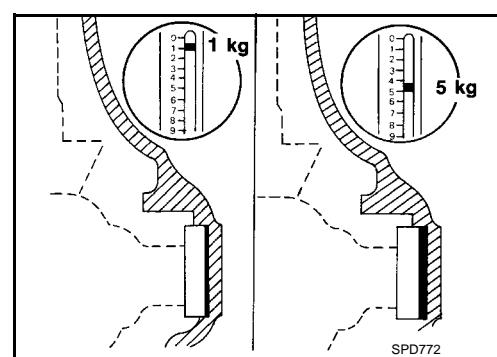

CAUTION:

Select a side bearing adjusting washer for right and left individually.

- Record the total amount of washer thickness required for the correct carrier side bearing preload.

DRIVE GEAR RUNOUT

- Remove rear cover. Refer to [DLN-189, "AWD : Disassembly"](#).
- Fit a dial indicator to the drive gear back face.
- Rotate the drive gear to measure runout.


Drive gear runout

: Refer to [DLN-217, "Drive Gear Runout"](#).

- If the runout is outside of the repair limit, check drive gear assembly condition; foreign material may be caught between drive gear and differential case, or differential case or drive gear may be deformed, etc.

CAUTION:

Replace drive gear and drive pinion gear as a set.

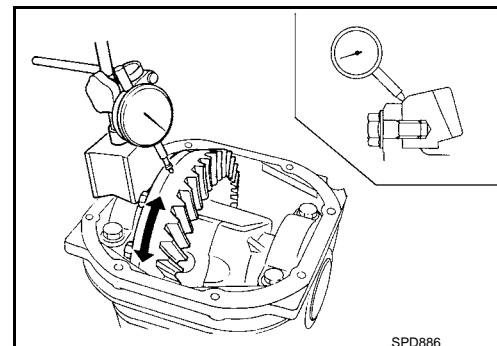

TOOTH CONTACT

Before inspection and adjustment, drain gear oil.

- Remove rear cover. Refer to [DLN-189, "AWD : Disassembly"](#).

A
B
C
DLN
E
F
G

H
I
J
K
L
M
N
O
P

DIFFERENTIAL ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]

2. Apply red lead to drive gear.

CAUTION:

Apply red lead to both the faces of 3 to 4 gears at 4 locations evenly spaced on drive gear.

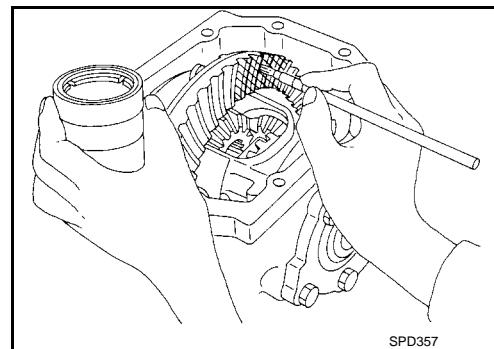


SPD357

3. Rotate drive gear back and forth several times, check drive pinion gear to drive gear tooth contact.

CAUTION:

Check tooth contact on drive side and reverse side.

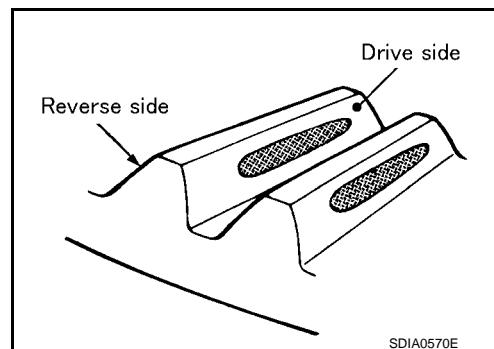

SDIA0570E

Tooth contact condition				Pinion height adjusting washer selection valve [mm (in)]	Adjustment (Yes/No)	Possible cause
Drive side	Back side	Drive side	Back side			
Heel side	Toe side	Toe side	Heel side	↑ Thicker	Yes	Occurrence of noise and scoring sound in all speed ranges.
						Occurrence of noise when accelerating.
						—
					No	—
						—
					Yes	Occurrence of noise at constant speed and decreasing speed.
						Occurrence of noise and scoring sound in all speed ranges.


SDIA0207E

DIFFERENTIAL ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]


4. If tooth contact is improperly adjusted, follow the procedure below to adjust the pinion height [dimension (X)].

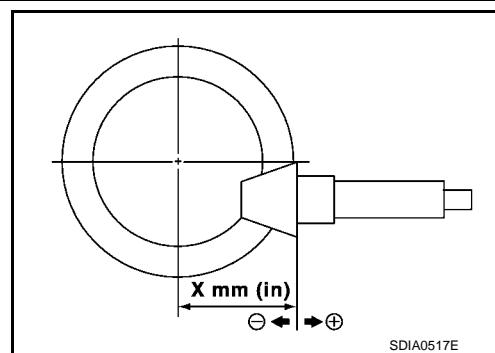

SDIA0517E

- If the tooth contact is near the face (face contact), or near the heel (heel contact), thicken pinion height adjusting washers to move drive pinion closer to drive gear.


For selecting adjusting washer, refer to the latest parts information.

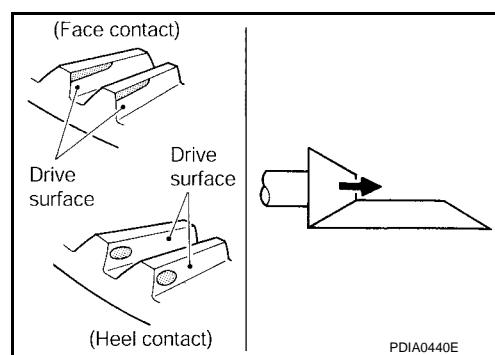

PDIA0440E

- If the tooth contact is near the flank (flank contact), or near the toe (toe contact), thin pinion height adjusting washers to move drive pinion farther from drive gear.

For selecting adjusting washer, refer to the latest parts information.

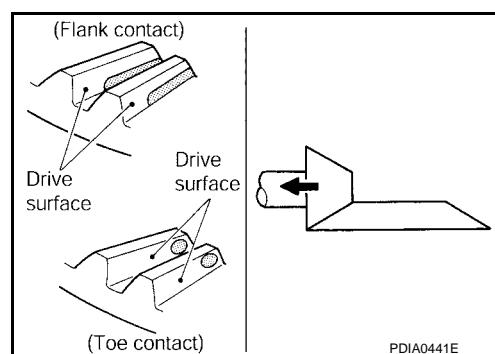

PDIA0441E

BACKLASH

Before inspection and adjustment, drain gear oil.

1. Remove rear cover. Refer to [DLN-189, "AWD : Disassembly"](#).
2. Fit a dial indicator to the drive gear face to measure the backlash.


Backlash

: Refer to [DLN-217, "Backlash"](#).

- If the backlash is outside of the specified value, change the thickness of side bearing adjusting washer.

When the backlash is large:

Make drive gear back side adjusting washer thicker, and drive gear tooth side adjusting washer thinner by the same amount. For selecting adjusting washer, refer to the latest parts information.

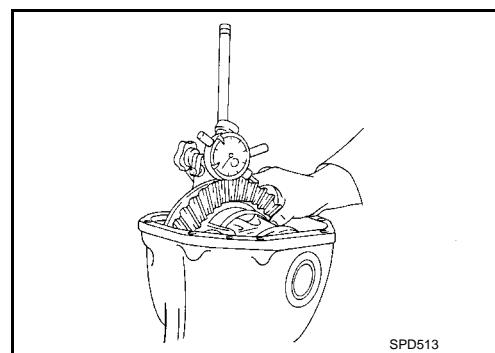

SPD513

When the backlash is small:

Make drive gear back side adjusting washer thinner, and drive gear tooth side adjusting washer thicker by the same amount. For selecting adjusting washer, refer to the latest parts information.

CAUTION:

Never change the total amount of washers as it changes the bearing preload.

AWD : Inspection After Disassembly

INFOID:000000008285662

DRIVE GEAR AND DRIVE PINION

- Clean up the disassembled parts.
- If the gear teeth never mesh or line-up correctly, determine the cause and adjust or replace as necessary.
- If the gears are worn, cracked, damaged, pitted or chipped (by friction) noticeably, replace with new drive gear and drive pinion as a set.

BEARING

- Clean up the disassembled parts.
- If any chipped (by friction), pitted, worn, rusted or scratched marks, or unusual noise from the bearing is observed, replace as a bearing assembly (as a new set).

SIDE GEAR AND PINION MATE GEAR

- Clean up the disassembled parts.
- If any cracks or damage on the surface of the tooth is found, replace.
- If any worn or chipped mark on the contact sides of the thrust washer is found, replace.

SIDE GEAR THRUST WASHER AND PINION MATE THRUST WASHER

- Clean up the disassembled parts.
- If it is chipped (by friction), damaged, or unusually worn, replace.

OIL SEAL

- Whenever disassembled, replace.
- If wear, deterioration of adherence (sealing force lips), or damage is detected on the lips, replace them.

DIFFERENTIAL CASE

- Clean up the disassembled parts.
- If any wear or crack on the contact sides of the differential case is found, replace.

COMPANION FLANGE

- Clean up the disassembled parts.
- If any chipped mark [about 0.1 mm, (0.004 in)] or other damage on the contact sides of the lips of the companion flange is found, replace.

DRIVE PINION

< UNIT DISASSEMBLY AND ASSEMBLY >


[REAR FINAL DRIVE: R200]

DRIVE PINION

2WD

2WD : Exploded View

INFOID:000000008285663

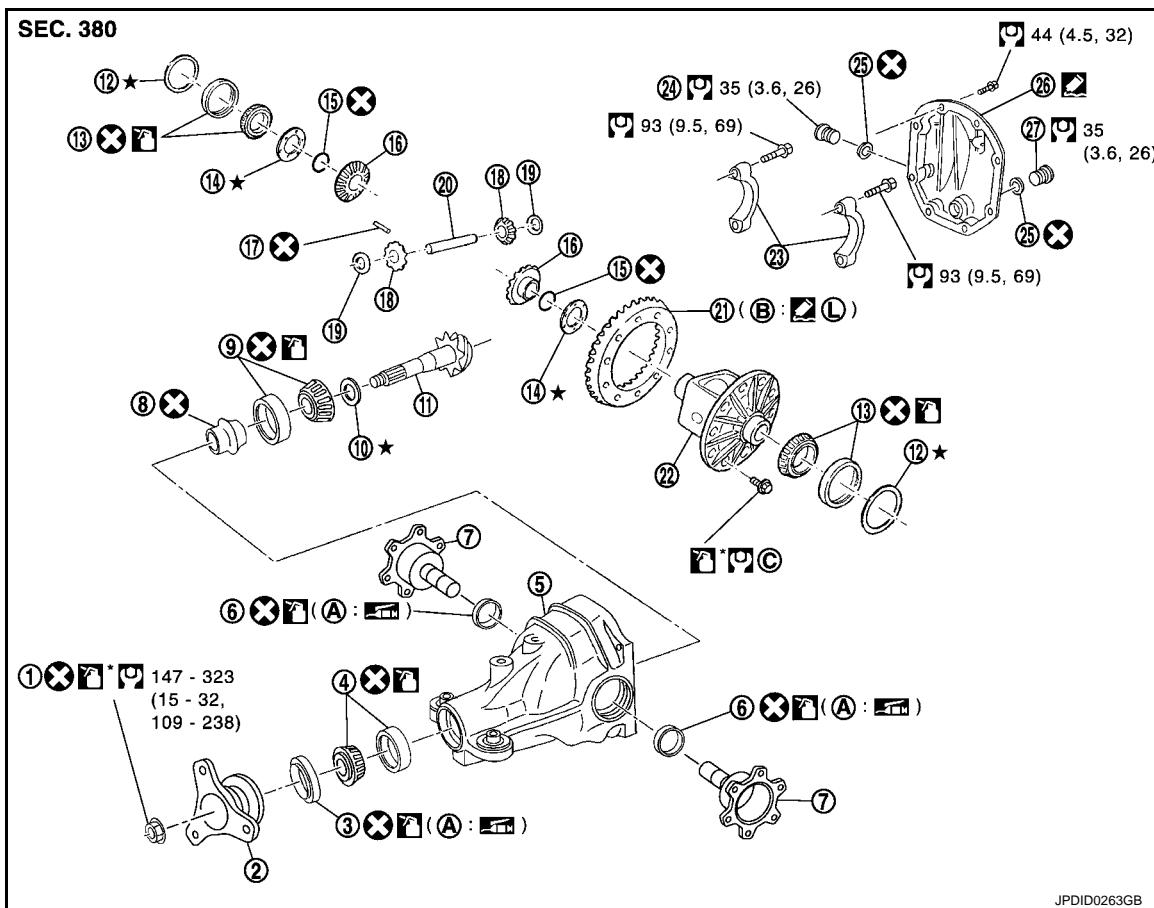

JPDID0263GB

1. Drive pinion lock nut	2. Companion flange	3. Front oil seal
4. Pinion front bearing	5. Gear carrier	6. Side oil seal
7. Side flange	8. Collapsible spacer	9. Pinion rear bearing
10. Pinion height adjusting washer	11. Drive pinion	12. Side bearing adjusting washer
13. Side bearing	14. Side gear thrust washer	15. Circular clip
16. Side gear	17. Lock pin	18. Pinion mate gear
19. Pinion mate thrust washer	20. Pinion mate shaft	21. Drive gear
22. Differential case	23. Bearing cap	24. Filler plug
25. Gasket	26. Rear cover	27. Drain plug
A. Oil seal lip	B. Screw hole	C. Comply with the assembly procedure when tightening. Refer to DLN-179, "2WD : Assembly".

: Apply gear oil.

: Apply anti-corrosion oil.

: Apply Genuine Silicone RTV or equivalent. Refer to [GI-22, "Recommended Chemical Products and Sealants".](#)

: Apply Genuine High Strength Thread Locking Sealant or equivalent. Refer to [GI-22, "Recommended Chemical Products and Sealants".](#)

Refer to [GI-4, "Components"](#) for symbols not described above.

A

B

C

DLN

E

F

G

H

I

J

K

L

M

N

O

P

DRIVE PINION


< UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]

2WD : Disassembly

INFOID:0000000008285664

1. Remove differential case assembly. Refer to [DLN-177, "2WD : Disassembly"](#).
2. Remove drive pinion lock nut with the flange wrench (commercial service tool).

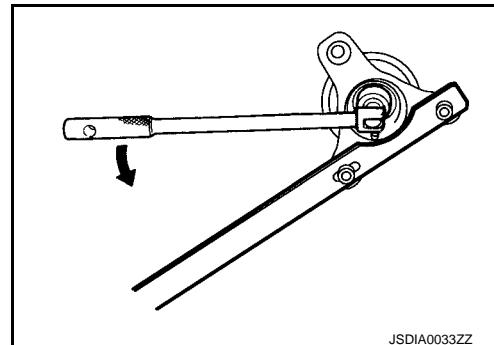

3. Put matching mark (B) on the end of drive pinion. The matching mark should be in line with the matching mark (A) on companion flange (1).


CAUTION:

For matching mark, use paint. Never damage companion flange and drive pinion.


NOTE:

The matching mark on the final drive companion flange indicates the maximum vertical runout position.

When replacing companion flange, matching mark is not necessary.

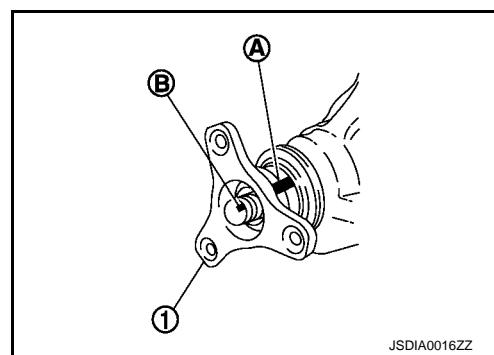

4. Remove companion flange using the suitable puller (commercial service tool).

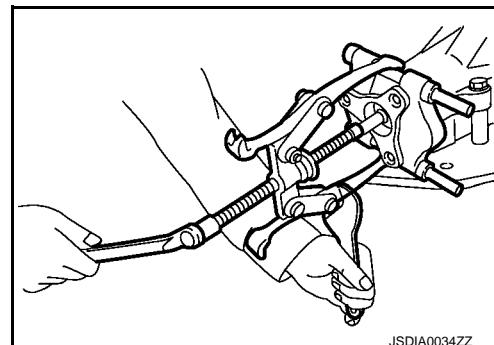


5. Press drive pinion assembly out of gear carrier.

CAUTION:

Never drop drive pinion assembly.

6. Remove front oil seal.
7. Remove side oil seal.
8. Remove pinion front bearing inner race.
9. Remove collapsible spacer.

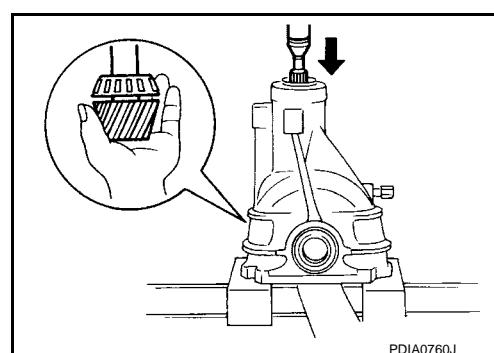


DRIVE PINION

< UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]


10. Remove pinion rear bearing inner race and pinion height adjusting washer with the replacer (A) (commercial service tool).

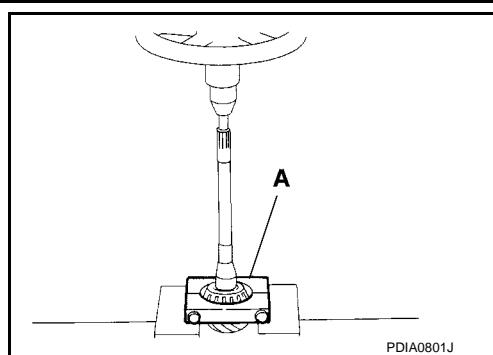

11. Tap pinion front/rear bearing outer races uniformly using a brass rod or equivalent to remove them.

CAUTION:

Never damage gear carrier.

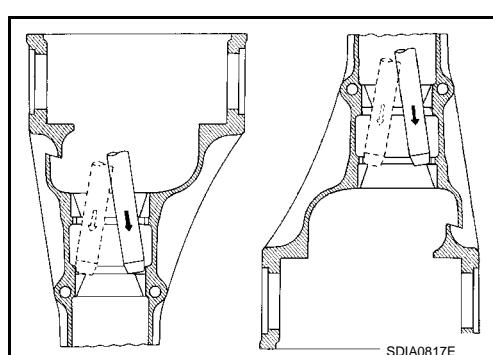

2WD : Assembly


INFOID:0000000008285665

1. Install front bearing outer race (1) and rear bearing outer race (2) using drifts (A, B and D) and drift bar (C).

- A : Drift [SST: ST30720000 (J-25405)]
- B : Drift [SST: KV40105230 (—)]
- C : Drift bar [SST: ST30611000 (J-25742-1)]
- D : Drift [SST: ST30613000 (J-25742-3)]

CAUTION:

- At first, using a hammer, tap bearing outer race until it becomes flat to gear carrier.
- Never reuse pinion front and rear bearing outer race.

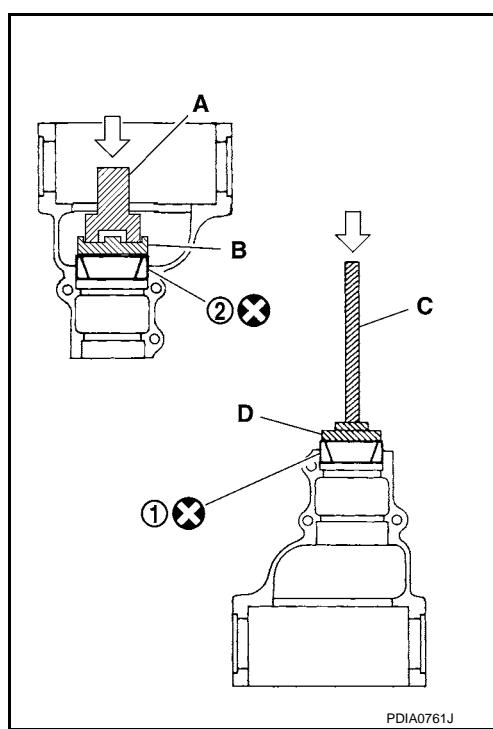

DRIVE PINION

< UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]

- Temporarily install pinion height adjusting washer (1).

When hypoid gear set has been replaced


- Select pinion height adjusting washer. Refer to [DLN-207, "2WD : Adjustment"](#).

When hypoid gear set has been reused

- Temporarily install the removed pinion height adjusting washer or same thickness washer to drive pinion.

CAUTION:

Pay attention to the direction of pinion height adjusting washer. (Assemble as shown in the figure.)

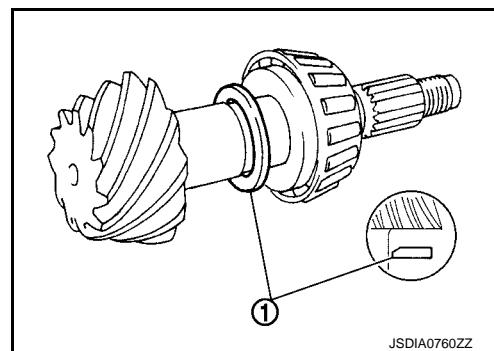

JSDIA0760ZZ

- Install pinion rear bearing inner race (1) to drive pinion with the drift (A) [SST: ST30901000 (J-26010-01)].

CAUTION:

Never reuse pinion rear bearing inner race.

- Check and adjust the tooth contact and back lash of drive gear and drive pinion following the procedure below.

- Assemble drive pinion into gear carrier.

CAUTION:

- Never assemble collapsible spacer at this time.**

- Apply gear oil to pinion rear bearing.**


- Assemble pinion front bearing inner race to drive pinion assembly.

CAUTION:


- Never reuse pinion front bearing inner race.**

- Apply gear oil to pinion front bearing.**

- Using suitable spacer (A) (commercial service tool), press the pinion front bearing inner race to drive pinion as far as drive pinion nut can be tightened.

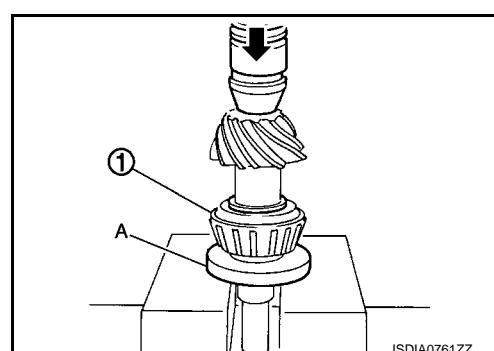

JSDIA0761ZZ

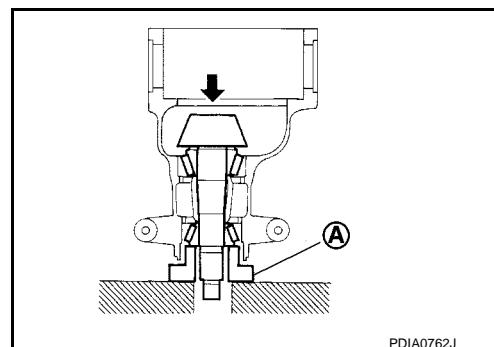

PDIA0762J


- Install companion flange.

CAUTION:

Never install front oil seal at this time.

NOTE:

When reusing drive pinion, align the matching mark (B) of drive pinion with the matching mark (A) of companion flange, and then install companion flange (1).

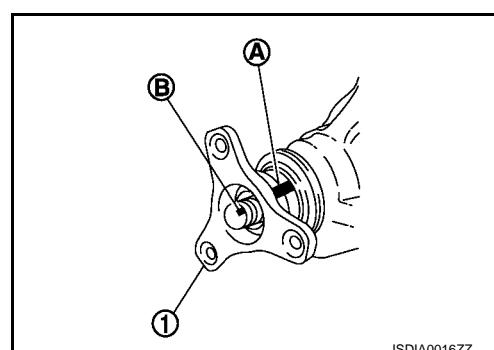

JSDIA0016ZZ

DRIVE PINION

< UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]

e. Temporarily tighten removed drive pinion nut to drive pinion, using flange wrench (commercial service tool).

A : Preload gauge [SST: ST3127S000 (J-25765-A)]

NOTE:

Use removed drive pinion nut only for the preload measurement.

f. Rotate drive pinion more than 20 times to adjust bearing.
g. Tighten to drive pinion lock nut using flange wrench (commercial service tool), while adjusting pinion bearing preload torque using preload gauge [SST: ST3127S000 (J-25765-A)].

**Pinion bearing preload
(without oil seal)** : 1.0 - 1.3 N·m (0.11 – 0.13 kg·m, 9 – 11 in·lb)

CAUTION:

Drive pinion nut is tightened with no collapsible spacer. Be careful not to overtighten it. While measuring the preload, tighten drive pinion nut in 5° to 10° increments.

h. Assemble removed drive side bearing adjusting washer or same thickness of it and install differential case assembly. Refer to [DLN-179, "2WD : Assembly"](#).

CAUTION:

- Apply differential gear oil to the side bearings.
- Install side bearing and side bearing adjusting washer in correct location. (drive gear tooth side or drive gear back side)

i. Install bearing caps.
j. Check and adjust tooth contact and drive gear to drive pinion backlash. Refer to [DLN-183, "2WD : Adjustment"](#).
k. Remove bearing caps and differential case assembly.
l. Remove companion flange.
m. Remove drive pinion assembly from gear carrier.

CAUTION:

Never drop the drive pinion assembly.

n. Remove pinion front bearing inner race.
5. Assemble collapsible spacer.

CAUTION:

Never reuse collapsible spacer.

6. Assemble drive pinion into gear carrier.

CAUTION:


Apply gear oil to pinion rear bearing.

7. Assemble pinion front bearing inner race to drive pinion assembly.


CAUTION:

- Never reuse pinion front bearing inner race.
- Apply gear oil to pinion front bearing.


8. Using suitable spacer (A) (commercial service tool), press the pinion front bearing inner race to drive pinion as far as drive pinion nut can be tightened.

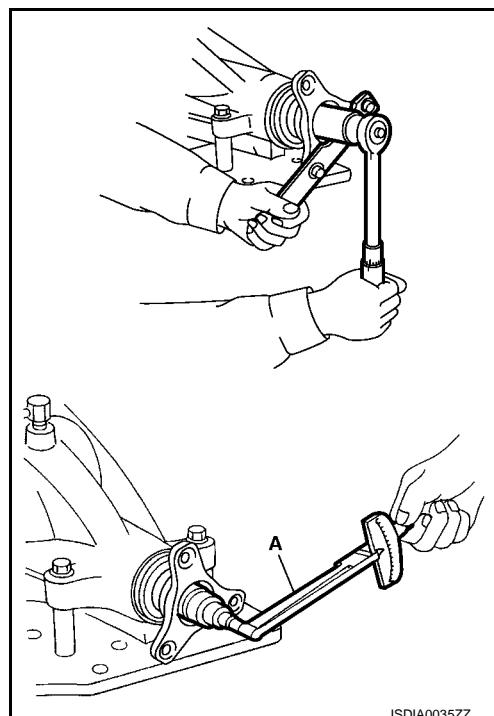

JS01A0035ZZ

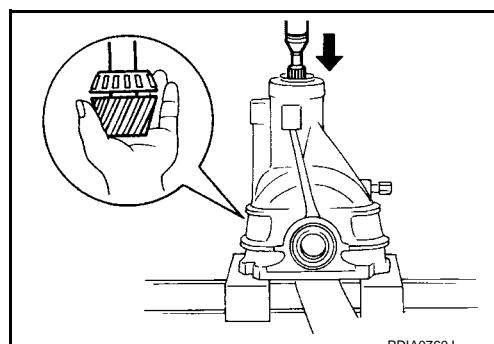

PDIA0760J

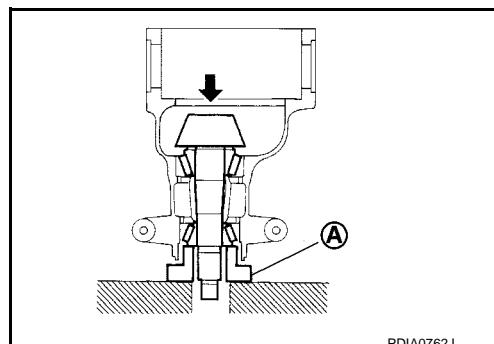

PDIA0762J

DRIVE PINION


< UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]

9. Using the drift (A) [SST: ST30720000 (J-25405)], install front oil seal as shown in figure.

CAUTION:

- Never reuse oil seal.
- When installing, never incline oil seal.
- Apply multi-purpose grease onto oil seal lips, and gear oil onto the circumference of oil seal.

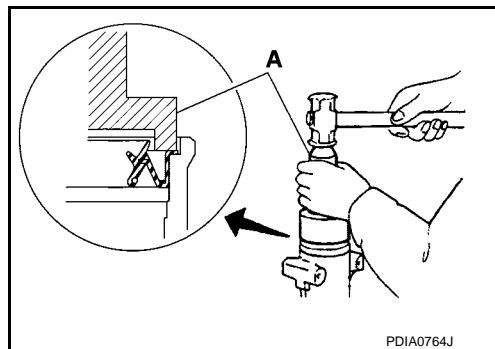


PDIA0764J

10. Install companion flange.

NOTE:

When reusing drive pinion, align the matching mark (B) of drive pinion with the matching mark (A) of companion flange, and then install companion flange (1).

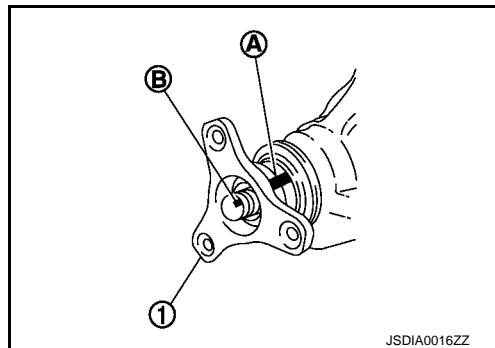

JSIDA0016ZZ

11. Apply anti-corrosion oil to the thread and seat of drive pinion lock nut, and temporarily tighten drive pinion lock nut to drive pinion, using flange wrench (commercial service tool).

A : Preload gauge [SST: ST3127S000 (J-25765-A)]


CAUTION:

Never reuse drive pinion lock nut.

12. Adjust to the drive pinion lock nut tightening torque and pinion bearing preload torque, using preload gauge [SST: ST3127S000 (J-25765-A)].

Pinion bearing preload

: Refer to [DLN-217, "Pre-load Torque".](#)

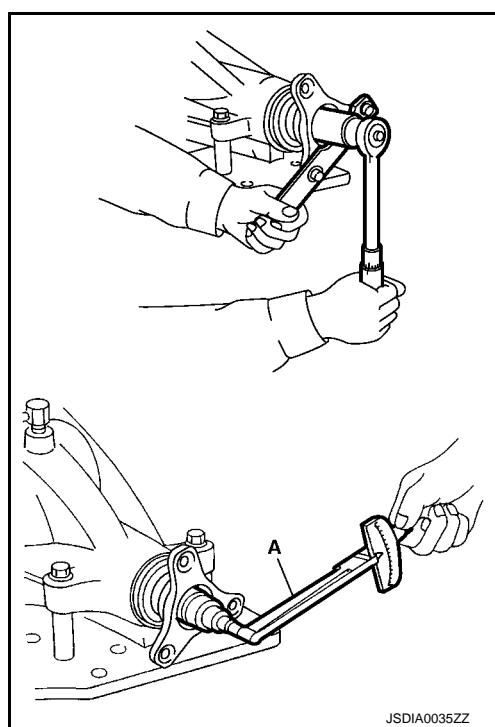

JSIDA0035ZZ

CAUTION:

- Adjust to the lower limit of the drive pinion lock nut tightening torque first.
- If the preload torque exceeds the specified value, replace collapsible spacer and tighten it again to adjust. Never loosen drive pinion lock nut to adjust the preload torque.
- After adjustment, rotate drive pinion back and forth 2 to 3 times to check for unusual noise, rotation malfunction, and other malfunctions.

13. Install differential case assembly. Refer to [DLN-179, "2WD : Assembly".](#)

CAUTION:

Never install rear cover at this timing.

14. Check and adjust drive gear runout, tooth contact, drive gear to drive pinion backlash, and companion flange runout. Refer to [DLN-183, "2WD : Adjustment"](#) and [DLN-207, "2WD : Adjustment"](#). Recheck above items. Readjust the above description, if necessary.

15. Check total preload torque. Refer to [DLN-183, "2WD : Adjustment"](#).

16. Install rear cover. Refer to [DLN-179, "2WD : Assembly"](#).

2WD : Adjustment

PINION GEAR HEIGHT

If the hypoid gear set has been replaced, select the pinion height adjusting washer.

1. Use the formula below to calculate pinion height adjusting washer thickness.

Washer selection equation:


$$T = T_0 + (t_1 - t_2)$$

T: **Correct washer thickness**

T₀: **Removed washer thickness**

t₁: **Old drive pinion head letter "H × 0.01"**
(**"H"**: machined tolerance 1/100 mm × 100)

t₂: **New drive pinion head letter "H × 0.01"**
(**"H"**: machined tolerance 1/100 mm × 100)

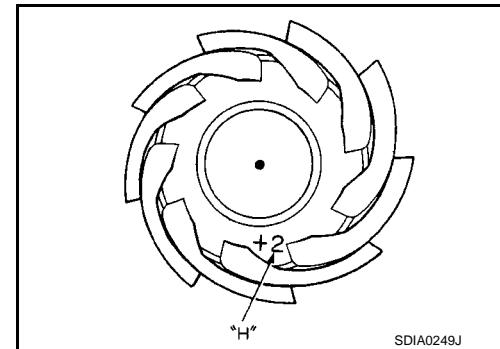

Example:

$$T = 3.21 + [(2 \times 0.01) - (-1 \times 0.01)] = 3.24$$

T₀: 3.21

t₁: +2

t₂: -1

2. Select the proper pinion height adjusting washer. For selecting adjusting washer, refer to the latest parts information.

CAUTION:

If unable to find a washer of desired thickness, use a washer with thickness closest to the calculated value.

Example:

Calculated value... T = 3.22 mm

Used washer... T = 3.21 mm


DRIVE PINION RUNOUT

1. Set a dial indicator (A) vertically to the tip of the drive pinion.
2. Rotate drive pinion to check for runout.

Drive pinion runout

: Refer to [DLN-217, "Drive Pinion Runout \(2WD\)"](#).

3. If the runout value is outside of the limit, possible causes are an assembly malfunction of drive pinion and pinion bearing and malfunction of pinion bearing. Check for these items and repair if necessary.

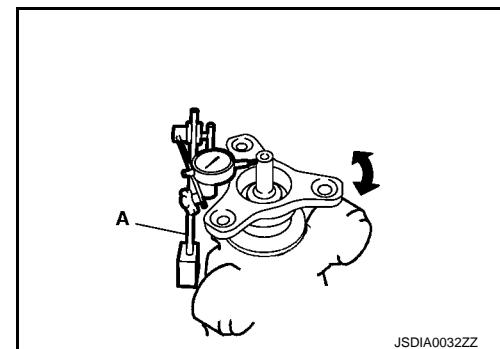

2WD : Inspection After Disassembly

DRIVE GEAR AND DRIVE PINION

- Clean up the disassembled parts.
- If the gear teeth never mesh or line-up correctly, determine the cause and adjust or replace as necessary.
- If the gears are worn, cracked, damaged, pitted or chipped (by friction) noticeably, replace with new drive gear and drive pinion as a set.

BEARING

- Clean up the disassembled parts.

DRIVE PINION

< UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]

- If any chipped (by friction), pitted, worn, rusted or scratched marks, or unusual noise from the bearing is observed, replace as a bearing assembly (as a new set).

SIDE GEAR AND PINION MATE GEAR

- Clean up the disassembled parts.
- If any cracks or damage on the surface of the tooth is found, replace.
- If any worn or chipped mark on the contact sides of the thrust washer is found, replace.

SIDE GEAR THRUST WASHER AND PINION MATE THRUST WASHER

- Clean up the disassembled parts.
- If it is chipped (by friction), damaged, or unusually worn, replace.

OIL SEAL

- Whenever disassembled, replace.
- If wear, deterioration of adherence (sealing force lips), or damage is detected on the lips, replace them.

DIFFERENTIAL CASE

- Clean up the disassembled parts.
- If any wear or crack on the contact sides of the differential case is found, replace.


COMPANION FLANGE

- Clean up the disassembled parts.
- If any chipped mark [about 0.1 mm, (0.004 in)] or other damage on the contact sides of the lips of the companion flange is found, replace.

AWD

AWD : Exploded View

INFOID:0000000008385668

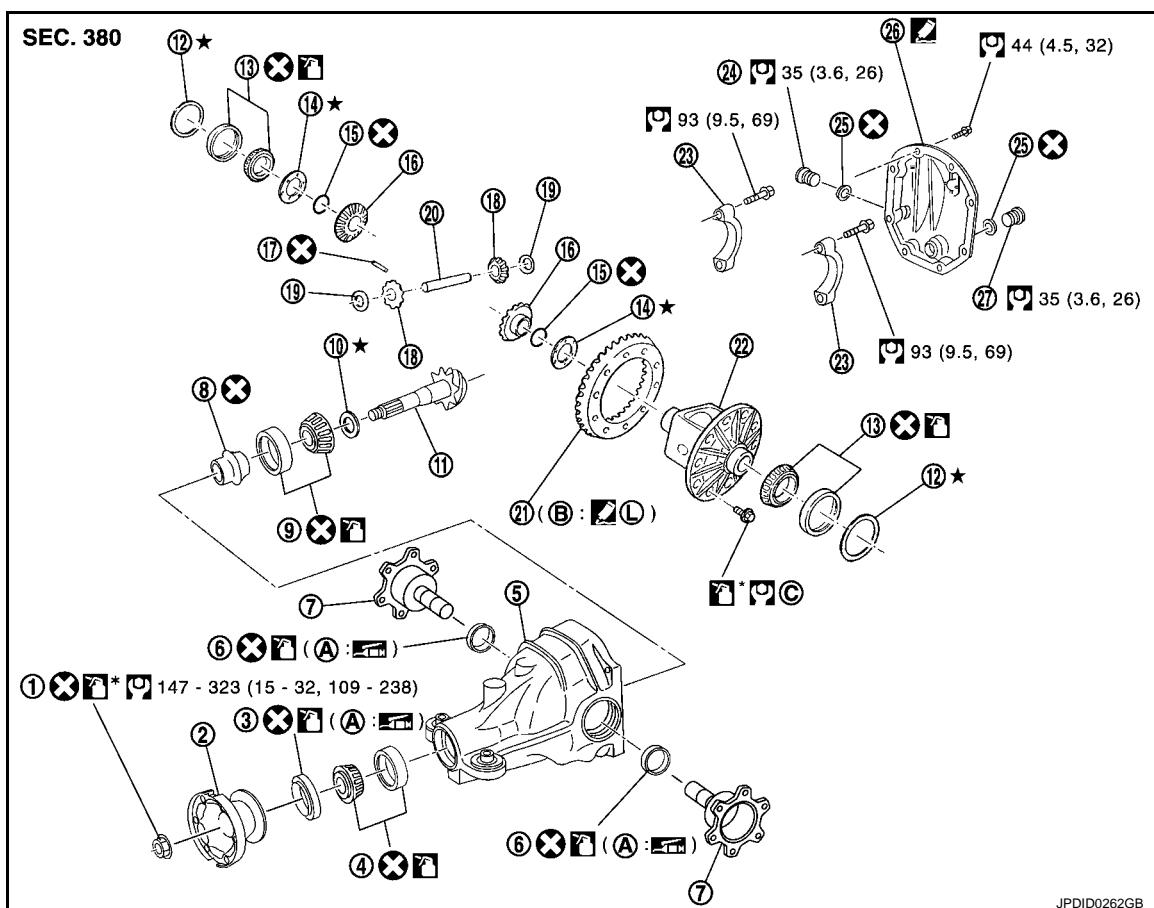

1. Drive pinion lock nut	2. Companion flange	3. Front oil seal
4. Pinion front bearing	5. Gear carrier	6. Side oil seal
7. Side flange	8. Collapsible spacer	9. Pinion rear bearing

DRIVE PINION

< UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]

10. Pinion height adjusting washer	11. Drive pinion	12. Side bearing adjusting washer
13. Side bearing	14. Side gear thrust washer	15. Circular clip
16. Side gear	17. Lock pin	18. Pinion mate gear
19. Pinion mate thrust washer	20. Pinion mate shaft	21. Drive gear
22. Differential case	23. Bearing cap	24. Filler plug
25. Gasket	26. Rear cover	27. Drain plug
A. Oil seal lip	B. Screw hole	C. Comply with the assembly procedure when tightening. Refer to DLN-192, "AWD : Assembly" .

A

B

C

DLN

: Apply gear oil.

: Apply anti-corrosion oil.

: Apply Genuine Silicone RTV or equivalent. Refer to [GI-22, "Recommended Chemical Products and Sealants"](#).

E

: Apply Genuine High Strength Thread Locking Sealant or equivalent. Refer to [GI-22, "Recommended Chemical Products and Sealants"](#).


F

Refer to [GI-4, "Components"](#) for symbols not described above.

INFOID:0000000008285669

AWD : Disassembly

1. Remove differential case assembly. Refer to [DLN-189, "AWD : Disassembly"](#).
2. Remove drive pinion lock nut with the flange wrench (commercial service tool).

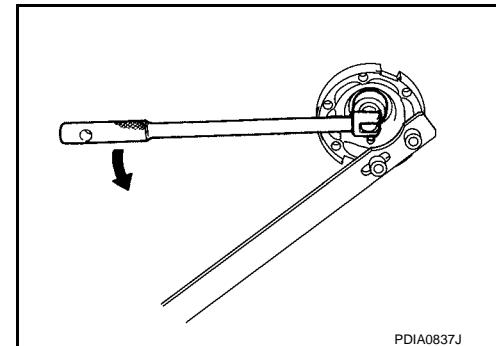

3. Put matching mark (B) on the end of drive pinion. The matching mark should be in line with the matching mark (A) on companion flange (1).


CAUTION:

For matching mark, use paint. Never damage companion flange and drive pinion.


NOTE:

The matching mark on the final drive companion flange indicates the maximum vertical runout position.

When replacing companion flange, matching mark is not necessary.

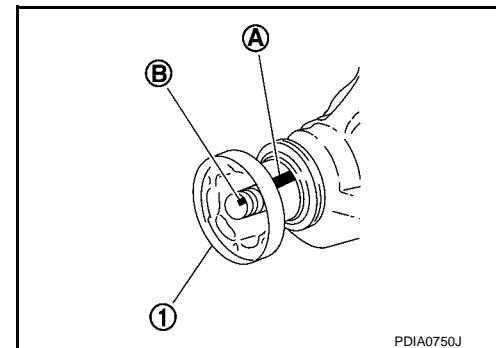

4. Remove companion flange using the suitable puller (commercial service tool).

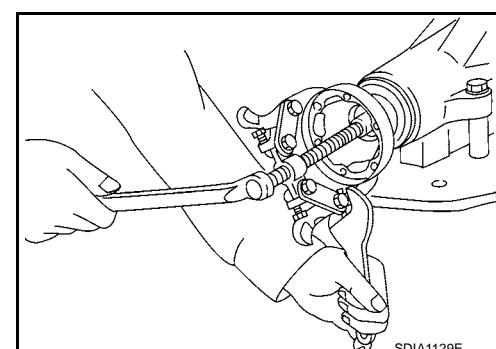

G

H

I

J

K

L

M

N

O


P

DRIVE PINION


< UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]

5. Press drive pinion assembly out of gear carrier.
CAUTION:
Never drop drive pinion assembly.
6. Remove front oil seal.
7. Remove side oil seal.
8. Remove pinion front bearing inner race.
9. Remove collapsible spacer.

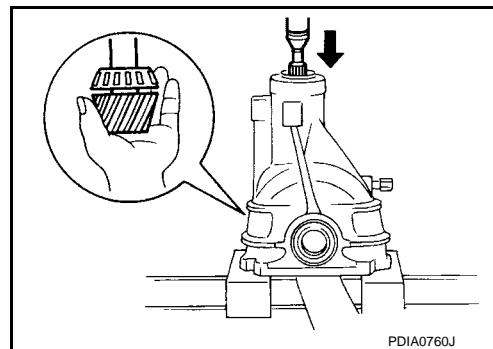


10. Remove pinion rear bearing inner race and pinion height adjusting washer with the replacer (A) (commercial service tool).

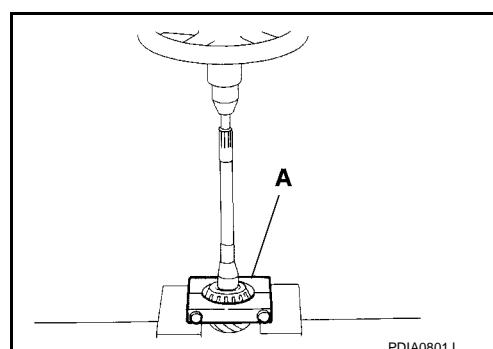

11. Tap pinion front/rear bearing outer races uniformly using a brass rod or equivalent to remove them.

CAUTION:
Never damage gear carrier.

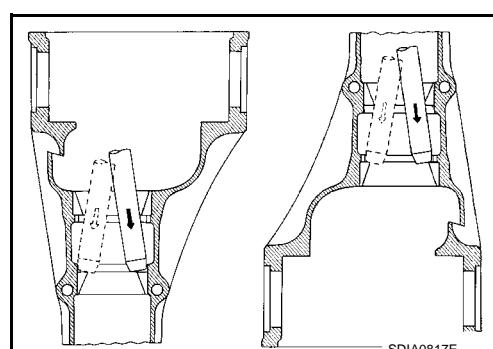

AWD : Assembly

A

B

C

DLN

E

F

G

H

I

J

K

L

M

N

O


P

1. Install front bearing outer race (1) and rear bearing outer race (2) using drifts (A, B and D) and drift bar (C).

A : Drift [SST: ST30720000 (J-25405)]
 B : Drift [SST: KV40105230 (—)]
 C : Drift bar [SST: ST30611000 (J-25742-1)]
 D : Drift [SST: ST30613000 (J-25742-3)]

CAUTION:

- At first, using a hammer, tap bearing outer race until it becomes flat to gear carrier.
- Never reuse pinion front and rear bearing outer race.

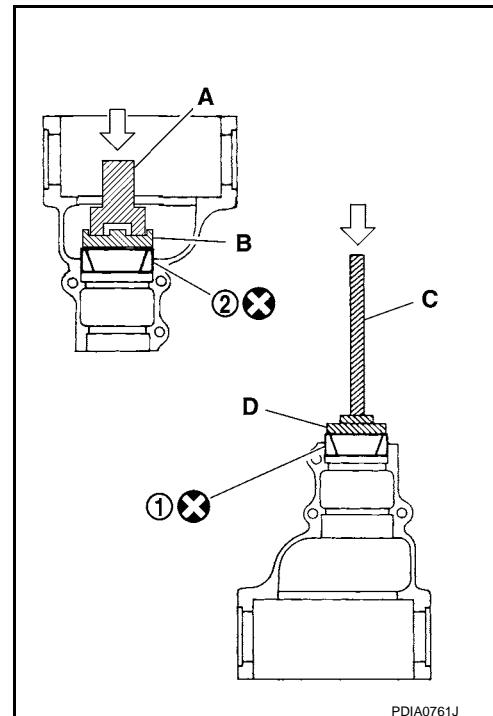

PDIA0761J

2. Temporarily install pinion height adjusting washer (1).

When hypoid gear set has been replaced


- Select pinion height adjusting washer. Refer to [DLN-214, "AWD : Adjustment"](#).

When hypoid gear set has been reused

- Temporarily install the removed pinion height adjusting washer or same thickness washer to drive pinion.

CAUTION:

Pay attention to the direction of pinion height adjusting washer. (Assemble as shown in the figure.)

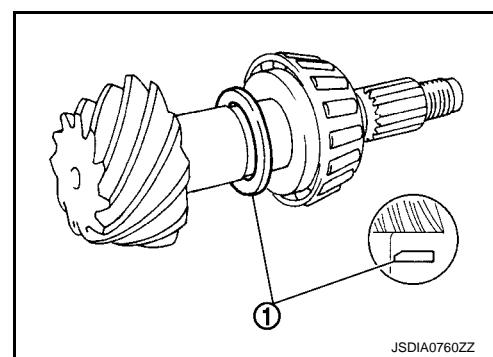

JSDIA0760ZZ

3. Install pinion rear bearing inner race (1) to drive pinion with the drift (A) [SST: ST30901000 (J-26010-01)].

CAUTION:

Never reuse pinion rear bearing inner race.

4. Check and adjust the tooth contact and back lash of drive gear and drive pinion following the procedure below.

- a. Assemble drive pinion into gear carrier.


CAUTION:

- Never install collapsible spacer at this time.
- Apply gear oil to pinion rear bearing.

- b. Assemble pinion front bearing inner race to drive pinion assembly.

CAUTION:

- Never reuse pinion front bearing inner race.
- Apply gear oil to pinion front bearing.

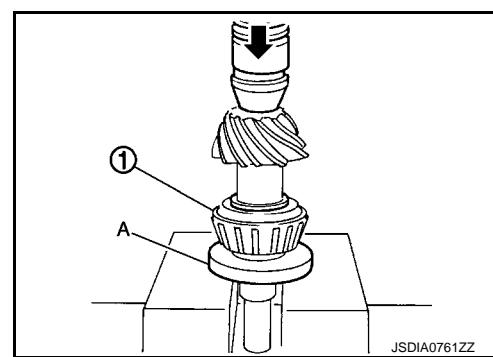


JSDIA0761ZZ

DRIVE PINION

< UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]

c. Using suitable spacer (A) (commercial service tool), press the pinion front bearing inner race to drive pinion as far as drive pinion nut can be tightened.

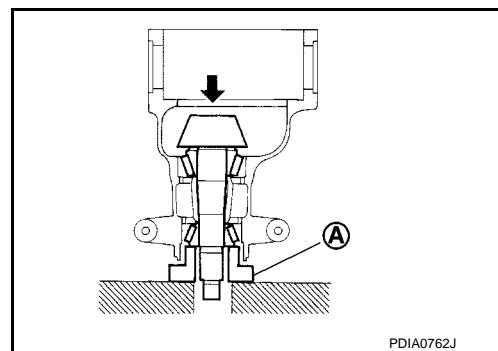

PDIA0762J


d. Install companion flange.

CAUTION:

Never install front oil seal at this time.

NOTE:

When reusing drive pinion, align the matching mark (B) of drive pinion with the matching mark (A) of companion flange, and then install companion flange (1).

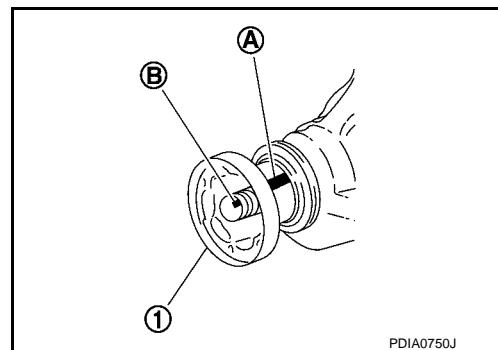

PDIA0750J

e. Temporarily tighten removed drive pinion nut to drive pinion, using flange wrench (commercial service tool).

A : Preload gauge [SST: ST3127S000 (J-25765-A)]

NOTE:

Use removed drive pinion nut only for the preload measurement.

f. Rotate drive pinion more than 20 times to adjust bearing.
g. Tighten to drive pinion lock nut using flange wrench (commercial service tool), while adjusting pinion bearing preload torque using preload gauge [SST: ST3127S000 (J-25765-A)].

Pinion bearing preload : 1.0 - 1.3 N·m (0.11 – 0.13 kg·m, 9 – 11 in-lb)

CAUTION:


Drive pinion nut is tightened with no collapsible spacer. Be careful not to overtighten it. While measuring the preload, tighten drive pinion nut in 5° to 10° increments.

h. Assemble removed drive side bearing adjusting washer or same thickness of it and install differential case assembly. Refer to [DLN-192, "AWD : Assembly"](#).

CAUTION:

- Apply differential gear oil to the side bearings.
- Install side bearing and side bearing adjusting washer in correct location. (drive gear tooth side or drive gear back side)

i. Install bearing caps.
j. Check and adjust tooth contact and drive gear to drive pinion backlash. Refer to [DLN-195, "AWD : Adjustment"](#).
k. Remove bearing caps and differential case assembly.
l. Remove companion flange.

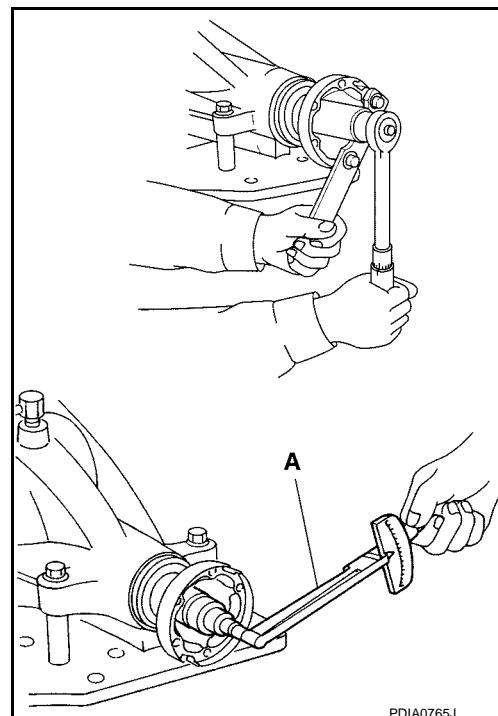

PDIA0765J

DRIVE PINION

< UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]

m. Remove drive pinion assembly from gear carrier.

CAUTION:

Never drop the drive pinion assembly.

n. Remove pinion front bearing inner race.

5. Assemble collapsible spacer.

CAUTION:

Never reuse collapsible spacer.

6. Assemble drive pinion into gear carrier.

CAUTION:

Apply gear oil to pinion rear bearing.


7. Assemble pinion front bearing inner race to drive pinion assembly.

CAUTION:

- **Never reuse pinion front bearing inner race.**

- **Apply gear oil to pinion front bearing.**

8. Using suitable spacer (A) (commercial service tool), press the pinion front bearing inner race to drive pinion as far as drive pinion nut can be tightened.

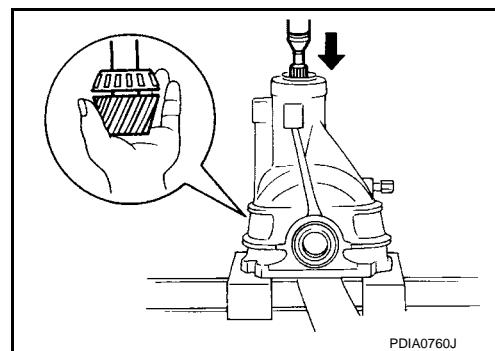

PDIA0760J

DLN


9. Using the drift (A) [SST: ST30720000 (J-25405)], install front oil seal as shown in figure.

CAUTION:

- **Never reuse oil seal.**

- **When installing, never incline oil seal.**

- **Apply multi-purpose grease onto oil seal lips, and gear oil onto the circumference of oil seal.**

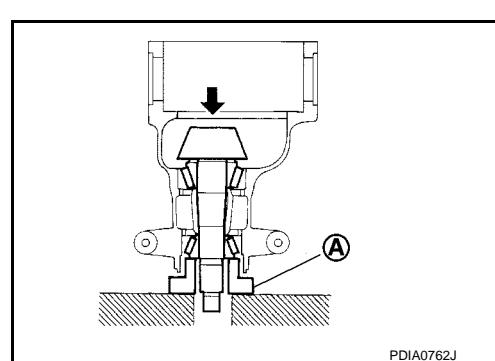


PDIA0762J


10. Install companion flange.

NOTE:

When reusing drive pinion, align the matching mark (B) of drive pinion with the matching mark (A) of companion flange, and then install companion flange (1).

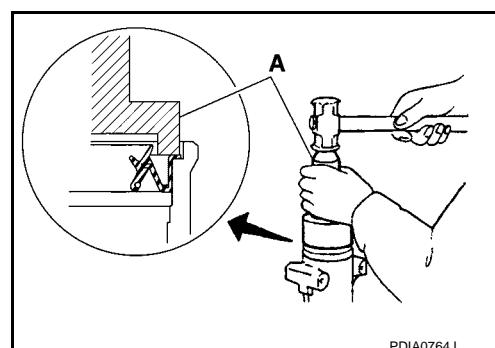

PDIA0764J

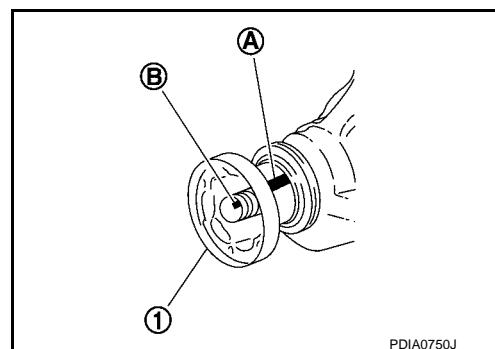

PDIA0750J

DRIVE PINION

< UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]

11. Apply anti-corrosion oil to the thread and seat of drive pinion lock nut, and temporarily tighten drive pinion lock nut to drive pinion, using flange wrench (commercial service tool).

A : Preload gauge [SST: ST3127S000 (J-25765-A)]

CAUTION:

Never reuse drive pinion lock nut.

12. Adjust to the drive pinion lock nut tightening torque and pinion bearing preload torque, using preload gauge [SST: ST3127S000 (J-25765-A)].

Pinion bearing preload

: Refer to [DLN-217, "Pre-load Torque"](#).

CAUTION:

- Adjust to the lower limit of the drive pinion lock nut tightening torque first.
- If the preload torque exceeds the specified value, replace collapsible spacer and tighten it again to adjust. Never loosen drive pinion lock nut to adjust the preload torque.
- After adjustment, rotate drive pinion back and forth 2 to 3 times to check for unusual noise, rotation malfunction, and other malfunctions.

13. Install differential case assembly. Refer to [DLN-192, "AWD : Assembly"](#).

CAUTION:

Never install rear cover at this timing.

14. Check and adjust drive gear runout, tooth contact, drive gear to drive pinion backlash, and companion flange runout. Refer to [DLN-195, "AWD : Adjustment"](#) and [DLN-214, "AWD : Adjustment"](#).
Recheck above items. Readjust the above description, if necessary.
15. Check total preload torque. Refer to [DLN-195, "AWD : Adjustment"](#).
16. Install rear cover. Refer to [DLN-192, "AWD : Assembly"](#).

AWD : Adjustment

INFOID:0000000008285671

PINION GEAR HEIGHT

If the hypoid gear set has been replaced, select the pinion height adjusting washer.

1. Use the formula below to calculate pinion height adjusting washer thickness.

Washer selection equation:


$$T = T_0 + (t_1 - t_2)$$

T: Correct washer thickness


T₀: Removed washer thickness

t₁: Old drive pinion head letter "H × 0.01"
("H": machined tolerance 1/100 mm × 100)

t₂: New drive pinion head letter "H × 0.01"
("H": machined tolerance 1/100 mm × 100)

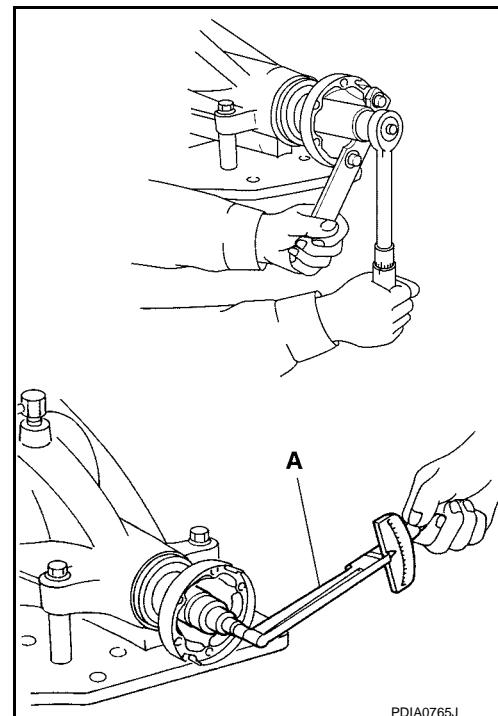

PDIA0765J

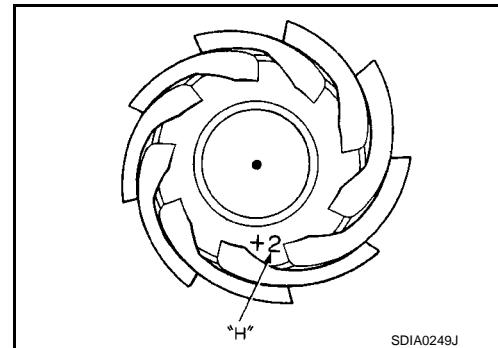

SDIA0249J

Example:

$$T = 3.21 + [(2 \times 0.01) - (-1 \times 0.01)] = 3.24$$

T₀: 3.21

t₁: +2

t₂: -1

2. Select the proper pinion height adjusting washer. For selecting adjusting washer, refer to the latest parts information.

CAUTION:

If unable to find a washer of desired thickness, use a washer with thickness closest to the calculated value.

Example:

Calculated value... $T = 3.22$ mm

Used washer... $T = 3.21$ mm

COMPANION FLANGE RUNOUT

1. Fit a test indicator to the inner side of companion flange (socket diameter).
2. Rotate companion flange to check for runout.

Companion flange runout : Refer to [DLN-218, "Companion Flange Runout \(AWD\)"](#).

3. If the runout value is outside the runout limit, follow the procedure below to adjust.
 - a. Check for runout while changing the phase between companion flange and drive pinion by 90° step, and search for the position where the runout is the minimum.
 - b. If the runout value is still outside of the limit after the phase has been changed, possible cause will be an assembly malfunction of drive pinion and pinion bearing and malfunction of pinion bearing. Check for these items and repair if necessary.
 - c. If the runout value is still outside of the limit after the check and repair, replace companion flange.

AWD : Inspection After Disassembly

INFOID:0000000008285672

DRIVE GEAR AND DRIVE PINION

- Clean up the disassembled parts.
- If the gear teeth never mesh or line-up correctly, determine the cause and adjust or replace as necessary.
- If the gears are worn, cracked, damaged, pitted or chipped (by friction) noticeably, replace with new drive gear and drive pinion as a set.

BEARING

- Clean up the disassembled parts.
- If any chipped (by friction), pitted, worn, rusted or scratched marks, or unusual noise from the bearing is observed, replace as a bearing assembly (as a new set).

SIDE GEAR AND PINION MATE GEAR

- Clean up the disassembled parts.
- If any cracks or damage on the surface of the tooth is found, replace.
- If any worn or chipped mark on the contact sides of the thrust washer is found, replace.

SIDE GEAR THRUST WASHER AND PINION MATE THRUST WASHER

- Clean up the disassembled parts.
- If it is chipped (by friction), damaged, or unusually worn, replace.

OIL SEAL


- Whenever disassembled, replace.
- If wear, deterioration of adherence (sealing force lips), or damage is detected on the lips, replace them.

DIFFERENTIAL CASE

- Clean up the disassembled parts.
- If any wear or crack on the contact sides of the differential case is found, replace.

COMPANION FLANGE

- Clean up the disassembled parts.

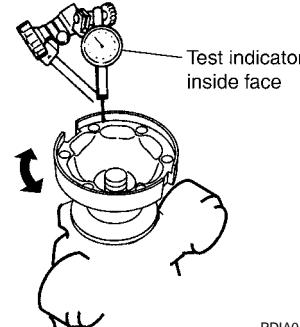

PDIA0490E

DRIVE PINION

< UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]

- If any chipped mark [about 0.1 mm, (0.004 in)] or other damage on the contact sides of the lips of the companion flange is found, replace.

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[REAR FINAL DRIVE: R200]

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

General Specification

INFOID:0000000008285673

	2WD	AWD
Applied model		VQ37VHR
		A/T
Final drive model		R200
Gear ratio		3.133
Number of teeth (Drive gear/Drive pinion)		47/15
Oil capacity (Approx.) ℓ (US pt, Imp pt)		1.4 (3, 2-1/2)
Number of pinion gears		2
Drive pinion adjustment spacer type		Collapsible

Drive Gear Runout

INFOID:0000000008285674

Unit: mm (in)

Item	Limit
Drive gear back face runout	0.05 (0.0020)

Differential Side Gear Clearance

INFOID:0000000008285675

Unit: mm (in)

Item	Standard
Side gear backlash (Clearance between side gear and differential case)	0.2 (0.008) or less (Each gear should rotate smoothly without excessive resistance during differential motion.)

Preload Torque

INFOID:0000000008285676

Unit: N·m (kg·m, in-lb)

Item	Standard
Pinion bearing (P1)	2.65 – 3.23 (0.27 – 0.32, 24 – 28)
Side bearing (P2)	0.20 – 0.52 (0.02 – 0.05, 2 – 4)
Side bearing to pinion bearing (Total preload) (Total preload = P1 + P2)	2.85 – 3.75 (0.29 – 0.38, 26 – 33)

Backlash

INFOID:0000000008285677

Unit: mm (in)

Item	Standard
Drive gear to drive pinion gear	0.10 – 0.15 (0.0039 – 0.0059)

Drive Pinion Runout (2WD)

INFOID:0000000008285678

Unit: mm (in)

Item	Limit
Tip of drive pinion runout	0.8 (0.031)

SERVICE DATA AND SPECIFICATIONS (SDS)

<SERVICE DATA AND SPECIFICATIONS (SDS)

[REAR FINAL DRIVE: R200]

Companion Flange Runout (AWD)

INFOID:000000008285679

Unit: mm (in)

Item	Limit
Inner side of the companion flange runout	0.08 (0.0031)