

C1A00-C1A14

车载显示	项目 (CONSULT 屏幕术语)	参考
0	C1A00:CONTROL UNIT	C1A00 CONTROL UNIT
1	C1A01:POWER SUPPLY CIR	C1A01 POWER SUPPLY CIR, C1A02 POWER SUPPLY CIR 2
2	C1A02:POWER SUPPLY CIR 2	C1A01 POWER SUPPLY CIR, C1A02 POWER SUPPLY CIR 2
3	C1A03:VHCL SPEED SE CIRC	C1A03 VHCL SPEED SE CIRC
4	C1A04:ABS/TCS/VDC CIRC	C1A04 ABS/TCS/VDC CIRC
5	C1A05:BRAKE SW/STOP L SW	C1A05 BRAKE SW/STOP L SW
6	C1A06:OPERATION SW CIRC	C1A06 OPERATION SW CIRC
12	C1A12:LASER BEAM OFFCNTR	C1A12 LASER BEAM OFFCNTR
13	C1A13:STOP LAMP RLY FIX	C1A13 STOP LAMP RLY FIX
14	C1A14:ECM CIRCUIT	C1A14 ECM CIRCUIT

C1A15-C1A34

车载显示	项目 (CONSULT 屏幕术语)	参考
15	C1A15:GEAR POSITION	C1A15 GEAR POSITION
16	C1A16:RADAR STAIN	C1A16 RADAR STAIN
18	C1A18:LASER AIMING INCMP	C1A18 LASER AIMING INCMP
21	C1A21:UNIT HIGH TEMP	C1A21 UNIT HIGH TEMP
24	C1A24:NP RANGE	C1A24 NP RANGE
26	C1A26:ECD MODE MALF	C1A26 ECD MODE MALF
27	C1A27:ECD PWR SUPPLY CIR	C1A27 ECD PWR SUPPLY CIR
33	C1A33:CAN TRANSMISSION ERROR	C1A33 CAN TRANSMISSION ERROR
34	C1A34:COMMAND ERROR	C1A34 COMMAND ERROR

U0121-U1010

车载显示	项目 (CONSULT 屏幕术语)	参考
127	U0121:VDC CAN CIR2	U0121 VDC CAN CIR2
120	U0401:ECM CAN CIR1	U0401 ECM CAN CIR1
122	U0402:TCM CAN CIR1	U0402 TCM CAN CIR1
126	U0415:VDC CAN CIR1	U0415 VDC CAN CIR1
100	U1000: CAN COMM CIRCUIT	U1000 CAN COMM CIRCUIT
110	U1010: CONTROL UNIT (CAN)	U1010 CONTROL UNIT (CAN)

www.car60.cc