

自动变速器

自动变速器.....	VT-1
准备工作.....	VT-1
维修数据.....	VT-3
注意事项.....	VT-4
系统说明.....	VT-5
故障检查排除基本流程	VT-13
就车检查.....	VT-14
故障诊断	VT-22
NVH 故障排除	VT-22
故障现象表	VT-22
变速器操纵机构	VT-24
部件图	VT-24
更换.....	VT-25
差速器油封.....	VT-27
更换.....	VT-27
呼吸气管	VT-28
更换.....	VT-28
输入轴油封.....	VT-29
更换.....	VT-29
选挡轴油封.....	VT-30
更换.....	VT-30
主动锥轮速度传感器	VT-31
更换.....	VT-31
液压控制块.....	VT-32
更换.....	VT-32