

一、 仪表台线束:

<p>接右后组合灯RIGHT REAR LIGHT</p> <p>DJ7061Y-2-20(YY)</p>	<p>接门灯开关ROOF DOOR SW</p> <p>DJ7013-6.3-20(YY)</p>
<p>接倒车雷达右侧探头</p> <p>6180-2451 (SUM)</p>	<p>接后雾灯REAR FOG LIGHT</p> <p>DJ7021-2-21</p>
<p>接倒车雷达左侧探头</p> <p>6180-2451 (SUM)</p>	<p>G9接地点</p>
<p>接后背门线束BACK DOOR</p> <p>DJ7064Y-2.2-11</p>	<p>接左后组合灯LEFT REAR LIGHT</p> <p>DJ7061Y-2-20(YY)</p>

门灯开关ROOF DOOR SW

3300
W
0.5

DJ7013-6.3-20(Y)

接前舱线束2

CABIN HARNESS CONNECTOR 2

3000
R
6.0
1

DJ7011-9.5-10

接前舱线束3

CABIN HARNESS CONNECTOR 3

2002	2801		1303		1908	1907	1901	3303	1
W	W		R		W	W	W	W	
1.0	1.0		1		1.0	1.0	0.5	0.5	
2003	2703	2702	2701	1509	1512	1803	1804		8
W	W	W	W	W	W	W	W		
1.0	1.0	1.0	1.0	1.0	1.0	0.5	0.75		

DJ7171-3-10(Y)

接前舱线束1

CABIN HARNESS CONNECTOR 1

9	CANH	CL2	1503	1900		2700	1700			2105	1
	Y	G	W	W		W	W			W	
	0.5	0.5	0.5	0.5		0.5	0.5			0.5	
20	CANL	CH2	3007	1701	CL1	CH1	3001	1601	2101	2100	10
	G	Y	R	W	L	Gr	R	W	W	W	
	0.5	0.5	1	0.5	0.5	0.5	0.5	0.5	0.5	0.5	

DJ7204Y-2.2-10(Y)

接前舱线束4

CABIN HARNESS CONNECTOR 4

3010	3004		3003
R	R		R
1.5	1		2
3006	3009	3005	3003
R	R	R	R
1.5	1.5	2.5	2


DJ7081-6.3-21

G5接地点

3105A	3105B	3105C	3105D
Br	Br	Br	Br
1.0	1.0	1.0	1.5

DJ431-6D

接阅读灯

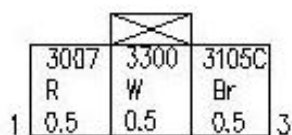


0465 101 (THB)

电动后视镜开关MIRROR SW




7283-7602

接左前门线束LEFT FRONT DOOR

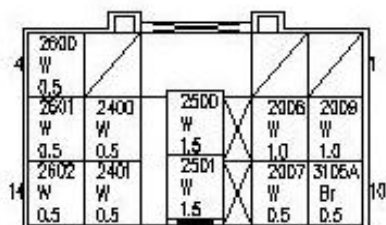


DJ7141Y-2.2/4.8-10(YY)

接后除霜开关

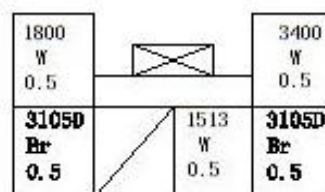


DJ7061-2.3-20

充电保压接插件

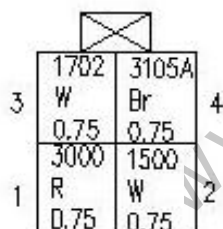


39-01-3042 (molex)

充电保压接插件

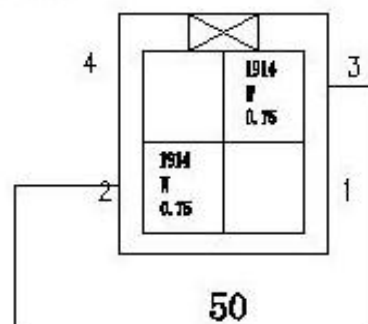


39-01-2041 (molex)

接点火开关KEY

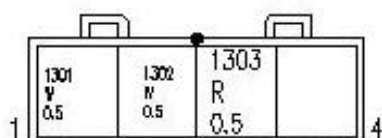


936238-1 (AMP)

接倒车雷达控制模块RADAR REVERSING

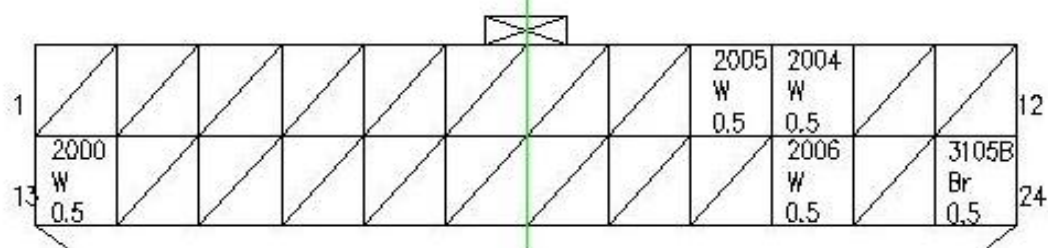


DF-TKA24MW02WH

中央门锁控制模块(BCM)

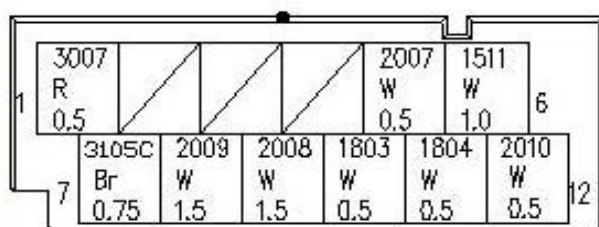


电喇叭HORN

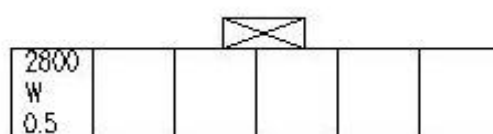

827603-1


174923-1

接雨刮开关WIPER SW

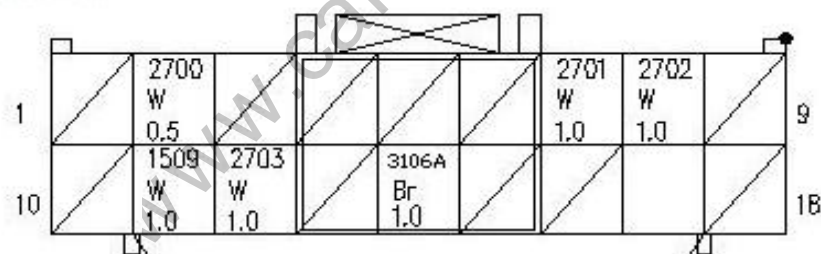

6098-1164 (SUM)

接灯光开关LIGHT SW

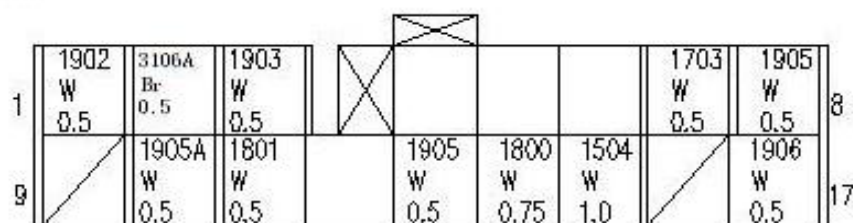


6098-1998 (SUM)

组合仪表 A CLUSTER A




MG610376

组合仪表 B CLUSTER B

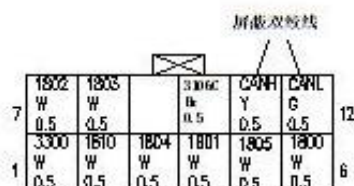


MG610376

 接制动踏板BRAKE PEDAL SW




7022-6. 3-20 (YY)

 G6接地点




DJ431-6E

接加速踏板 ACCELERATOR PEDAL

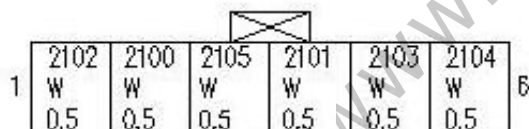

AMP 936394-2

 12V电源接口




DJ7023-6. 3-20

G8接地点




DJ431-6E

对接附件线束1 (母---紫) ACCESSORY CONNECTOR 1

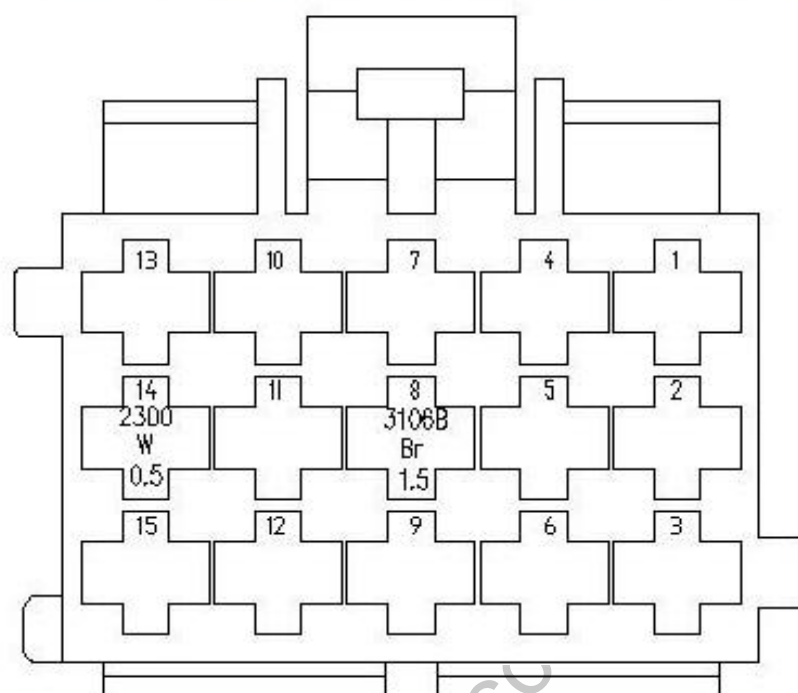


AMP 1-967623-3

对接附件线束2(母--棕)ACCESSORY CONNECTOR 2

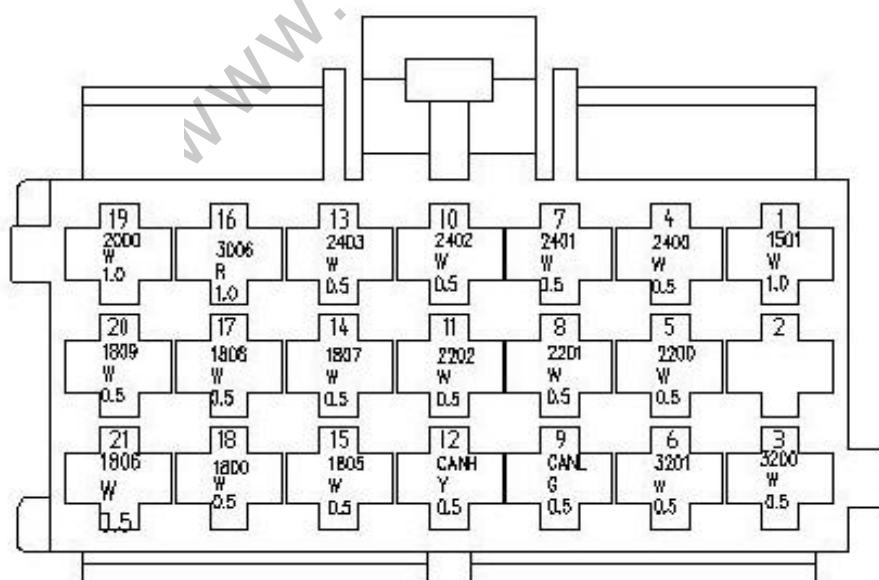


AMP 1-967625-1

接空调系统

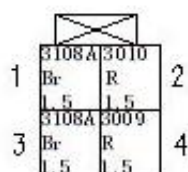


DJ7041-6.3-21 (YY)

接空调系统

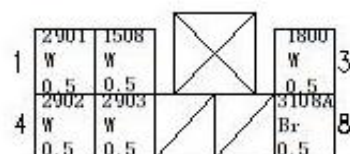


DJ7081Y-2-21 (YY)

接充电口CP和PP插件CHAGER PP AND CP

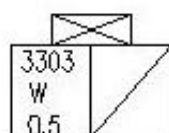

DJ70227Y-2.2-21

 接手刹开关HAND BREAK SW




DJ7011-6.3-20 (YY)

接应急开关测试端口EMERGENCY SW




DJ70214Y-2-21

接右玻璃升降器开关RIGHT WINDOW SW

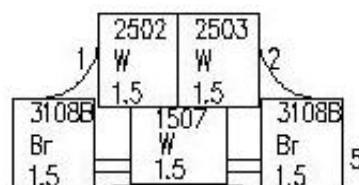


DJ7052-6.3-20

接左玻璃升降器开关LEFT WINDOW SW

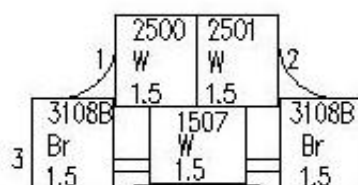

DJ7052-6.3-20

接右前门线束RIGHT DOOR

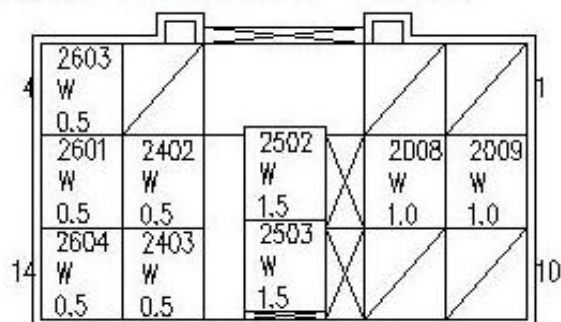

DJ7141Y-2.2/4.8-10 (YY)

接RS485诊断接口 RS485 DIAGNOSTIC INTERFACE




282087-1

通用诊断接口 CAN-BUS DIAGNOSTIC INTERFACE




179631-1(AMP)

接GPRS

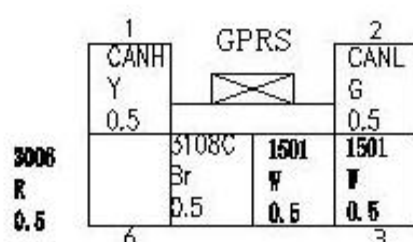


DJ7061-2.3-21

对接VMS插件C（黑色）VMS CONNECTOR C

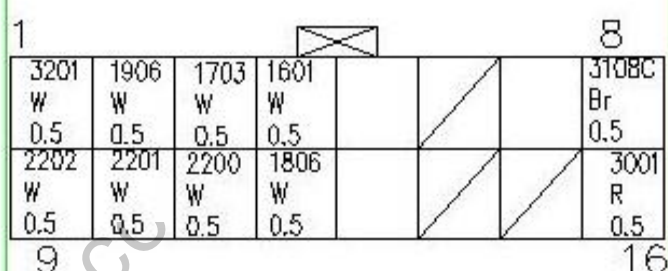


174046-2

对接VMS插件A（灰色）VMS CONNECTOR A

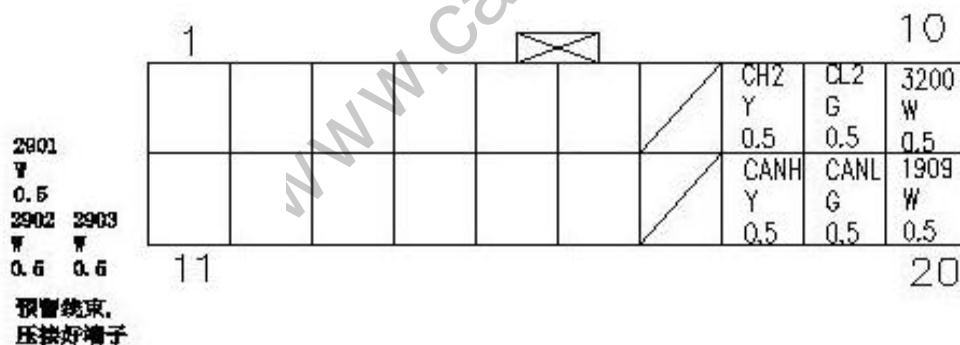


179057-6

对接VMS插件B（灰色）VMS CONNECTOR B

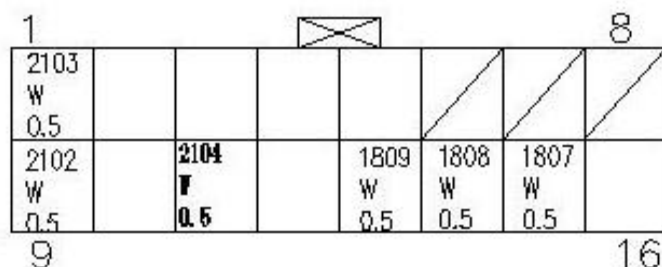


179054-6

对接附件线束1(公—紫)
ACCESSORY CONNECTOR 1

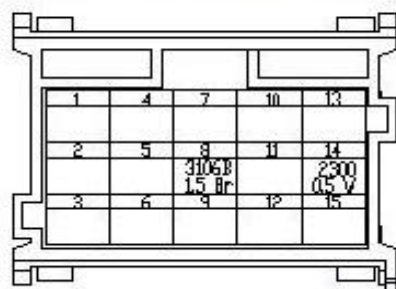


AMP:1-967628-3

接警示灯开关HAZARD SW

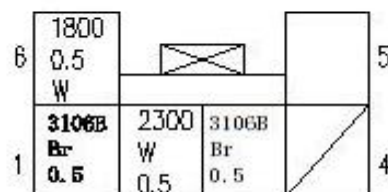


DJ7061-2.3-20(YY)

对接附件线束2(公—棕)ACCESSORY CONNECTOR 2

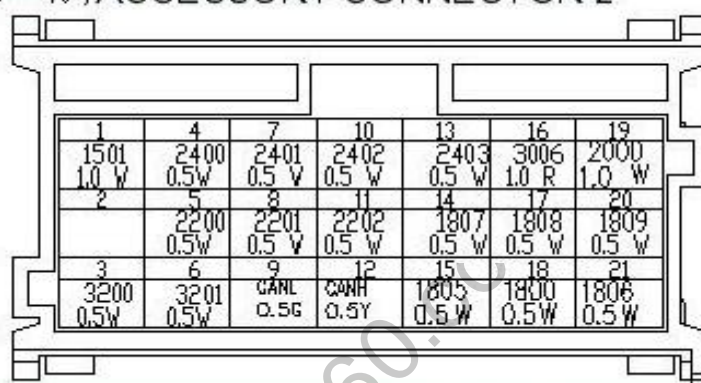


AMP: 1-967630-1

档位开关DRIVER SWITCH UNIT (DSU)
(黄色)

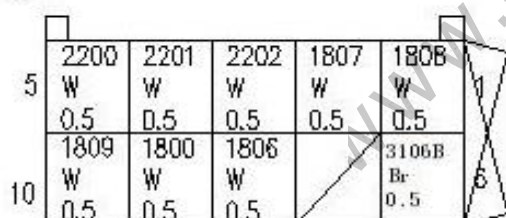


1534170-1

接模式切换开关(捆绑在仪表分支上)
(黑色)

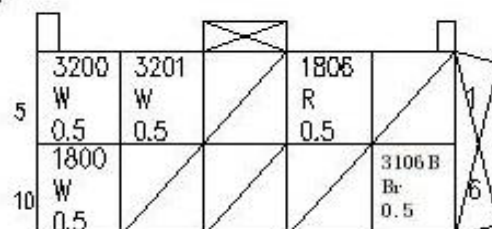

1534170-1

接GPS主机

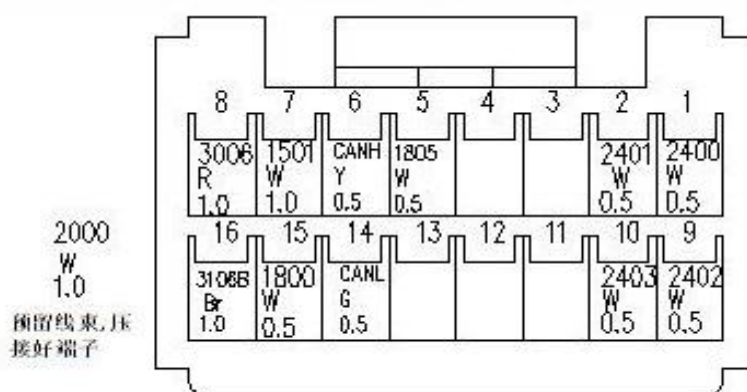

2000
W
1.0
预留线束,压
接好端子

DJ7161-1.2-21