



POWER SOURCE (LHD)

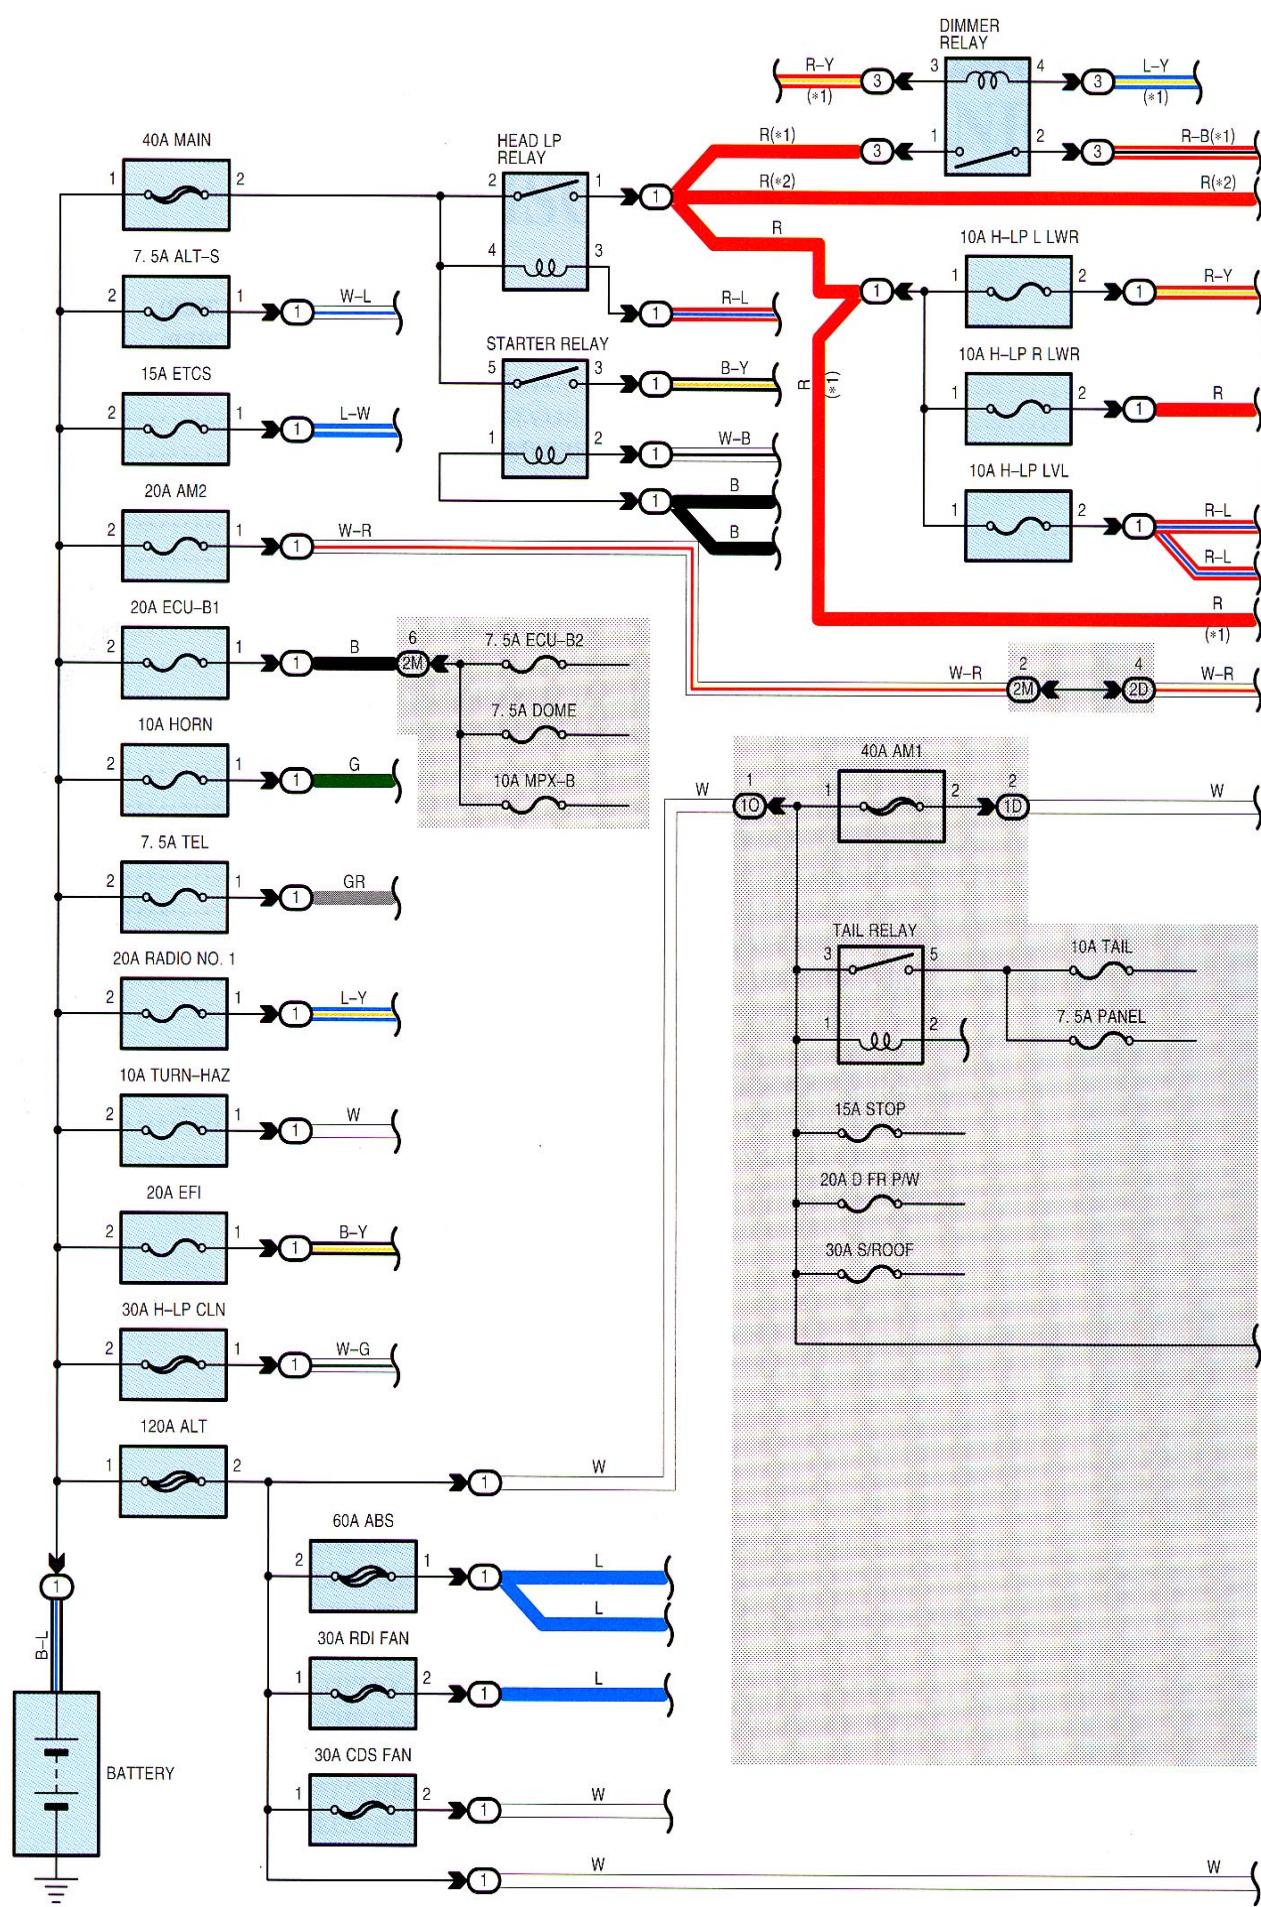

* 1 : W/ DAYTIME RUNNING LIGHT
* 2 : W/O DAYTIME RUNNING LIGHT

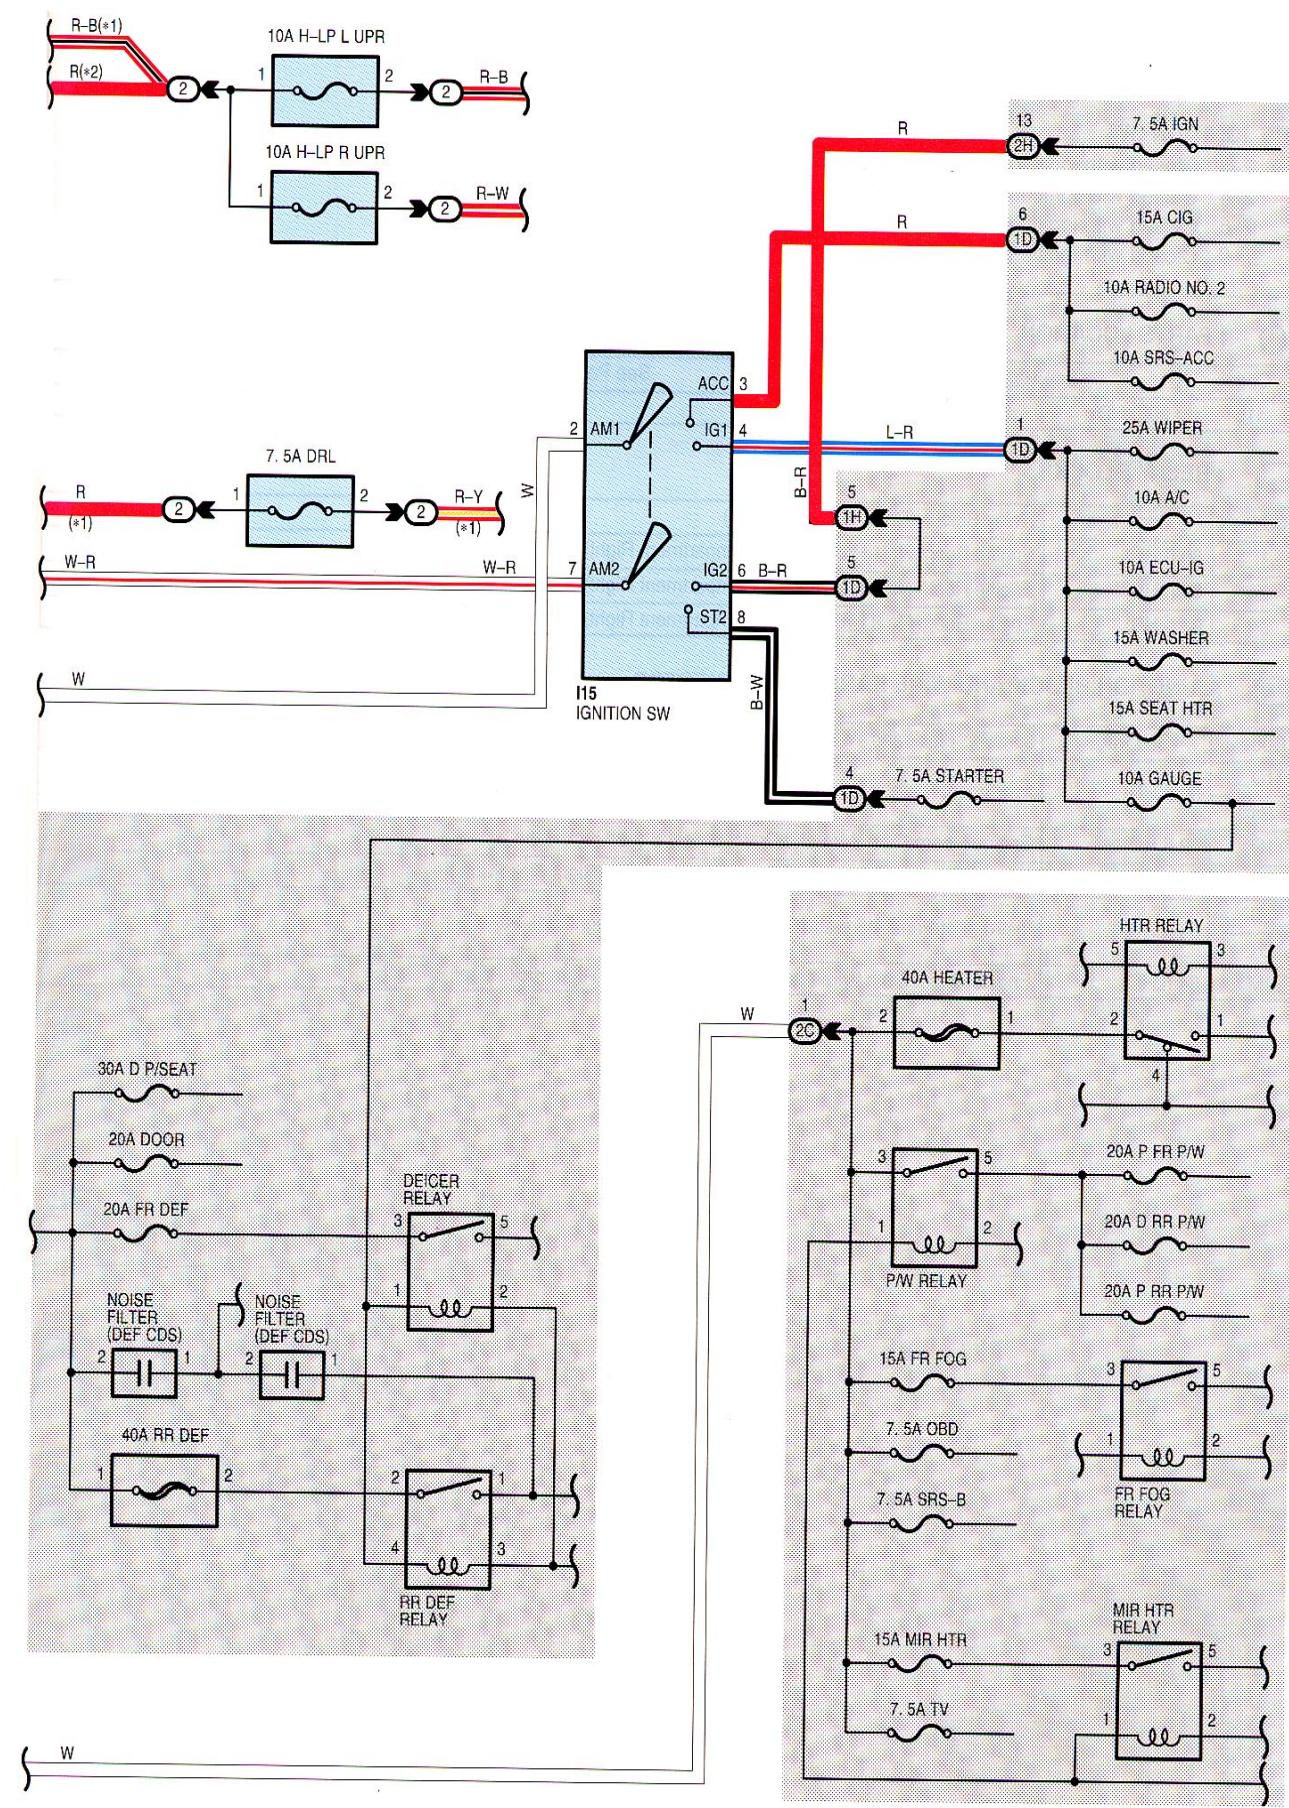

POWER SOURCE (LHD)

SERVICE HINTS

HEAD LP RELAY

2-1 : Closed with light control SW at **HEAD** position or dimmer SW at **FLASH** position

TAIL RELAY

5-3 : Closed with light control SW at **TAIL** or **HEAD** position

I15 IGNITION SW

2-3 : Closed with ignition key at **ACC** or **ON** position

2-4 : Closed with ignition key at **ON** or **ST** position

7-6 : Closed with ignition key at **ON** or **ST** position

7-8 : Closed with ignition key at **ST** position

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
I15	99 (LHD)				

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	80 (LHD)	Engine Room No.1 R/B (Engine Compartment Right)
2	80 (LHD)	Engine Room No.2 R/B (Engine Compartment Right)
3	94 (LHD)	Engine Room No.3 R/B (Engine Compartment Right)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	82 (LHD)	Instrument Panel Wire and Driver Side J/B (Left Kick Panel)
1H		
1O	82 (LHD)	Engine Room Main Wire and Driver Side J/B (Left Kick Panel)
2C	84 (LHD)	Engine Room Main Wire and Passenger Side J/B (Right Kick Panel)
2D	84 (LHD)	Instrument Panel Wire and Passenger Side J/B (Right Kick Panel)
2H		
2M	84 (LHD)	Engine Room Main Wire and Passenger Side J/B (Right Kick Panel)

POWER SOURCE (RHD)

SERVICE HINTS

HEAD LP RELAY

2-1 : Closed with light control SW at **HEAD** position or dimmer SW at **FLASH** position

TAIL RELAY

5-3 : Closed with light control SW at **TAIL** or **HEAD** position

I15 IGNITION SW

2-3 : Closed with ignition key at **ACC** or **ON** position

2-4 : Closed with ignition key at **ON** or **ST** position

7-6 : Closed with ignition key at **ON** or **ST** position

7-8 : Closed with ignition key at **ST** position

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
I15	107 (RHD)				

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	81 (RHD)	Engine Room No.1 R/B (Engine Compartment Left)
2	81 (RHD)	Engine Room No.2 R/B (Engine Compartment Left)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	88 (RHD)	Engine Room Main Wire and Driver Side J/B (Right Kick Panel)
1D	88 (RHD)	Instrument Panel Wire and Driver Side J/B (Right Kick Panel)
2D	90 (RHD)	Instrument Panel Wire and Passenger Side J/B (Left Kick Panel)
2K		
2O	90 (RHD)	Engine Room Main Wire and Passenger Side J/B (Left Kick Panel)