


TURN SIGNAL AND HAZARD WARNING LIGHT (LHD)

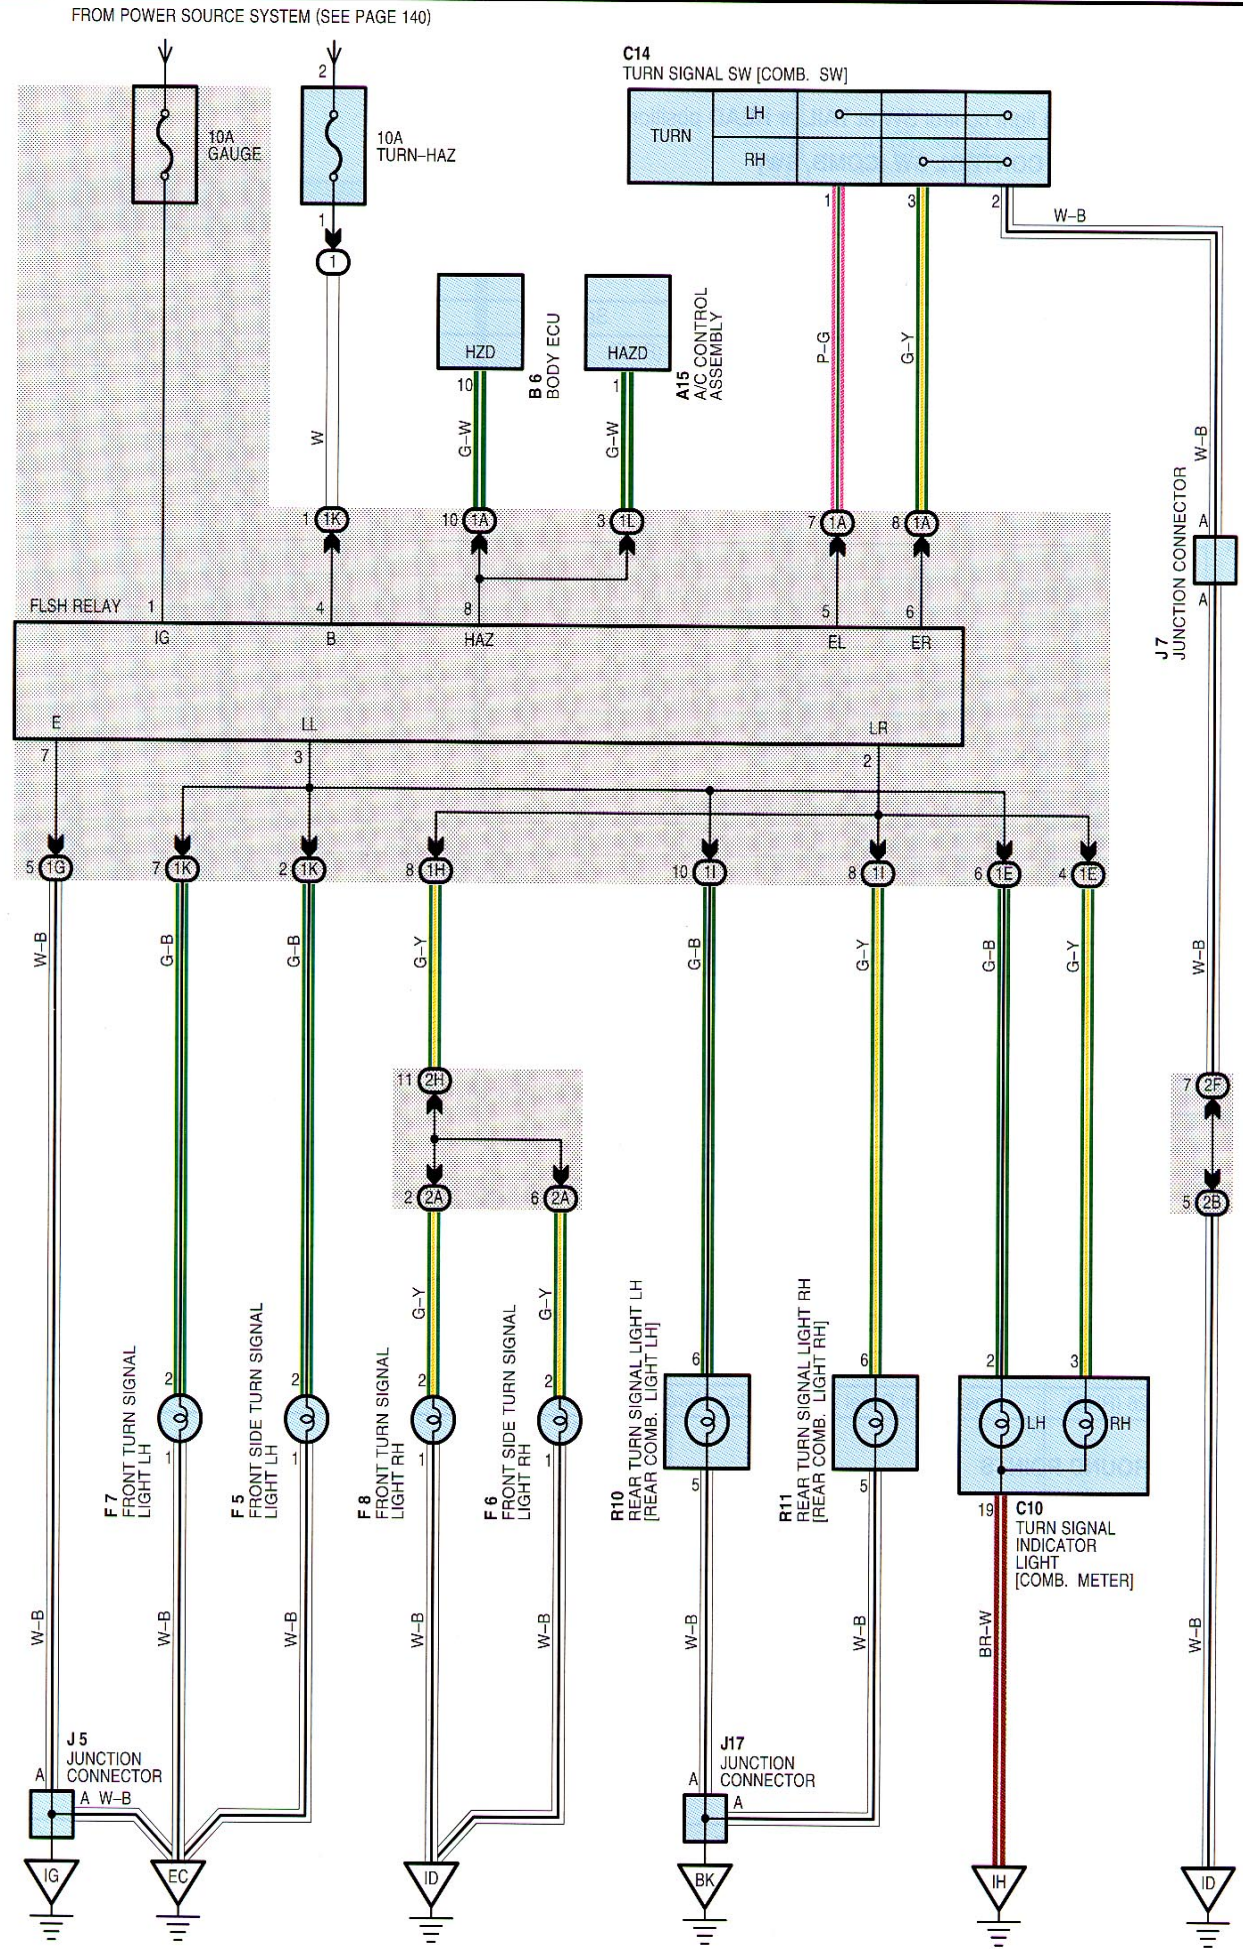

SERVICE HINTS

FLSH RELAY

- 4-GROUND : Always approx. 12 volts
- 1-GROUND : Approx. 12 volts with ignition SW at ON or ST position
- 7-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A15	98 (LHD)	F6	96 (LHD)	J17	100 (LHD)
B6	98 (LHD)	F7	96 (LHD)	R10	101 (LHD)
C10	98 (LHD)	F8	96 (LHD)	R11	101 (LHD)
C14	98 (LHD)	J5	99 (LHD)		
F5	96 (LHD)	J7	99 (LHD)		

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	80 (LHD)	Engine Room No.1 R/B (Engine Compartment Right)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	82 (LHD)	Instrument Panel Wire and Driver Side J/B (Left Kick Panel)
1E	82 (LHD)	Instrument Panel Wire and Driver Side J/B (Left Kick Panel)
1G	82 (LHD)	Engine Room Main Wire and Driver Side J/B (Left Kick Panel)
1H	82 (LHD)	Instrument Panel Wire and Driver Side J/B (Left Kick Panel)
1I	82 (LHD)	Floor No.2 Wire and Driver Side J/B (Left Kick Panel)
1K	82 (LHD)	Engine Room Main Wire and Driver Side J/B (Left Kick Panel)
1L	82 (LHD)	Instrument Panel Wire and Driver Side J/B (Left Kick Panel)
2A	84 (LHD)	Engine Room Main Wire and Passenger Side J/B (Right Kick Panel)
2B	84 (LHD)	Instrument Panel Wire and Passenger Side J/B (Right Kick Panel)
2F	84 (LHD)	Instrument Panel Wire and Passenger Side J/B (Right Kick Panel)
2H	84 (LHD)	Instrument Panel Wire and Passenger Side J/B (Right Kick Panel)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
EC	112 (LHD)	Left Fender Apron
ID	114 (LHD)	Cowl Side Panel LH
IG	114 (LHD)	Cowl Side Panel RH
IH	114 (LHD)	Front Floor Panel Center LH
BK	118 (LHD)	Left Quarter Panel LH