


HORN

FROM POWER SOURCE SYSTEM (SEE PAGE 140, 144)

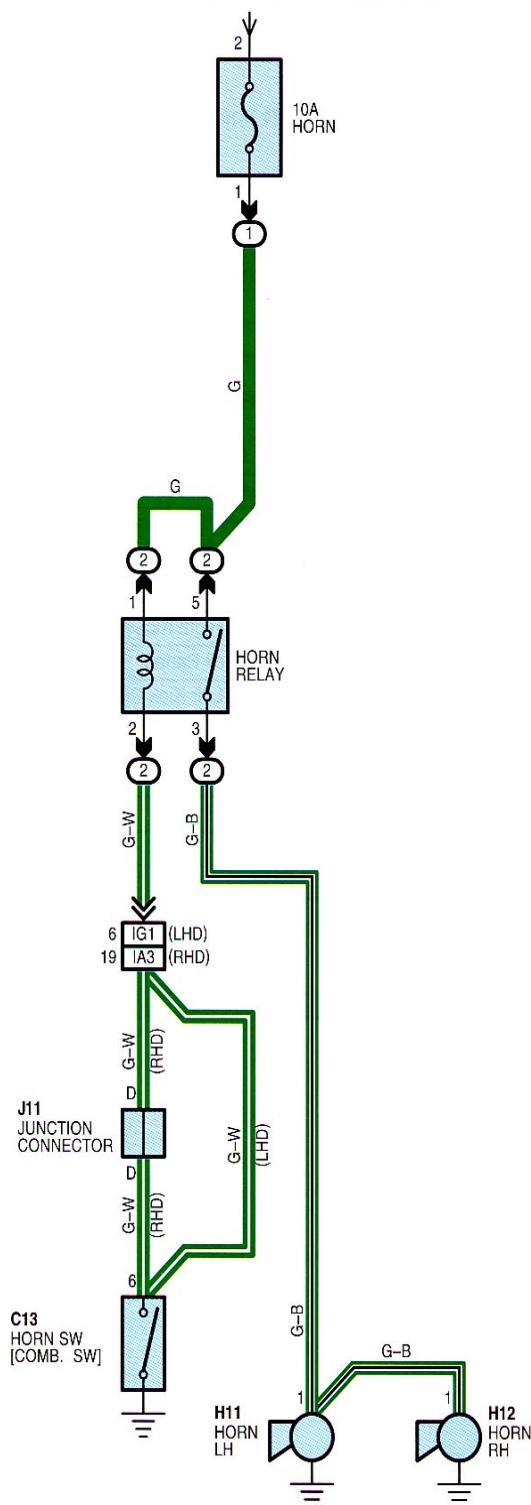

SERVICE HINTS

HORN RELAY

5-3 : Closed horn SW on

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C13	98 (LHD)	H11	105 (RHD)	J11	107 (RHD)
	106 (RHD)		97 (LHD)		
H11	97 (LHD)	H12	105 (RHD)		

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	80 (LHD)	Engine Room No.1 R/B (Engine Compartment Right)
	81 (RHD)	Engine Room No.1 R/B (Engine Compartment Left)
2	80 (LHD)	Engine Room No.2 R/B (Engine Compartment Right)
	81 (RHD)	Engine Room No.2 R/B (Engine Compartment Left)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA3	124 (RHD)	Instrument Panel Wire and Engine Room Main Wire (Near the Passenger Side J/B)
IG1	116 (LHD)	