


Position of Parts in Seat

[LHD : Rear Seat]

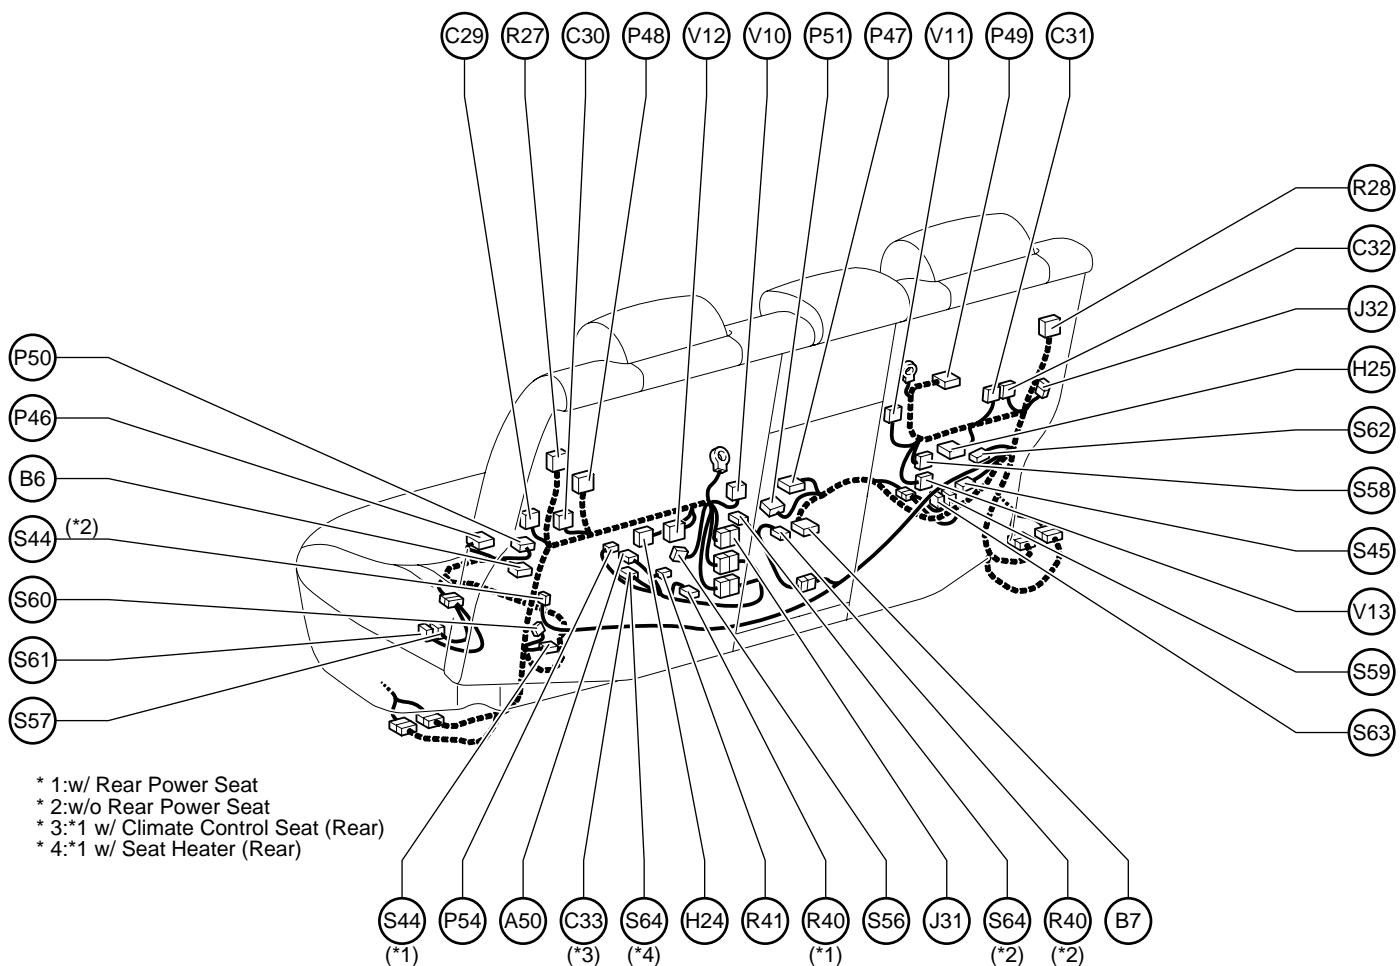

A50 Audio and Rear A/C Control SW

B 6 Buckle SW Rear LH
B 7 Buckle SW Rear RH

C29 Climate Control Seat ECU (Rear LH Seat)
C30 Climate Control Seat ECU (Rear LH Seat)
C31 Climate Control Seat ECU (Rear RH Seat)
C32 Climate Control Seat ECU (Rear RH Seat)
C33 Climate Control Seat SW (Rear)

H24 Head Rest Limit SW Rear LH
H25 Head Rest Limit SW Rear RH

J 31 Junction Connector
J 32 Junction Connector

P46 Power Seat Motor
(Rear Passenger's LH Seat Slide Control)
P47 Power Seat Motor
(Rear Passenger's RH Seat Slide Control)
P48 Power Seat Motor and Position Sensor
(Rear Passenger's LH Seat Head Rest Top and Bottom Control)
P49 Power Seat Motor and Position Sensor
(Rear Passenger's RH Seat Head Rest Top and Bottom Control)

P50 Power Seat Position Sensor
(Rear Passenger's LH Seat Slide Control)

P51 Power Seat Position Sensor
(Rear Passenger's RH Seat Slide Control)
P54 Power Seat Control SW (Rear Seat)

R27 Rear LH Seat ECU
R28 Rear RH Seat ECU
R40 Rear Armrest Courtesy SW
R41 Rear Sunshade SW (Rear)

S44 Seat Heater Rear LH
S45 Seat Heater Rear RH
S56 Seat Climate Controller Rear LH (Seat Back)
S57 Seat Climate Controller Rear LH (Seat Cushion)
S58 Seat Climate Controller Rear RH (Seat Back)
S59 Seat Climate Controller Rear RH (Seat Cushion)
S60 Seat Climate Fan Motor Rear LH (Seat Back)
S61 Seat Climate Fan Motor Rear LH (Seat Cushion)
S62 Seat Climate Fan Motor Rear RH (Seat Back)
S63 Seat Climate Fan Motor Rear RH (Seat Cushion)
S64 Seat Heater SW (Rear)

V10 Vibration Seat ECU LH
V11 Vibration Seat ECU RH
V12 Vibrator LH
V13 Vibrator RH