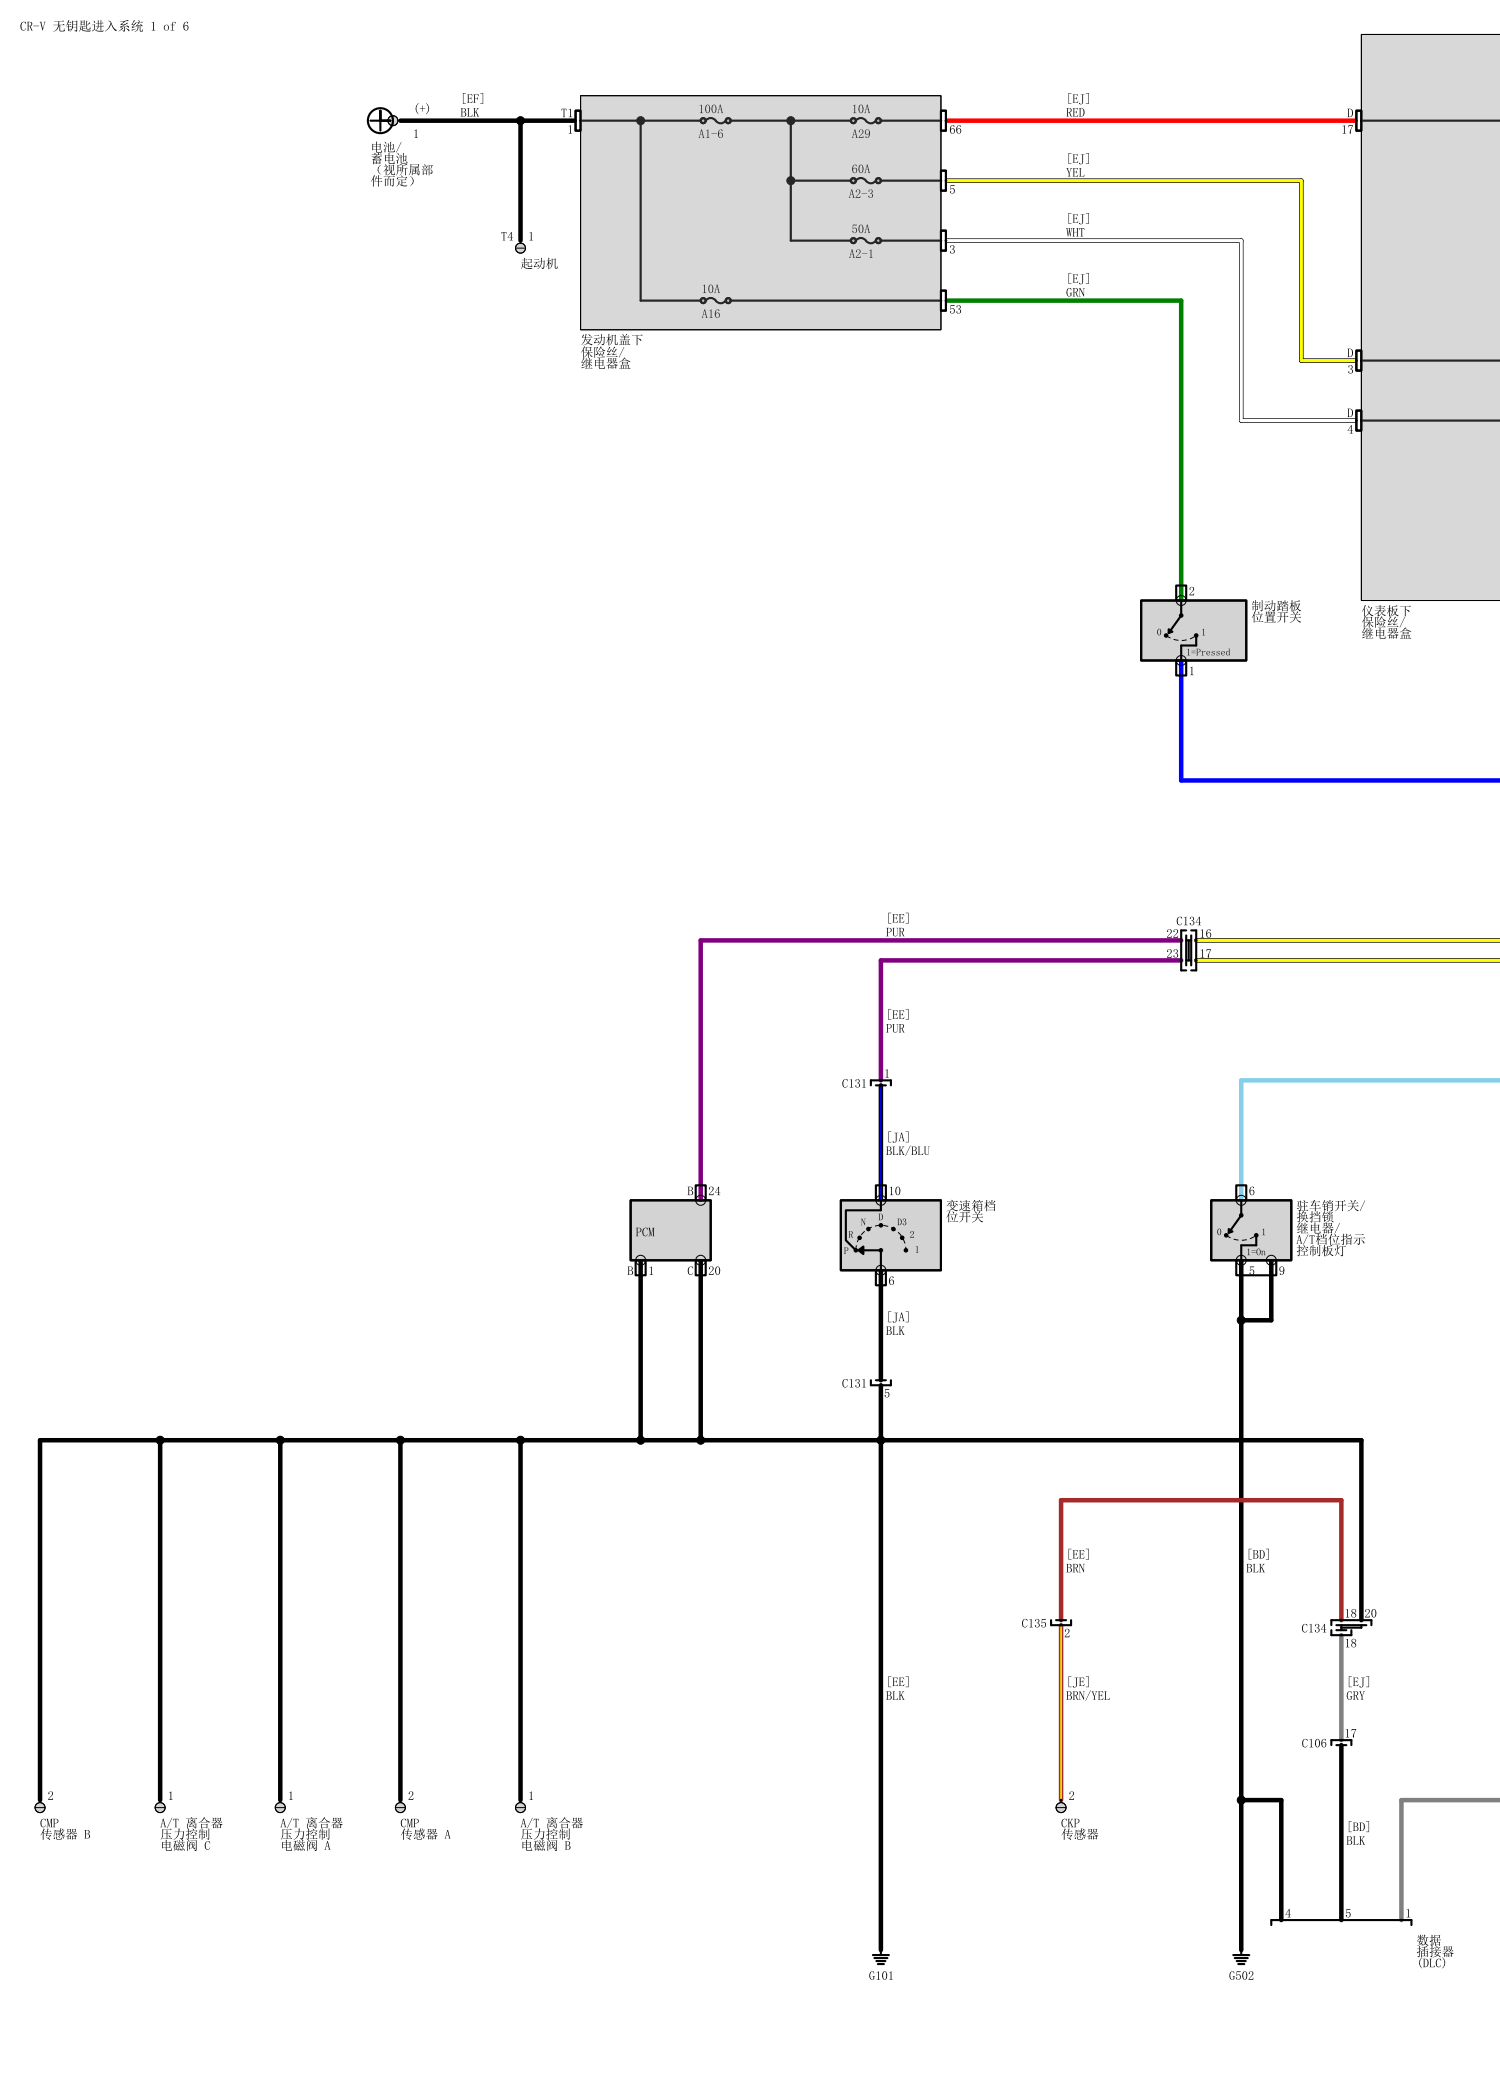
电池/
蓄电池
（视所属部
件而定）
(+)
[EF]
BLK
T1
1
T4
起动机
100A
A1-6
10A
A29
60A
A2-3
50A
A2-1
10A
A16
发动机盖下
保险丝/
继电器盒
[EJ]
RED
[EJ]
YEL
[EJ]
WHT
[EJ]
GRN
66
5
3
53
D
17
3
4
制动踏板
位置开关
1=Pressed
仪表板下
保险丝/
继电器盒
[EE]
PUR
C134
22
23
16
17
C131
[JA]
BLK/BLU
B
24
PCM
B
1
C
20
10
变速箱档
位开关
N
D
D3
2
1
R
P
6
[JA]
BLK
C131
5
6
驻车销开关/
换档锁
继电器/
A/T档位指示
控制板灯
1=On
5
9
[EE]
BRN
C135
2
[JE]
BRN/YEL
[BD]
BLK
C134
18
20
18
[EJ]
GRY
C106
17
[BD]
BLK
[EE]
BLK
2
CMP
传感器 B
1
A/T 离合器
压力控制
电磁阀 C
1
A/T 离合器
压力控制
电磁阀 A
2
CMP
传感器 A
1
A/T 离合器
压力控制
电磁阀 B
2
CKP
传感器
G101
G502
4
5
1
数据
插接器
(DLC)

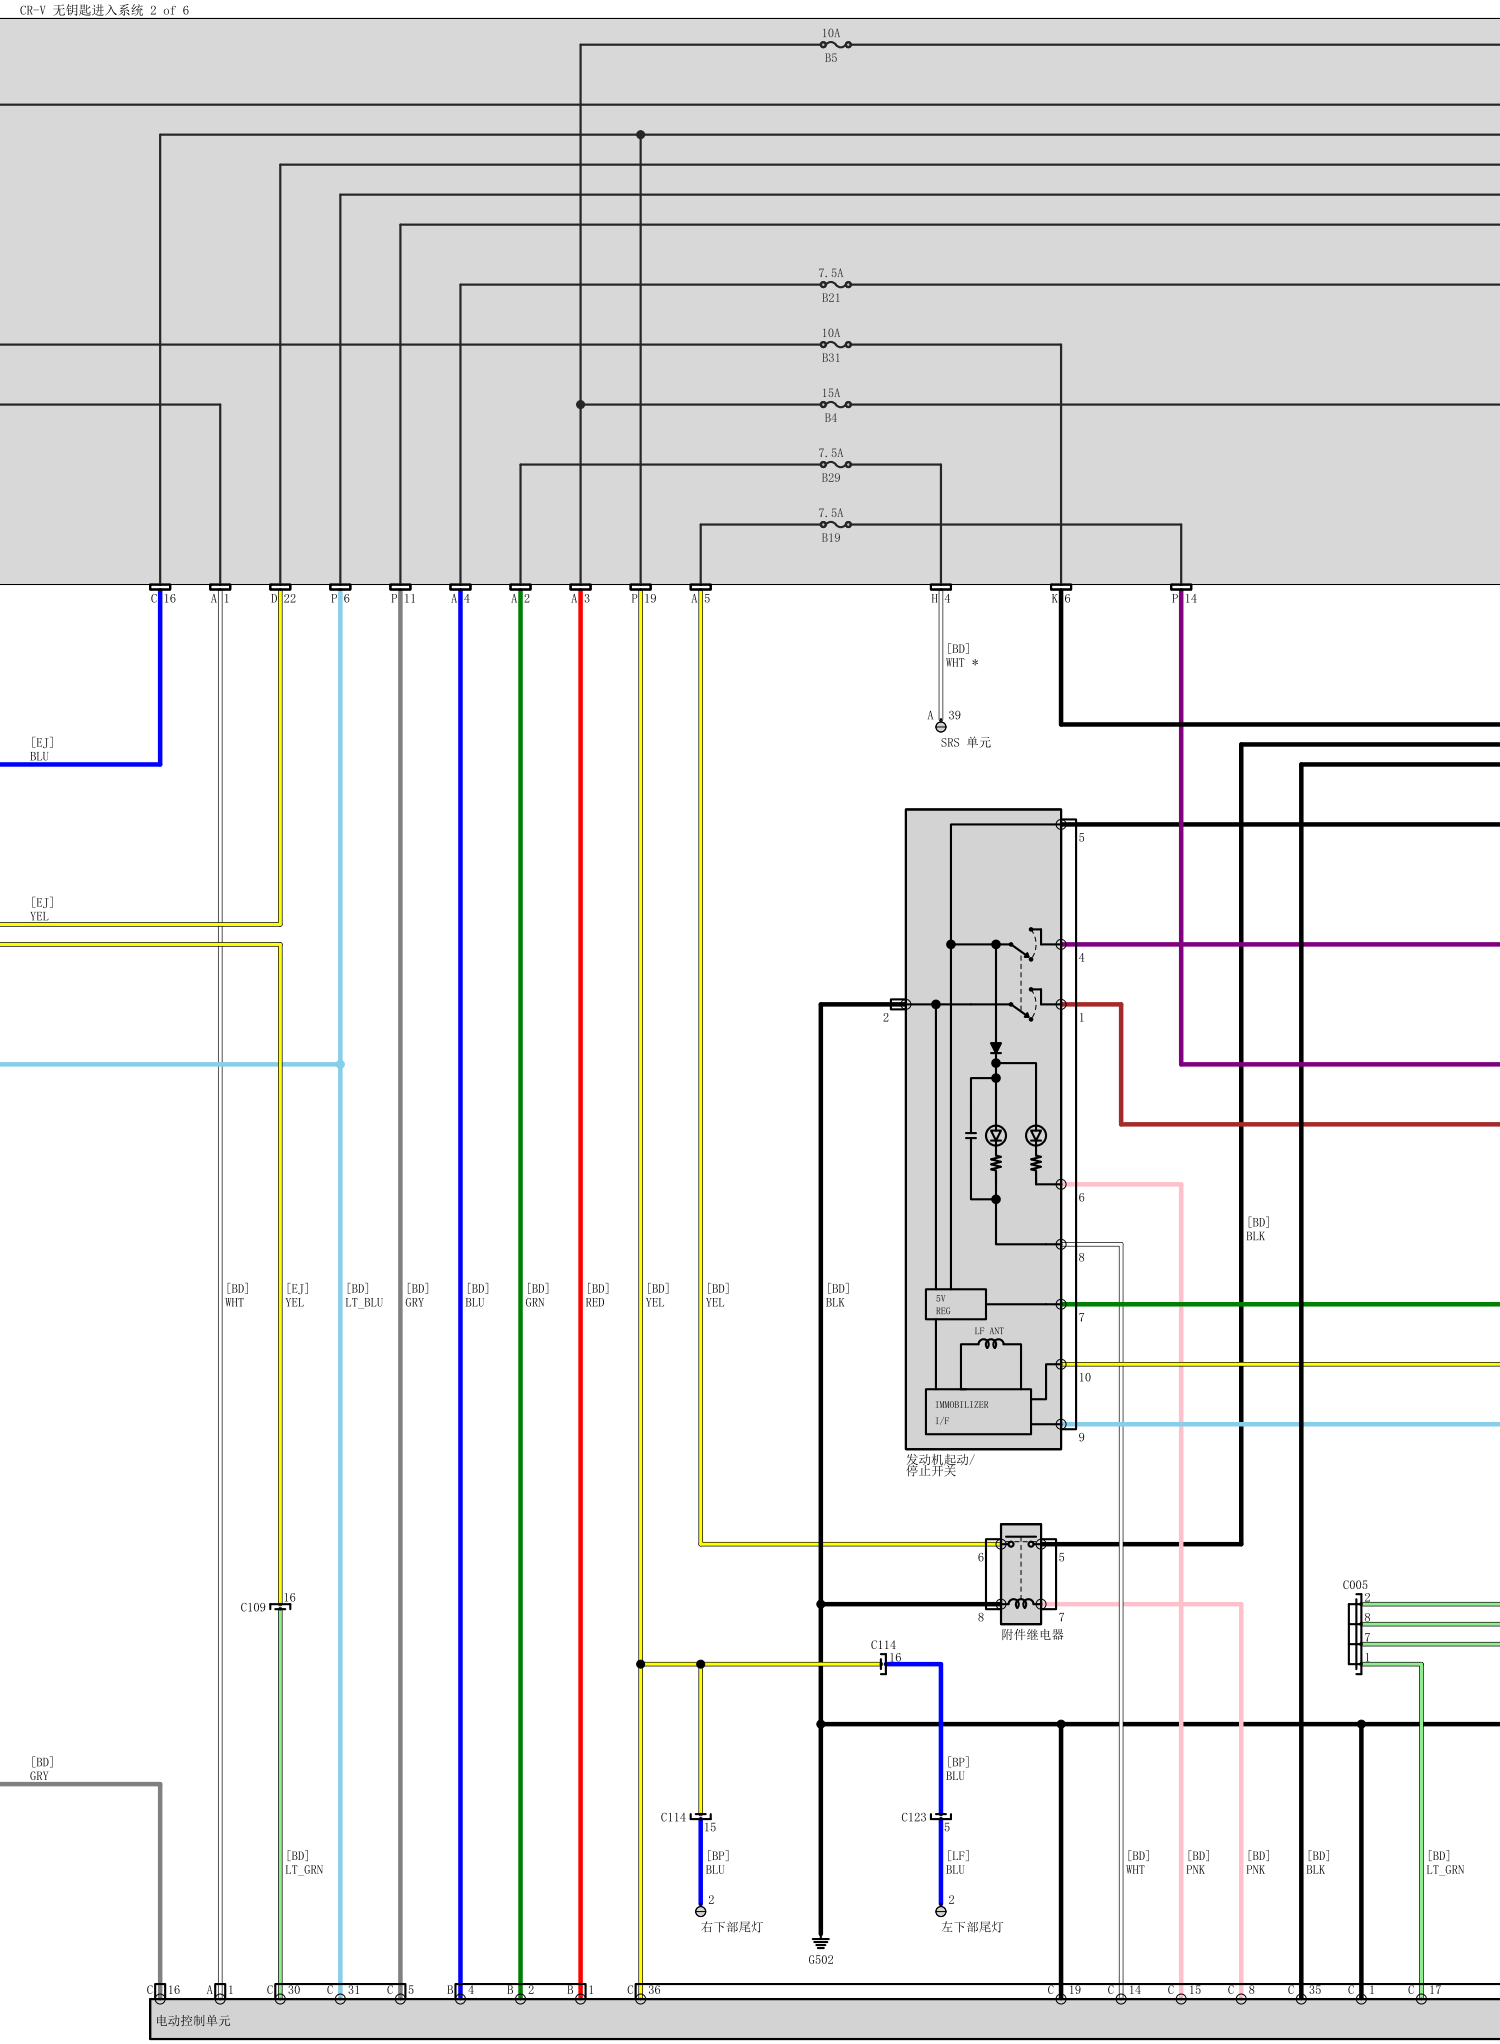
10A
B5
7.5A
B21
10A
B31
15A
B4
7.5A
B29
7.5A
B19
C 16
A 1
D 22
F 6
P 11
A 4
A 2
A 3
P 19
A 5
H 4
K 6
P 14
[BD]
WHT *
A 39
SRS 单元
[EJ]
BLU
[EJ]
YEL
[BD]
WHT
[EJ]
YEL
[BD]
LT_BLU
[BD]
GRY
[BD]
BLU
[BD]
GRN
[BD]
RED
[BD]
YEL
[BD]
YEL
[BD]
BLK
[BD]
BLK
5V
REG
LF ANT
IMMOBILIZER
I/F
发动机起动/
停止开关
附件继电器
C109
16
C114
16
C005
[BD]
GRY
[BD]
LT_GRN
C114
15
[BP]
BLU
右下部尾灯
C123
5
[BP]
BLU
[LF]
BLU
左下部尾灯
G502
[BD]
WHT
[BD]
PNK
[BD]
PNK
[BD]
BLK
[BD]
LT_GRN
C 16
A 1
C 30
C 31
C 5
B 4
B 2
B 1
C 36
C 19
C 14
C 15
C 8
C 35
C 1
C 17
电动控制单元

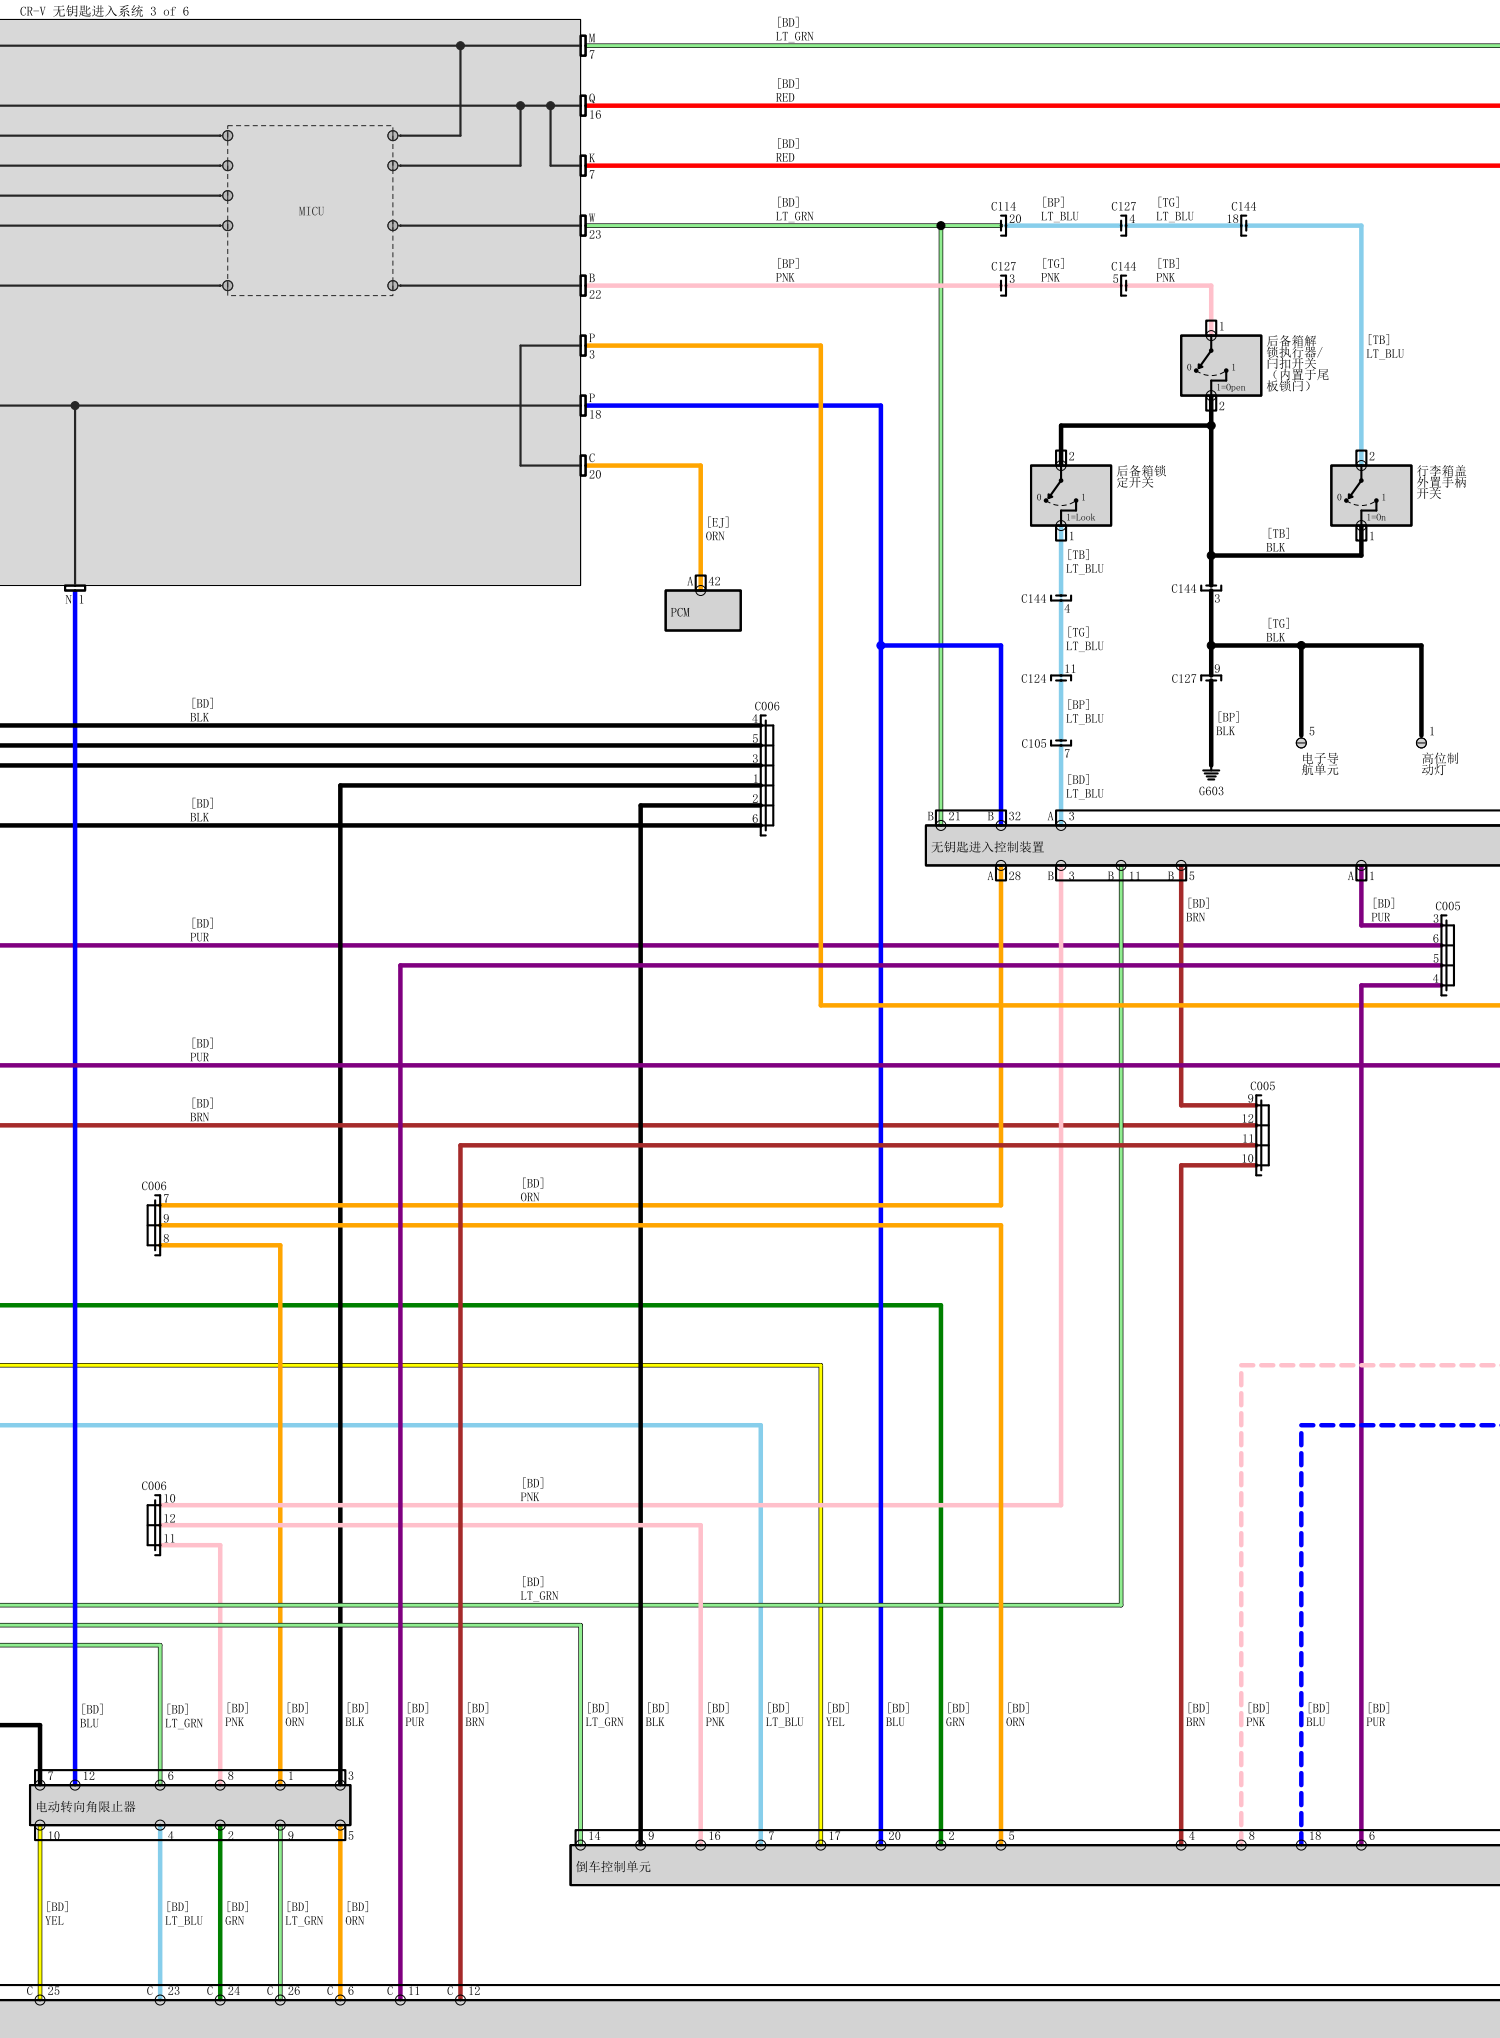
MICU
M 7
Q 16
K 7
W 23
B 22
P 3
P 18
C 20
N 1
[BD] LT_GRN
[BD] RED
[BD] RED
[BD] LT_GRN
[BP] PNK
[EJ] ORN
A 42
PCM
C114 20
[BP] LT_BLU
C127 4
[TG] LT_BLU
C144 18
C127 3
[TG] PNK
C144 5
[TB] PNK
后备箱解锁执行器/门扣开关（内置于尾板锁门）
[TB] LT_BLU
后备箱锁定开关
行李箱盖外置手柄开关
[TB] BLK
[TB] LT_BLU
C144 4
C144 3
[TG] LT_BLU
[TG] BLK
C124 11
C127 9
[BP] LT_BLU
[BP] BLK
C105 7
[BD] LT_BLU
G603
电子导航单元
高位制动灯
C006
[BD] BLK
[BD] BLK
[BD] PUR
[BD] PUR
[BD] BRN
C005
[BD] PUR
[BD] BRN
[BD] ORN
[BD] PNK
[BD] LT_GRN
无钥匙进入控制装置
B 21
B 32
A 3
A 28
B 3
B 11
B 15
A 11
电动转向角限止器
[BD] BLU
[BD] LT_GRN
[BD] PNK
[BD] ORN
[BD] BLK
[BD] PUR
[BD] BRN
[BD] LT_GRN
[BD] BLK
[BD] PNK
[BD] LT_BLU
[BD] YEL
[BD] BLU
[BD] GRN
[BD] ORN
[BD] BRN
[BD] PNK
[BD] BLU
[BD] PUR
倒车控制单元
[BD] YEL
[BD] LT_BLU
[BD] GRN
[BD] LT_GRN
[BD] ORN
C 25
C 23
C 24
C 26
C 6
C 11
C 12

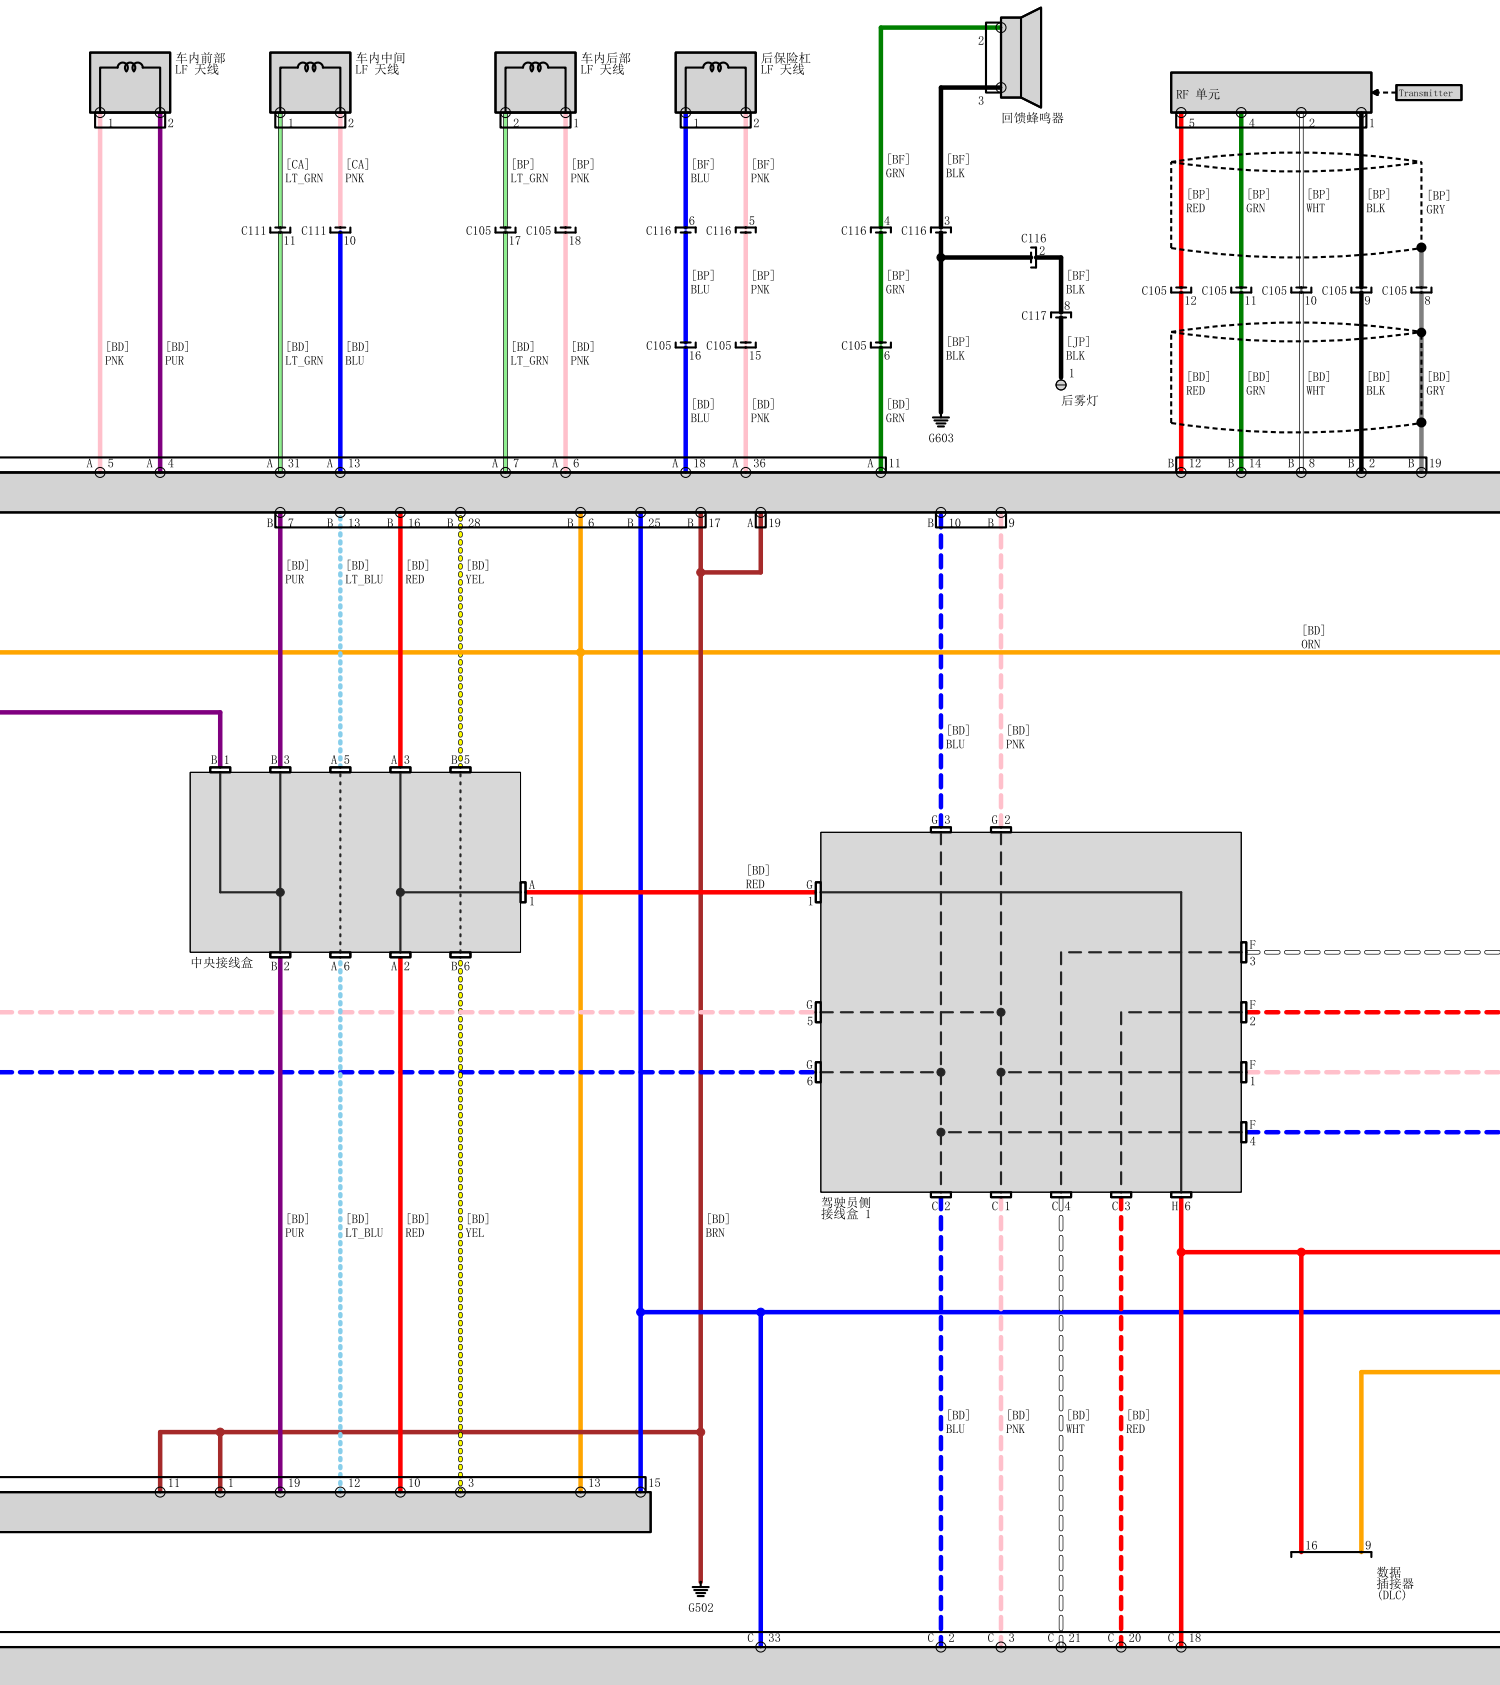
车内前部
LF 天线
车内中间
LF 天线
车内后部
LF 天线
后保险杠
LF 天线
回馈蜂鸣器
RF 单元
Transmitter
后雾灯
G603
中央接线盒
驾驶员侧
接线盒 1
G502
数据
插接器
(DLC)

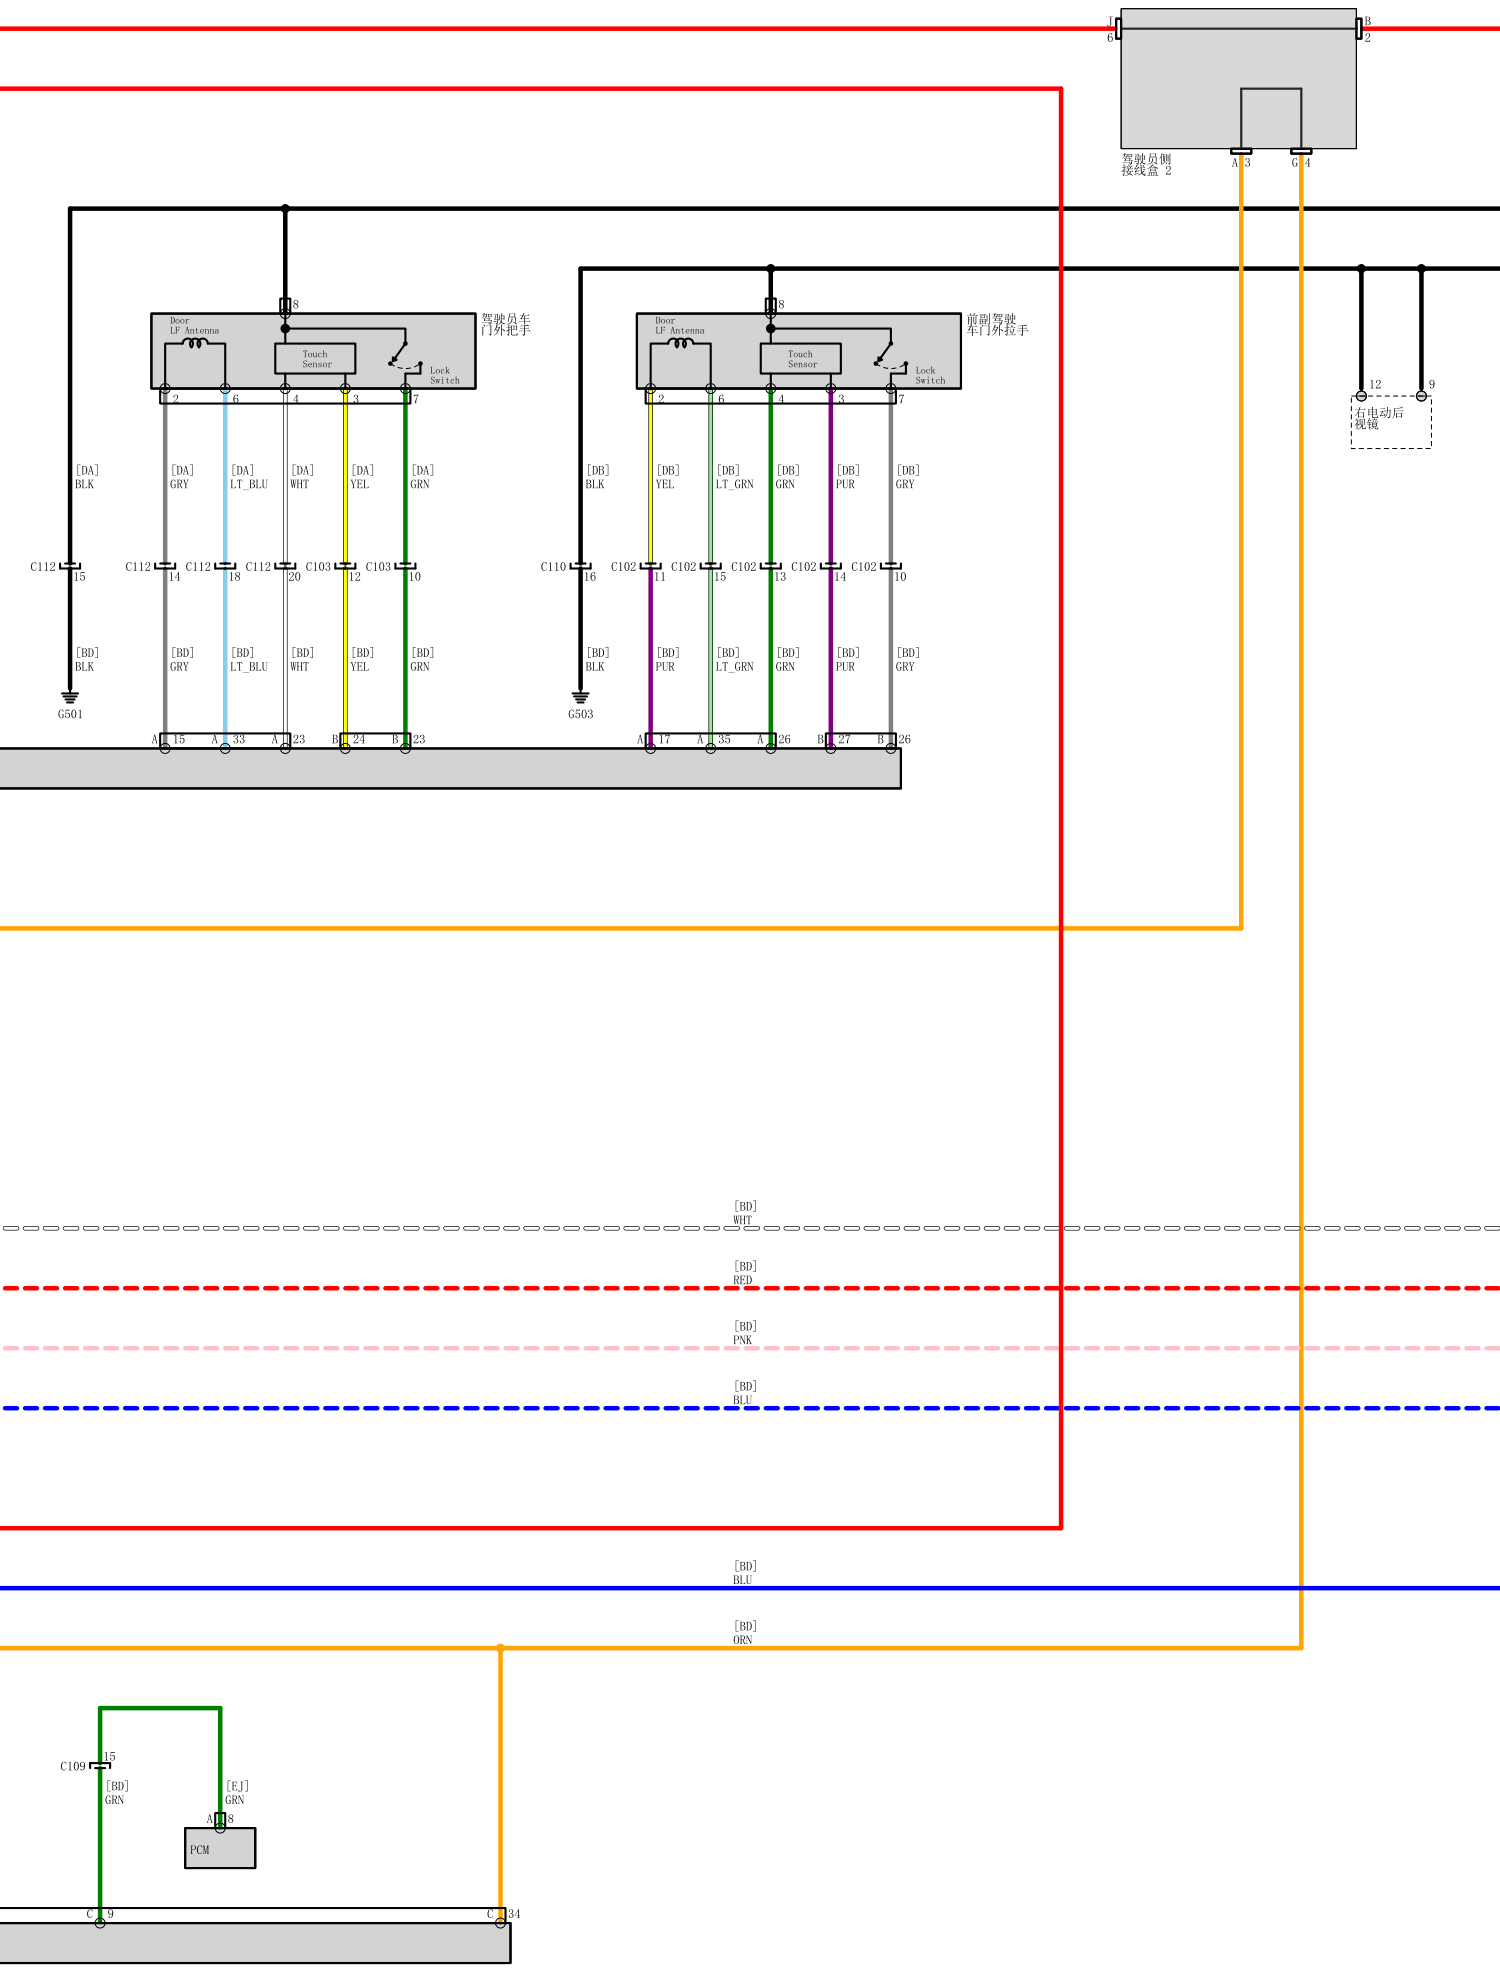
驾驶员侧
接线盒 2
A 3
G 4
驾驶员车
门外把手
Door
LF Antenna
Touch
Sensor
Lock
Switch
前副驾驶
车门外拉手
右电动后
视镜
[DA]
BLK
[DA]
GRY
[DA]
LT_BLU
[DA]
WHT
[DA]
YEL
[DA]
GRN
[DB]
BLK
[DB]
YEL
[DB]
LT_GRN
[DB]
GRN
[DB]
PUR
[DB]
GRY
C112
C103
C110
C102
G501
G503
[BD]
WHT
[BD]
RED
[BD]
PNK
[BD]
BLU
[BD]
ORN
C109
[BD]
GRN
[EJ]
GRN
PCM

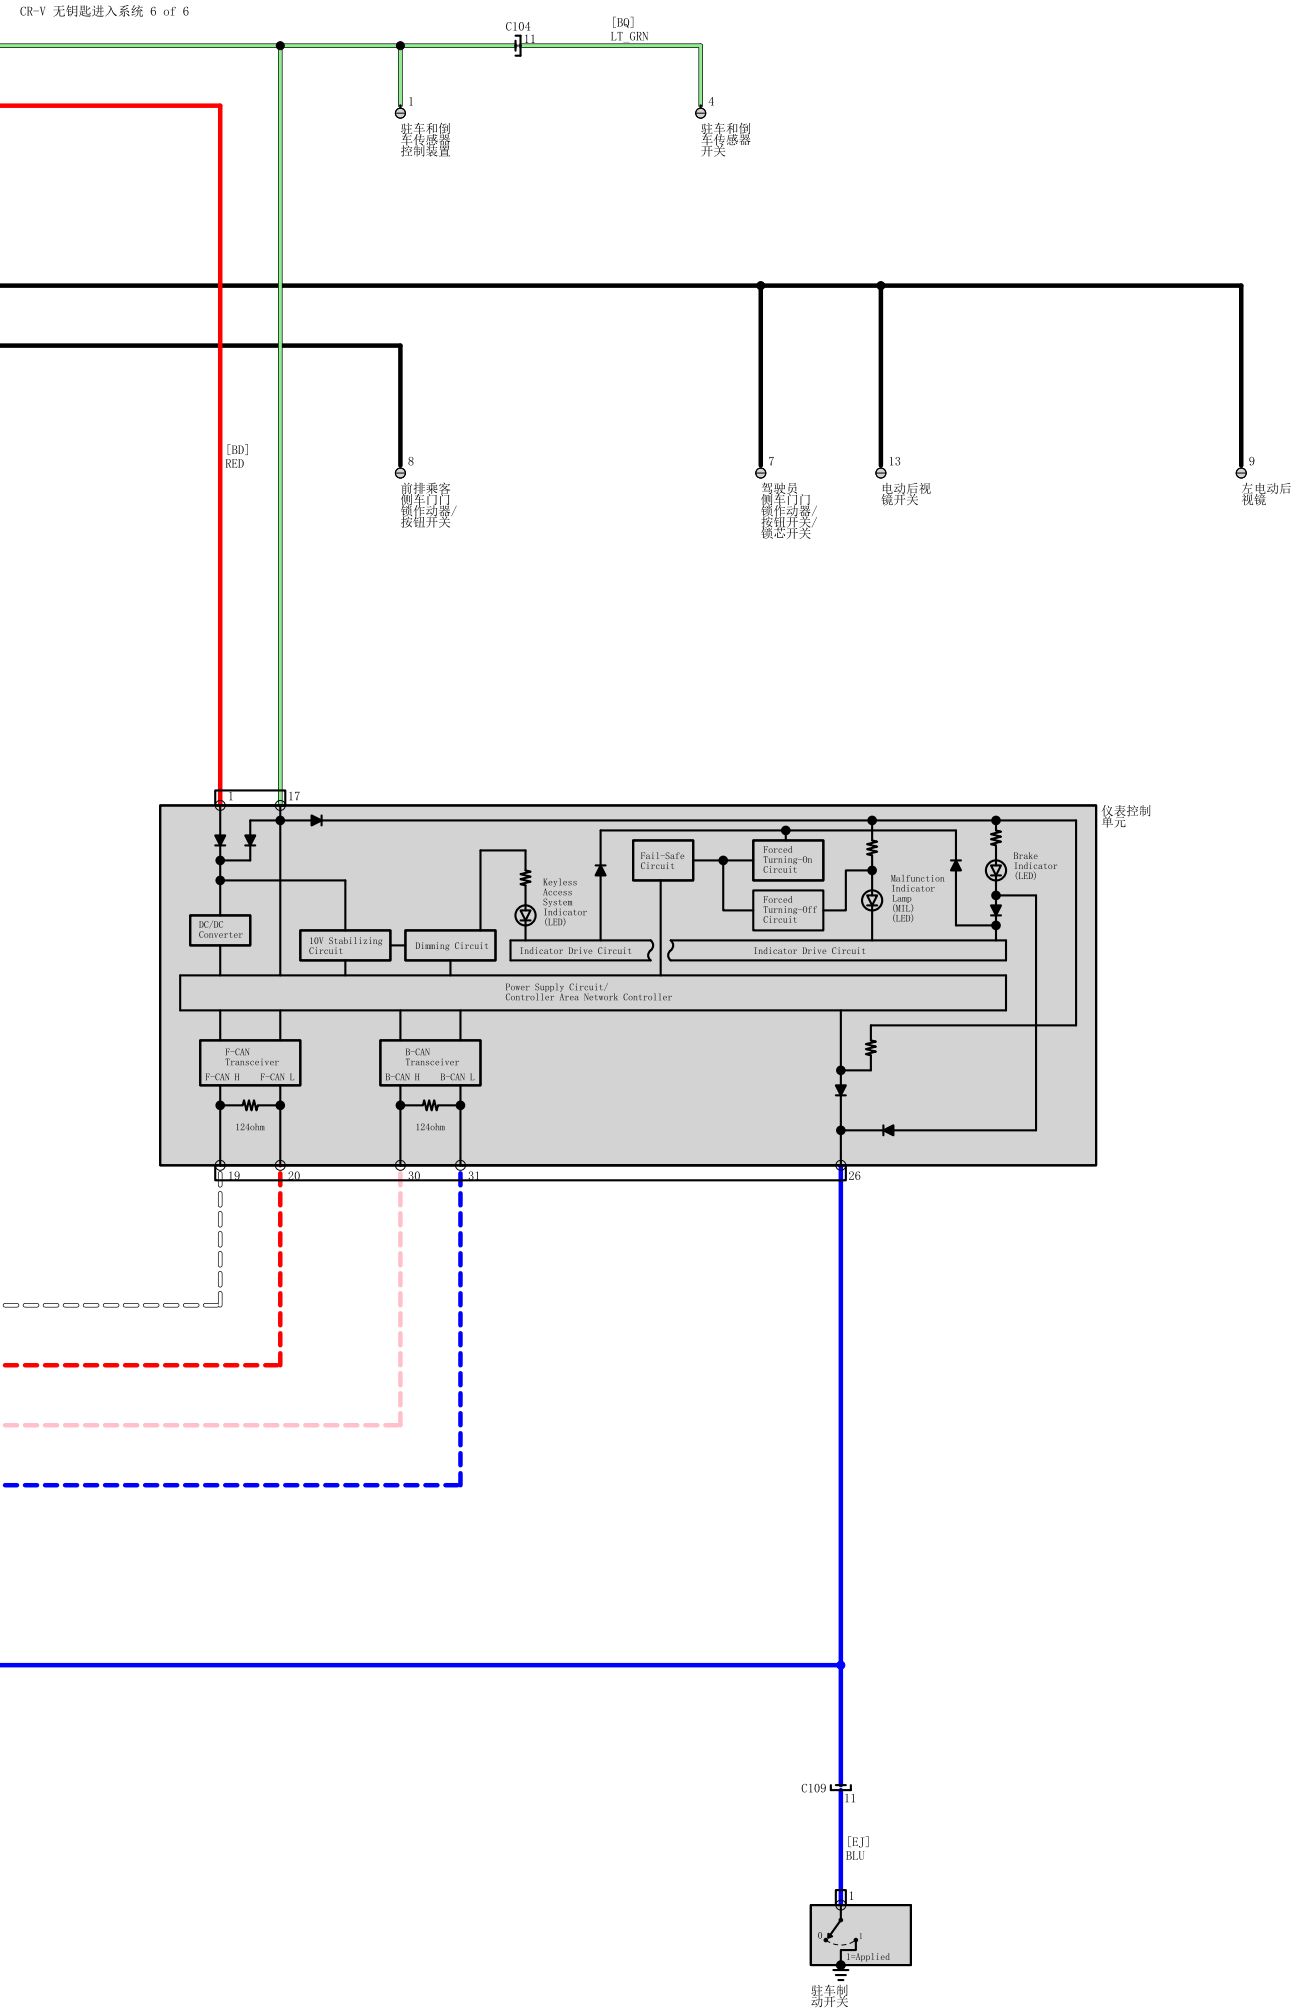
C104
11
[BQ]
LT GRN
1
驻车和倒车传感器控制装置
4
驻车和倒车传感器开关
[BD]
RED
8
前排乘客侧车门门锁作动器/按钮开关
7
驾驶员侧车门门锁作动器/按钮开关/锁芯开关
13
电动后视镜开关
9
左电动后视镜
1
17
仪表控制单元
DC/DC Converter
10V Stabilizing Circuit
Dimming Circuit
Keyless Access System Indicator (LED)
Indicator Drive Circuit
Fail-Safe Circuit
Forced Turning-On Circuit
Forced Turning-Off Circuit
Malfunction Indicator Lamp (MIL) (LED)
Brake Indicator (LED)
Indicator Drive Circuit
Power Supply Circuit/ Controller Area Network Controller
F-CAN Transceiver
F-CAN H
F-CAN L
B-CAN Transceiver
B-CAN H
B-CAN L
124ohm
124ohm
19
20
30
31
26
C109
11
[EJ]
BLU
1
0
1
1=Applied
驻车制动开关