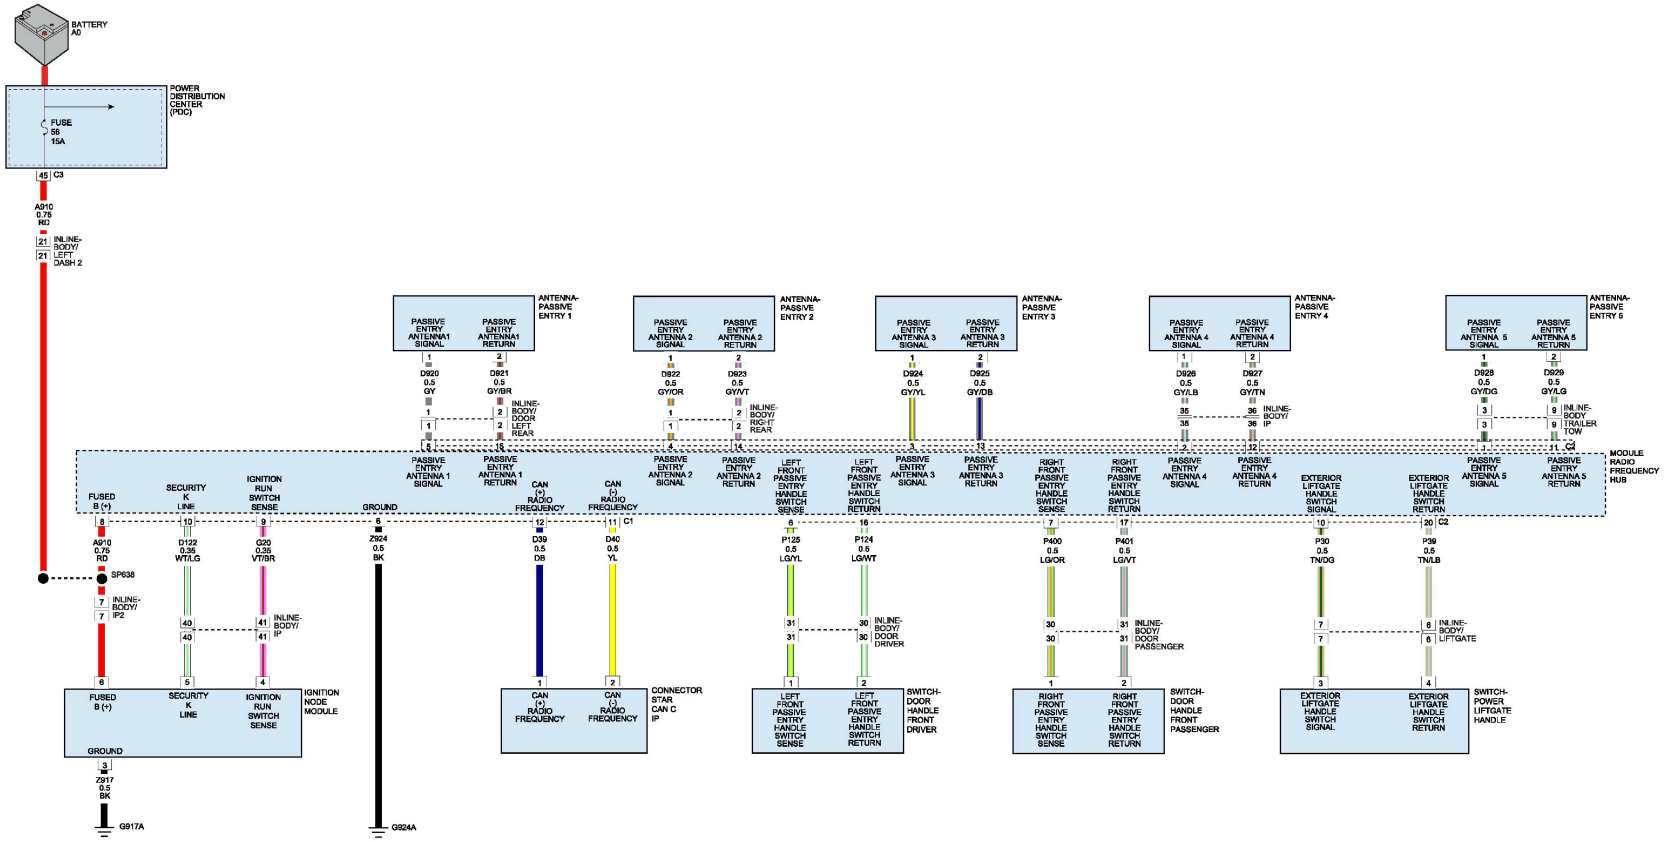
BATTERY
A0
POWER DISTRIBUTION CENTER (PDC)
FUSE 55 15A
45 C3
A910 0.75 RD
21 INLINE-BODY/ LEFT DASH 2
ANTENNA-PASSIVE ENTRY 1
PASSIVE ENTRY ANTENNA1 SIGNAL
PASSIVE ENTRY ANTENNA1 RETURN
D920 0.5 GY
D921 0.5 GY/BR
INLINE-BODY/ DOOR LEFT REAR
ANTENNA-PASSIVE ENTRY 2
PASSIVE ENTRY ANTENNA 2 SIGNAL
PASSIVE ENTRY ANTENNA 2 RETURN
D922 0.5 GY/OR
D923 0.5 GY/VT
INLINE-BODY/ RIGHT REAR
ANTENNA-PASSIVE ENTRY 3
PASSIVE ENTRY ANTENNA 3 SIGNAL
PASSIVE ENTRY ANTENNA 3 RETURN
D924 0.5 GY/YL
D925 0.5 GY/DB
ANTENNA-PASSIVE ENTRY 4
PASSIVE ENTRY ANTENNA 4 SIGNAL
PASSIVE ENTRY ANTENNA 4 RETURN
D926 0.5 GY/LB
D927 0.5 GY/TN
INLINE-BODY/ IP
ANTENNA-PASSIVE ENTRY 5
PASSIVE ENTRY ANTENNA 5 SIGNAL
PASSIVE ENTRY ANTENNA 5 RETURN
D928 0.5 GY/DG
D929 0.5 GY/LG
INLINE-BODY TRAILER TOW
C2
MODULE RADIO FREQUENCY HUB
FUSED B (+)
SECURITY K LINE
IGNITION RUN SWITCH SENSE
GROUND
CAN (+) RADIO FREQUENCY
CAN (-) RADIO FREQUENCY
PASSIVE ENTRY ANTENNA 1 SIGNAL
PASSIVE ENTRY ANTENNA 1 RETURN
PASSIVE ENTRY ANTENNA 2 SIGNAL
PASSIVE ENTRY ANTENNA 2 RETURN
LEFT FRONT PASSIVE ENTRY HANDLE SWITCH SENSE
LEFT FRONT PASSIVE ENTRY HANDLE SWITCH RETURN
PASSIVE ENTRY ANTENNA 3 SIGNAL
PASSIVE ENTRY ANTENNA 3 RETURN
RIGHT FRONT PASSIVE ENTRY HANDLE SWITCH SENSE
RIGHT FRONT PASSIVE ENTRY HANDLE SWITCH RETURN
PASSIVE ENTRY ANTENNA 4 SIGNAL
PASSIVE ENTRY ANTENNA 4 RETURN
EXTERIOR LIFTGATE HANDLE SWITCH SIGNAL
EXTERIOR LIFTGATE HANDLE SWITCH RETURN
PASSIVE ENTRY ANTENNA 5 SIGNAL
PASSIVE ENTRY ANTENNA 5 RETURN
C1
A910 0.75 RD
SP638
INLINE-BODY/ IP2
D122 0.35 WT/LG
G20 0.35 VT/BR
INLINE-BODY/ IP
Z924 0.5 BK
D39 0.5 DB
D40 0.5 YL
P125 0.5 LG/YL
P124 0.5 LG/WT
INLINE-BODY/ DOOR DRIVER
P400 0.5 LG/OR
P401 0.5 LG/VT
INLINE-BODY/ DOOR PASSENGER
P30 0.5 TN/DG
P39 0.5 TN/LB
INLINE-BODY/ LIFTGATE
FUSED B (+)
SECURITY K LINE
IGNITION RUN SWITCH SENSE
IGNITION NODE MODULE
GROUND
Z917 0.5 BK
G917A
G924A
CAN (+) RADIO FREQUENCY
CAN (-) RADIO FREQUENCY
CONNECTOR STAR CAN C IP
LEFT FRONT PASSIVE ENTRY HANDLE SWITCH SENSE
LEFT FRONT PASSIVE ENTRY HANDLE SWITCH RETURN
SWITCH-DOOR HANDLE FRONT DRIVER
RIGHT FRONT PASSIVE ENTRY HANDLE SWITCH SENSE
RIGHT FRONT PASSIVE ENTRY HANDLE SWITCH RETURN
SWITCH-DOOR HANDLE FRONT PASSENGER
EXTERIOR LIFTGATE HANDLE SWITCH SIGNAL
EXTERIOR LIFTGATE HANDLE SWITCH RETURN
SWITCH-POWER LIFTGATE HANDLE