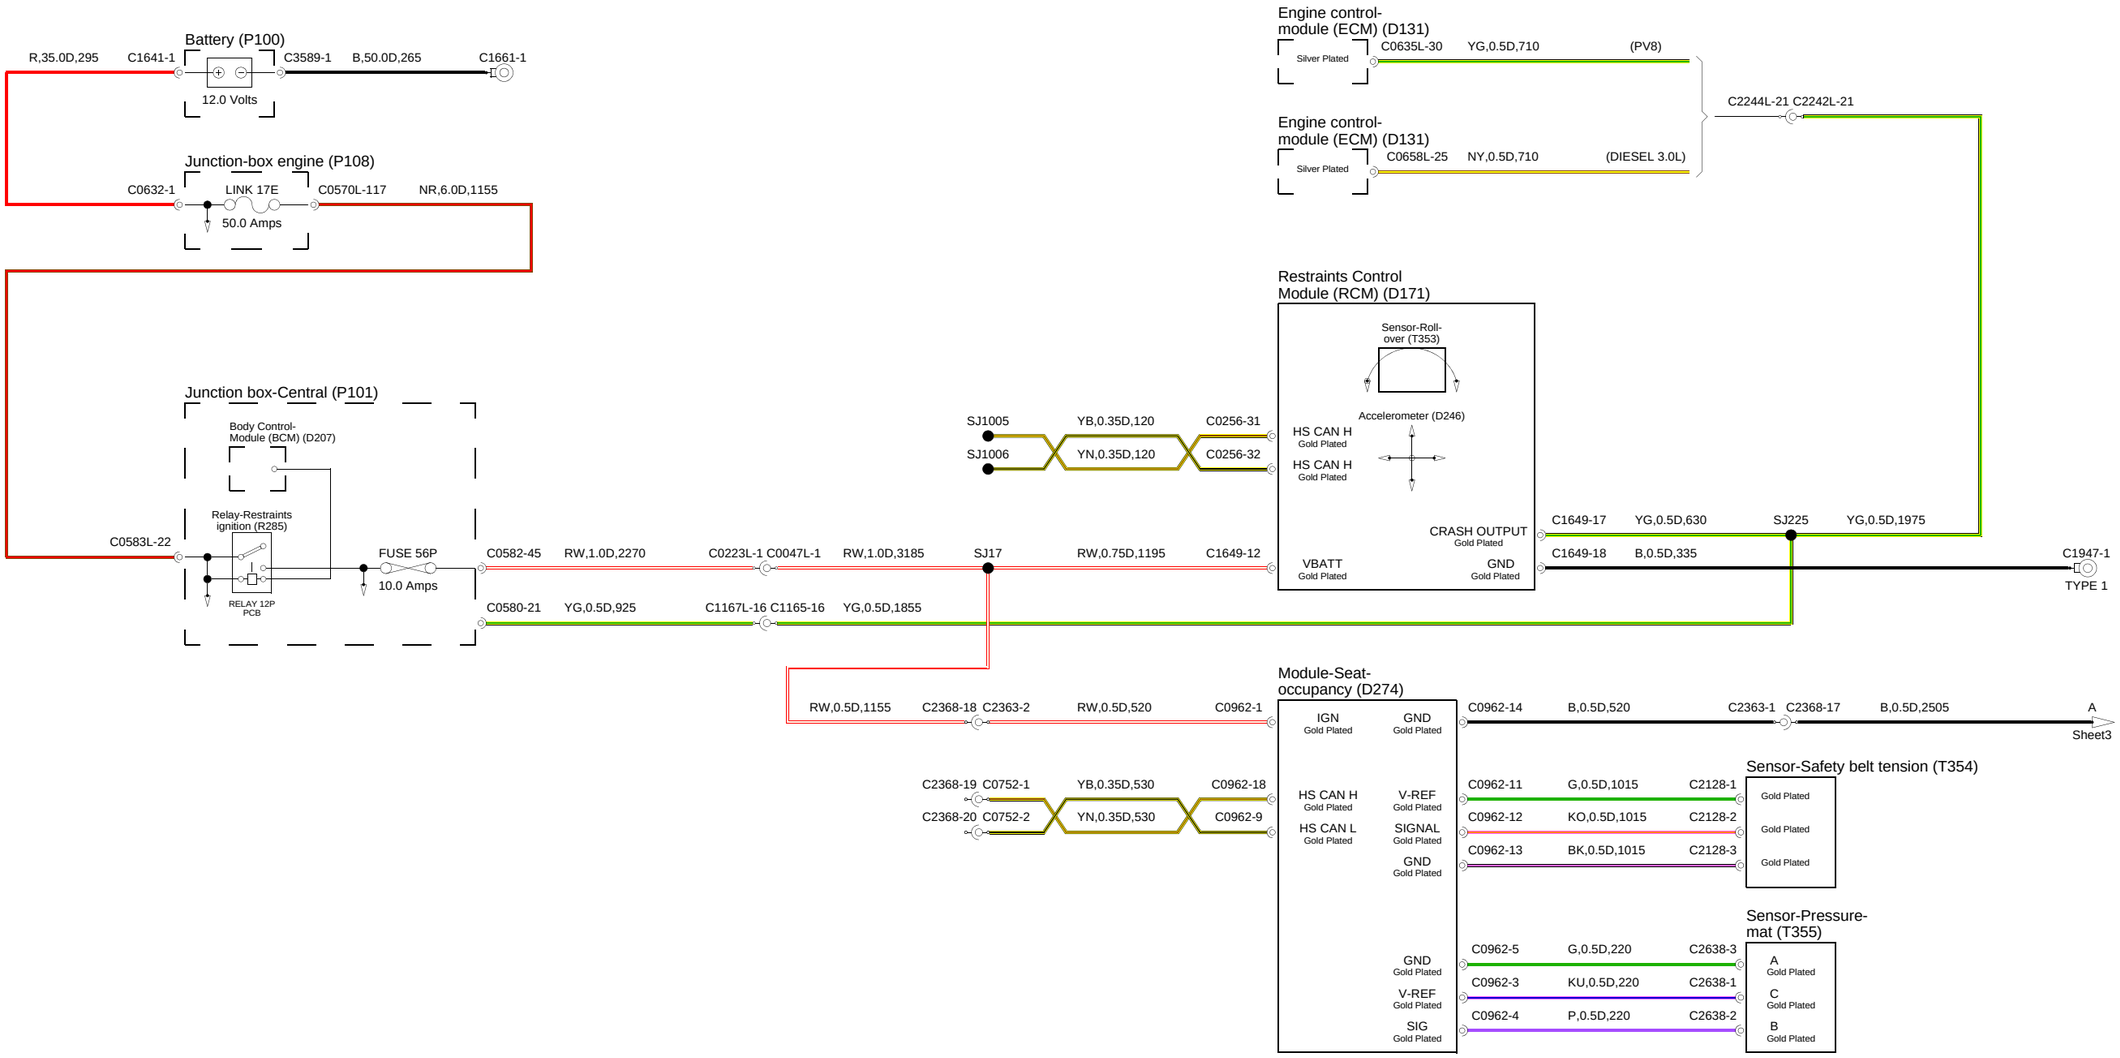
Battery (P100)
R,35.0D,295
C1641-1
C3589-1
B,50.0D,265
C1661-1
12.0 Volts
Junction-box engine (P108)
C0632-1
LINK 17E
C0570L-117
NR,6.0D,1155
50.0 Amps
Engine control-module (ECM) (D131)
Silver Plated
C0635L-30
YG,0.5D,710
(PV8)
Engine control-module (ECM) (D131)
Silver Plated
C0658L-25
NY,0.5D,710
(DIESEL 3.0L)
C2244L-21 C2242L-21
Restraints Control Module (RCM) (D171)
Sensor-Roll-over (T353)
Accelerometer (D246)
HS CAN H
Gold Plated
HS CAN H
Gold Plated
CRASH OUTPUT
Gold Plated
VBATT
Gold Plated
GND
Gold Plated
Junction box-Central (P101)
Body Control-Module (BCM) (D207)
Relay-Restraints ignition (R285)
RELAY 12P PCB
C0583L-22
FUSE 56P
10.0 Amps
C0582-45
RW,1.0D,2270
C0223L-1 C0047L-1
RW,1.0D,3185
SJ17
RW,0.75D,1195
C1649-12
C0580-21
YG,0.5D,925
C1167L-16 C1165-16
YG,0.5D,1855
SJ1005
SJ1006
YB,0.35D,120
YN,0.35D,120
C0256-31
C0256-32
C1649-17
YG,0.5D,630
SJ225
YG,0.5D,1975
C1649-18
B,0.5D,335
C1947-1
TYPE 1
Module-Seat-occupancy (D274)
RW,0.5D,1155
C2368-18 C2363-2
RW,0.5D,520
C0962-1
IGN
Gold Plated
GND
Gold Plated
C0962-14
B,0.5D,520
C2363-1 C2368-17
B,0.5D,2505
A
Sheet3
C2368-19 C0752-1
C2368-20 C0752-2
YB,0.35D,530
YN,0.35D,530
C0962-18
C0962-9
HS CAN H
Gold Plated
HS CAN L
Gold Plated
V-REF
Gold Plated
SIGNAL
Gold Plated
GND
Gold Plated
C0962-11
G,0.5D,1015
C2128-1
C0962-12
KO,0.5D,1015
C2128-2
C0962-13
BK,0.5D,1015
C2128-3
Sensor-Safety belt tension (T354)
Gold Plated
Gold Plated
Gold Plated
Sensor-Pressure-mat (T355)
GND
Gold Plated
V-REF
Gold Plated
SIG
Gold Plated
C0962-5
G,0.5D,220
C2638-3
C0962-3
KU,0.5D,220
C2638-1
C0962-4
P,0.5D,220
C2638-2
A
Gold Plated
C
Gold Plated
B
Gold Plated

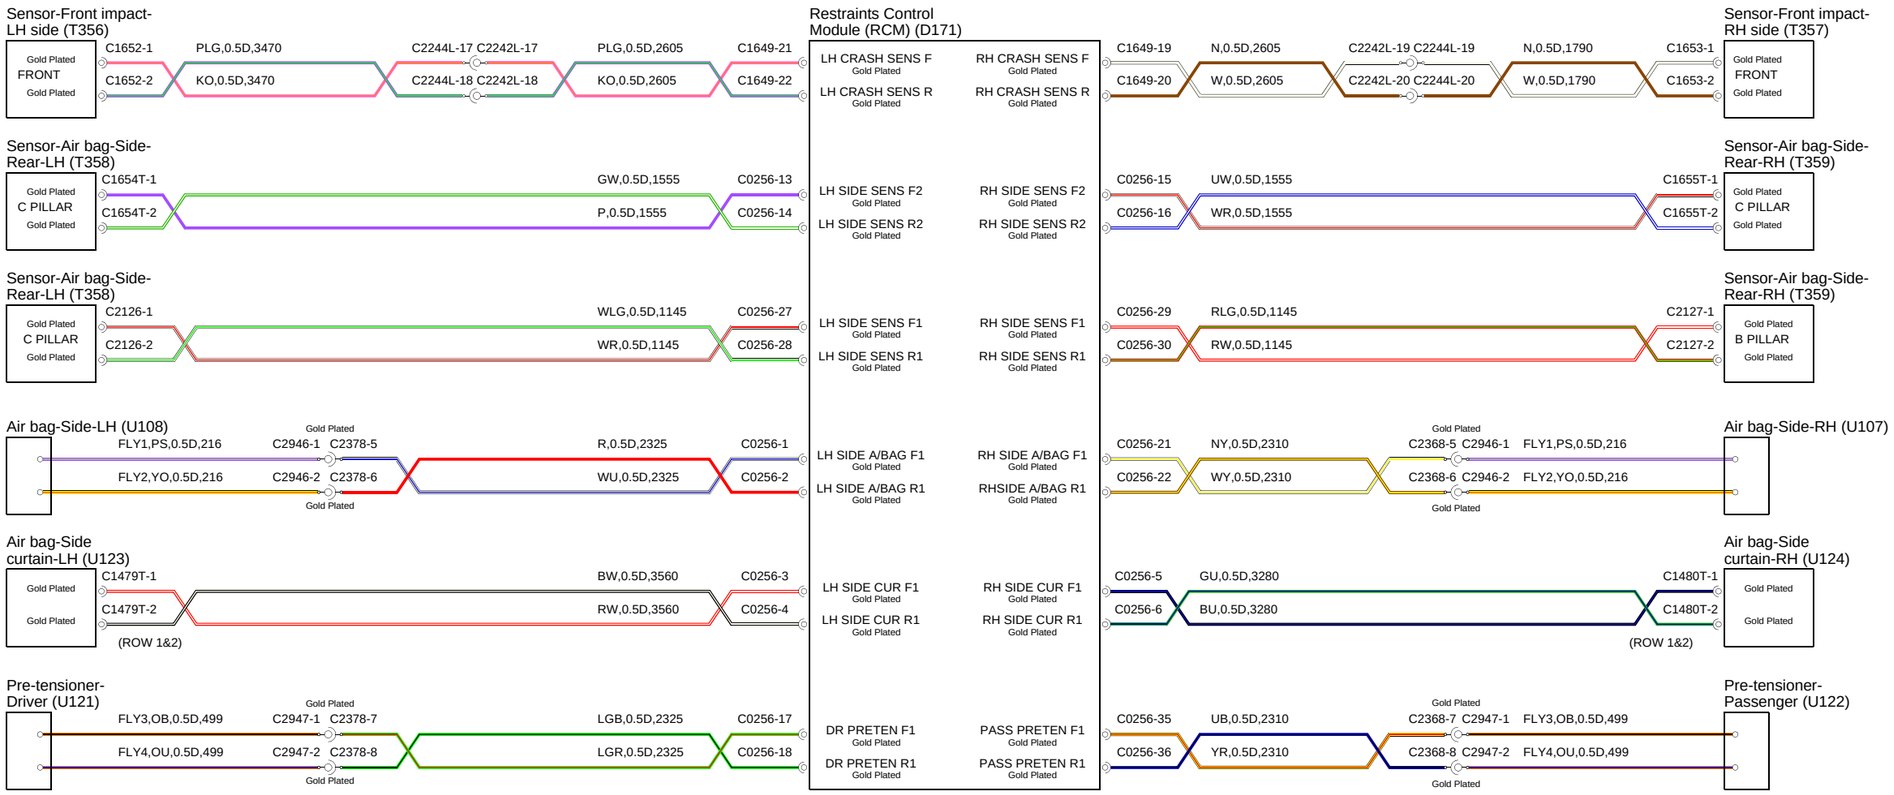
Sensor-Front impact-LH side (T356)
Gold Plated
FRONT
Gold Plated
C1652-1
C1652-2
PLG,0.5D,3470
KO,0.5D,3470
C2244L-17 C2242L-17
C2244L-18 C2242L-18
PLG,0.5D,2605
KO,0.5D,2605
C1649-21
C1649-22
Restraints Control Module (RCM) (D171)
LH CRASH SENS F
LH CRASH SENS R
RH CRASH SENS F
RH CRASH SENS R
C1649-19
C1649-20
N,0.5D,2605
W,0.5D,2605
C2242L-19 C2244L-19
C2242L-20 C2244L-20
N,0.5D,1790
W,0.5D,1790
C1653-1
C1653-2
Sensor-Front impact-RH side (T357)
Sensor-Air bag-Side-Rear-LH (T358)
C1654T-1
C1654T-2
GW,0.5D,1555
P,0.5D,1555
C0256-13
C0256-14
LH SIDE SENS F2
LH SIDE SENS R2
RH SIDE SENS F2
RH SIDE SENS R2
C0256-15
C0256-16
UW,0.5D,1555
WR,0.5D,1555
C1655T-1
C1655T-2
Sensor-Air bag-Side-Rear-RH (T359)
Sensor-Air bag-Side-Rear-LH (T358)
C2126-1
C2126-2
WLG,0.5D,1145
WR,0.5D,1145
C0256-27
C0256-28
LH SIDE SENS F1
LH SIDE SENS R1
RH SIDE SENS F1
RH SIDE SENS R1
C0256-29
C0256-30
RLG,0.5D,1145
RW,0.5D,1145
C2127-1
C2127-2
Sensor-Air bag-Side-Rear-RH (T359)
Air bag-Side-LH (U108)
FLY1,PS,0.5D,216
FLY2,YO,0.5D,216
C2946-1 C2378-5
C2946-2 C2378-6
R,0.5D,2325
WU,0.5D,2325
C0256-1
C0256-2
LH SIDE A/BAG F1
LH SIDE A/BAG R1
RH SIDE A/BAG F1
RHSIDE A/BAG R1
C0256-21
C0256-22
NY,0.5D,2310
WY,0.5D,2310
C2368-5 C2946-1
C2368-6 C2946-2
FLY1,PS,0.5D,216
FLY2,YO,0.5D,216
Air bag-Side-RH (U107)
Air bag-Side curtain-LH (U123)
C1479T-1
C1479T-2
(ROW 1&2)
BW,0.5D,3560
RW,0.5D,3560
C0256-3
C0256-4
LH SIDE CUR F1
LH SIDE CUR R1
RH SIDE CUR F1
RH SIDE CUR R1
C0256-5
C0256-6
GU,0.5D,3280
BU,0.5D,3280
C1480T-1
C1480T-2
(ROW 1&2)
Air bag-Side curtain-RH (U124)
Pre-tensioner-Driver (U121)
FLY3,OB,0.5D,499
FLY4,OU,0.5D,499
C2947-1 C2378-7
C2947-2 C2378-8
LGB,0.5D,2325
LGR,0.5D,2325
C0256-17
C0256-18
DR PRETEN F1
DR PRETEN R1
PASS PRETEN F1
PASS PRETEN R1
C0256-35
C0256-36
UB,0.5D,2310
YR,0.5D,2310
C2368-7 C2947-1
C2368-8 C2947-2
FLY3,OB,0.5D,499
FLY4,OU,0.5D,499
Pre-tensioner-Passenger (U122)

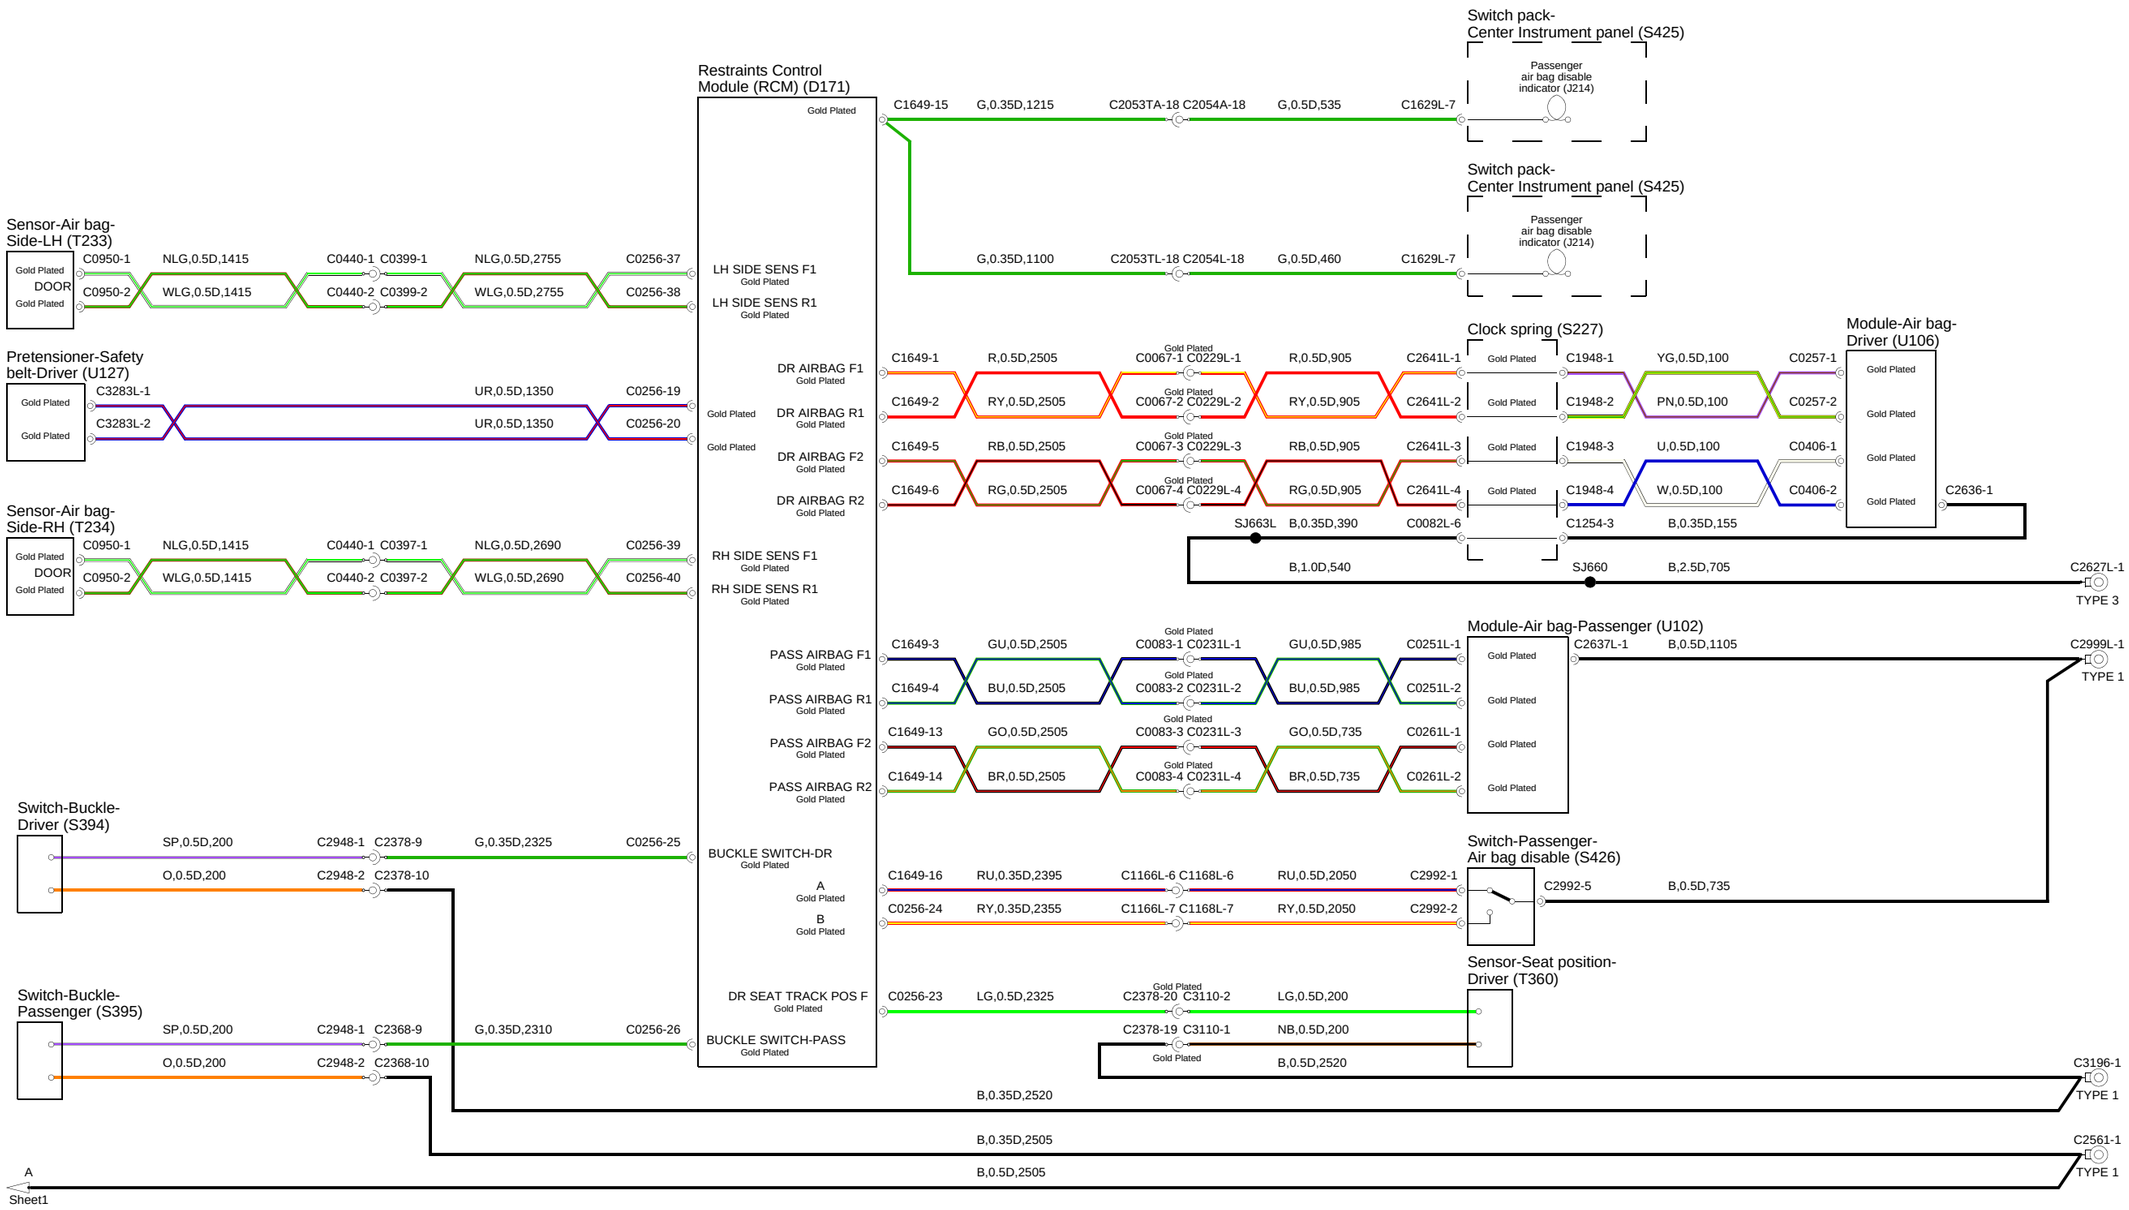
Restraints Control Module (RCM) (D171)
Switch pack-Center Instrument panel (S425)
Passenger air bag disable indicator (J214)
C1649-15 G,0.35D,1215 C2053TA-18 C2054A-18 G,0.5D,535 C1629L-7
G,0.35D,1100 C2053TL-18 C2054L-18 G,0.5D,460 C1629L-7
Sensor-Air bag-Side-LH (T233)
DOOR
C0950-1 NLG,0.5D,1415 C0440-1 C0399-1 NLG,0.5D,2755 C0256-37
C0950-2 WLG,0.5D,1415 C0440-2 C0399-2 WLG,0.5D,2755 C0256-38
LH SIDE SENS F1
LH SIDE SENS R1
Pretensioner-Safety belt-Driver (U127)
C3283L-1 UR,0.5D,1350 C0256-19
C3283L-2 UR,0.5D,1350 C0256-20
DR AIRBAG F1
DR AIRBAG R1
DR AIRBAG F2
DR AIRBAG R2
Clock spring (S227)
Module-Air bag-Driver (U106)
C1649-1 R,0.5D,2505 C0067-1 C0229L-1 R,0.5D,905 C2641L-1 C1948-1 YG,0.5D,100 C0257-1
C1649-2 RY,0.5D,2505 C0067-2 C0229L-2 RY,0.5D,905 C2641L-2 C1948-2 PN,0.5D,100 C0257-2
C1649-5 RB,0.5D,2505 C0067-3 C0229L-3 RB,0.5D,905 C2641L-3 C1948-3 U,0.5D,100 C0406-1
C1649-6 RG,0.5D,2505 C0067-4 C0229L-4 RG,0.5D,905 C2641L-4 C1948-4 W,0.5D,100 C0406-2
C2636-1
Sensor-Air bag-Side-RH (T234)
C0950-1 NLG,0.5D,1415 C0440-1 C0397-1 NLG,0.5D,2690 C0256-39
C0950-2 WLG,0.5D,1415 C0440-2 C0397-2 WLG,0.5D,2690 C0256-40
RH SIDE SENS F1
RH SIDE SENS R1
SJ663L B,0.35D,390 C0082L-6 C1254-3 B,0.35D,155
B,1.0D,540 SJ660 B,2.5D,705
C2627L-1
TYPE 3
Module-Air bag-Passenger (U102)
PASS AIRBAG F1
PASS AIRBAG R1
PASS AIRBAG F2
PASS AIRBAG R2
C1649-3 GU,0.5D,2505 C0083-1 C0231L-1 GU,0.5D,985 C0251L-1 C2637L-1 B,0.5D,1105 C2999L-1
C1649-4 BU,0.5D,2505 C0083-2 C0231L-2 BU,0.5D,985 C0251L-2
C1649-13 GO,0.5D,2505 C0083-3 C0231L-3 GO,0.5D,735 C0261L-1
C1649-14 BR,0.5D,2505 C0083-4 C0231L-4 BR,0.5D,735 C0261L-2
TYPE 1
Switch-Buckle-Driver (S394)
SP,0.5D,200 C2948-1 C2378-9 G,0.35D,2325 C0256-25
O,0.5D,200 C2948-2 C2378-10
BUCKLE SWITCH-DR
A
B
C1649-16 RU,0.35D,2395 C1166L-6 C1168L-6 RU,0.5D,2050 C2992-1
C0256-24 RY,0.35D,2355 C1166L-7 C1168L-7 RY,0.5D,2050 C2992-2
Switch-Passenger-Air bag disable (S426)
C2992-5 B,0.5D,735
Sensor-Seat position-Driver (T360)
DR SEAT TRACK POS F
C0256-23 LG,0.5D,2325 C2378-20 C3110-2 LG,0.5D,200
C2378-19 C3110-1 NB,0.5D,200
B,0.5D,2520
Switch-Buckle-Passenger (S395)
SP,0.5D,200 C2948-1 C2368-9 G,0.35D,2310 C0256-26
O,0.5D,200 C2948-2 C2368-10
BUCKLE SWITCH-PASS
B,0.35D,2520
C3196-1
TYPE 1
B,0.35D,2505
C2561-1
TYPE 1
A
B,0.5D,2505
Sheet1

Published by Technical Communications, Land Rover
Publication Part No. JLR 16 24 21_3E