(Cont. next page)

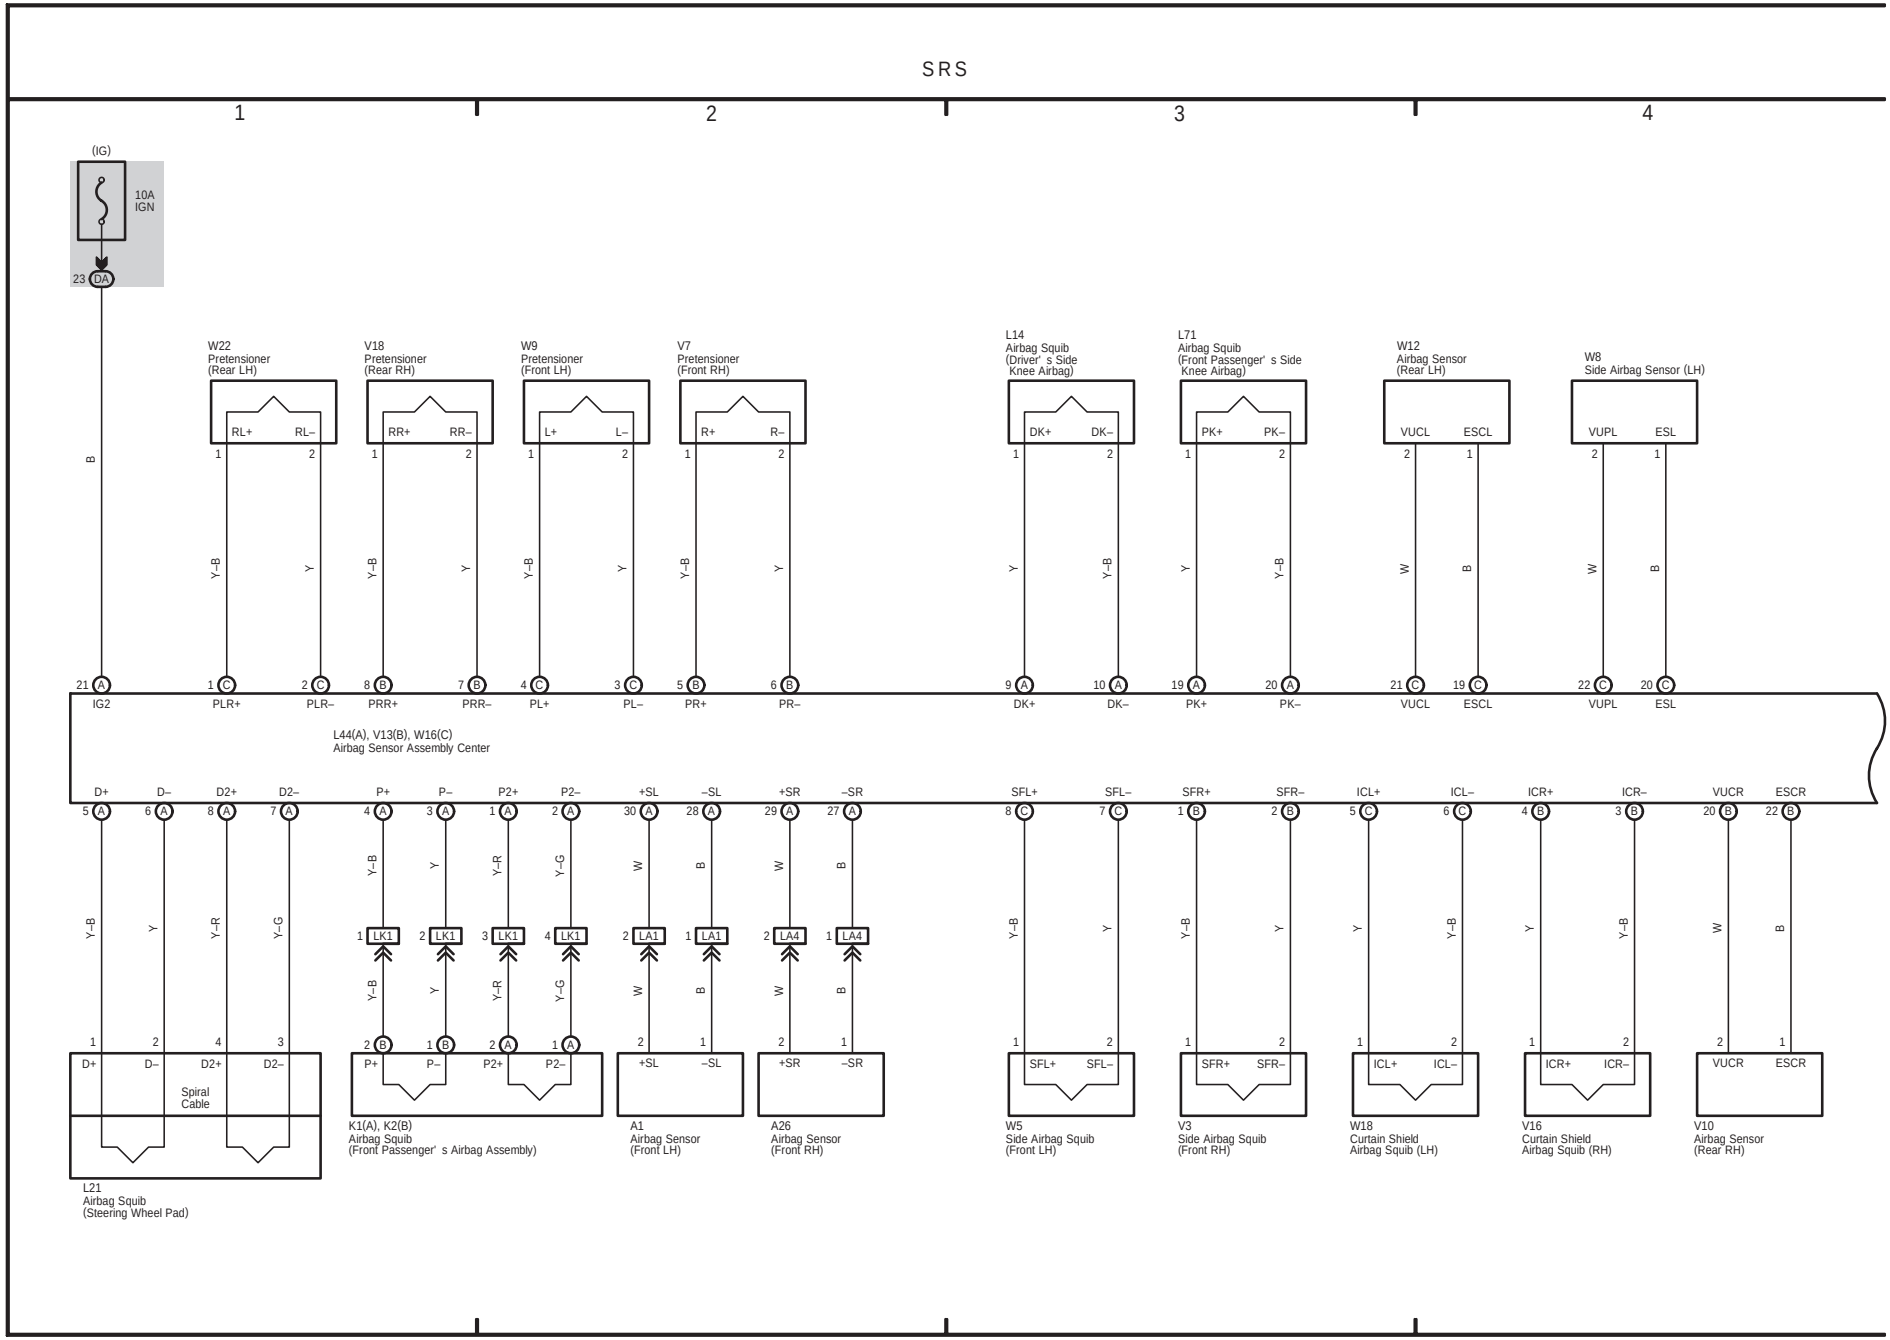

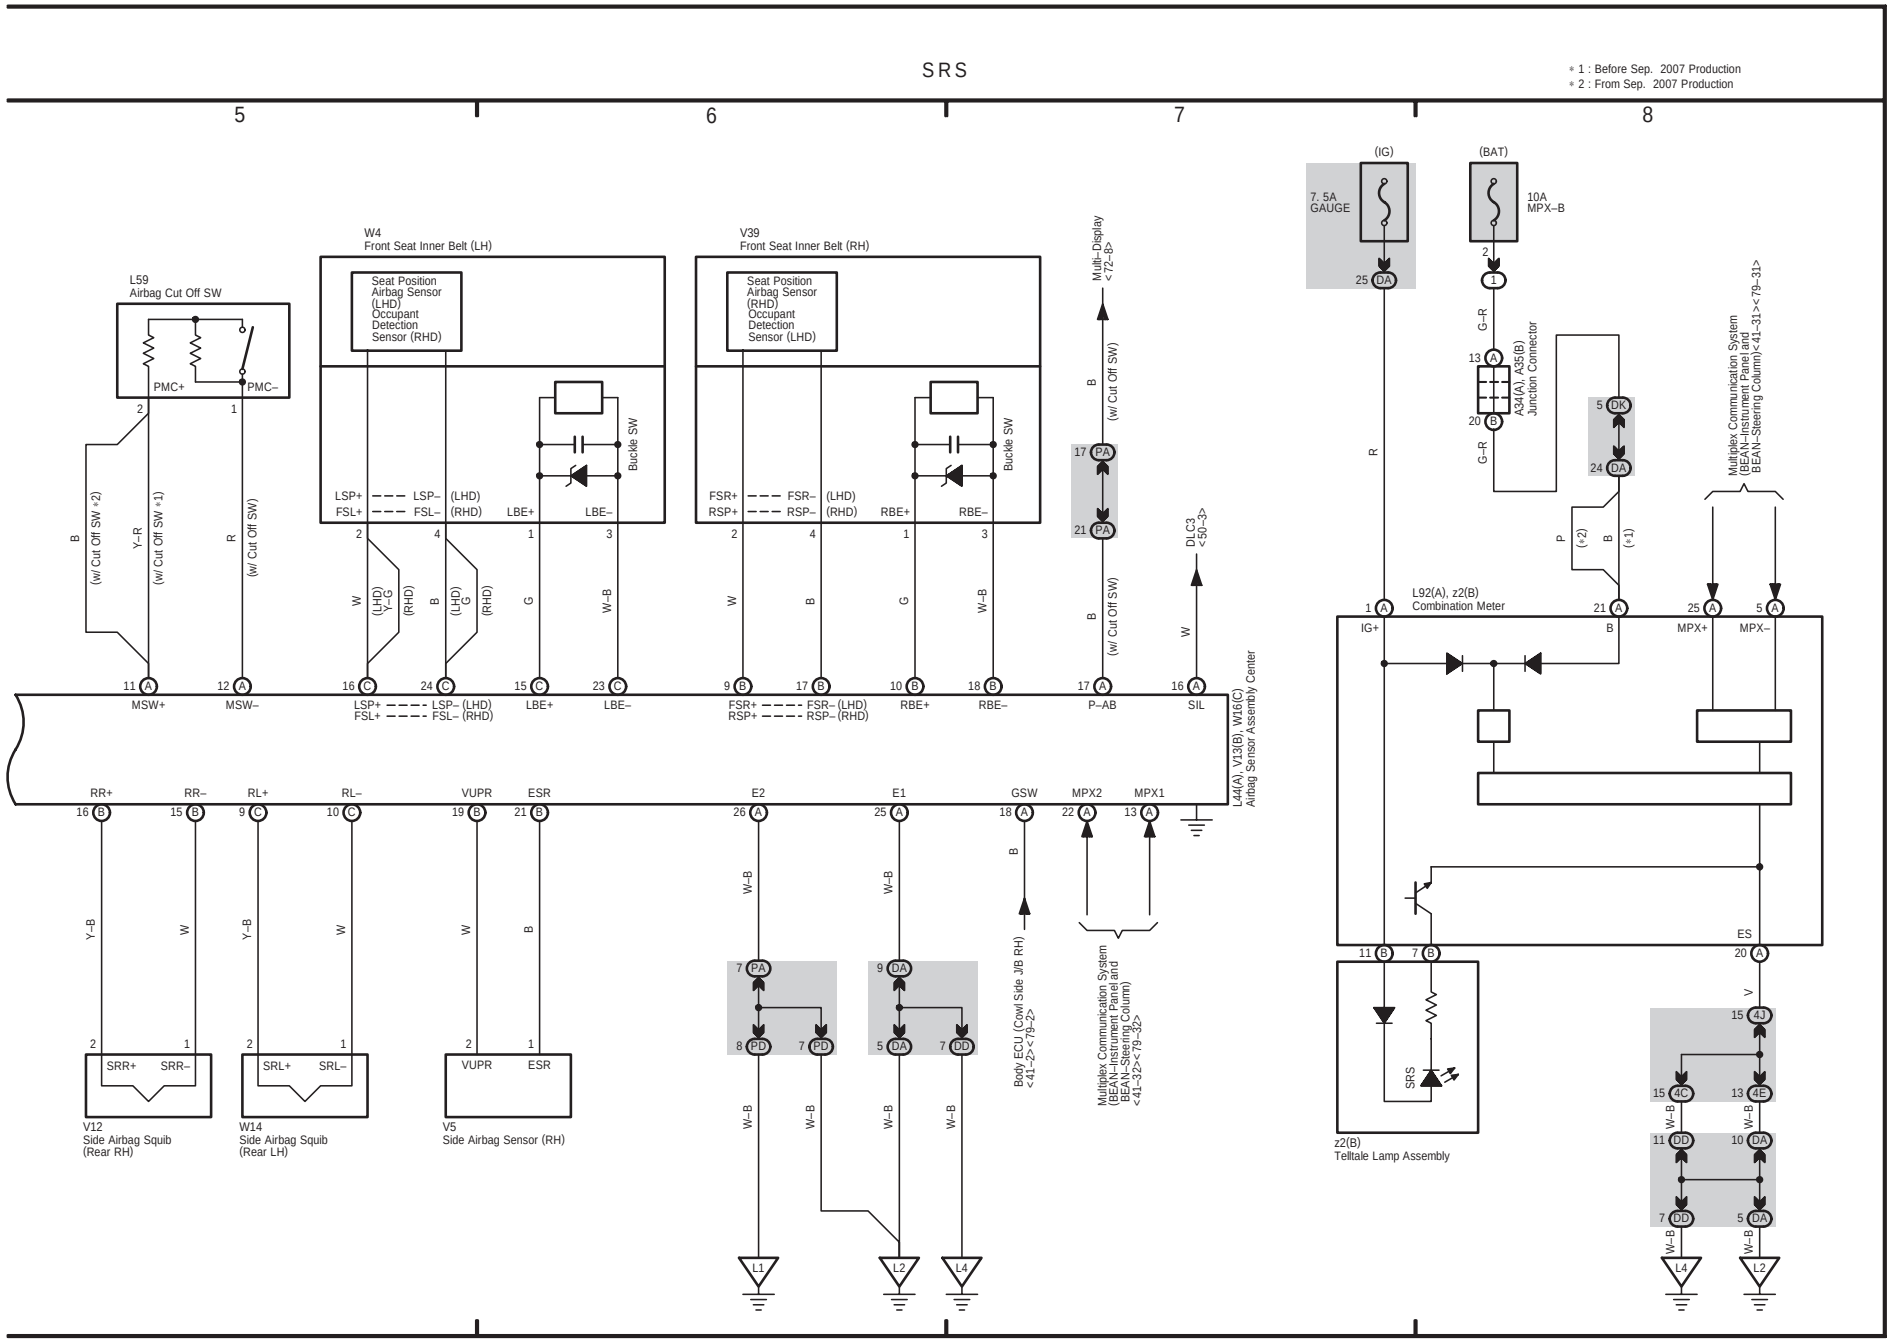
SRS
* 1 : Before Sep. 2007 Production
* 2 : From Sep. 2007 Production
5
6
7
8
L59
Airbag Cut Off SW
PMC+
PMC–
W4
Front Seat Inner Belt (LH)
Seat Position Airbag Sensor (LHD) Occupant Detection Sensor (RHD)
Buckle SW
V39
Front Seat Inner Belt (RH)
Seat Position Airbag Sensor (RHD) Occupant Detection Sensor (LHD)
Multi–Display <72–8>
DLC3 <50–3>
(IG)
(BAT)
7. 5A GAUGE
10A MPX–B
A34(A), A35(B) Junction Connector
Multiplex Communication System (BEAN–Instrument Panel and BEAN–Steering Column)<41–31><79–31>
L92(A), z2(B) Combination Meter
IG+
MPX+
MPX–
ES
MSW+
MSW–
LSP+
FSL+
LSP–
FSL–
(LHD)
(RHD)
LBE+
LBE–
FSR+
RSP+
FSR–
RSP–
RBE+
RBE–
P–AB
SIL
L44(A), V13(B), W16(C) Airbag Sensor Assembly Center
RR+
RR–
RL+
RL–
VUPR
ESR
E2
E1
GSW
MPX2
MPX1
SRR+
SRR–
SRL+
SRL–
V12
Side Airbag Squib (Rear RH)
W14
Side Airbag Squib (Rear LH)
V5
Side Airbag Sensor (RH)
Body ECU (Cowl Side J/B RH) <41–2><79–2>
Multiplex Communication System (BEAN–Instrument Panel and BEAN–Steering Column) <41–32><79–32>
z2(B)
Telltale Lamp Assembly
SRS
L1
L2
L4