






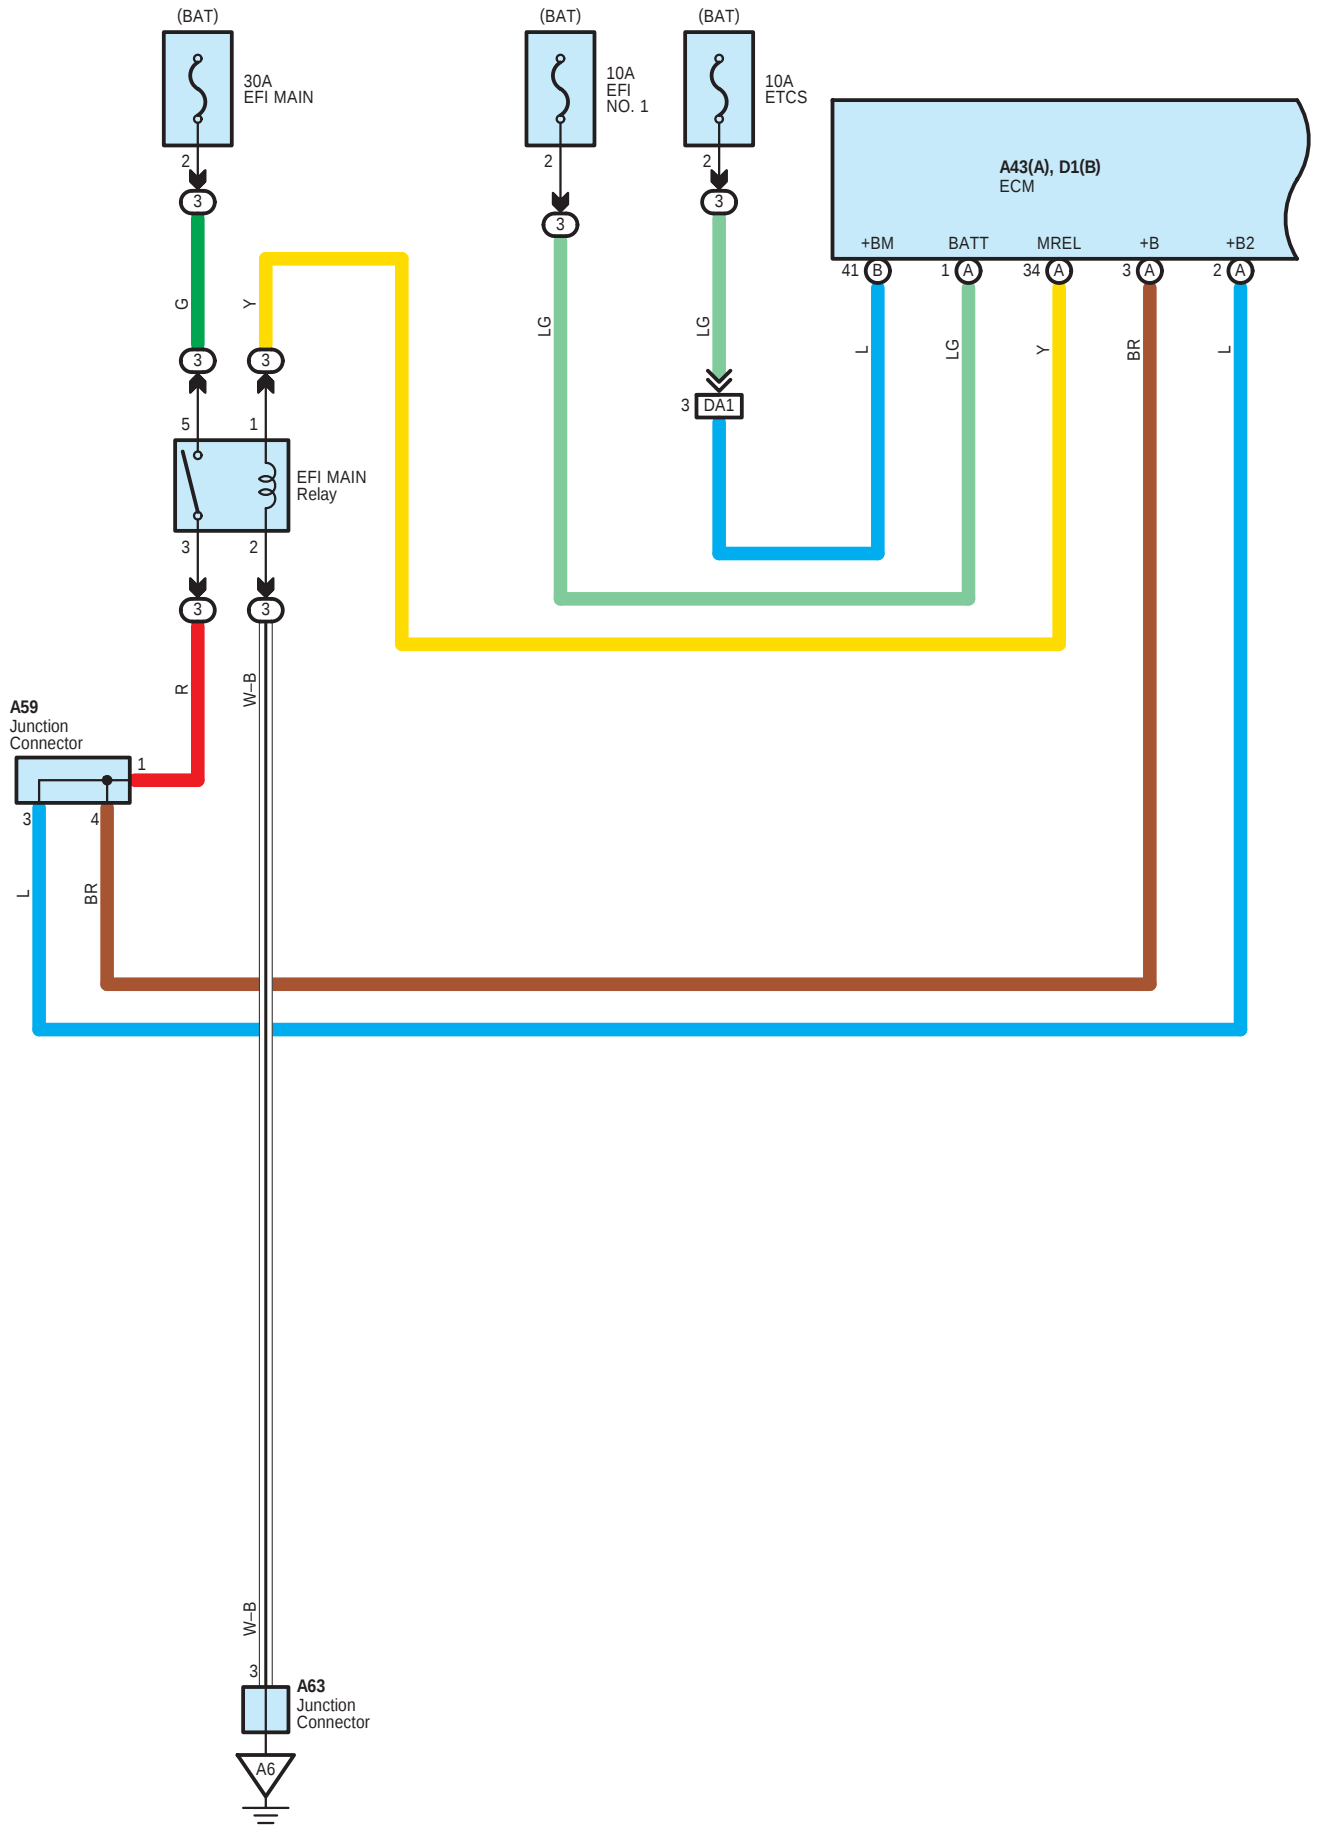


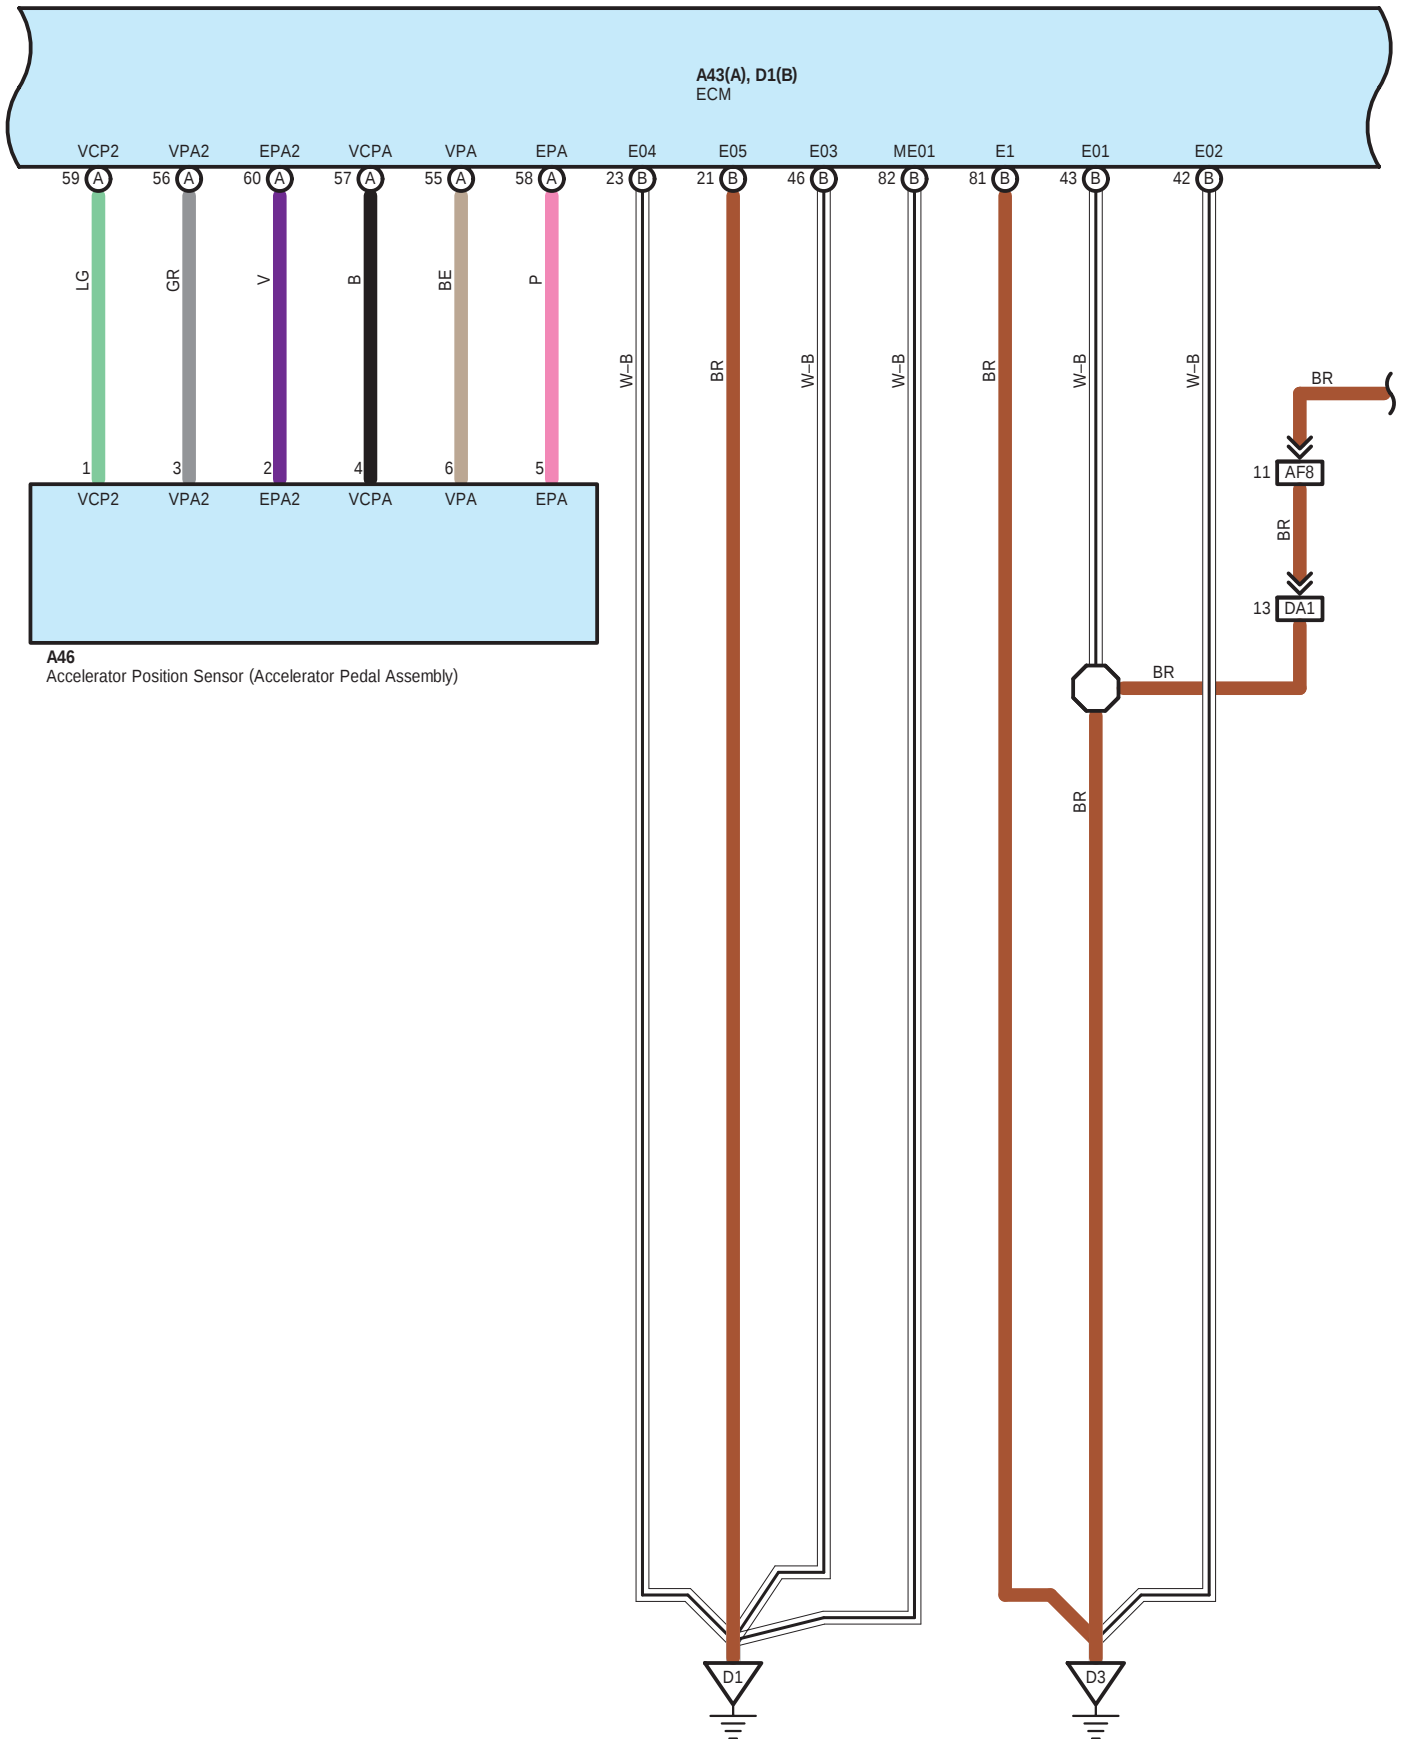


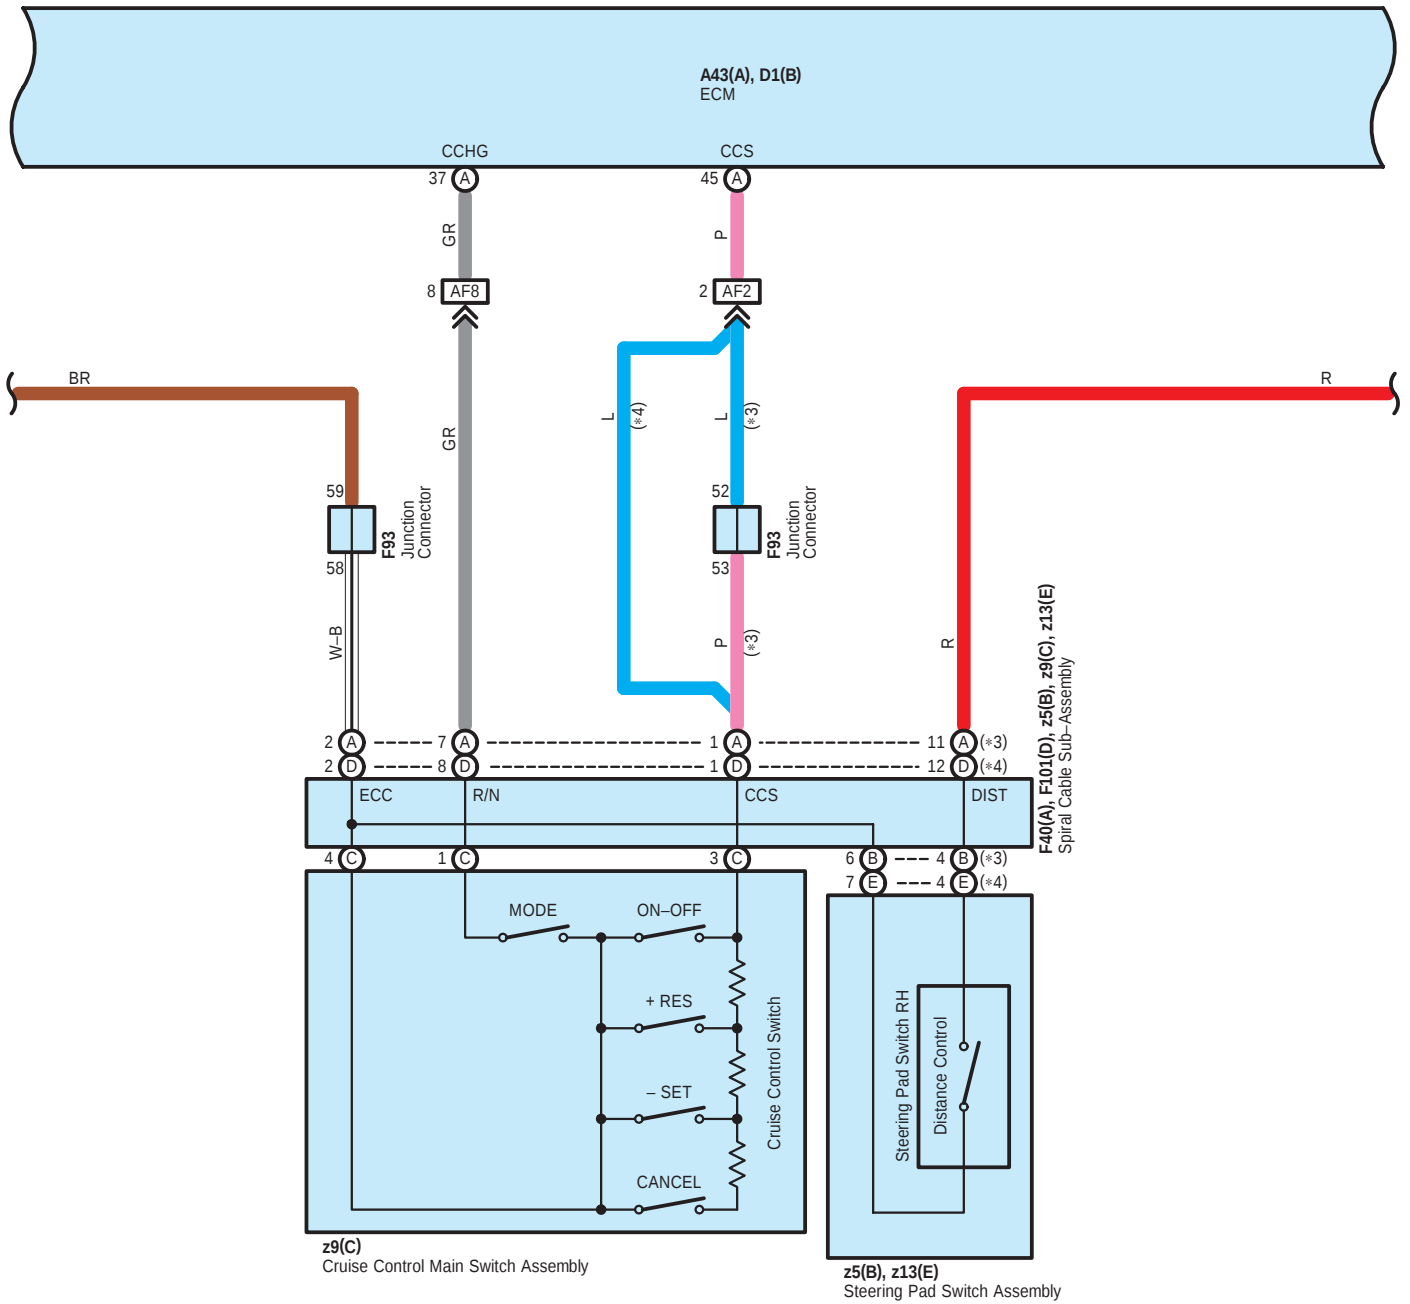


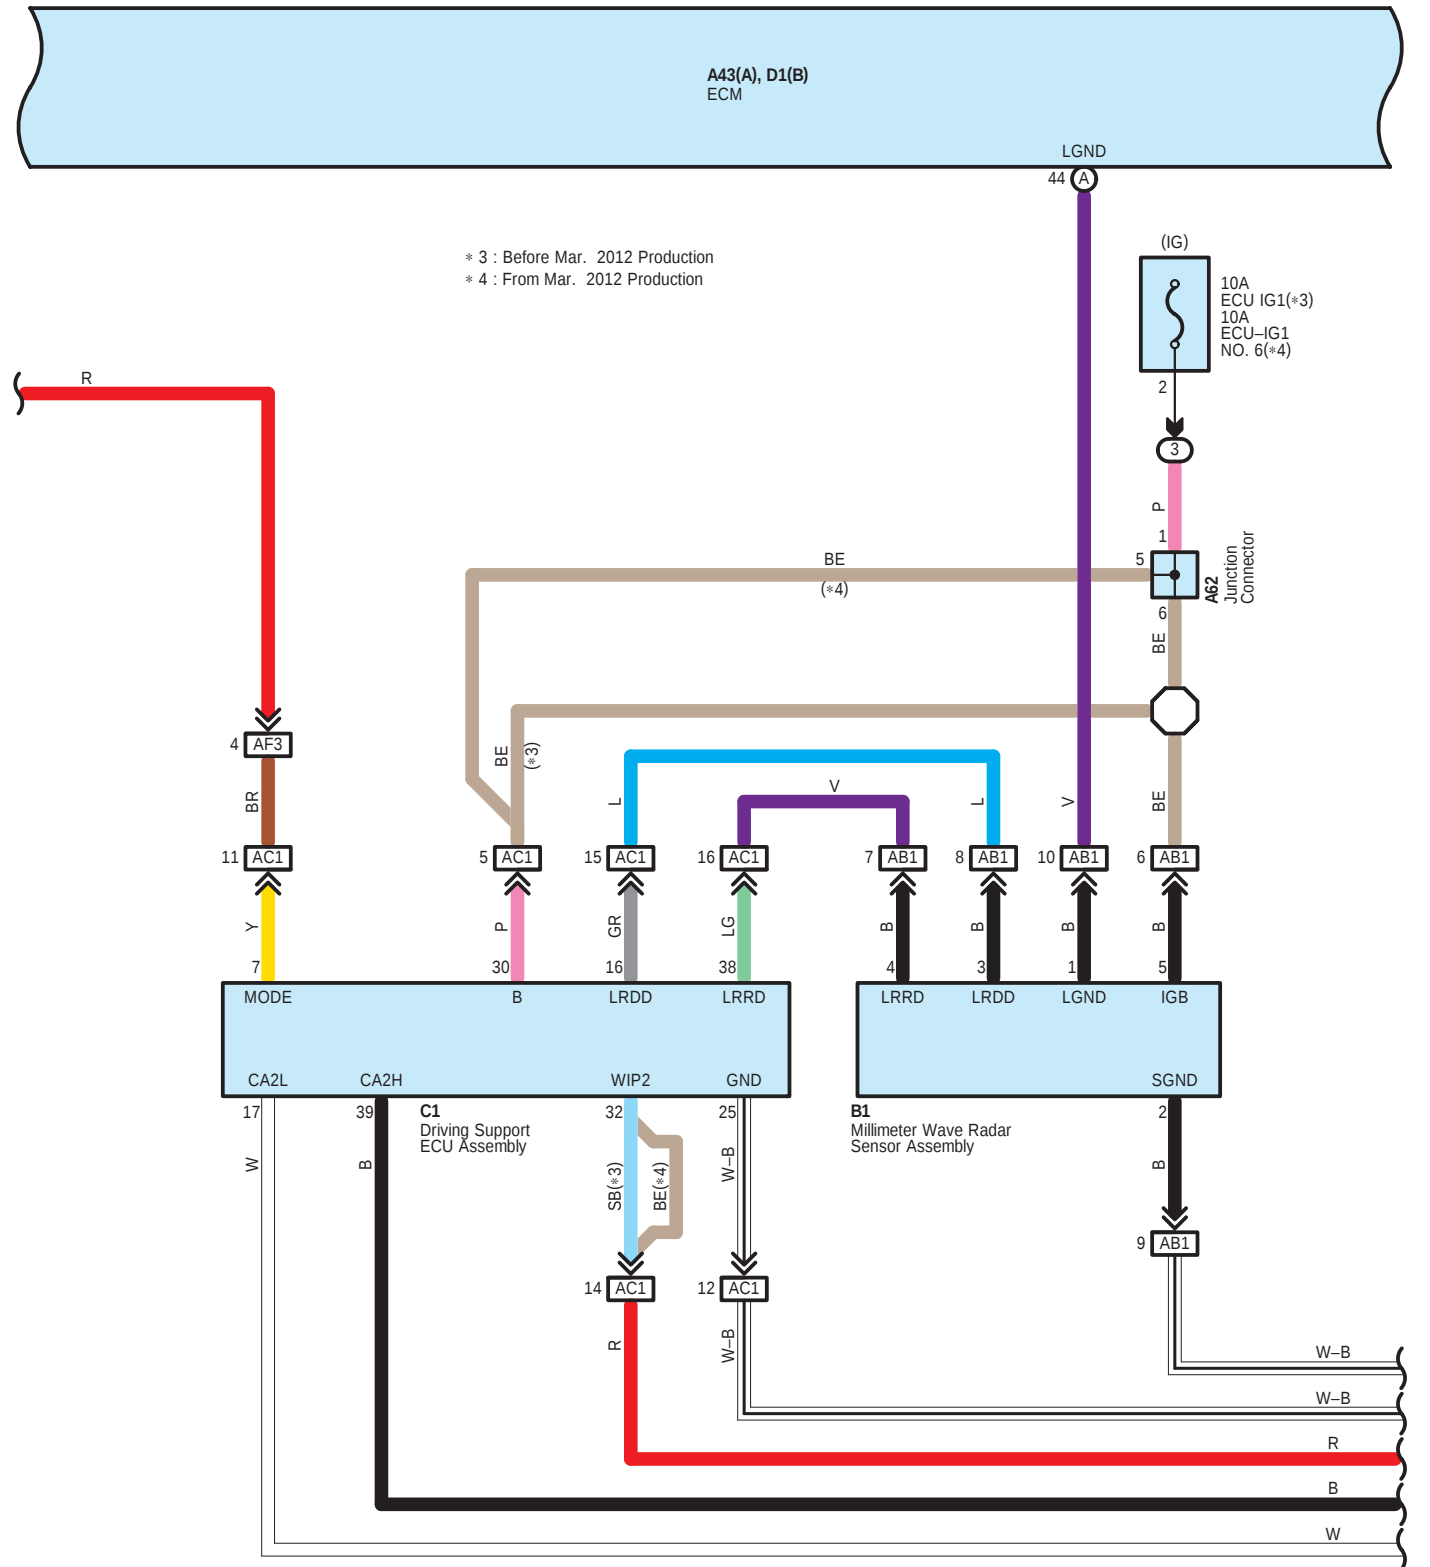


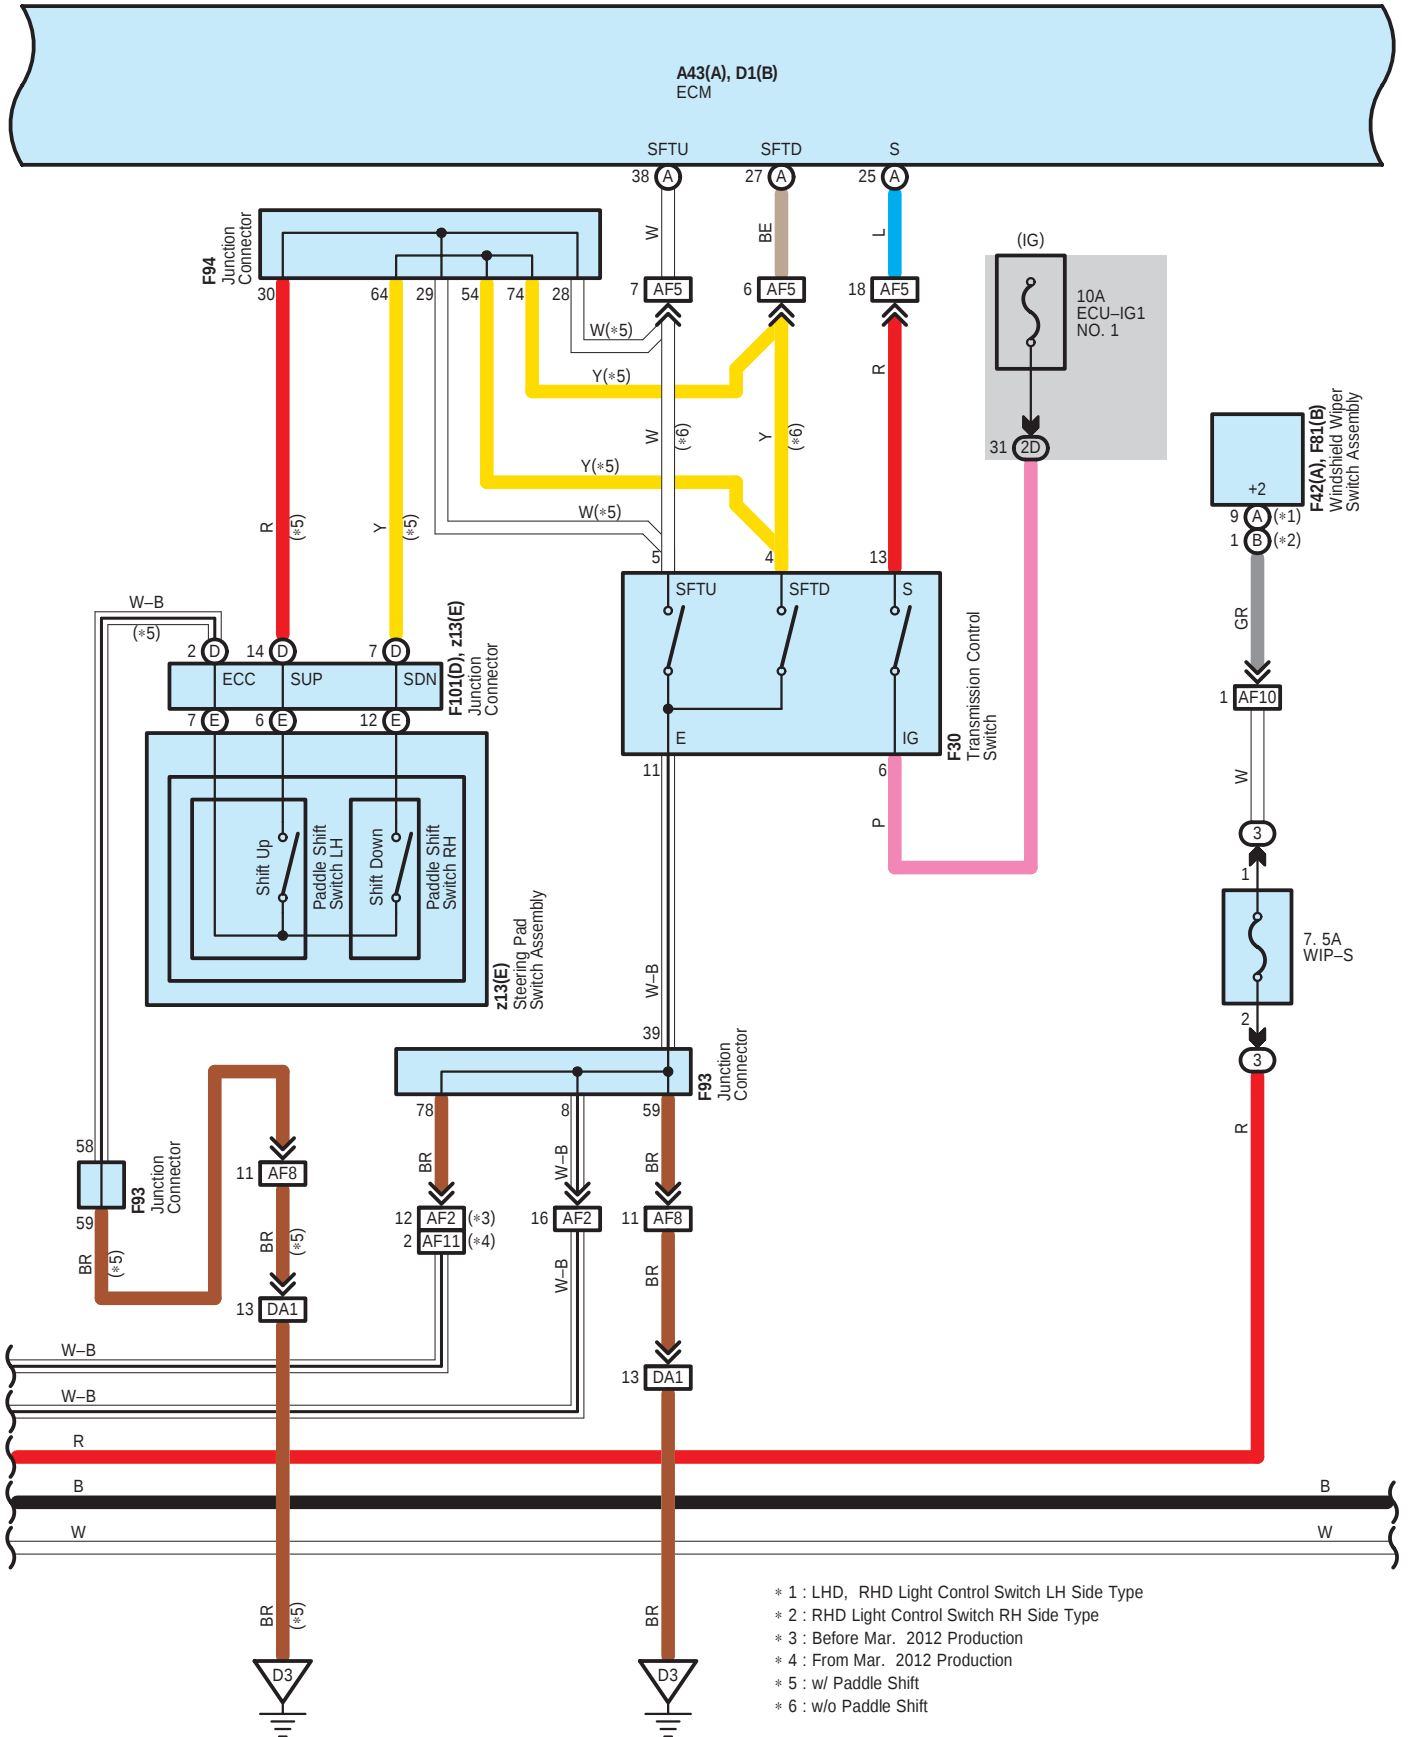


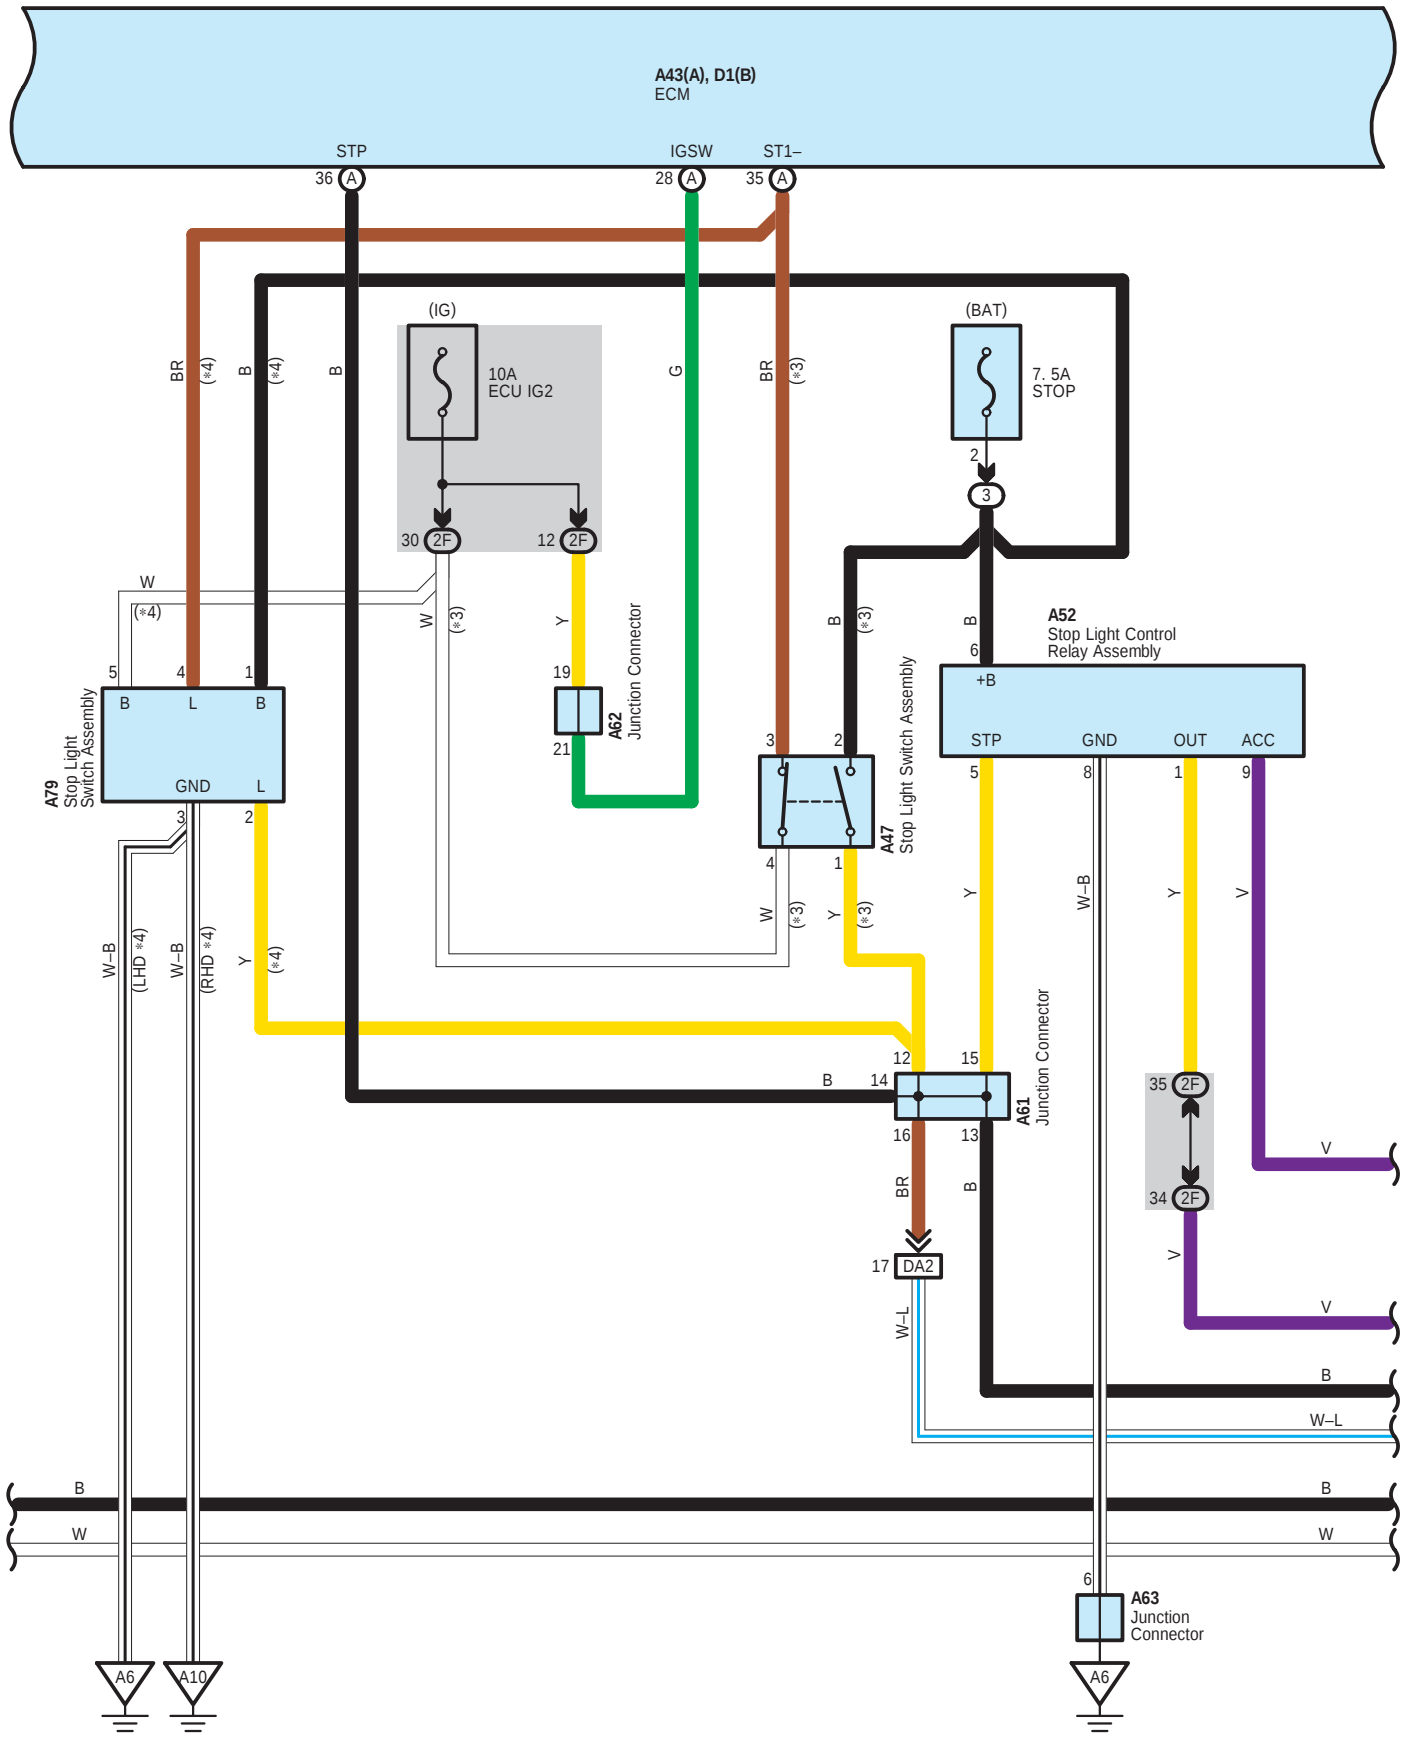


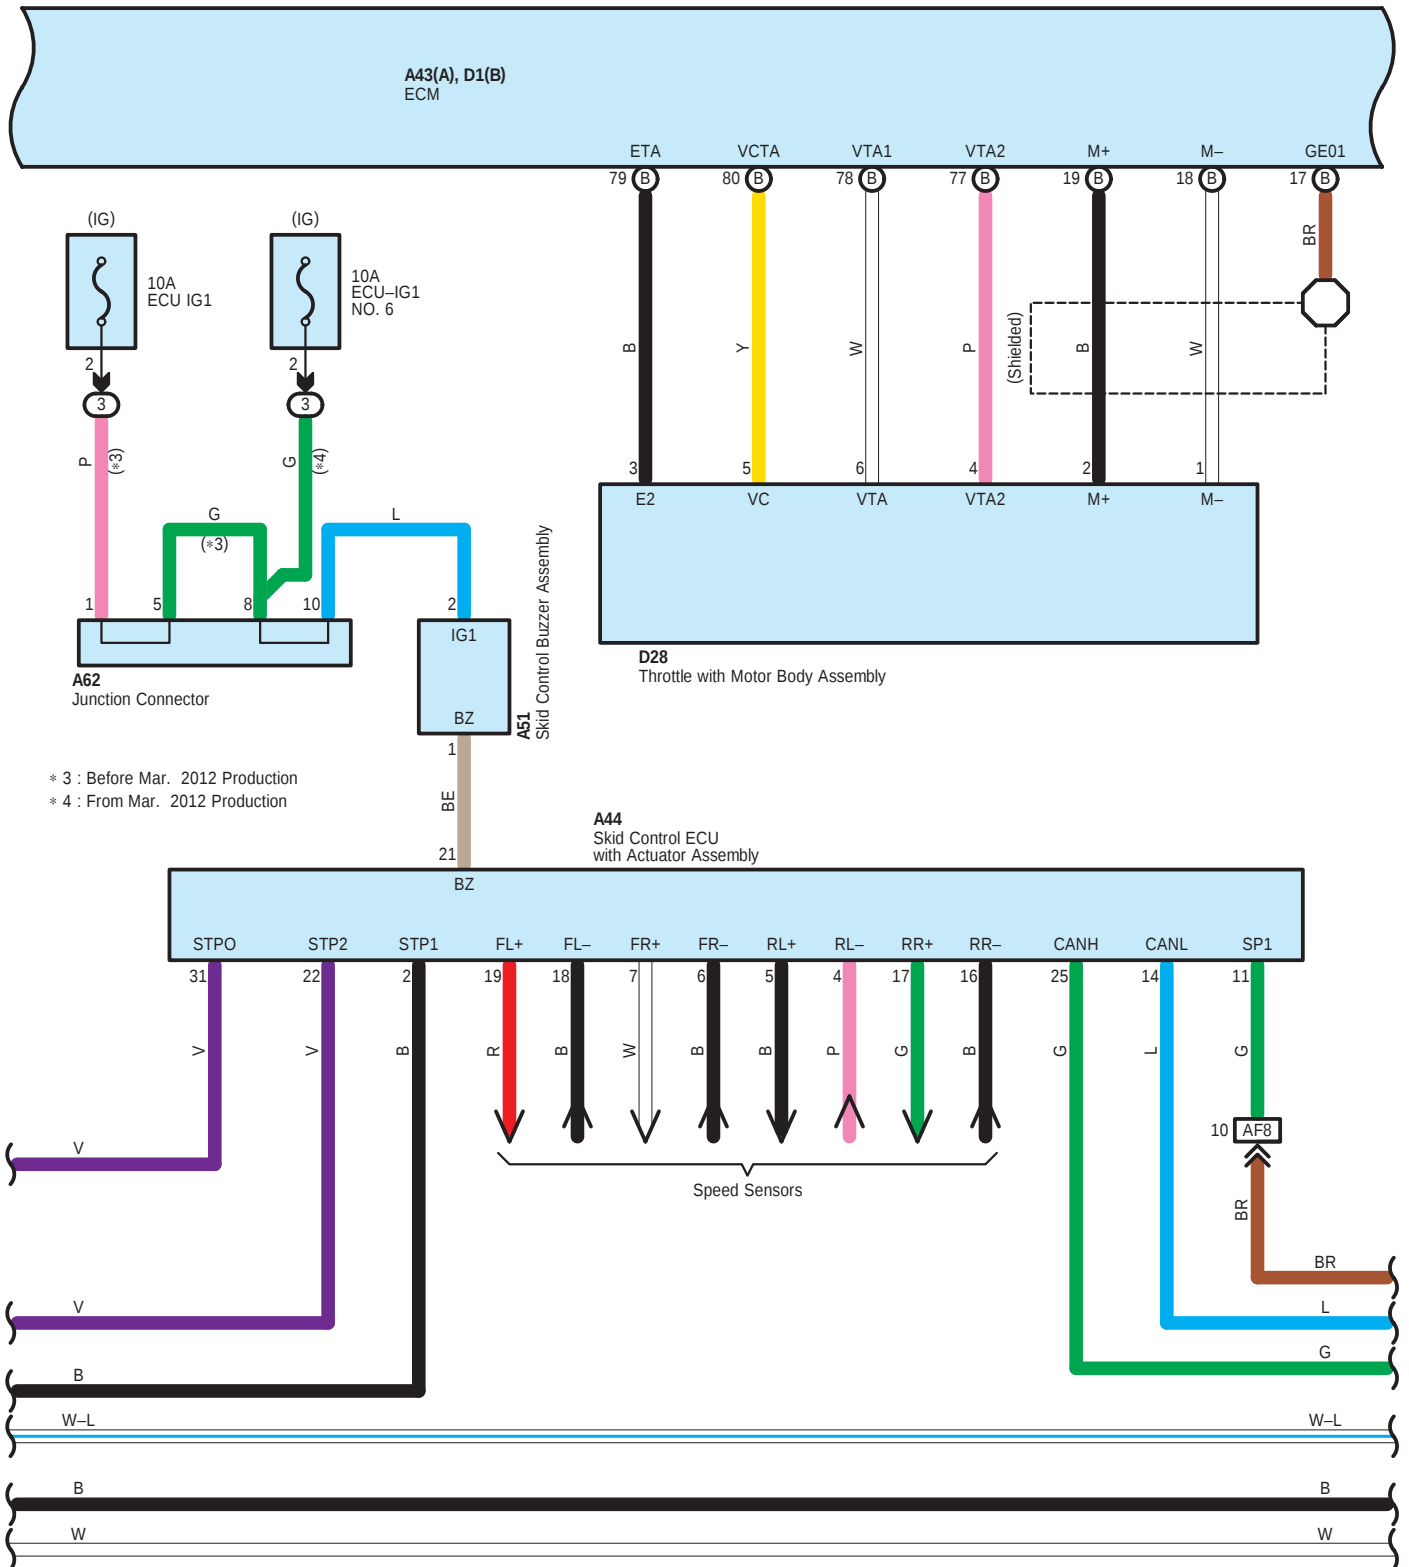


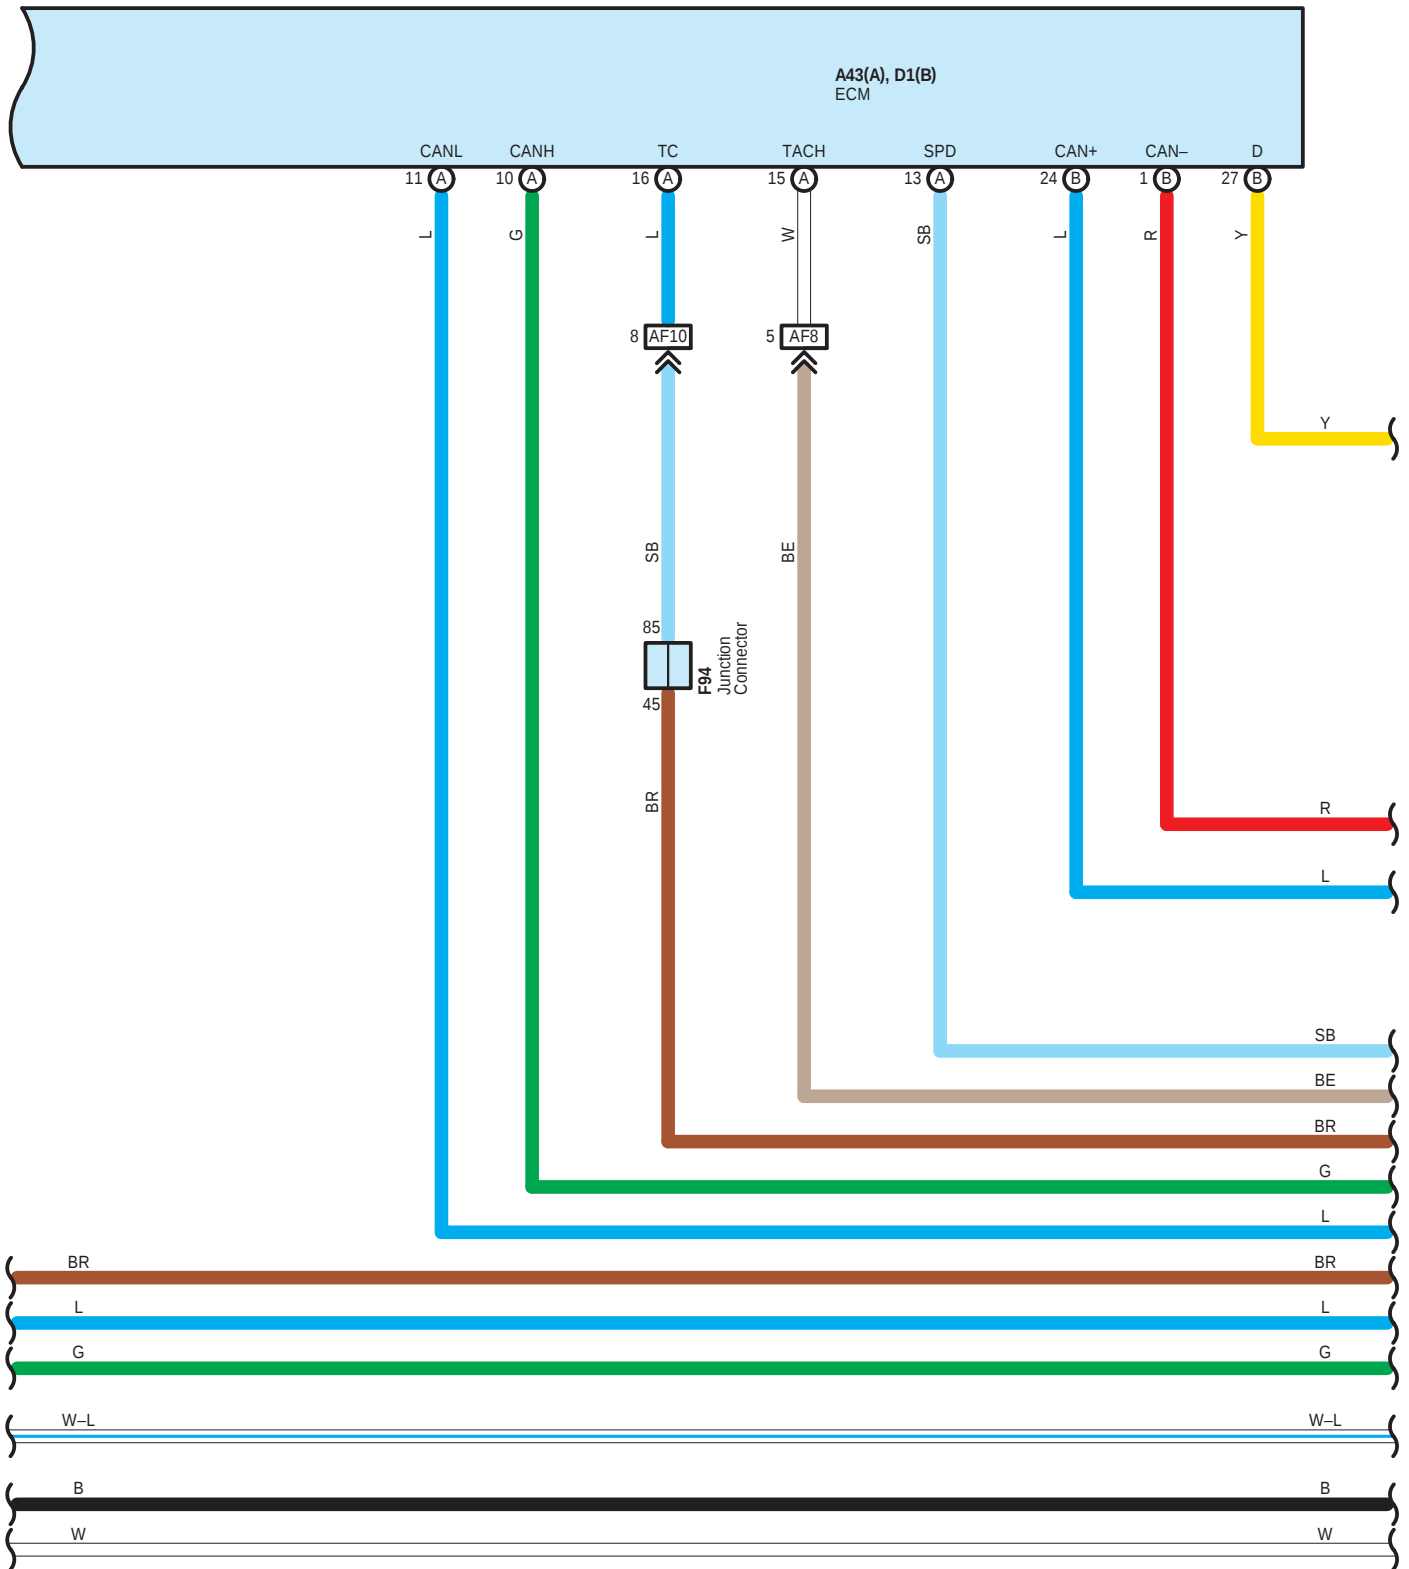

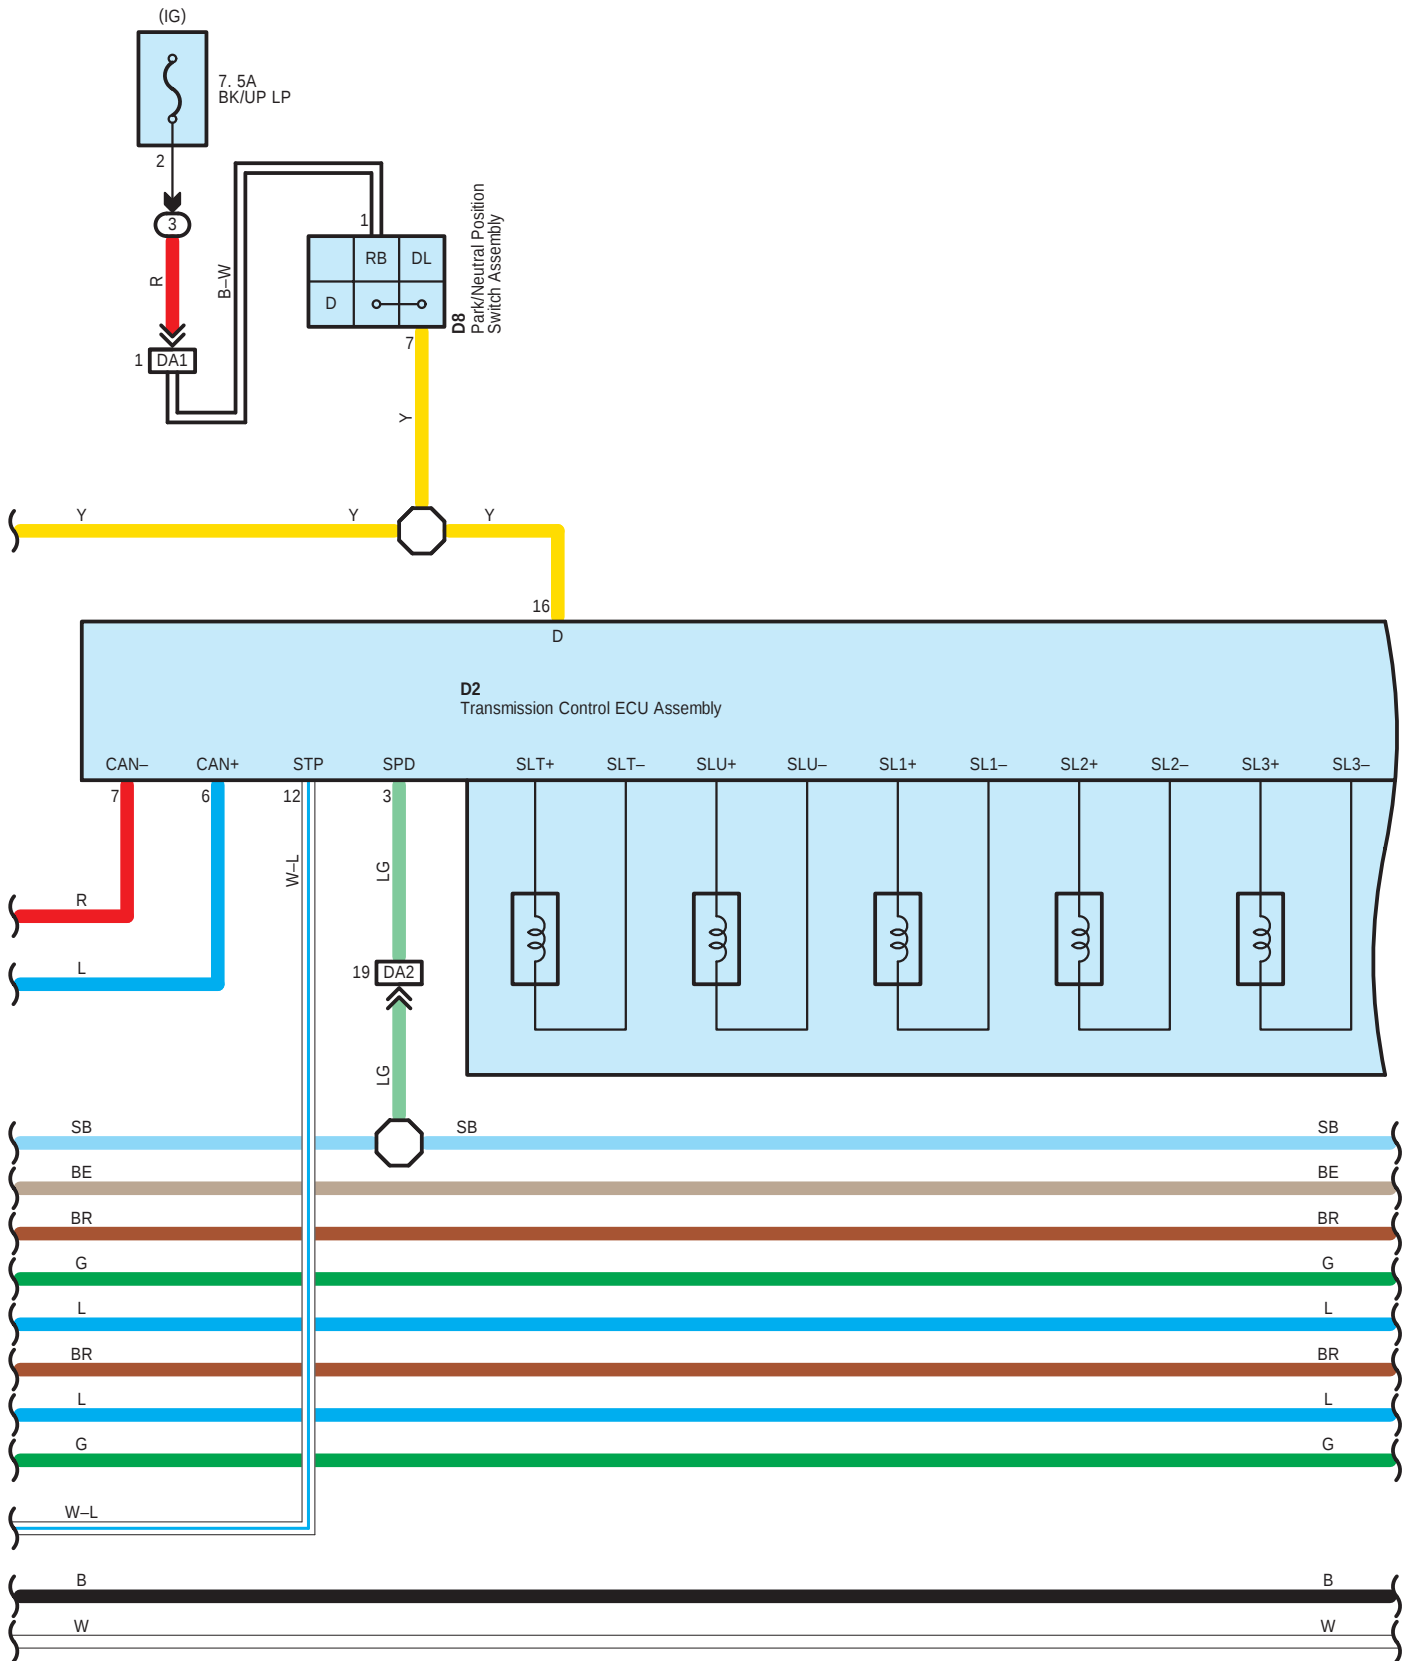


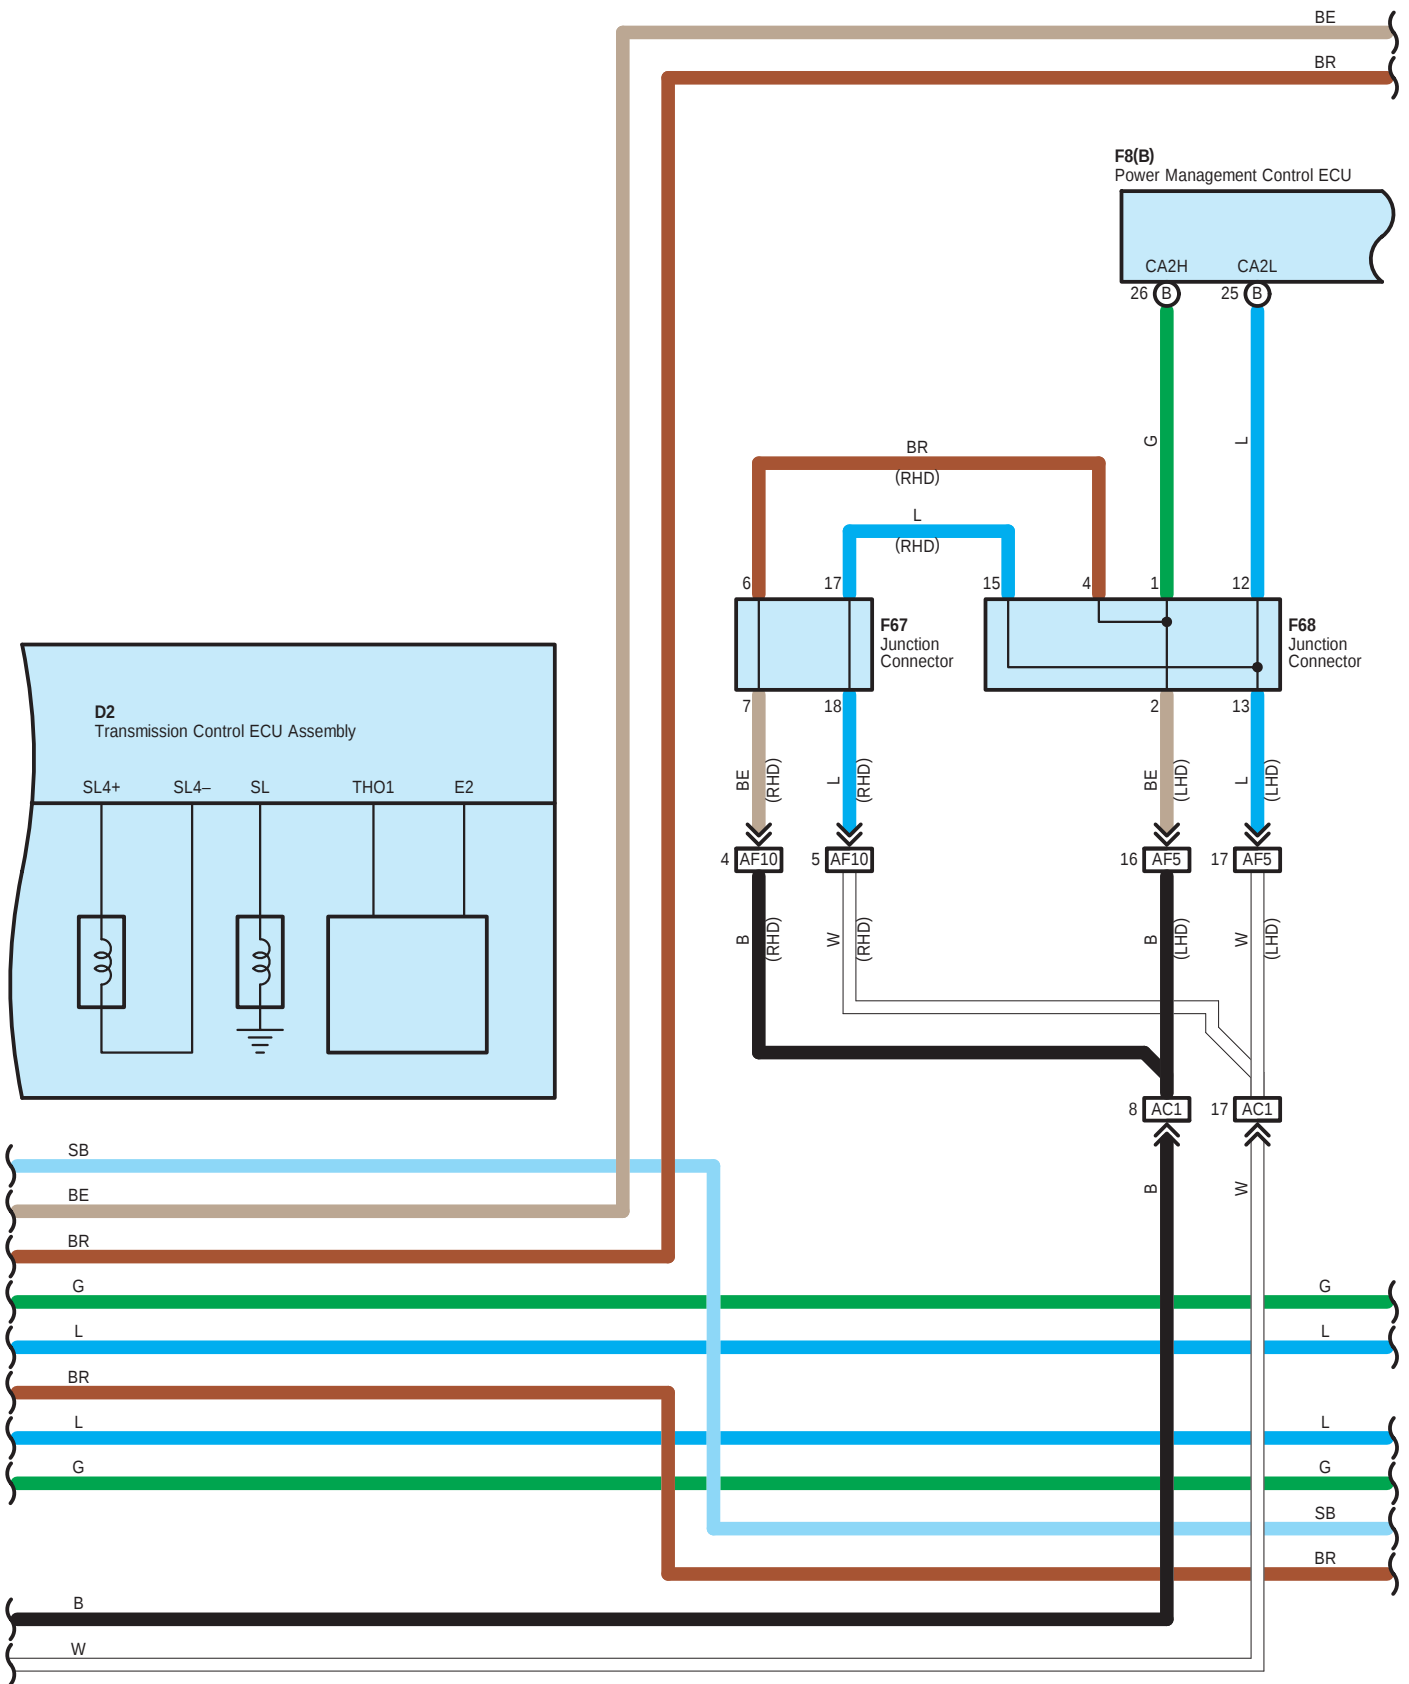

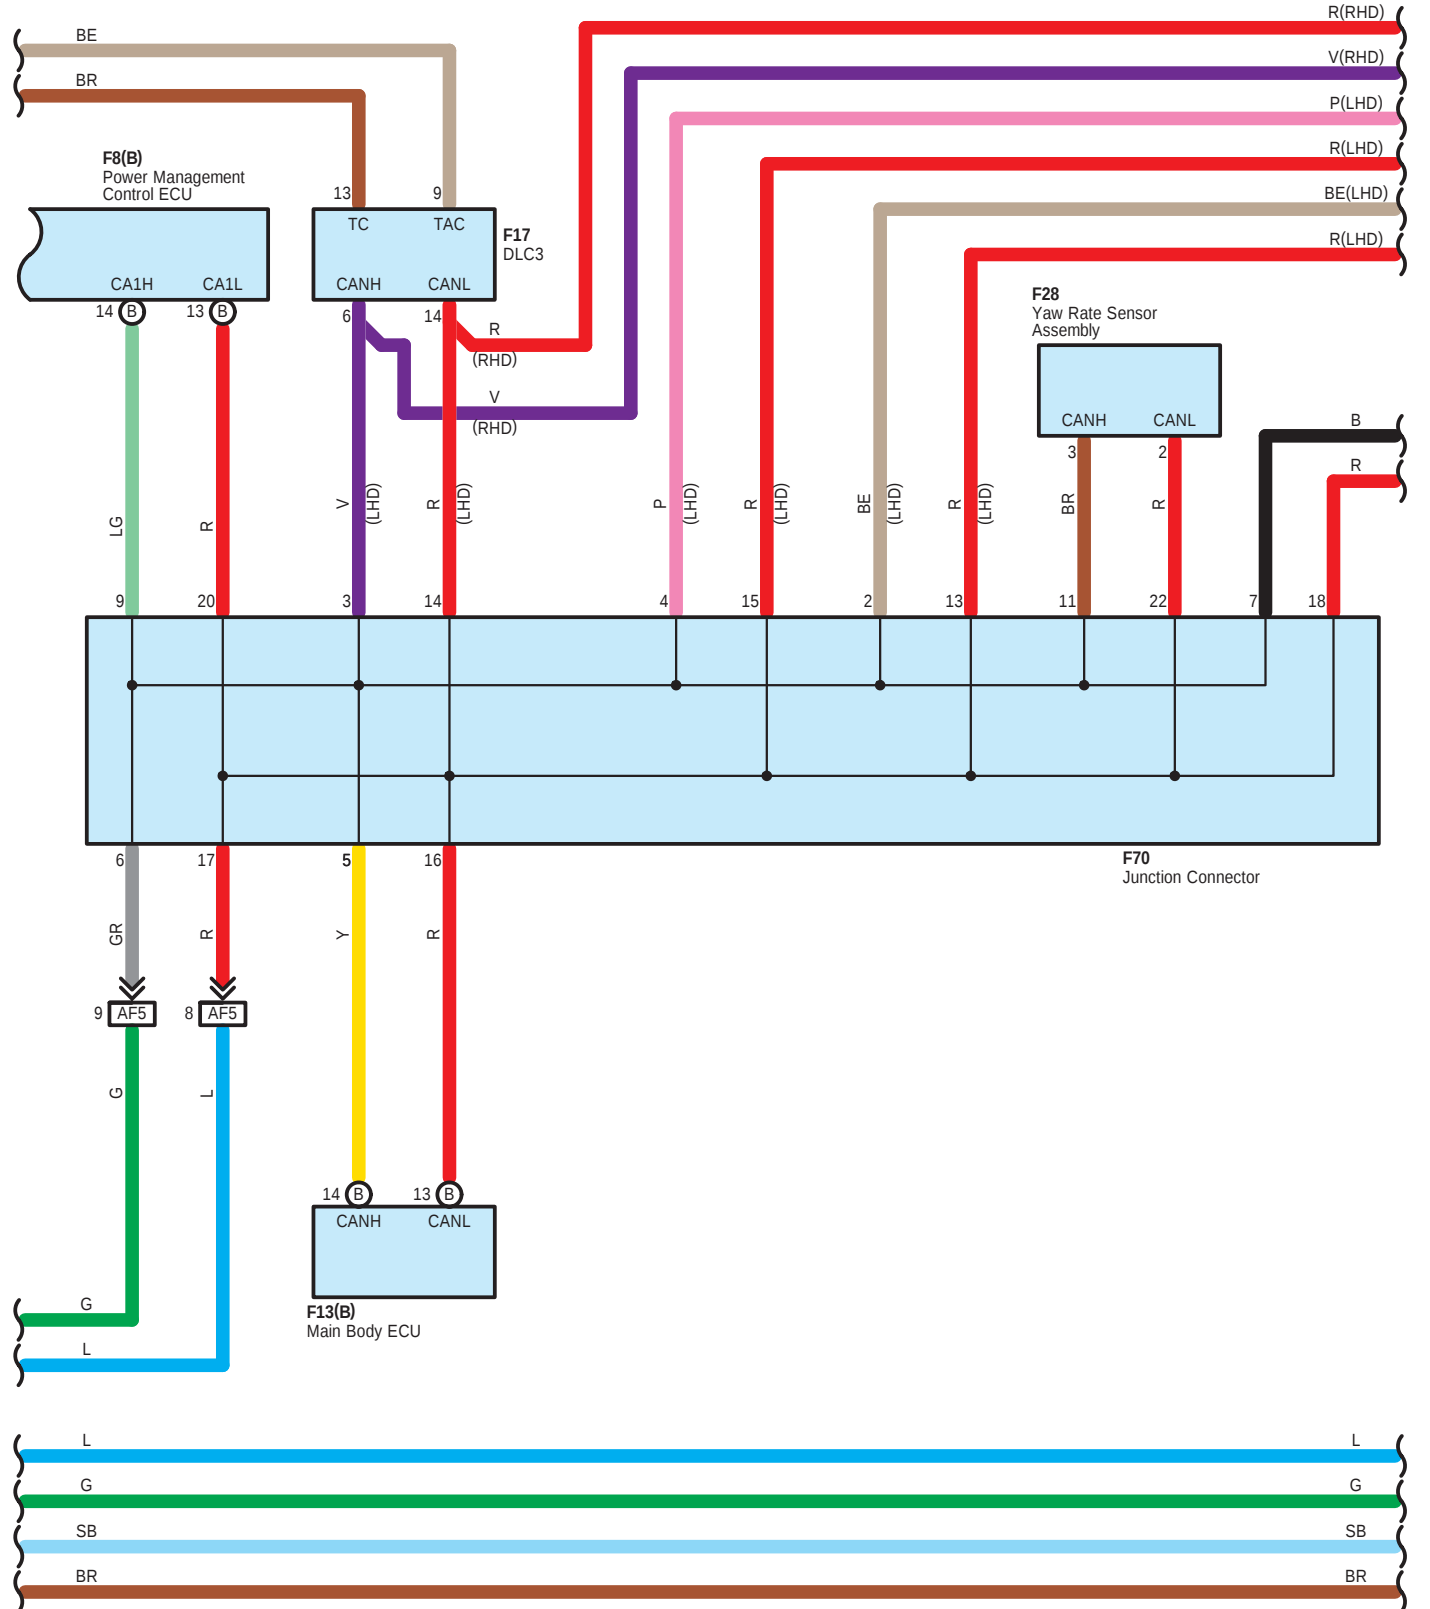


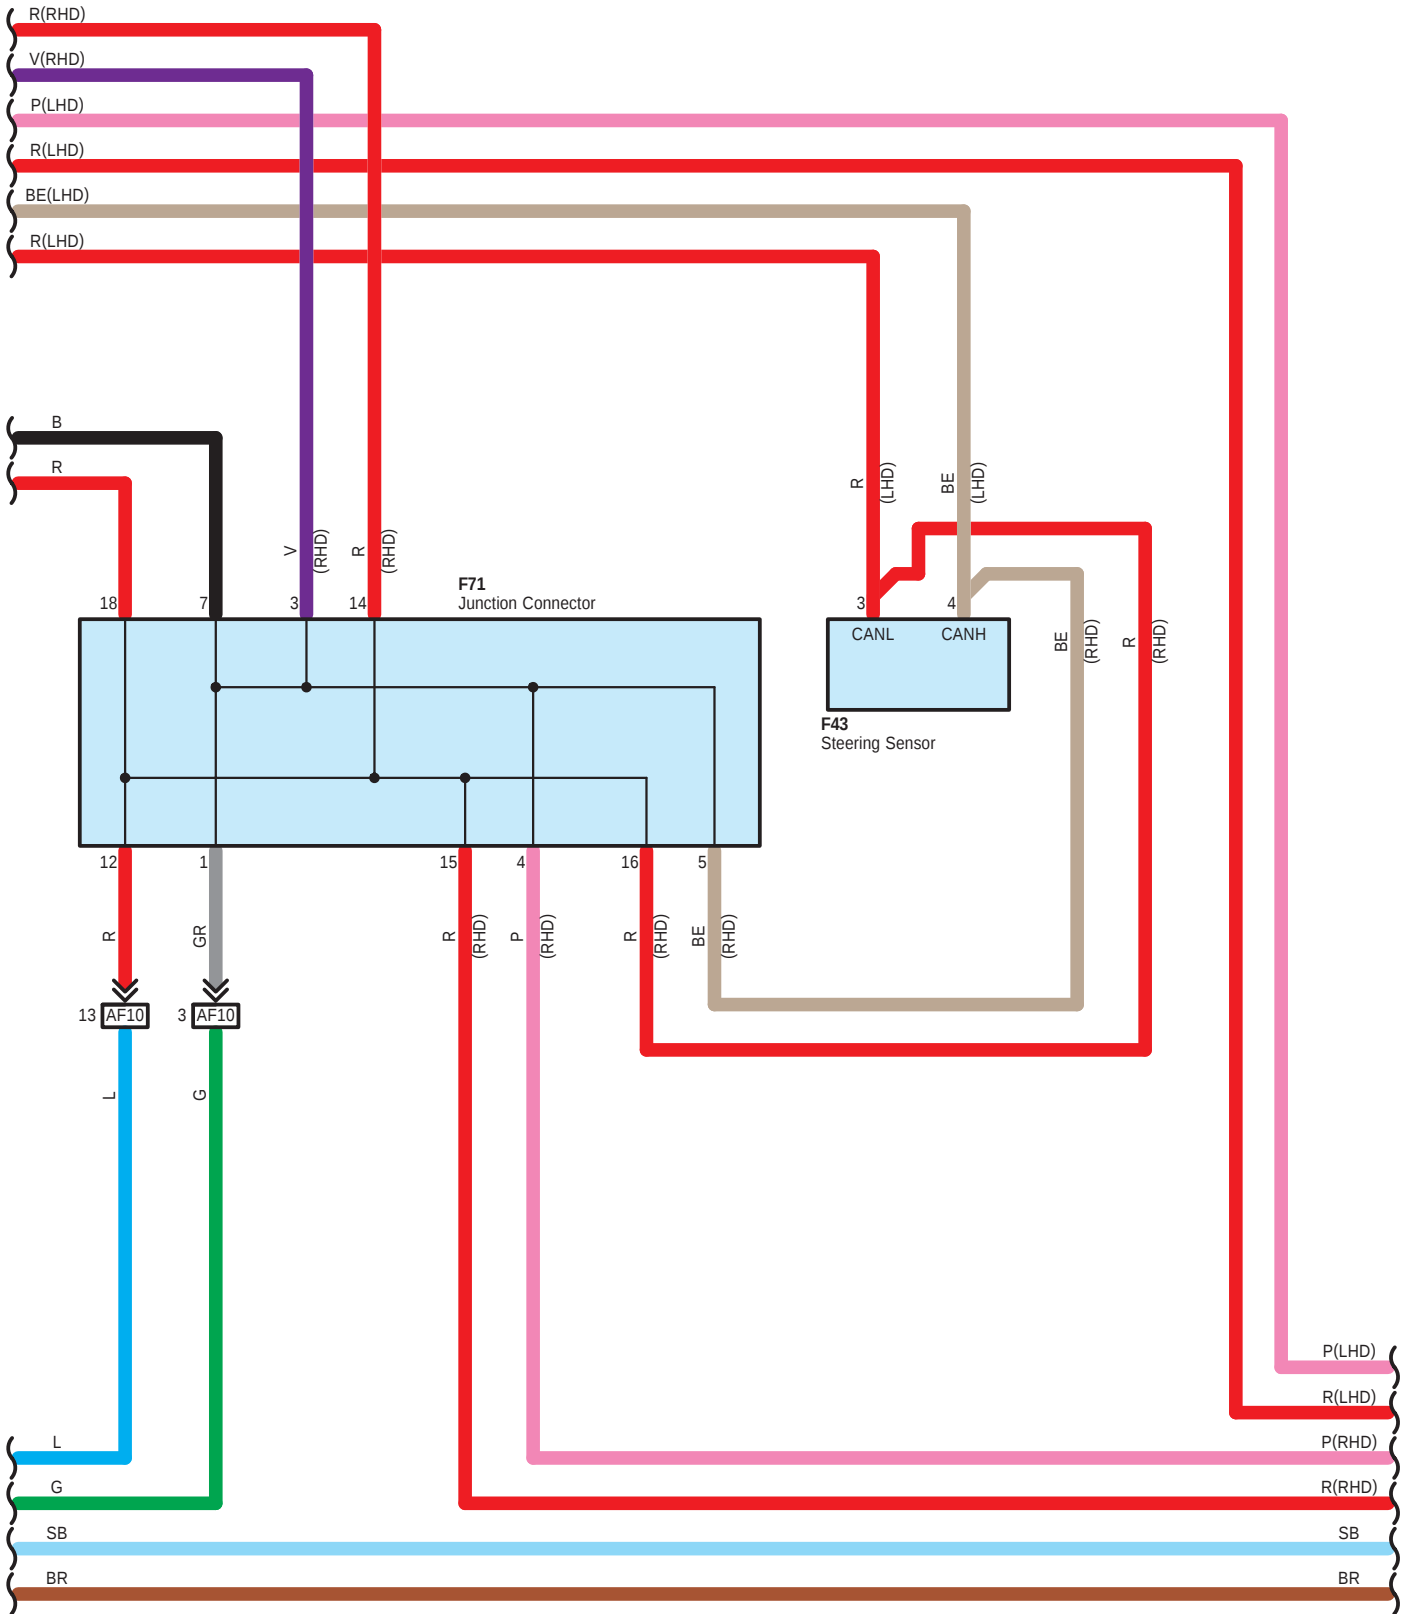


* 3 : Before Mar. 2012 Production
 * 4 : From Mar. 2012 Production

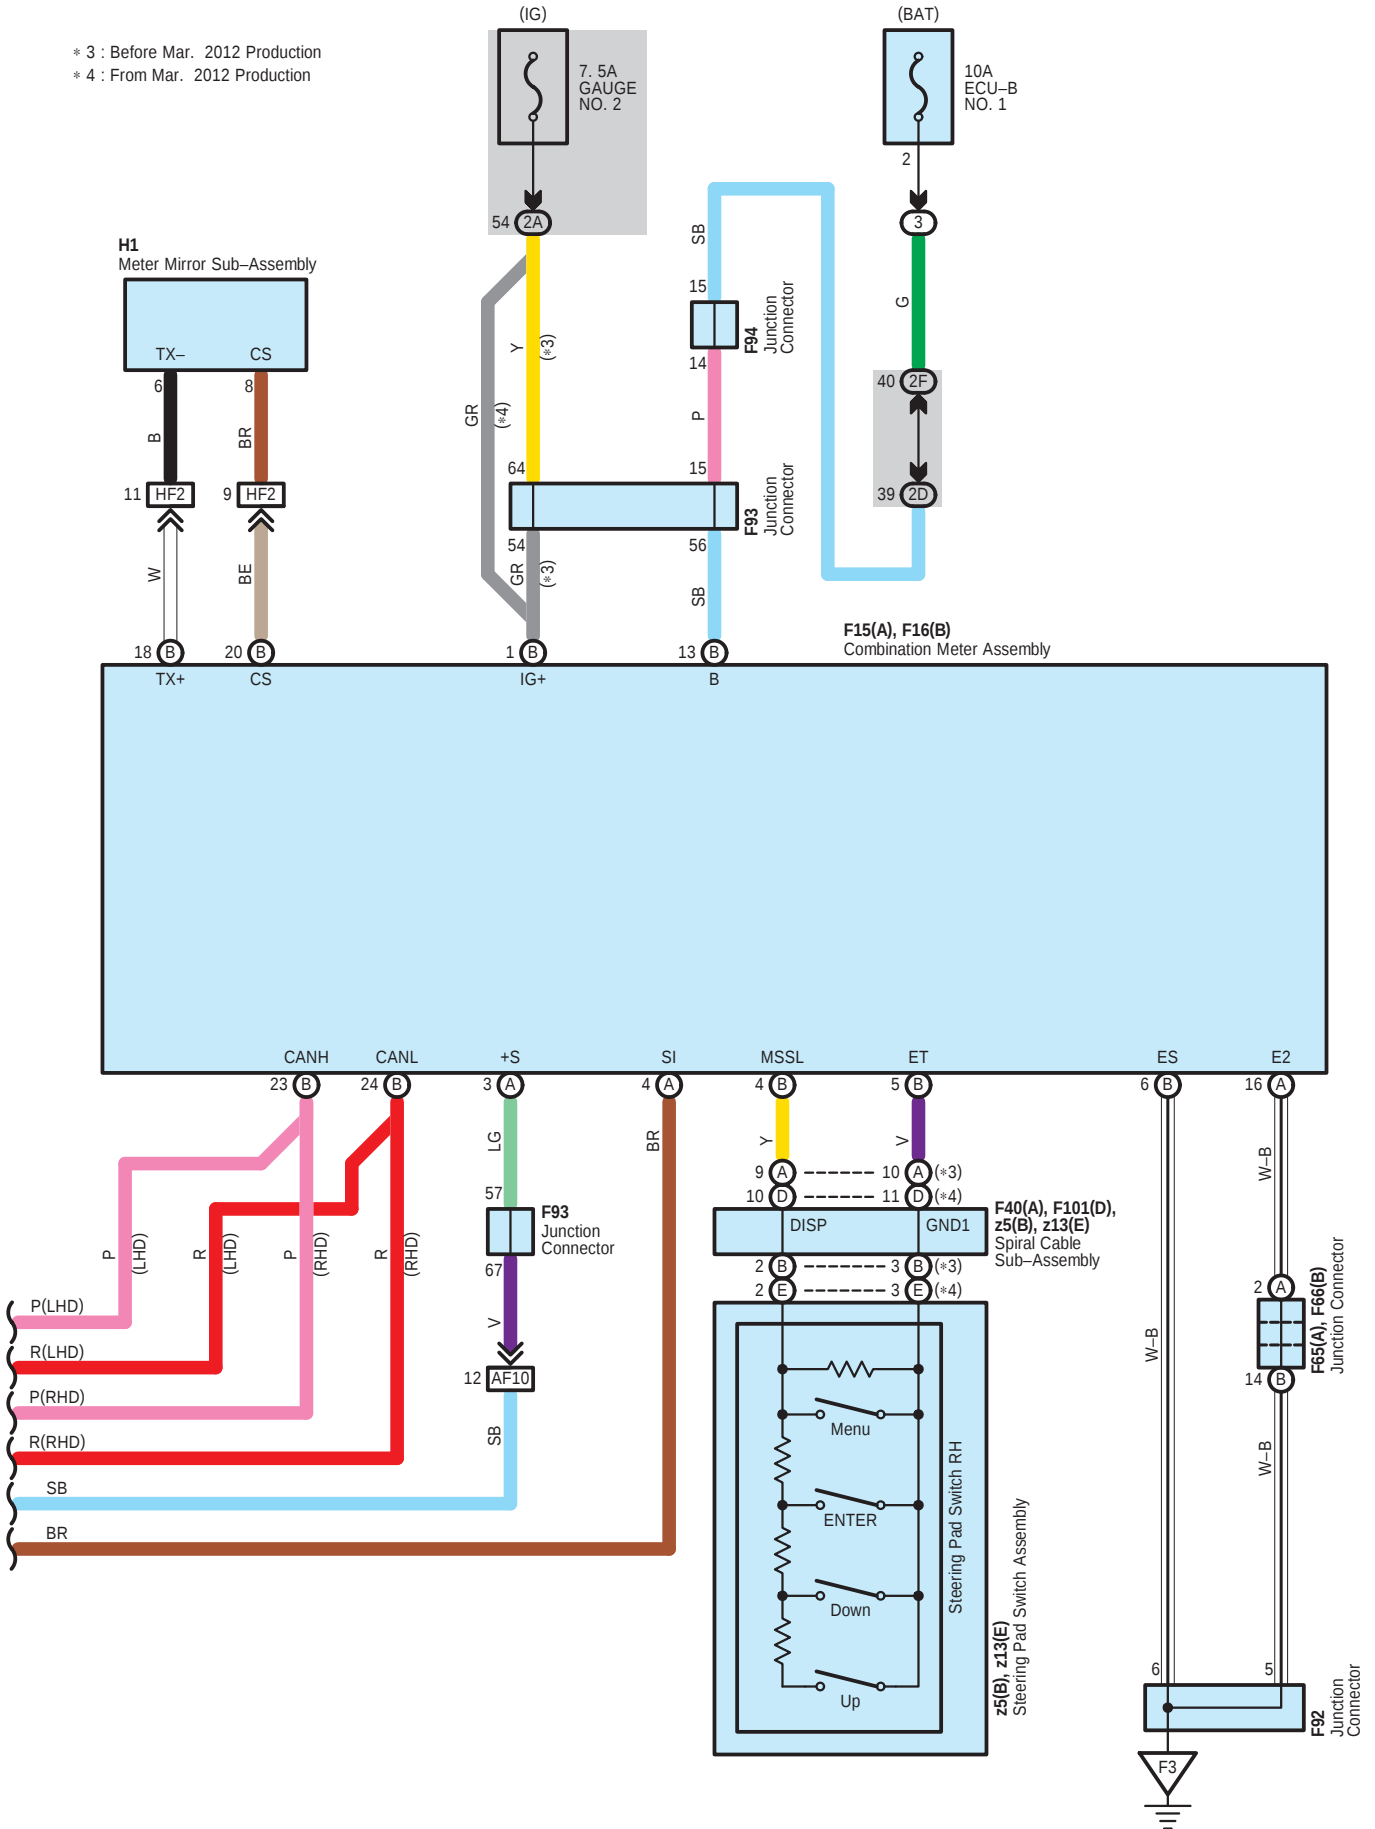


A 43
Black

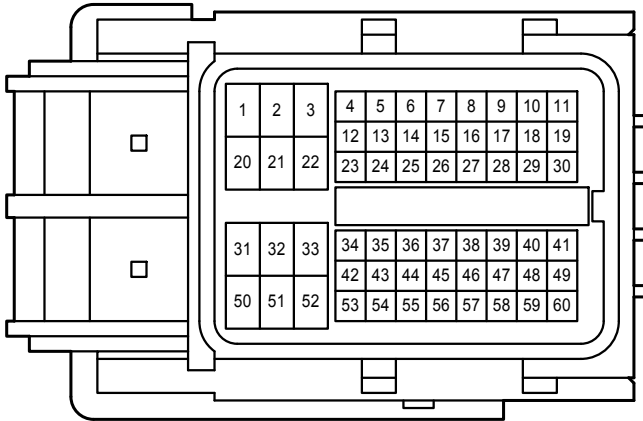


A 44
Black

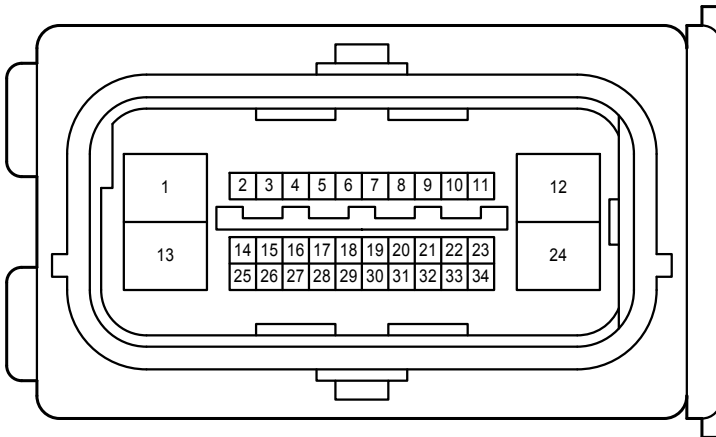


A 46
Black

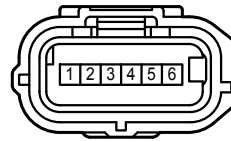


A 47
Green




A 51
Blue




A 52
Black




A 59
Black

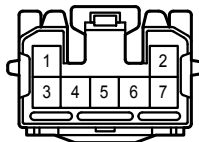


A 61
Black

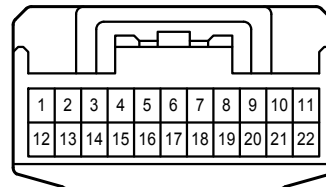


A 62
Black

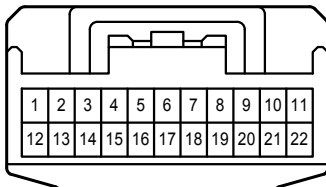


A 63
White

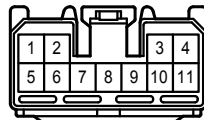


A 79
White

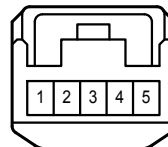


B 1
Black

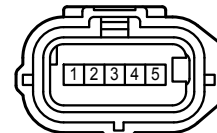


C 1
White

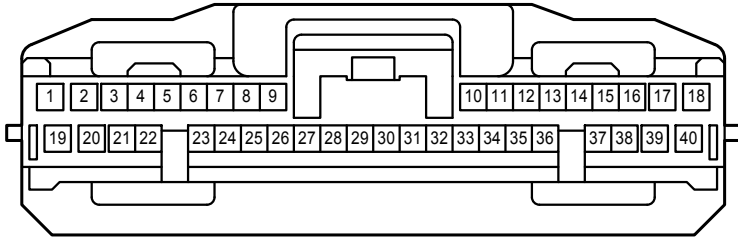


D 1
Black

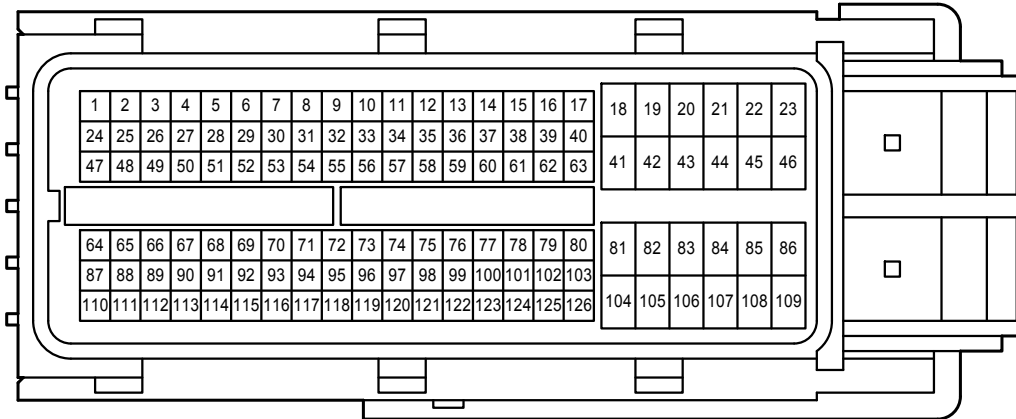


D 2
Gray

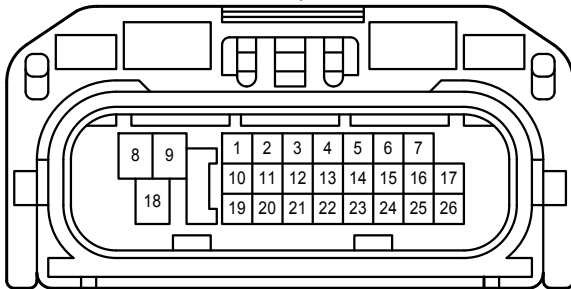


D 8
Gray

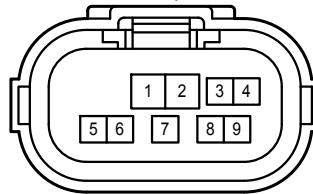


D 28
Black

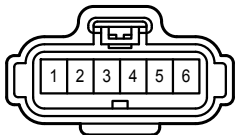


F 8
Black

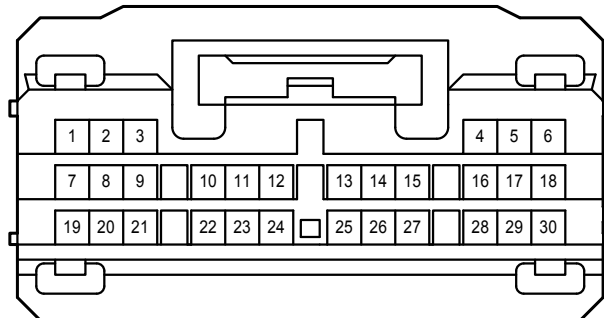


F 13
Black

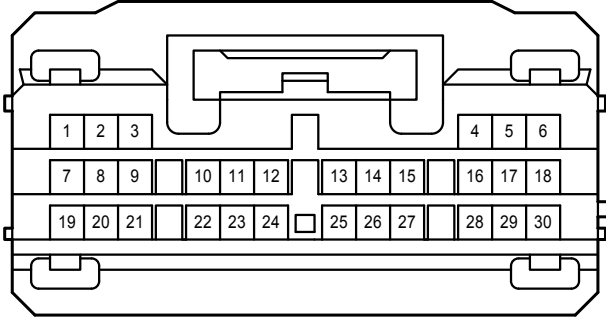


F 15
Black

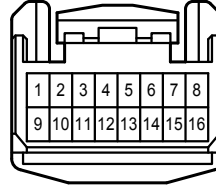


F 16
Black

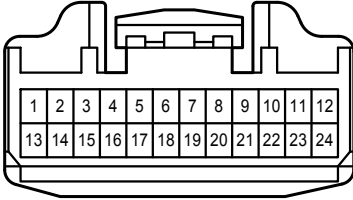


F 17
White

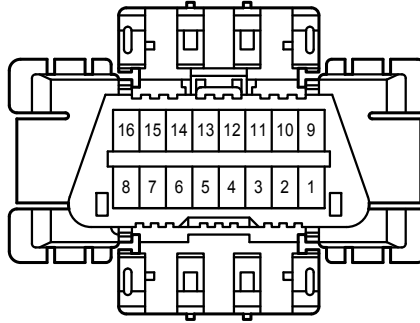


F 28
Black

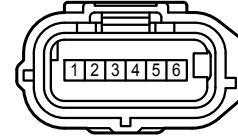


F 30
White

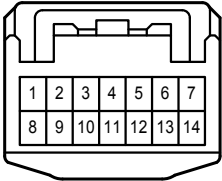


F 40
Black

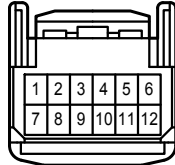


F 42
White

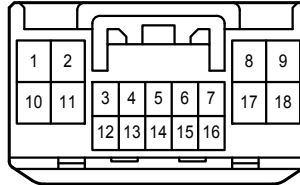


F 43
Blue

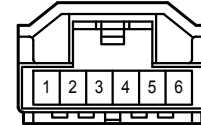


F 65
White

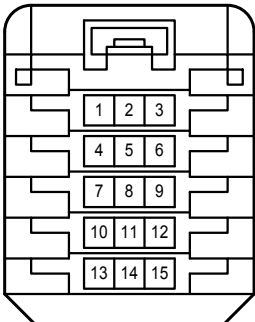


F 66
White

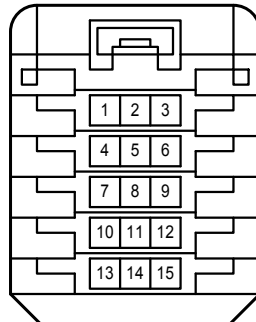


F 67
Black

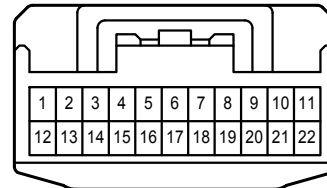


F 68
Black

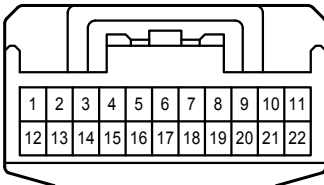


F 70
Blue

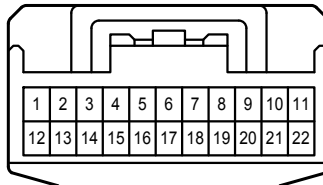


F 71
Blue

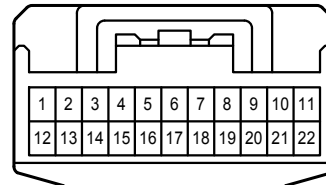


F 81
White

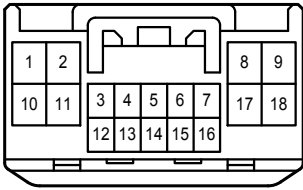


F 92
White

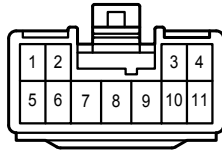


F 93
White

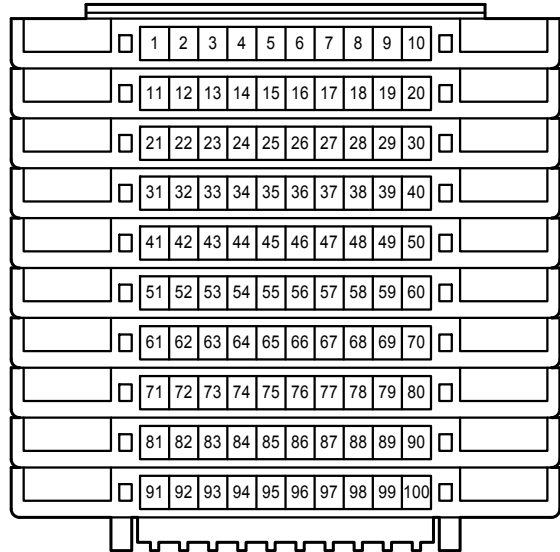


F 94
White

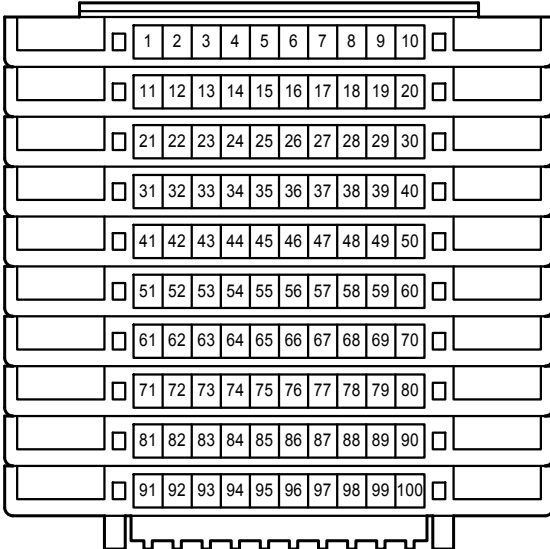


F101
Black

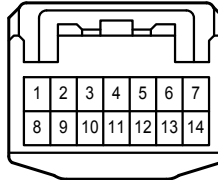


H 1
White

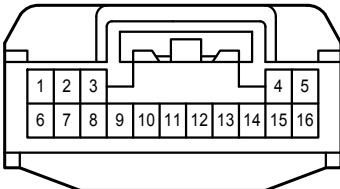


z 5
White

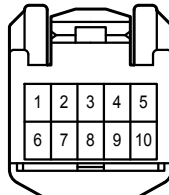


z 9
White




z 13
White

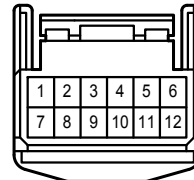


2A
White

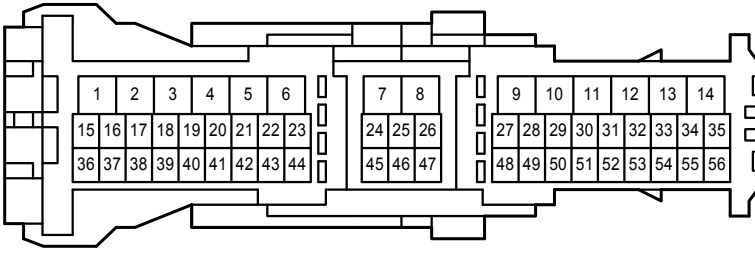


2D
White

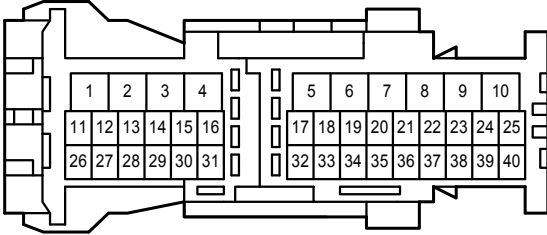


2F
White

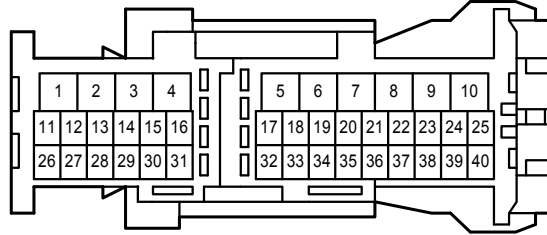


AB1
Black

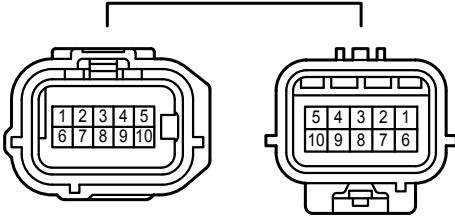


AC1
White

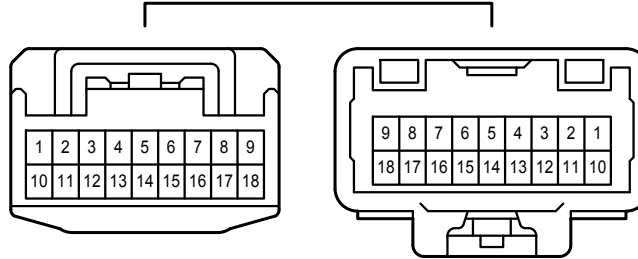


AF2
Black

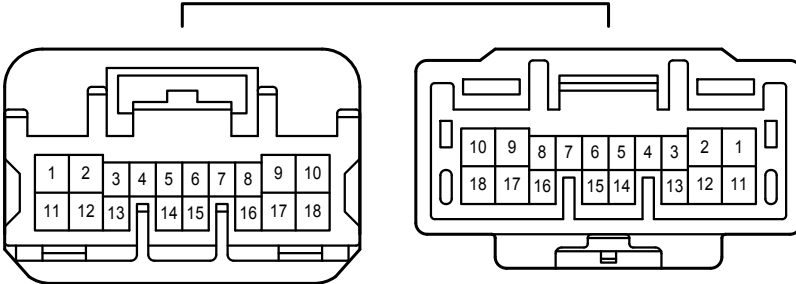


AF3
Blue

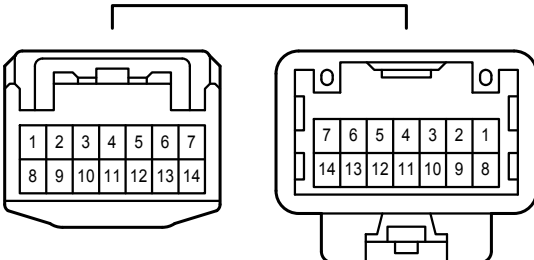


AF5
Blue

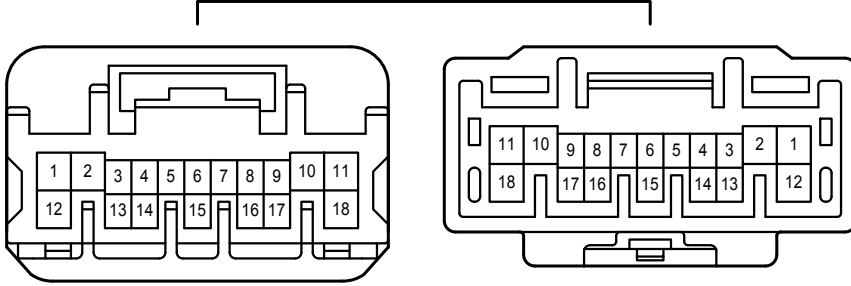


AF8
Blue

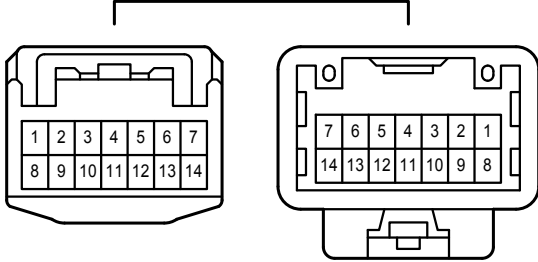


AF10
Black

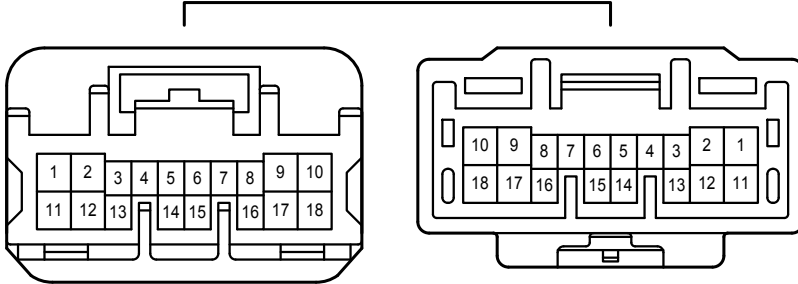

AF11
White

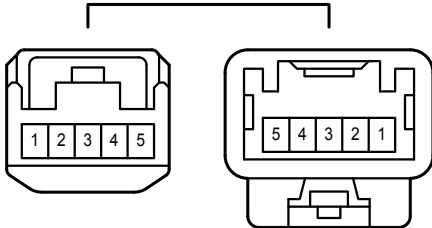

DA1
White

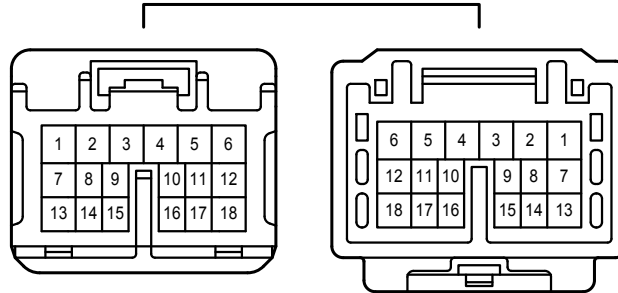

DA2
White

