


九 插头端子定义


1 高压系统

动力电池 (H02)

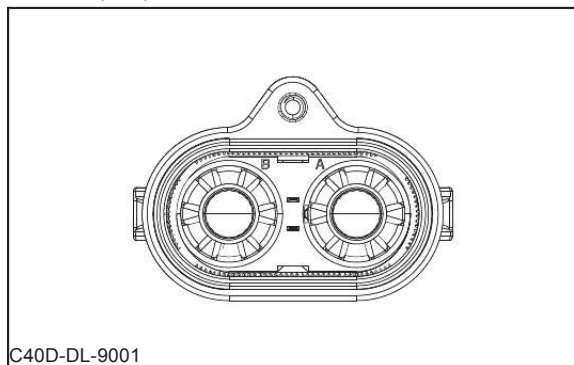


插座型号 :F02-50200E-PA7	
针脚编号	定义
A	+
B	-

快充接口 (H04)

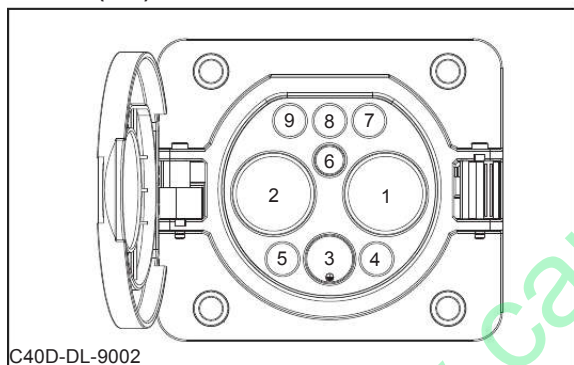


插座型号 :F08-630090-70L	
针脚编号	定义
1	+
2	-
3	PE
4	A+
5	A-
6	CC1
7	S+
8	CC2
9	S-

慢充接口 (H05)

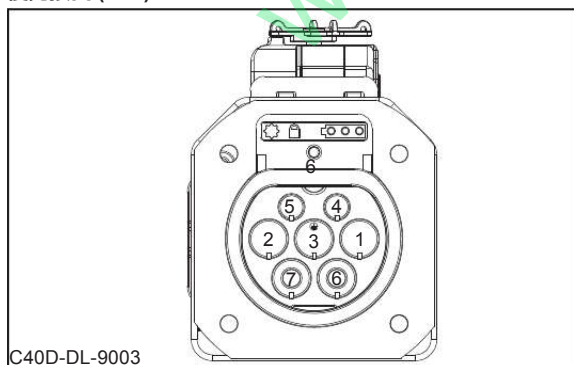


零件号 : BJEV-AVSS-1P-0232	
针脚编号	定义
1	L
2	N
3	PE
4	CC
5	CP
6	NC1
7	NC2

EAS(H07)

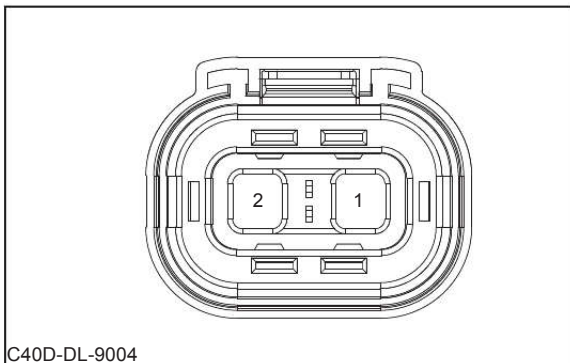


引脚编号	定义
1	+
2	-

PTC(H08)

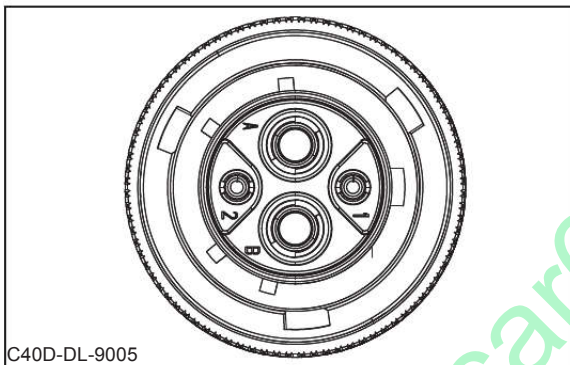


插座型号 :F02-110124-PN0	
引脚编号	定义
A	+
B	-
1	自锁
2	短接

PEU- 动力电池对接插头 (H09)

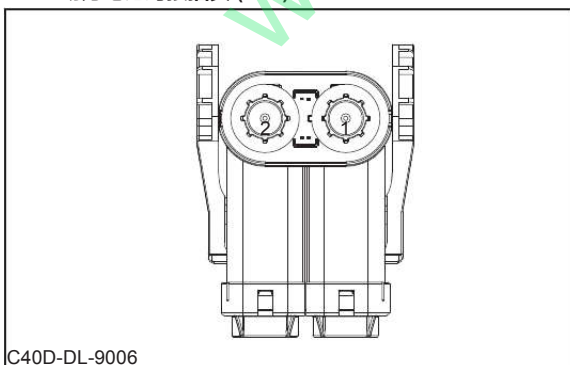


插座型号 :HVMC2P12FV150	
引脚编号	定义
1	+
2	-

PEU- 快充接口对接插头 (H10)

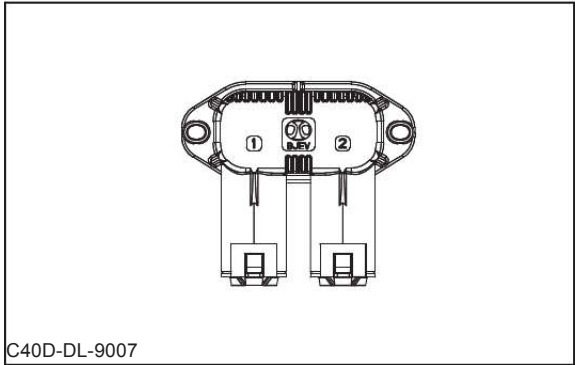


插座型号 :F02-51210E-PA8	
针脚编号	定义
1	-
2	+

PEU- 慢充接口对接插头 (H11)

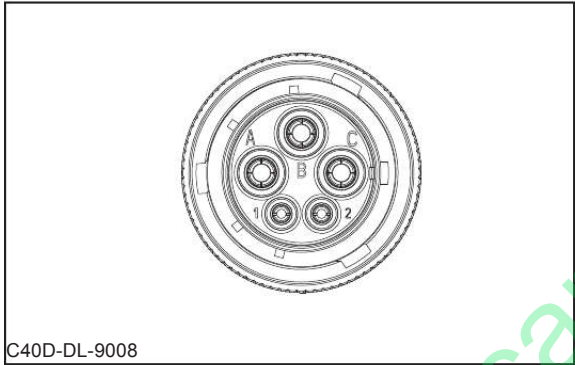


插座型号 :F02-100165-PN2	
针脚编号	定义
A	L
B	PE
C	N
1	-
2	-

PEU-EAS 对接插头 (H12)

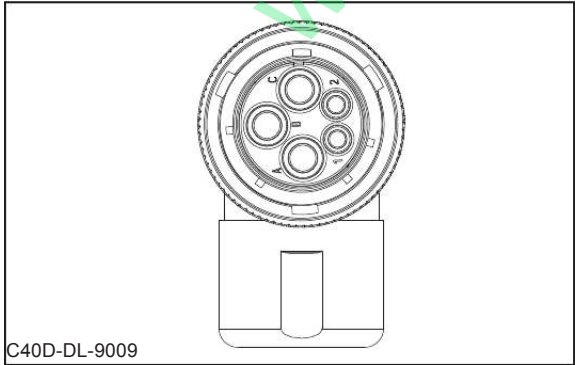

插座型号 :F02-111165-PX0S	
针脚编号	定义
A	+
B	
C	-
1	
2	

PEU-PTC 对接插头 (H13)

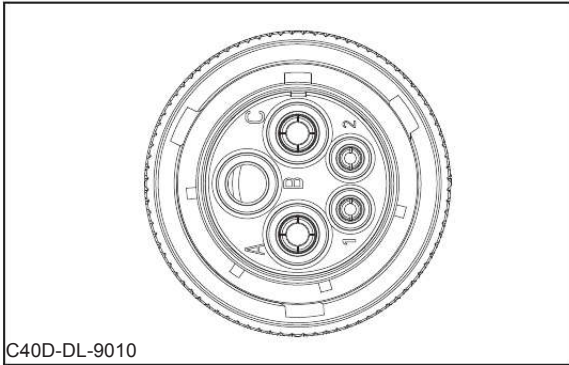

插座型号 :F02-110165-PY0S	
针脚编号	定义
A	+
B	-
C	
1	自锁
2	短接

www.car60.com