


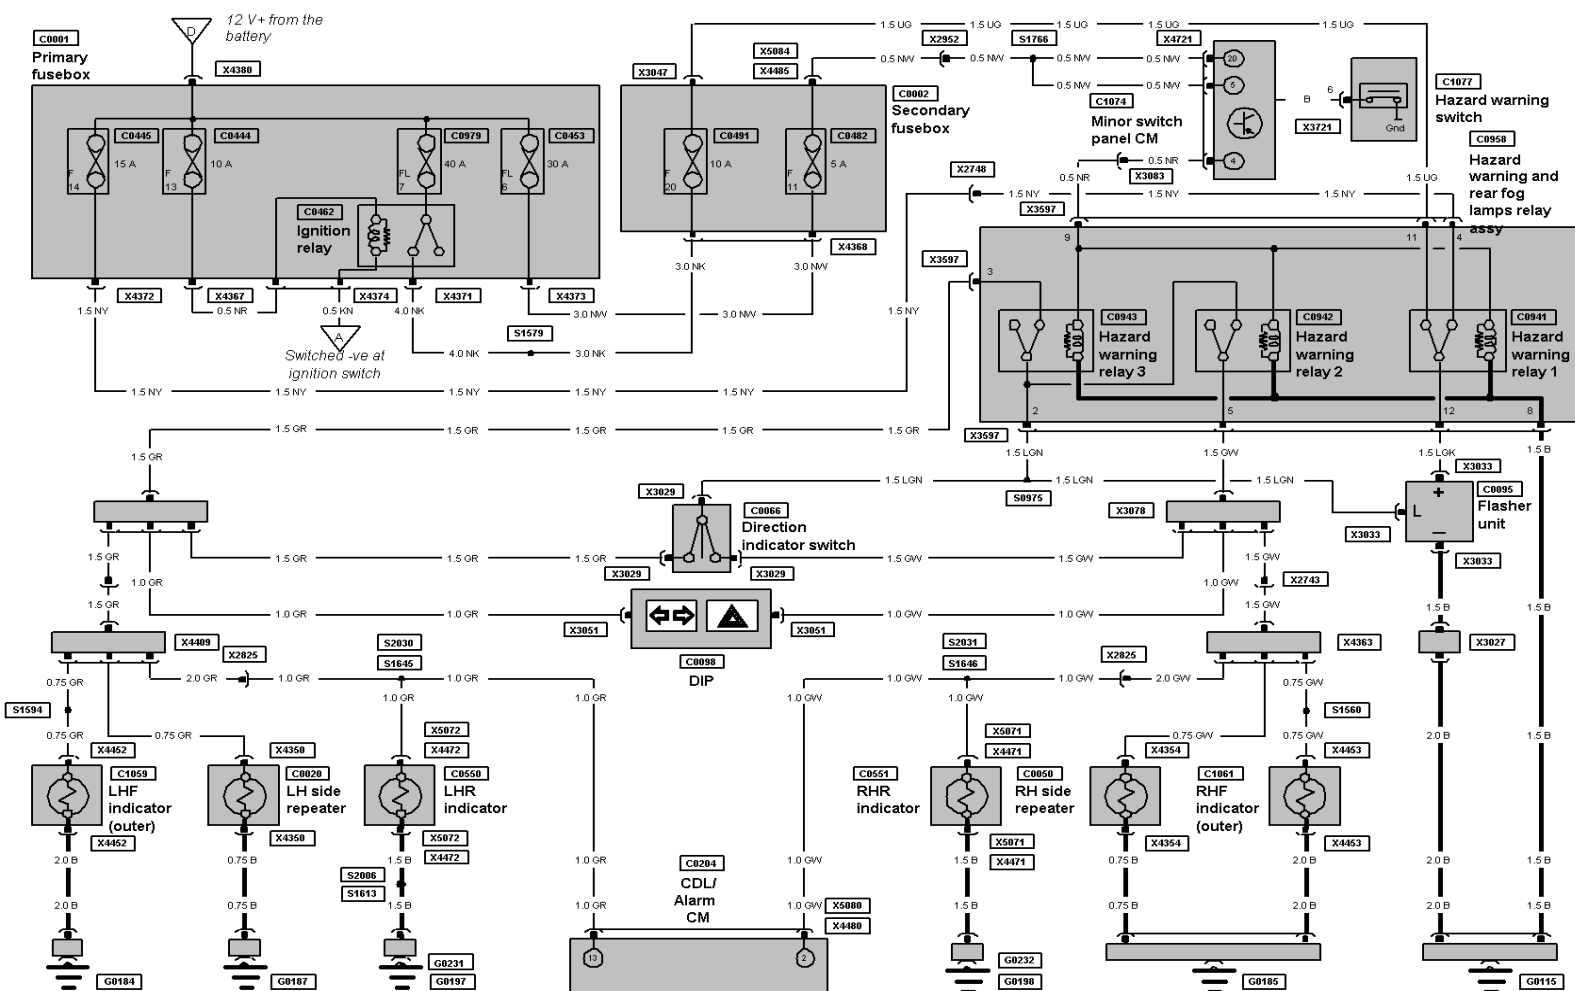


Electrical Circuit: 11 01 13: Indicators and hazards (LHD - other than USA market)

No	Description
C0001	Primary fusebox
C0002	Secondary fusebox
C0020	Left-hand side repeater lamp
C0050	Right-hand side repeater lamp
C0066	Direction indicators switch
C0095	Flasher unit
C0098	Driver's information panel
C0204	Centralised door locking/anti-theft alarm system control module
C0444	Fuse F13, 10 amp - primary fusebox
C0445	Fuse F14, 15 amp - primary fusebox
C0453	Fuse FL6, 30 amp - primary fusebox
C0462	Ignition relay - primary fusebox
C0482	Fuse F11, 5 amp - secondary fusebox
C0491	Fuse F20, 10 amp - secondary fusebox
C0550	Left-hand rear indicator lamp
C0551	Right-hand rear indicator lamp
C0941	Hazard warning relay 1
C0942	Hazard warning relay 2
C0943	Hazard warning relay 3
C0958	Hazard warning and rear fog lamps relay assembly
C0979	Fuse FL7, 40 amp - primary fusebox
C1059	Left-hand front indicator lamp - outer
C1061	Right-hand front indicator lamp - outer
C1074	Minor switch panel control module
C1077	Hazard warning switch
G0115	Ground point header connector 6-way
G0184	Ground point header connector 10-way
G0185	Ground point header connector 10-way
G0187	Ground point header connector 6-way
G0197	Ground point header connector 10-way
G0198	Ground point header connector 10-way
G0231	Ground point header connector 10-way
G0232	Ground point header connector 10-way
S0975	Splice - Light green/brown - left-hand drive facia loom
S1560	Splice - Green/white - front main loom
S1579	Splice - Brown/pink - front main loom
S1594	Splice - Green/red - front main loom
S1613	Splice - Black - rear main loom
S1645	Splice - Green/red - rear main loom
S1646	Splice - Green/white - rear main loom
S1766	Splice - Brown/white - console loom
S2006	Splice - Black - rear main loom
S2030	Splice - Green/red - rear main loom
S2031	Splice - Green/white - rear main loom
X2743	Front main loom to left-hand drive facia loom plug and socket 18-way
X2748	Front main loom to left-hand drive facia loom plug and socket 22-way
X2825	Front main loom to rear main loom plug and socket 22-way
X2952	Rear main loom to left-hand drive console loom plug and socket 20-way
X3027	Header connector 20-way
X3029	Direction indicators/headlamps switch connector 11-way

X3033	Flasher unit connector
X3047	Secondary fusebox connector 13-way
X3051	Driver's information panel connector 12-way
X3078	Header connector 20-way
X3083	Left-hand drive facia loom to console loom plug and socket 20-way
X3597	Hazard warning/rear fog lamps relay unit connector 12-way
X3721	Minor switch panel connector 18-way
X4350	Left-hand side repeater lamp connector 2-way
X4354	Right-hand side repeater lamp connector 2-way
X4363	Header connector 20-way
X4367	Primary fusebox connector 12-way
X4368	Secondary fusebox connector 4-way
X4371	Primary fusebox connector 3-way
X4372	Primary fusebox connector 6-way
X4373	Primary fusebox connector 7-way
X4374	Primary fusebox connector 18-way
X4380	Primary fusebox connector 2-way
X4409	Header connector 20-way
X4452	Left-hand outer headlamp connector 8-way
X4453	Right-hand outer headlamp connector 8-way
X4471	Right-hand rear lamp assembly connector 9-way
X4472	Left-hand rear lamp assembly connector 9-way
X4480	Centralised door locking/anti-theft alarm system control module connector 26-way
X4485	Secondary fusebox connector 9-way
X4721	Minor switch panel control module connector 20-way
X5071	Right-hand rear lamp assembly connector 9-way
X5072	Left-hand rear lamp assembly connector 9-way
X5080	Centralised door locking/anti-theft alarm system control module connector 26-way
X5084	Secondary fusebox connector 9-way

Circuit Links

Description	Circuit	Additional Information
D	050105	12 V+ from the battery
A		Switched -ve at ignition switch

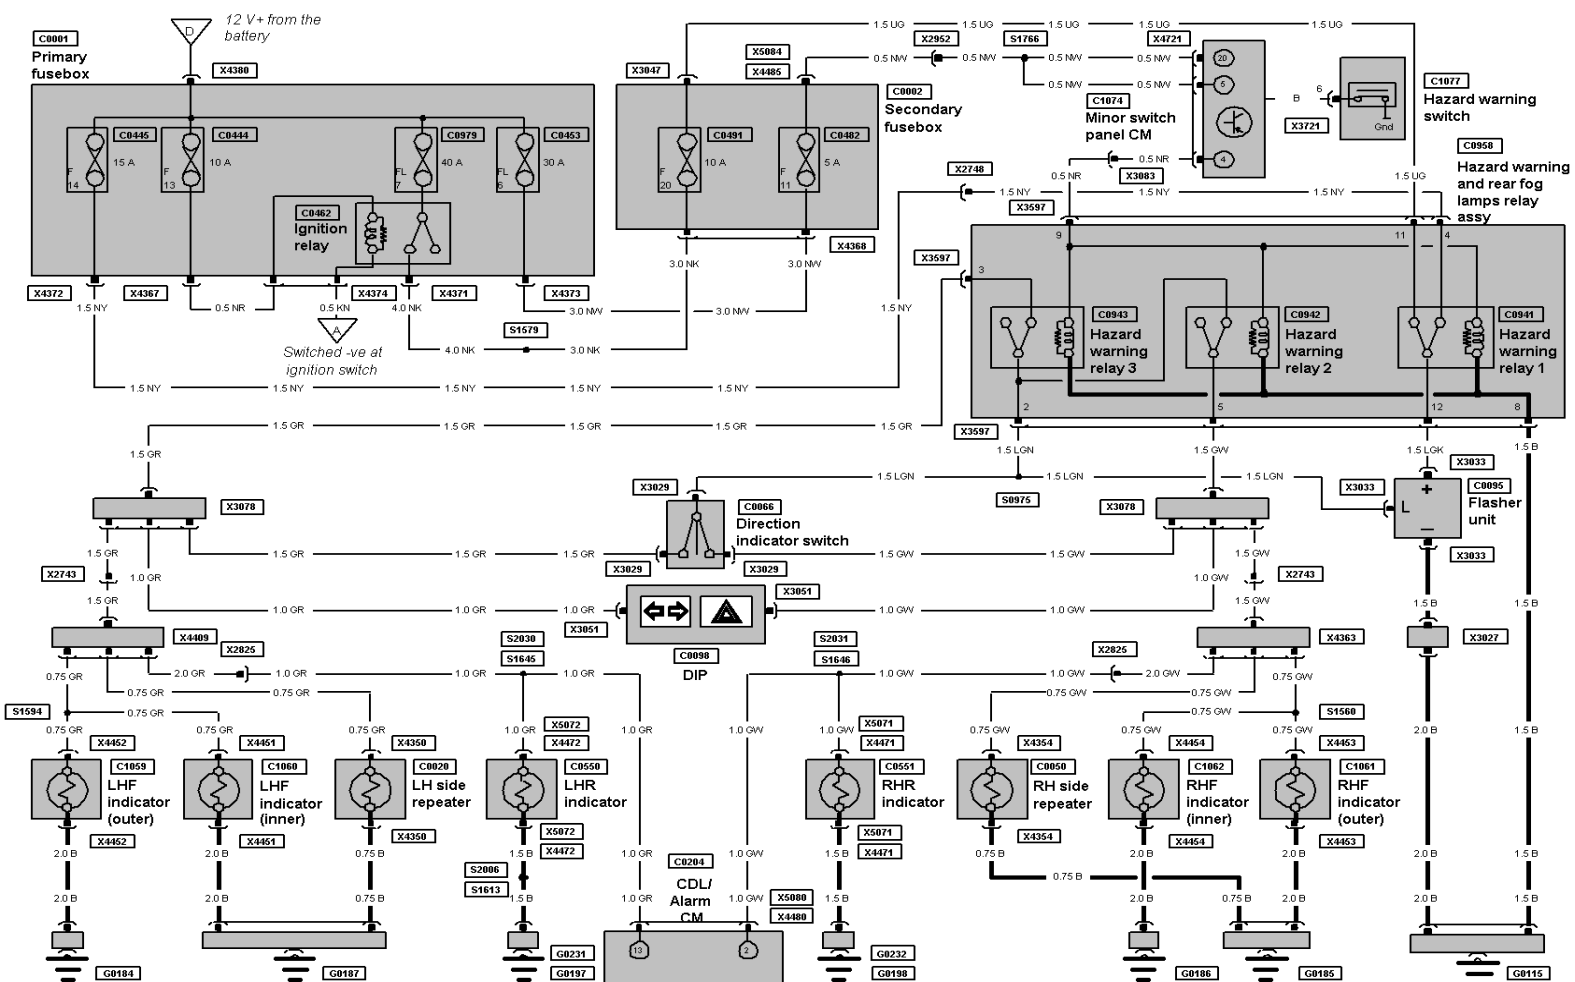

Electrical Circuit: 11 01 15: Indicators and hazards (LHD - USA market)

No	Description
C0001	Primary fusebox
C0002	Secondary fusebox
C0020	Left-hand side repeater lamp
C0050	Right-hand side repeater lamp
C0066	Direction indicators switch
C0095	Flasher unit
C0098	Driver's information panel
C0204	Centralised door locking/anti-theft alarm system control module
C0444	Fuse F13, 10 amp - primary fusebox
C0445	Fuse F14, 15 amp - primary fusebox
C0453	Fuse FL6, 30 amp - primary fusebox
C0462	Ignition relay - primary fusebox
C0482	Fuse F11, 5 amp - secondary fusebox
C0491	Fuse F20, 10 amp - secondary fusebox
C0550	Left-hand rear indicator lamp
C0551	Right-hand rear indicator lamp
C0941	Hazard warning relay 1
C0942	Hazard warning relay 2
C0943	Hazard warning relay 3
C0958	Hazard warning and rear fog lamps relay assembly
C0979	Fuse FL7, 40 amp - primary fusebox
C1059	Left-hand front indicator lamp - outer
C1060	Left-hand front indicator lamp - inner
C1061	Right-hand front indicator lamp - outer
C1062	Right-hand front indicator lamp - inner
C1074	Minor switch panel control module
C1077	Hazard warning switch
G0115	Ground point header connector 6-way
G0184	Ground point header connector 10-way
G0185	Ground point header connector 10-way
G0186	Ground point header connector 10-way
G0187	Ground point header connector 6-way
G0197	Ground point header connector 10-way
G0198	Ground point header connector 10-way
G0231	Ground point header connector 10-way
G0232	Ground point header connector 10-way
S0975	Splice - Light green/brown - left-hand drive facia loom
S1560	Splice - Green/white - front main loom
S1579	Splice - Brown/pink - front main loom
S1594	Splice - Green/red - front main loom
S1613	Splice - Black - rear main loom
S1645	Splice - Green/red - rear main loom
S1646	Splice - Green/white - rear main loom
S1766	Splice - Brown/white - console loom
S2006	Splice - Black - rear main loom
S2030	Splice - Green/red - rear main loom
S2031	Splice - Green/white - rear main loom
X2743	Front main loom to left-hand drive facia loom plug and socket 18-way
X2748	Front main loom to left-hand drive facia loom plug and socket 22-way
X2825	Front main loom to rear main loom plug and socket 22-way
X2952	Rear main loom to left-hand drive console loom plug and socket 20-way

X3027	Header connector 20-way
X3029	Direction indicators/headlamps switch connector 11-way
X3033	Flasher unit connector
X3047	Secondary fusebox connector 13-way
X3051	Driver's information panel connector 12-way
X3078	Header connector 20-way
X3083	Left-hand drive facia loom to console loom plug and socket 20-way
X3597	Hazard warning/rear fog lamps relay unit connector 12-way
X3721	Minor switch panel connector 18-way
X4350	Left-hand side repeater lamp connector 2-way
X4354	Right-hand side repeater lamp connector 2-way
X4363	Header connector 20-way
X4367	Primary fusebox connector 12-way
X4368	Secondary fusebox connector 4-way
X4371	Primary fusebox connector 3-way
X4372	Primary fusebox connector 6-way
X4373	Primary fusebox connector 7-way
X4374	Primary fusebox connector 18-way
X4380	Primary fusebox connector 2-way
X4409	Header connector 20-way
X4451	Left-hand inner headlamp connector 8-way
X4452	Left-hand outer headlamp connector 8-way
X4453	Right-hand outer headlamp connector 8-way
X4454	Right-hand inner headlamp connector 8-way
X4471	Right-hand rear lamp assembly connector 9-way
X4472	Left-hand rear lamp assembly connector 9-way
X4480	Centralised door locking/anti-theft alarm system control module connector 26-way
X4485	Secondary fusebox connector 9-way
X4721	Minor switch panel control module connector 20-way
X5071	Right-hand rear lamp assembly connector 9-way
X5072	Left-hand rear lamp assembly connector 9-way
X5080	Centralised door locking/anti-theft alarm system control module connector 26-way
X5084	Secondary fusebox connector 9-way

Circuit Links

Description	Circuit	Additional Information
D	050105	12 V+ from the battery
A		Switched -ve at ignition switch