


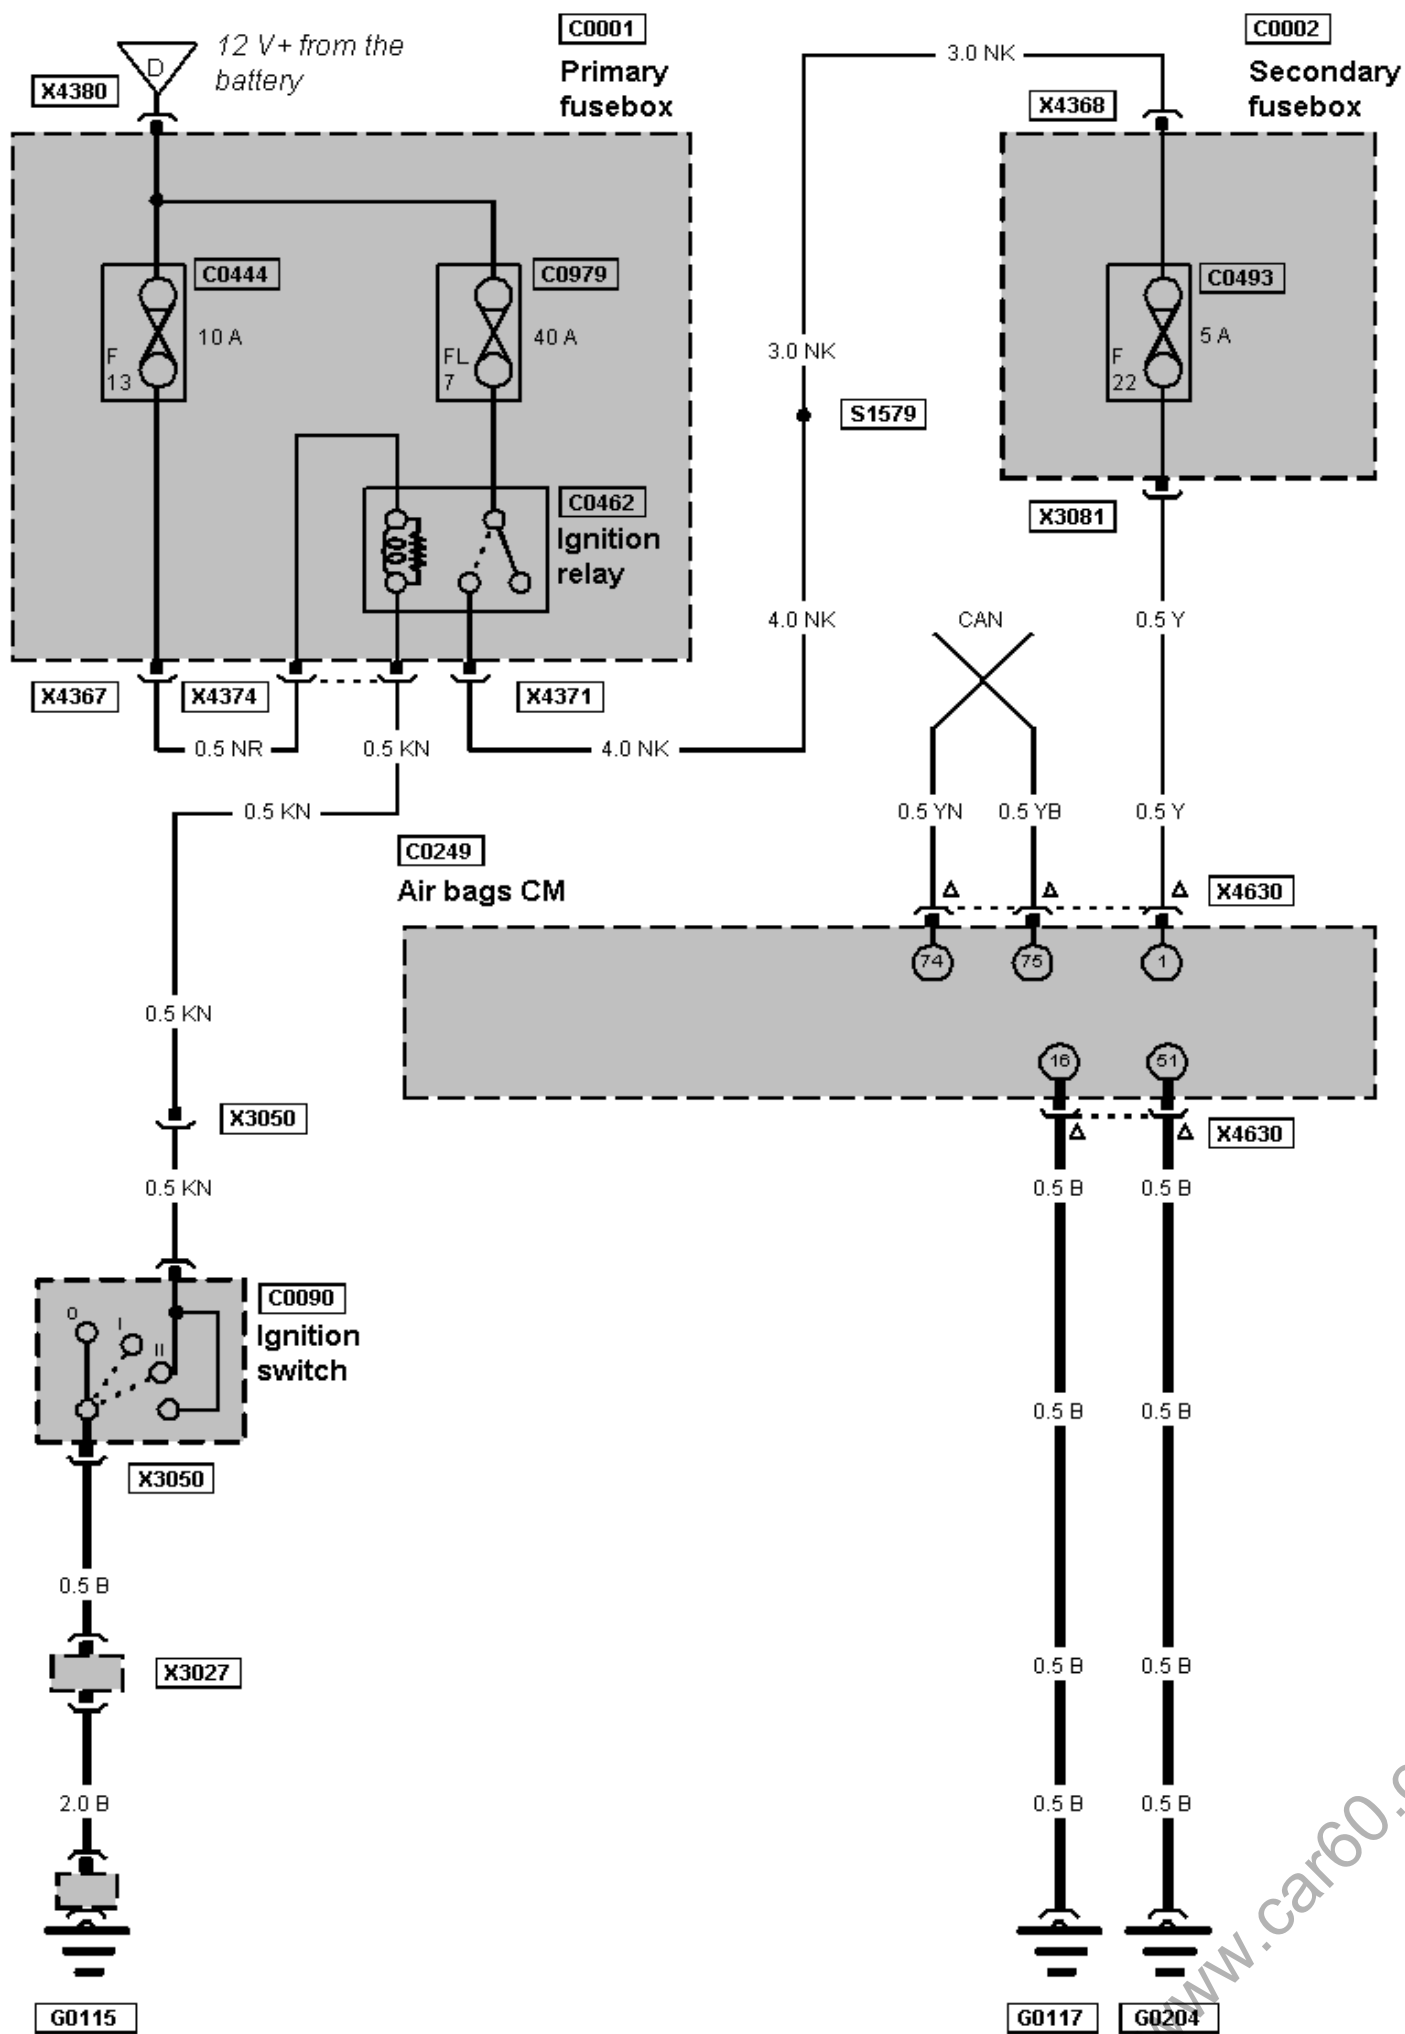


Electrical Circuit: 23 01 25: Power supply and grounds (other than USA market) LHD

No	Description
C0001	Primary fusebox
C0002	Secondary fusebox
C0090	Ignition switch
C0249	Air bags control module
C0444	Fuse F13, 10 amp - primary fusebox
C0462	Ignition relay - primary fusebox
C0979	Fuse FL7, 40 amp - primary fusebox
G0115	Ground point header connector 6-way
G0117	Ground point connector
G0204	Air bag Control Module ground 2
S1579	Splice - Brown/pink - front main loom
X3027	Header connector 20-way
X3050	Switchbox connector 26-way
X3081	Secondary fusebox connector 3-way
X4367	Primary fusebox connector 12-way
X4368	Secondary fusebox connector 4-way
X4371	Primary fusebox connector 3-way
X4374	Primary fusebox connector 18-way
X4380	Primary fusebox connector 2-way
X4630	Air bags control module connector 75-way

Circuit Links

Description	Circuit	Additional Information
D	050105	12 V+ from the battery

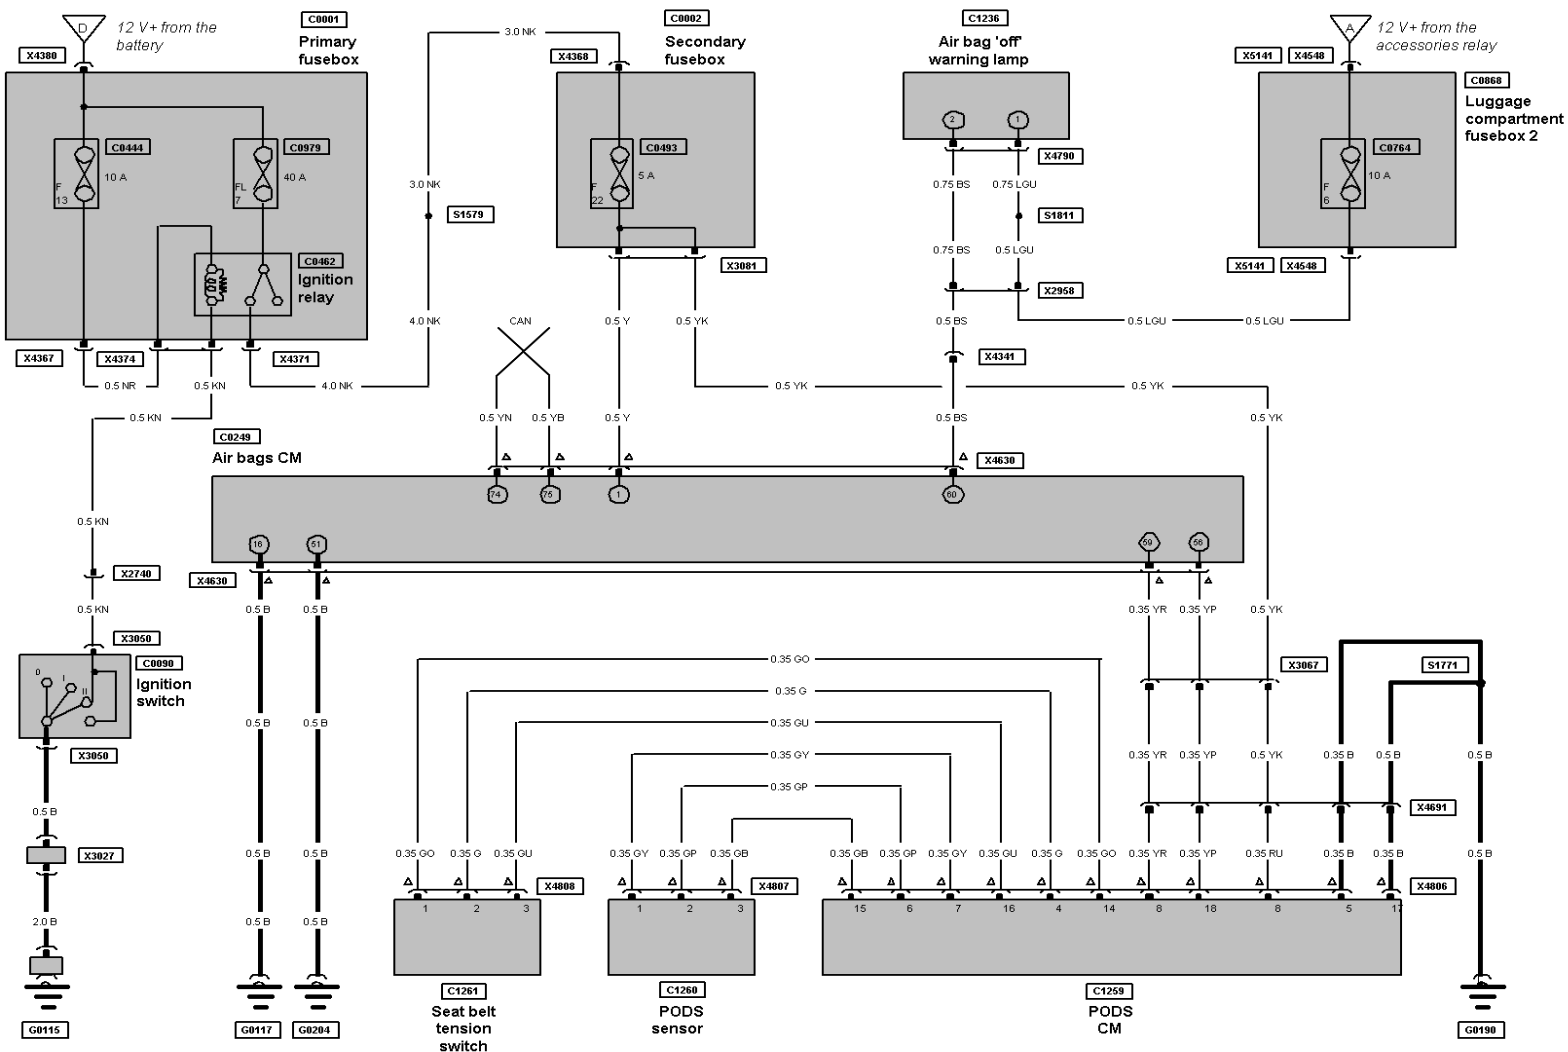


Electrical Circuit: 23 01 26: Power supply, grounds, air bag 'off' warning lamp and passenger occupant detection system (USA market) LHD

No	Description
C0001	Primary fusebox
C0002	Secondary fusebox
C0090	Ignition switch
C0249	Air bags control module
C0444	Fuse F13, 10 amp - primary fusebox
C0462	Ignition relay - primary fusebox
C0493	Fuse F22, 5 amp - secondary fusebox
C0764	Fuse F6, 10 amp - luggage compartment fusebox
C0868	Luggage compartment fusebox 2
C0979	Fuse FL7, 40 amp - primary fusebox
C1236	Air bag 'off' warning lamp
C1259	Passenger occupant detection system control module
C1260	Passenger occupant detection system sensor
C1261	Seat belt tension switch
G0115	Ground point header connector 6-way
G0117	Ground point connector
G0190	Ground point connector
G0204	Air bag Control Module ground 2
S1579	Splice - Brown/pink - front main loom
S1771	Splice - Black - console loom
S1811	Splice - light Green/blue - roof loom
X2740	Front main loom to left-hand drive facia loom plug and socket 23-way
X2958	Rear main loom to roof loom plug and socket 12-way
X3027	Header connector 20-way
X3050	Switchbox connector 26-way
X3067	Left-hand drive facia loom to console loom plug and socket 18-way
X3081	Secondary fusebox connector 3-way
X4341	Rear main loom to left hand facia loom plug and socket 17-way
X4367	Primary fusebox connector 12-way
X4368	Secondary fusebox connector 4-way
X4371	Primary fusebox connector 3-way
X4374	Primary fusebox connector 18-way
X4380	Primary fusebox connector 2-way
X4548	Luggage compartment fuseblock connector 12-way
X4630	Air bags control module connector 75-way
X4691	Left-hand drive console loom to PODS loom plug and socket 5-way
X4790	Passenger air bag off warning lamp connector 2-way
X4806	PODS control module connector 18-way
X4807	PODS pressure sensor connector 3-way
X4808	PODS seat belt connector 3-way
X5141	Luggage compartment fuseblock connector 12-way

Circuit Links

Description	Circuit	Additional Information
A		12 V+ from the accessories relay
D	050105	12 V+ from the battery

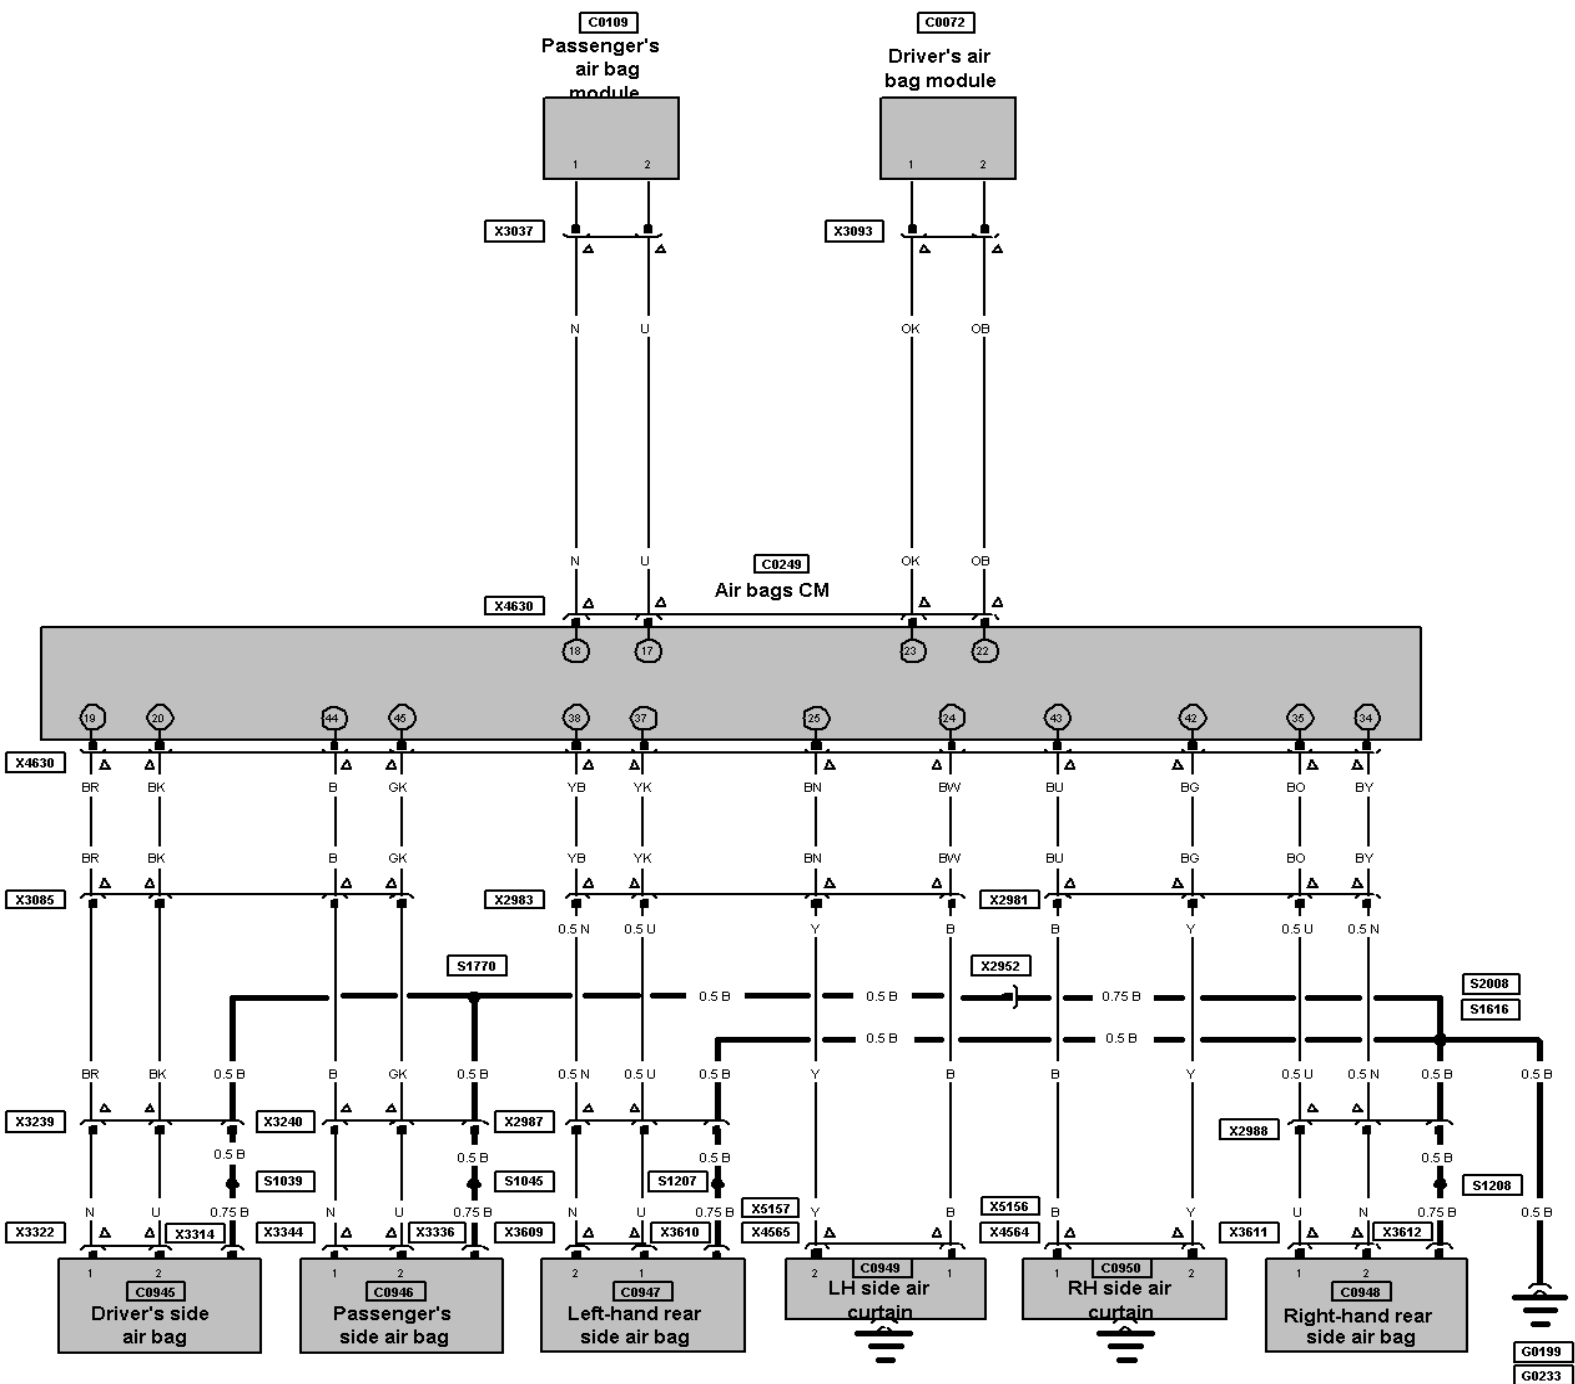


Electrical Circuit: 23 01 28: Air bags and side air curtains LHD Bentley Arnage T and R

No	Description
C0072	Driver's air bag module
C0109	Passenger's air bag module
C0249	Air bags control module
C0945	Driver's side air bag
C0946	Passenger's side air bag
C0947	Left-hand rear side air bag
C0948	Right-hand rear side air bag
C0949	Left-hand side air curtain
C0950	Right-hand side air curtain
G0199	Ground point connector
G0233	Ground point connector
S1039	Splice - Black - side air bags link loom
S1045	Splice - Black - side air bags link loom
S1207	Splice - Black - side air bags link loom
S1208	Splice - Black - side air bags link loom
S1616	Splice - Black - rear main loom
S1770	Splice - Black - console loom
S2008	Splice - Black - rear main loom
X2952	Rear main loom to left-hand drive console loom plug and socket 20-way
X2981	Rear main loom to left-hand drive facia loom plug and socket 4-way
X2983	Rear main loom to left-hand drive facia loom plug and socket 4-way
X2987	Rear main loom to left-hand rear side air bag link loom plug and socket 4-way
X2988	
X3037	Passenger's air bag module connector 2-way
X3085	Left-hand drive facia loom to console loom plug and socket 4-way
X3093	Left-hand drive facia loom to rotary coupler plug and socket 5-way
X3239	Left-hand drive console loom to driver's side air bag link loom plug and socket 4-way
X3240	Left-hand drive console loom to front passenger's side air bag link loom plug and socket 4-way
X3314	Driver's side air bag connector
X3322	Driver's side air bag connector 2-way
X3336	Front passenger's side air bag connector
X3344	Front passenger's side air bag connector 2-way
X3609	Left-hand rear passenger's side air bag connector 2-way
X3610	Left-hand rear passenger's side air bag connector
X3611	Right-hand rear passenger's side air bag connector 2-way
X3612	Right-hand rear passenger's side air bag connector
X4564	Right-hand side air curtain connector 2-way
X4565	Left-hand side air curtain connector 2-way
X4630	Air bags control module connector 75-way
X5156	Right-hand side air curtain connector 2-way
X5157	1

Circuit Links

Description	Circuit	Additional Information
-------------	---------	------------------------

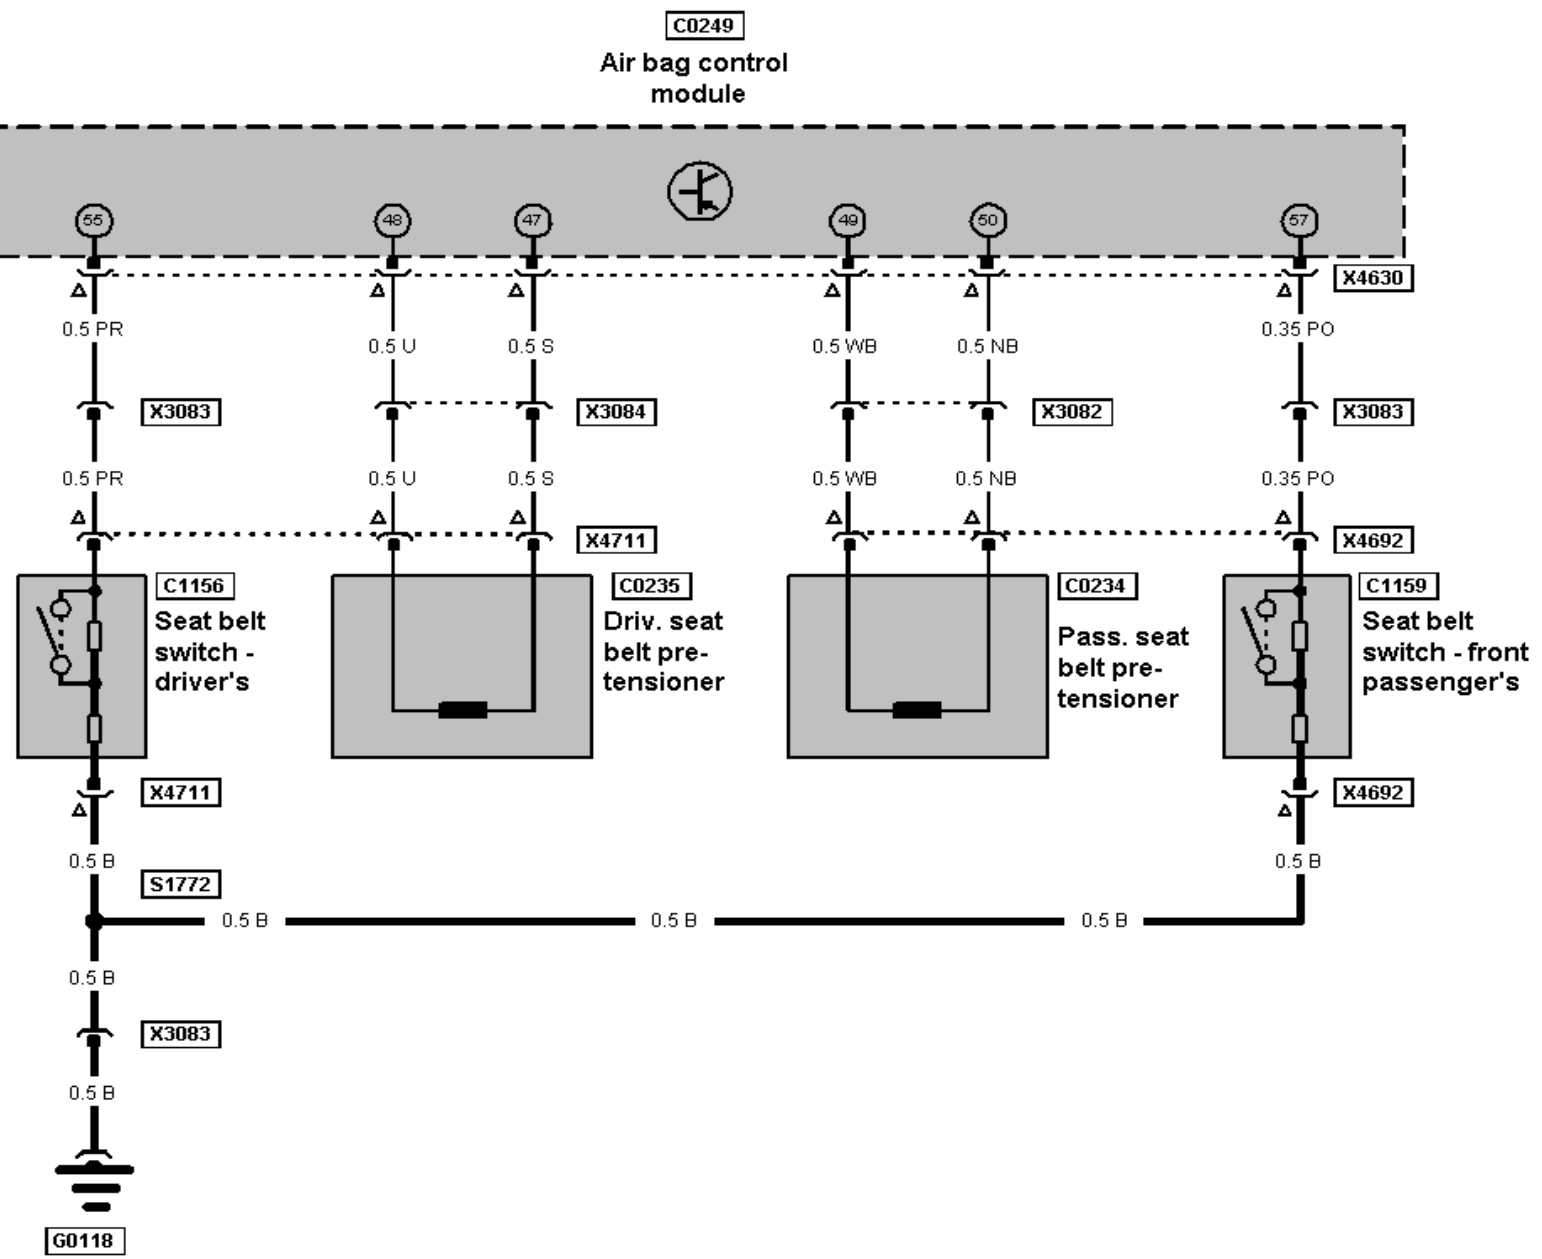


Electrical Circuit: 23 01 32: Seat belt switches and seat belt tensioners LHD

No	Description
C0234	Passenger's seat belt pre-tensioner unit
C0235	Driver's seat belt pre-tensioner unit
C0249	Air bags control module
C1156	Seat belt switch - driver's
C1159	Seat belt switch - front passenger's
G0118	Ground point connector
S1772	Splice - Black - console loom
X3082	Left-hand drive facia loom to console loom plug and socket 2-way
X3083	Left-hand drive facia loom to console loom plug and socket 20-way
X3084	Left-hand drive facia loom to console loom plug and socket 2-way
X4630	Air bags control module connector 75-way
X4692	Passenger's seat belt switch connector 4-way
X4711	Driver's seat belt pre-tensioner connector 4-way

Circuit Links

Description	Circuit	Additional Information
-------------	---------	------------------------

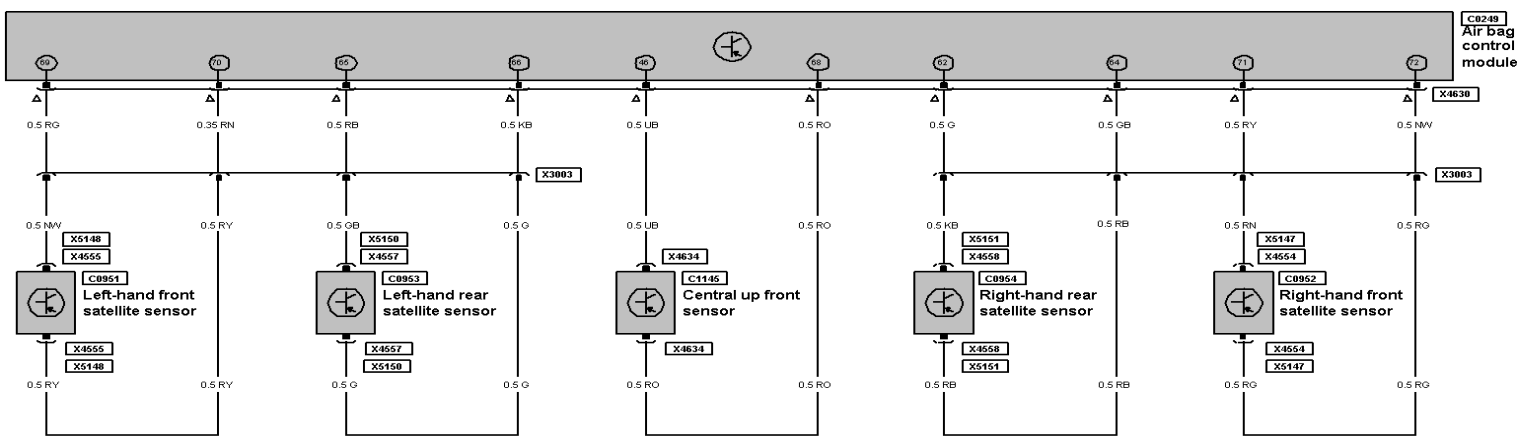

Electrical Circuit: 23 01 34: Air bag crash sensors LHD

No	Description
C0249	Air bags control module
C0951	Left-hand front satellite sensor
C0952	Right-hand front satellite sensor
C0953	Left-hand rear satellite sensor
C0954	Right-hand rear satellite sensor
C1145	Driver's up front air bag sensor
X3003	Rear main loom to left-hand drive facia loom plug and socket 14-way
X4554	Right-hand front crash sensor connector 3-way
X4555	Left-hand front crash sensor connector 3-way
X4557	Left-hand rear crash sensor connector 3-way
X4558	Right-hand rear crash sensor connector 3-way
X4630	Air bags control module connector 75-way
X4634	Driver's up front air bag sensor connector 2-way
X5147	Right-hand front crash sensor connector 3-way
X5148	Left-hand front crash sensor connector 3-way
X5150	Left-hand rear crash sensor connector 3-way
X5151	Right-hand rear crash sensor connector 3-way

Circuit Links

Description	Circuit	Additional Information
-------------	---------	------------------------