



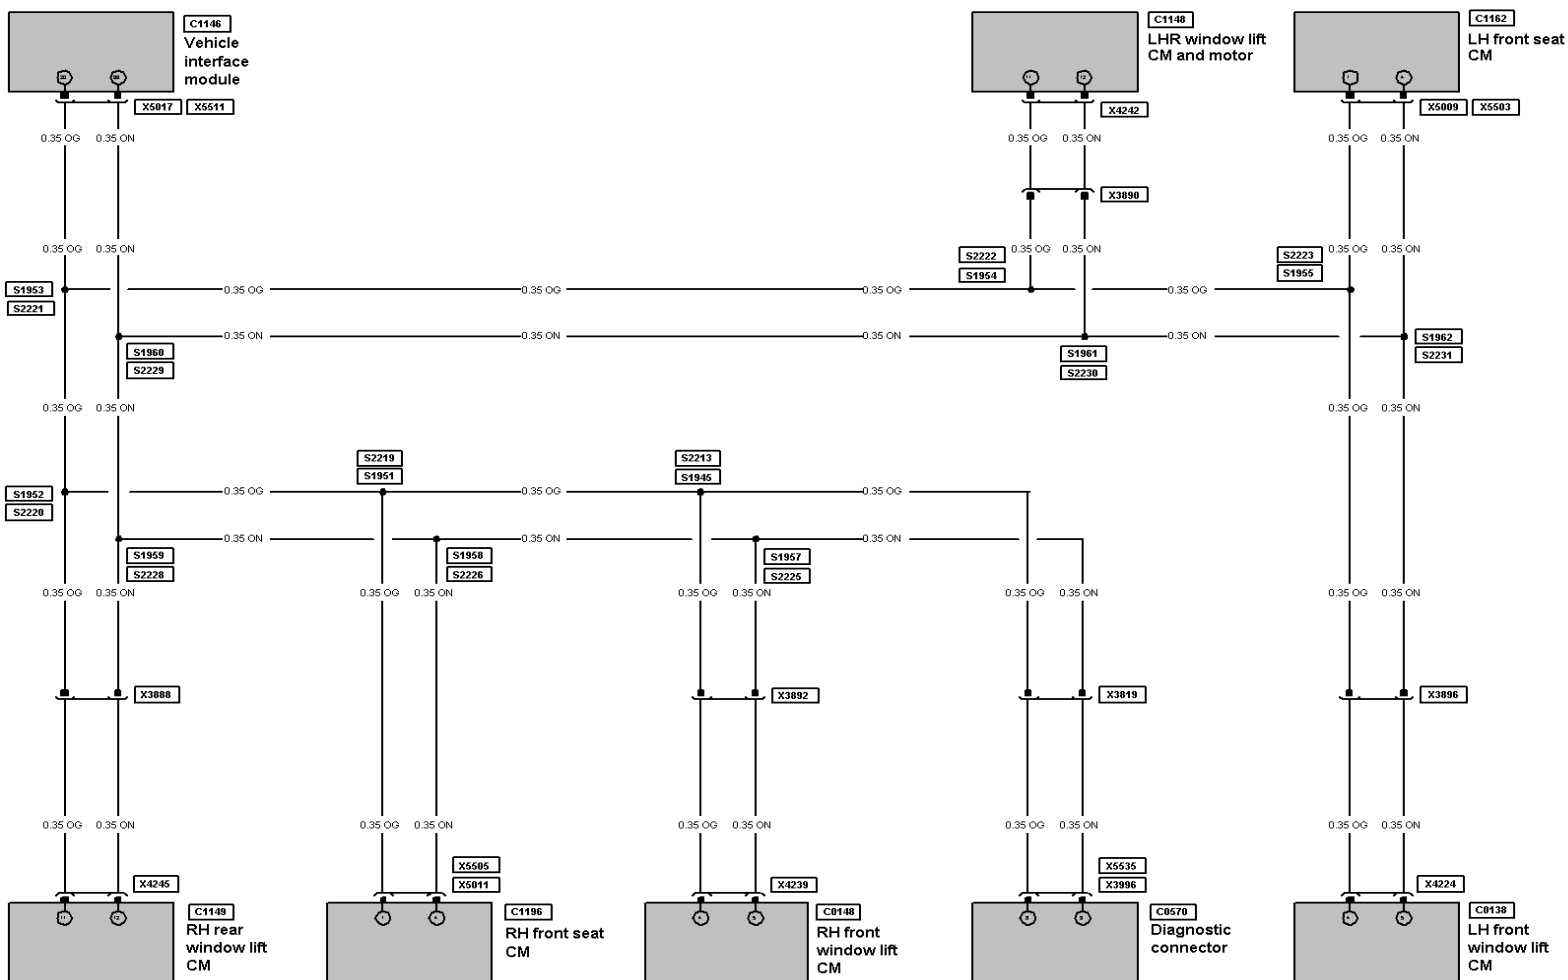

Electrical Circuit: 04 01 23: Comfort bus (LHD)

No	Description
C0138	Left-hand front door window lift motor and control module
C0148	Right-hand front door window lift motor and control module
C0570	Diagnostic connector
C1146	Vehicle interface (Rear body) module
C1148	Left-hand rear window lift motor and control module
C1149	Right-hand rear window lift motor and control module
C1162	Driver's seat control module
C1196	Passenger's seat control module
S1945	Splice - Orange/green - rear main loom
S1951	Splice - Orange/green - rear main loom
S1952	Splice - Orange/green - rear main loom
S1953	Splice - Orange/green - rear main loom
S1954	Splice - Orange/green - rear main loom
S1955	Splice - Orange/green - rear main loom
S1957	Splice - Orange/brown - rear main loom
S1958	Splice - Orange/brown - rear main loom
S1959	Splice - Orange/brown - rear main loom
S1960	Splice - Orange/brown - rear main loom
S1961	Splice - Orange/brown - rear main loom
S1962	Splice - Orange/brown - rear main loom
S2213	Splice - Black - rear main loom
S2219	Splice - Orange/green - rear main loom
S2220	Splice - Orange/green - rear main loom
S2221	Splice - Orange/green - rear main loom
S2222	Splice - Orange/green - rear main loom
S2223	Splice - Orange/green - rear main loom
S2225	Splice - Orange/brown - rear main loom
S2226	Splice - Orange/brown - rear main loom
S2228	Splice - Orange/brown - rear main loom
S2229	Splice - Orange/brown - rear main loom
S2230	Splice - Orange/brown - rear main loom
S2231	Splice - Orange/brown - rear main loom
X3819	Rear main loom to left-hand drive facia loom plug and socket 14-way
X3888	Rear main loom to right-hand rear quarter loom plug and socket 10-way
X3890	Rear main loom to left-hand rear quarter loom plug and socket 10-way
X3892	Rear main loom to right-hand door loom plug and socket 10-way
X3896	Rear main loom to left-hand door loom plug and socket 10-way
X3996	Diagnostic connector 16-way
X4224	Left-hand front window lift control module connector 10-way
X4239	Right-hand front window lift control module connector 10-way
X4242	Left-hand rear window lift control module connector 18-way
X4245	Right-hand rear window lift control module connector 18-way
X5009	Left-hand front seat control module connector 6-way
X5011	Right-hand front seat control module connector 6-way
X5017	Vehicle interface module connector 81-way
X5503	Left-hand front seat control module connector 6-way
X5505	Right-hand front seat control module connector 6-way
X5511	Vehicle interface module connector 81-way
X5535	Diagnostic connector 16-way

Description	Circuit	Additional Information
-------------	---------	------------------------

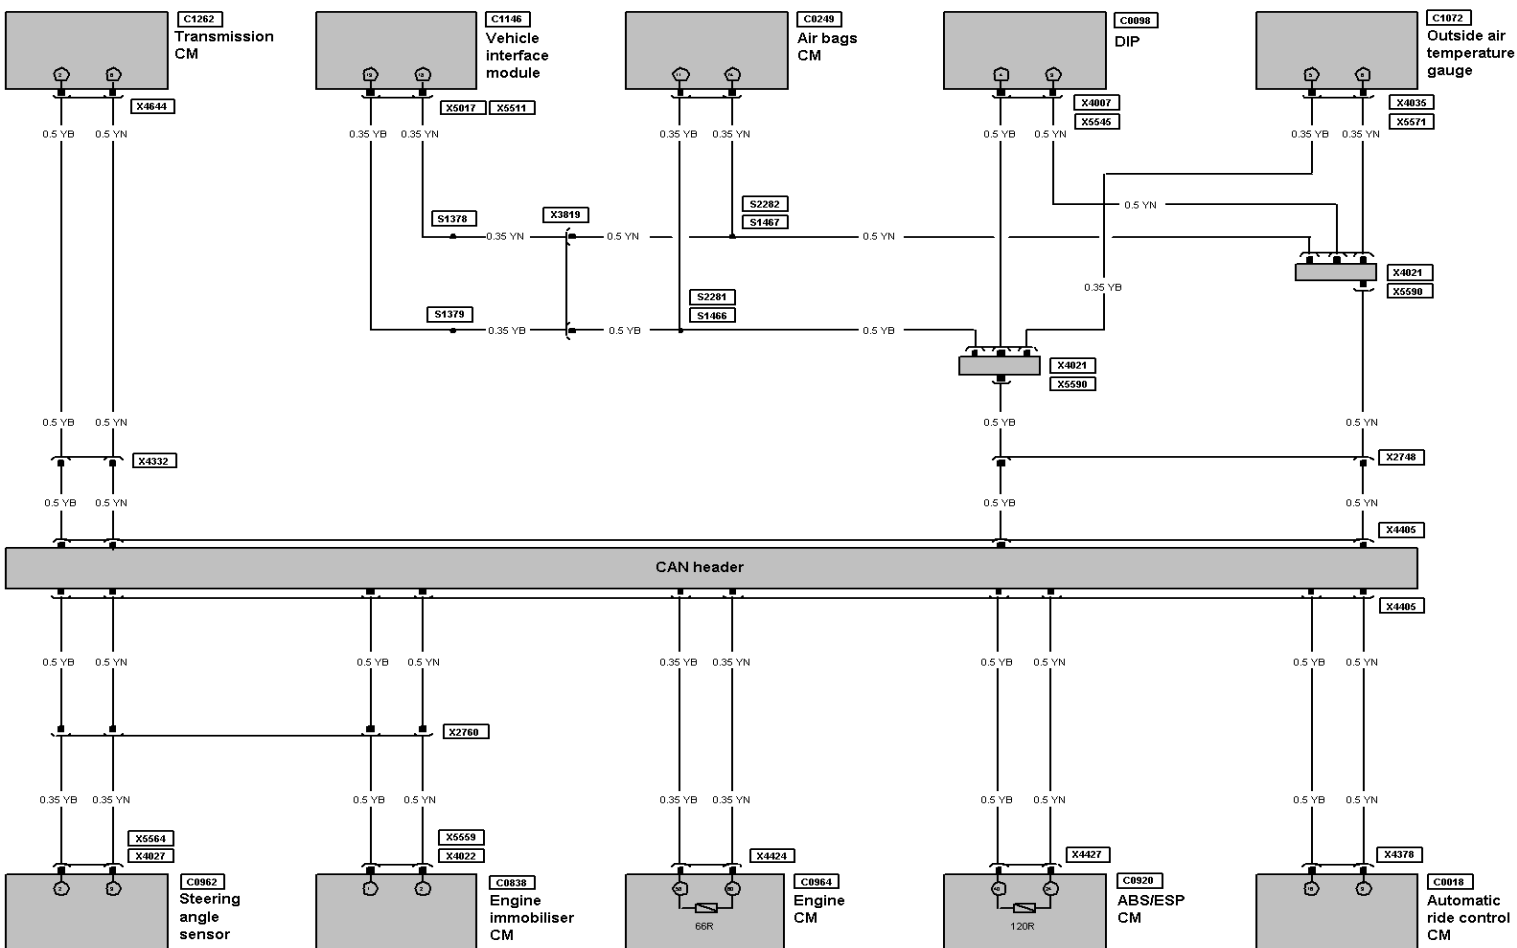


Electrical Circuit: 04 01 25: Powertrain bus (LHD)

No	Description
C0018	Automatic ride control control module
C0098	Driver's information panel
C0249	Air bags control module
C0838	Engine immobiliser control module
C0920	Anti-locking braking system/Electronic stability programme control module
C0962	Steering angle sensor
C0964	Engine control module
C1072	Outside air temperature gauge
C1146	Vehicle interface (Rear body) module
C1262	Transmission control module
S1378	Splice - Yellow/brown - rear main loom
S1379	Splice - Yellow/black - rear main loom
S1466	Splice - Yellow/black - left-hand drive facia loom
S1467	Splice - Yellow/brown - left-hand drive facia loom
S2281	Splice - Yellow/black - left-hand drive facia loom
S2282	Splice - Yellow/brown - left-hand drive facia loom
X2748	Front main loom to left-hand drive facia loom plug and socket 22-way
X2760	Front main loom to left-hand drive facia loom plug and socket 20-way
X3819	Rear main loom to left-hand drive facia loom plug and socket 14-way
X4007	Driver's information panel connector 12-way
X4021	Header connector 20-way
X4022	Engine immobiliser control module connector 10-way
X4027	Steering angle sensor connector 6-way
X4035	Outside air temperature gauge connector 6-way
X4332	Front main loom to engine loom plug and socket 17-way - green
X4378	Automatic ride control control module connector 26-way
X4405	Header connector 20-way
X4424	Engine control module connector 81-way
X4427	Anti-locking braking system/Electronic stability programme control module connector 42-way
X4644	Transmission control module connector 16-way
X5017	Vehicle interface module connector 81-way
X5511	Vehicle interface module connector 81-way
X5545	Driver's information panel connector 12-way
X5559	Engine immobiliser control module connector 10-way
X5564	Steering angle sensor connector 6-way
X5571	Outside air temperature gauge connector 6-way
X5590	Header connector 20-way

Circuit Links

Description	Circuit	Additional Information
-------------	---------	------------------------

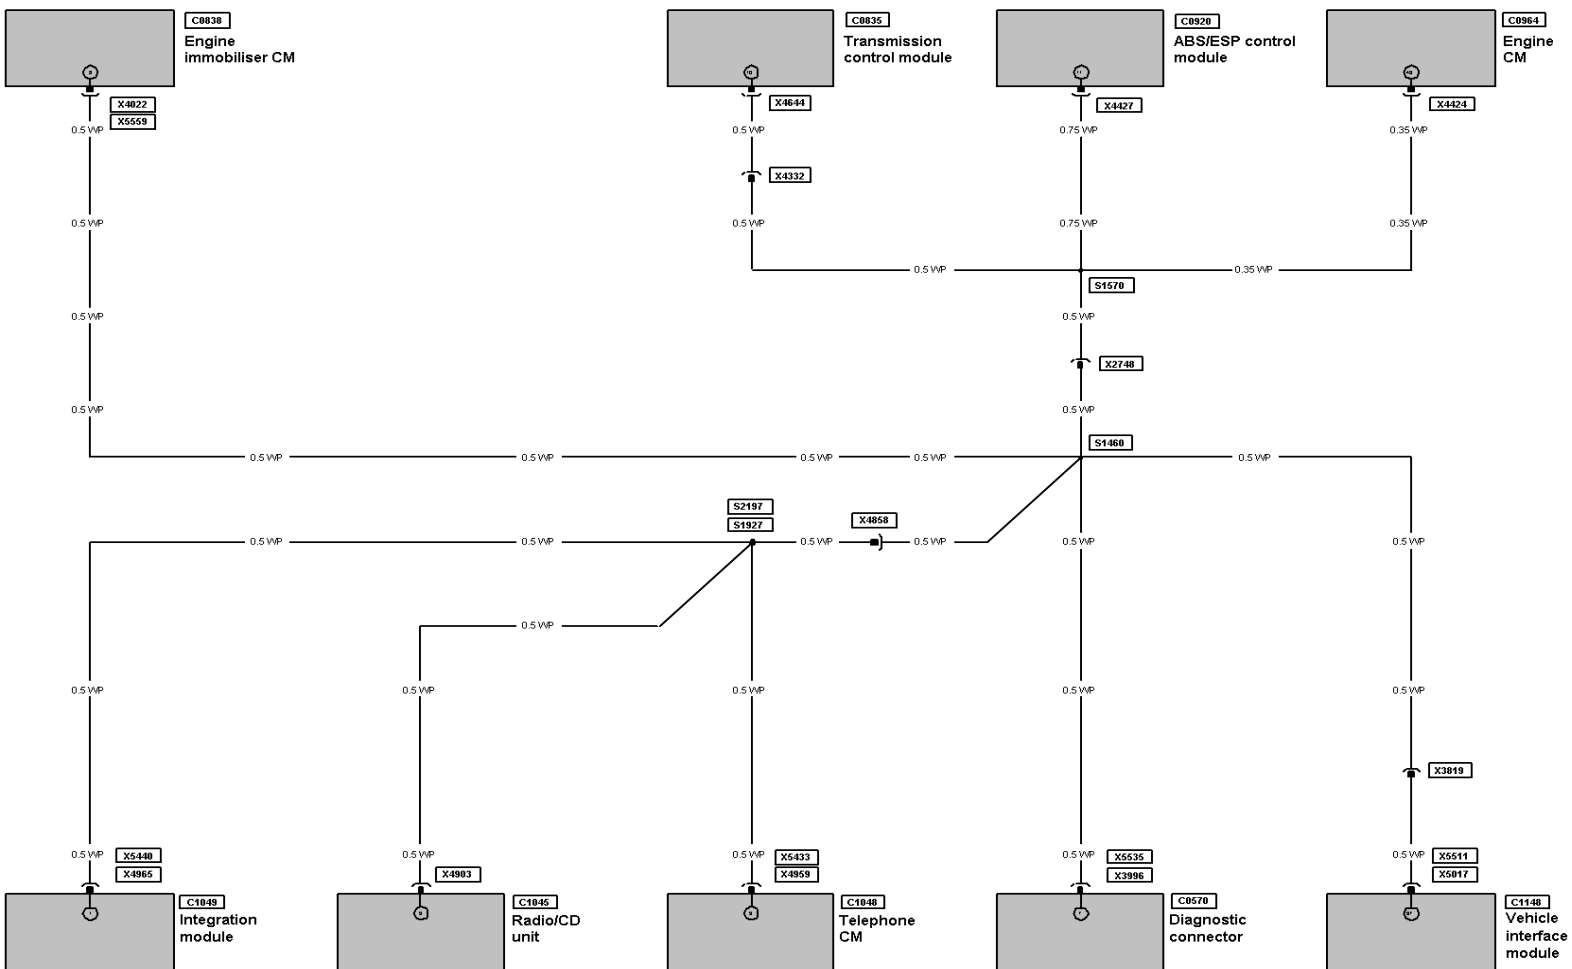


Electrical Circuit: 04 02 19: Engine bus (LHD)

No	Description
C0570	Diagnostic connector
C0835	Transmission control module
C0838	Engine immobiliser control module
C0920	Anti-locking braking system/Electronic stability programme control module
C0964	Engine control module
C1045	Radio/CD unit
C1048	Telephone control module
C1049	Integration module
C1148	Left-hand rear window lift motor and control module
S1460	Splice - White/purple - left-hand drive facia loom
S1570	Splice - White/purple - front main loom
S1927	Splice - White/purple - rear main loom
S2197	Splice - White/purple - rear main loom
X2748	Front main loom to left-hand drive facia loom plug and socket 22-way
X3819	Rear main loom to left-hand drive facia loom plug and socket 14-way
X3996	Diagnostic connector 16-way
X4022	Engine immobiliser control module connector 10-way
X4332	Front main loom to engine loom plug and socket 17-way - green
X4424	Engine control module connector 81-way
X4427	Anti-locking braking system/Electronic stability programme control module connector 42-way
X4644	Transmission control module connector 16-way
X4858	Rear main loom to left-hand facia loom plug and socket 17-way
X4903	Radio/CD unit power connector 8-way - grey
X4959	Telephone control module connector 18-way
X4965	Integration module connector 18-way
X5017	Vehicle interface module connector 81-way
X5433	Telephone control module connector 18-way
X5440	Integration module connector 18-way
X5511	Vehicle interface module connector 81-way
X5535	Diagnostic connector 16-way
X5559	Engine immobiliser control module connector 10-way

Circuit Links

Description	Circuit	Additional Information
-------------	---------	------------------------

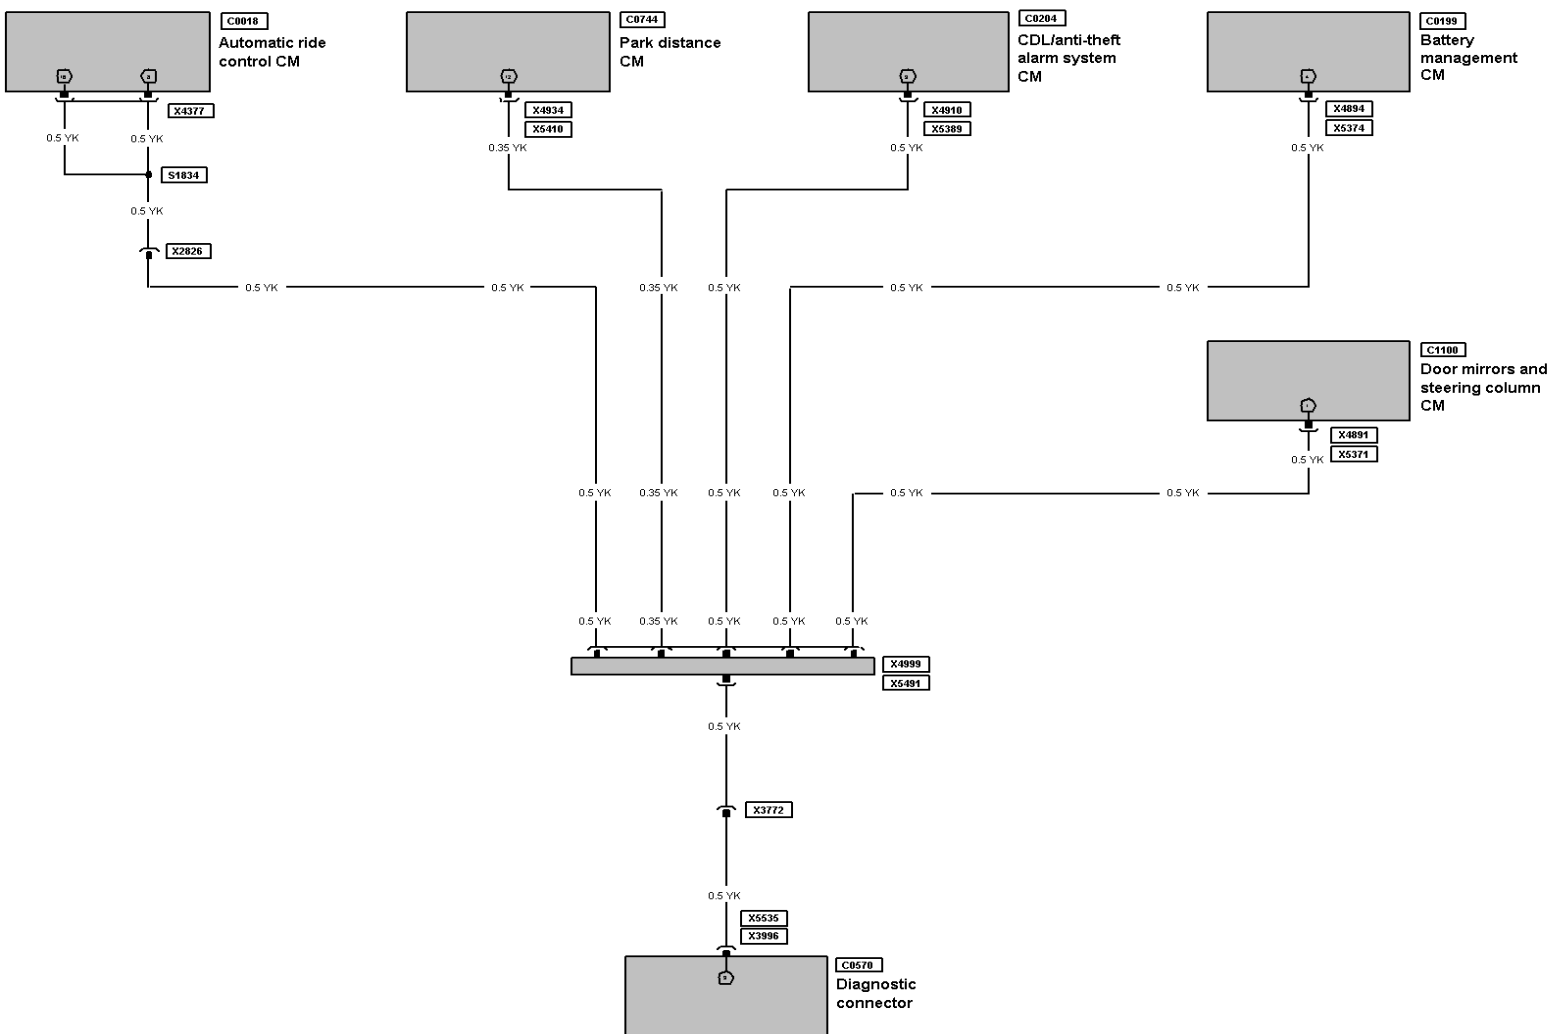


Electrical Circuit: 04 03 19: Body bus (LHD)

No	Description
C0018	Automatic ride control control module
C0199	Battery management control module
C0204	Centralised door locking/anti-theft alarm system control module
C0570	Diagnostic connector
C0744	Park distance control control module
C1100	Door mirrors and steering column control module
S1834	Splice - Yellow/Pink - front main loom
X2826	Front main loom to rear main loom plug and socket 20-way
X3772	Rear main loom to left-hand drive facia loom plug and socket 20-way
X3996	Diagnostic connector 16-way
X4377	Automatic ride control control module connector 16-way
X4891	Door mirrors/steering column CM connector 22-way
X4894	Battery management control module connector 26-way
X4910	CDL/anti-theft alarm system CM connector 22-way
X4934	Park distance control connector 16-way
X4999	Header connector 20-way
X5371	Door mirrors and steering column control module connector 22-way
X5374	Battery management control module connector 26-way
X5389	Centralised door locking/anti-theft alarm system control module connector 22-way
X5410	Park distance control connector 16-way
X5491	Header connector 20-way
X5535	Diagnostic connector 16-way

Circuit Links

Description	Circuit	Additional Information
-------------	---------	------------------------

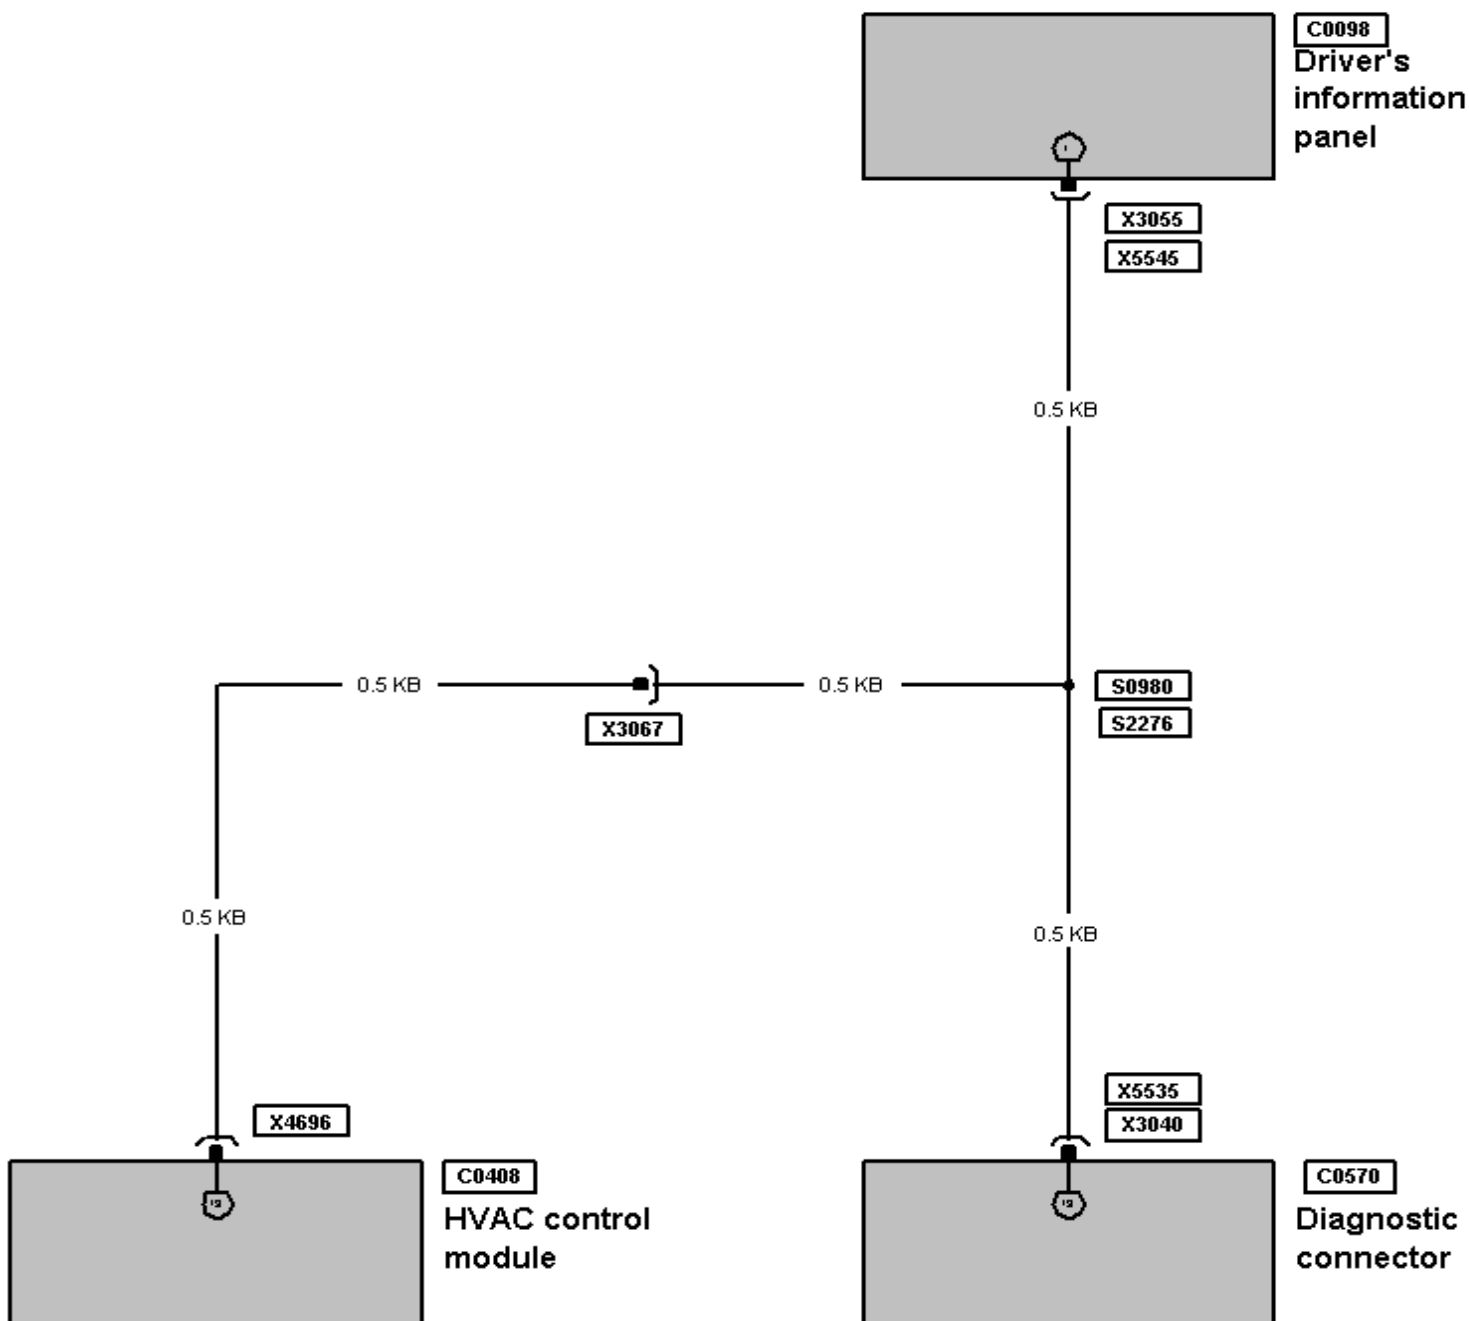


Electrical Circuit: 04 04 19: K-bus LHD (HVAC & Instrument panel)

No	Description
C0098	Driver's information panel
C0408	HVAC control module
C0570	Diagnostic connector
S0980	Splice - Pink/black - left-hand drive facia loom
S2276	Splice - Pink/black - left-hand drive facia loom
X3040	Diagnostic connector 16-way
X3055	Driver's information panel connector 12-way
X3067	Left-hand drive facia loom to console loom plug and socket 18-way
X4696	HVAC control module connector 26-way
X5535	Diagnostic connector 16-way
X5545	Driver's information panel connector 12-way

Circuit Links

Description	Circuit	Additional Information
-------------	---------	------------------------

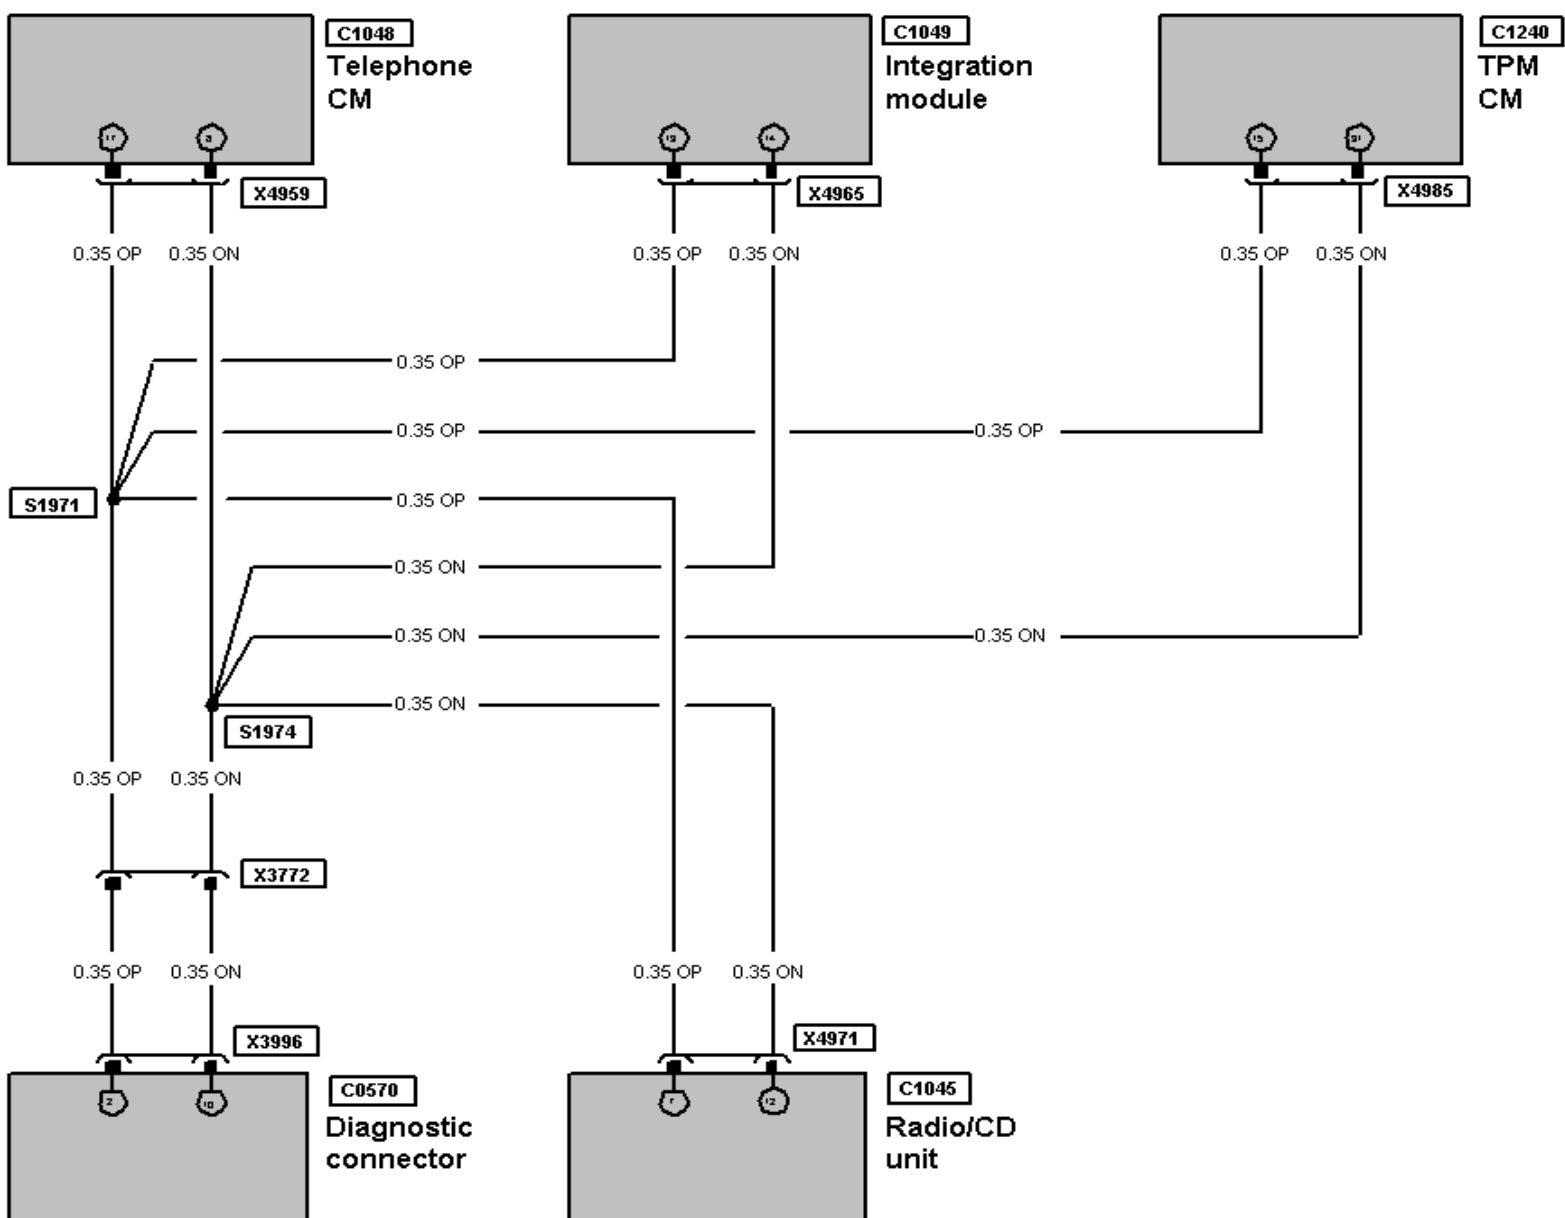


Electrical Circuit: 04 05 07: Infotainment bus LHD (cars prior to VIN 13921)

No	Description
C0570	Diagnostic connector
C1048	Telephone control module
C1049	Integration module
C1240	Squab lock warning LED - driver's
S1971	Splice - Orange/purple - rear main loom
S1974	Splice - Orange/brown - rear main loom
X3772	Rear main loom to left-hand drive facia loom plug and socket 20-way
X3996	Diagnostic connector 16-way
X4959	Telephone control module connector 18-way
X4965	Integration module connector 18-way
X4971	Radio/CD unit connector 6-way - green
X4985	Tyre pressure monitor control module connector 32-way

Circuit Links

Description	Circuit	Additional Information
-------------	---------	------------------------

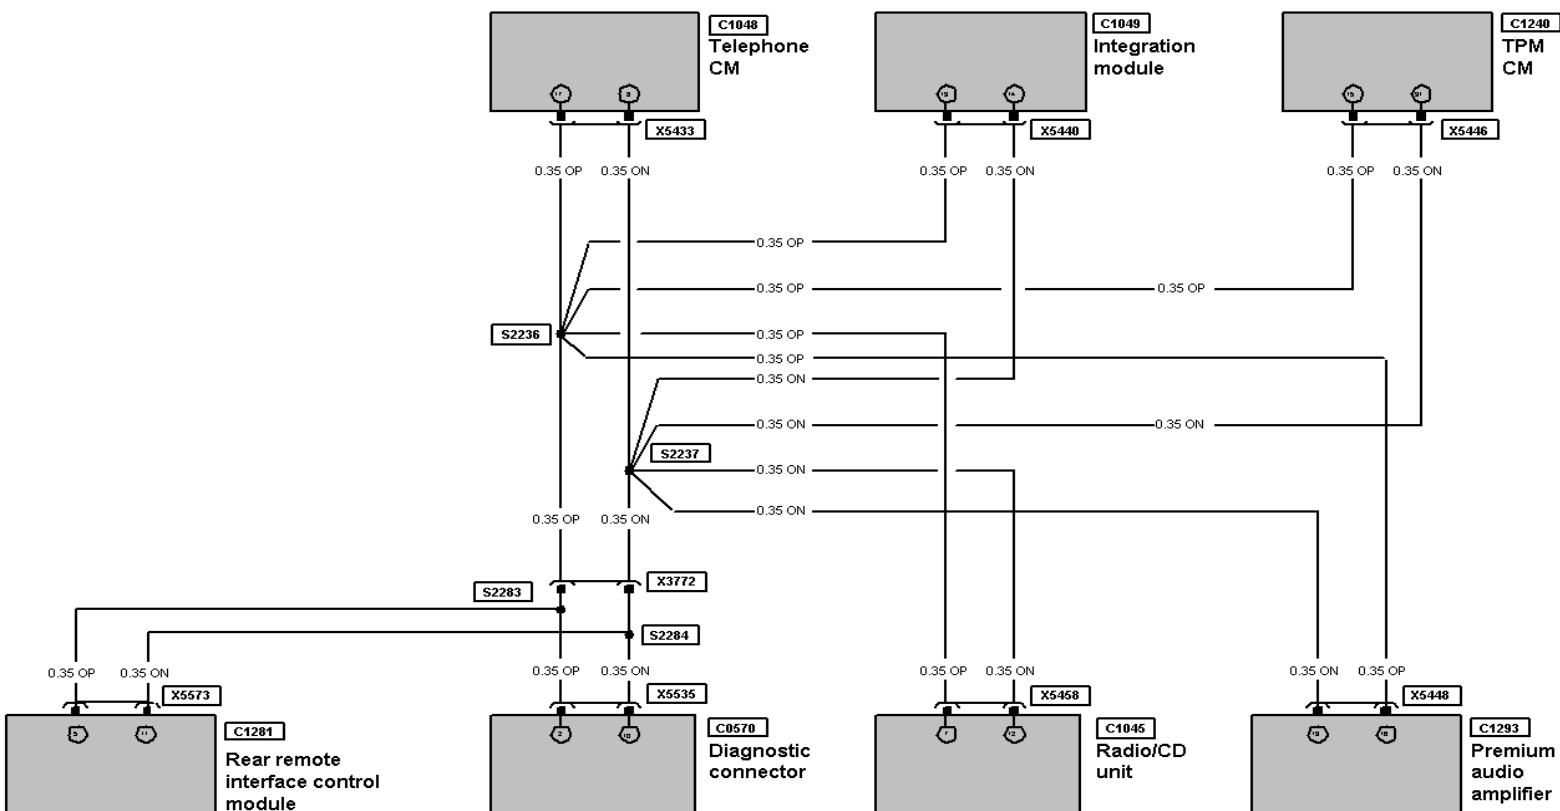

Electrical Circuit: 04 05 13: Infotainment bus LHD (cars from VIN 13921)

No	Description
C0570	Diagnostic connector
C1045	Radio/CD unit
C1048	Telephone control module
C1049	Integration module
C1240	Squab lock warning LED - driver's
C1281	Rear remote interface ecu
C1293	Premium audio amplifier
S2236	Splice - Orange/purple - rear main loom
S2237	Splice - Orange/brown - rear main loom
S2283	Splice - Orange/purple - left-hand drive facia loom
S2284	Splice - Orange/brown - left-hand drive facia loom
X3772	Rear main loom to left-hand drive facia loom plug and socket 20-way
X5433	Telephone control module connector 18-way
X5440	Integration module connector 18-way
X5446	Tyre pressure monitor control module connector 32-way
X5448	Power amplifier connector A 24-way
X5458	Radio Head unit C connector 12-way
X5535	Diagnostic connector 16-way
X5573	Rear remote interface connector 12-way

Circuit Links

Description	Circuit	Additional Information
-------------	---------	------------------------