


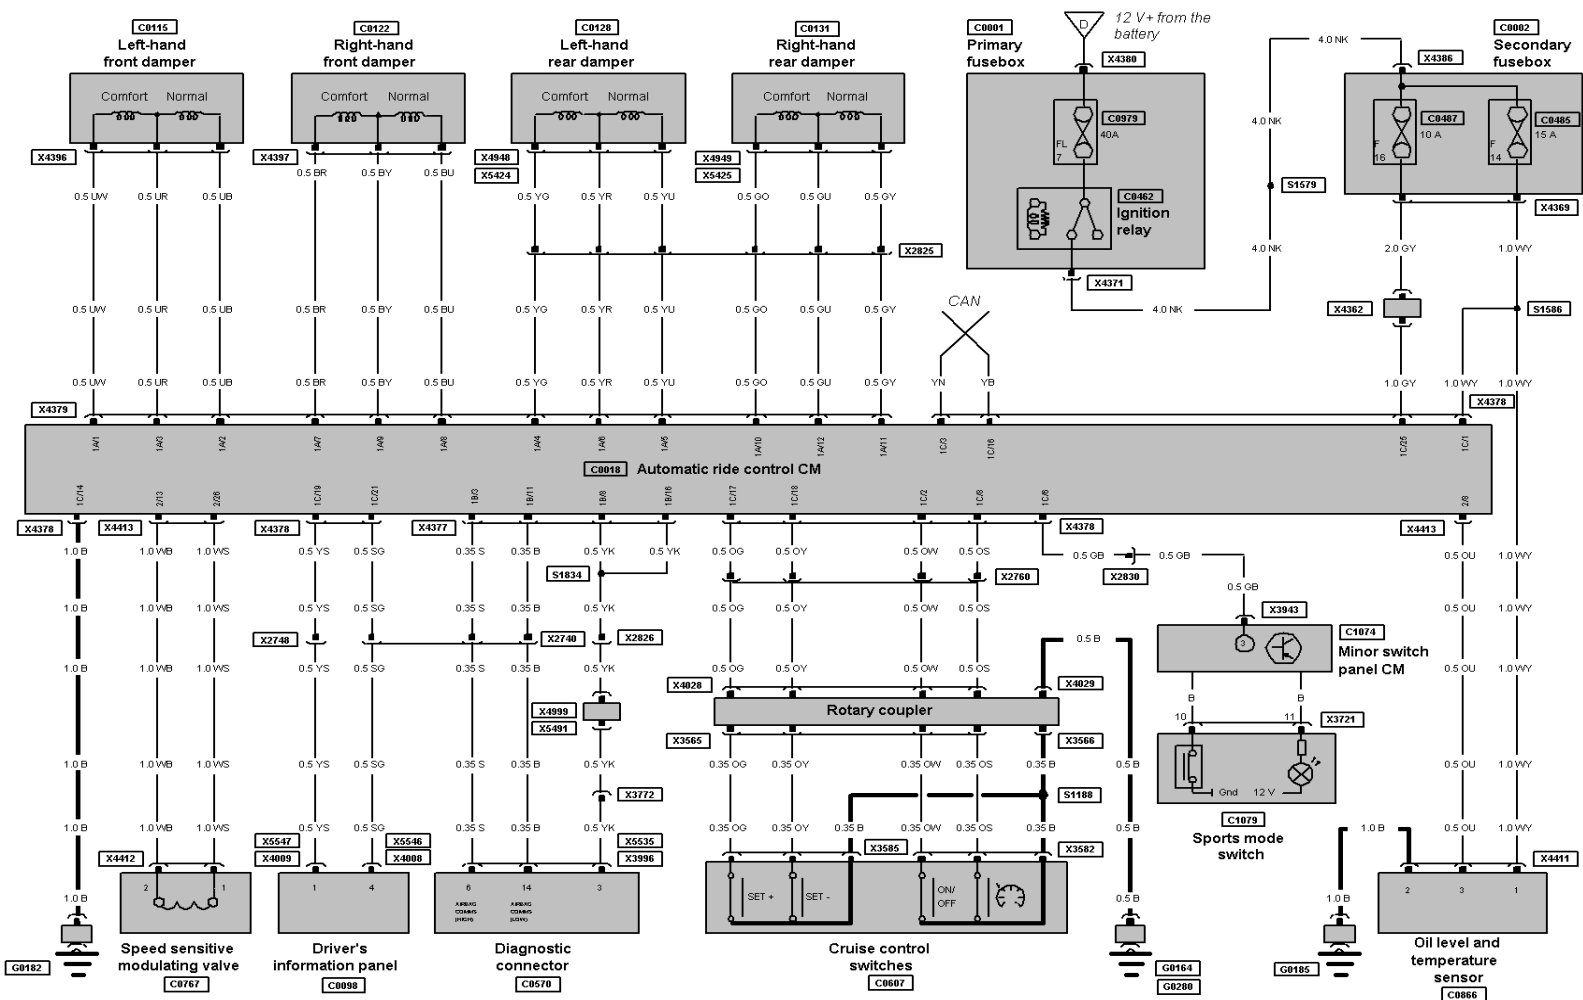

Electrical Circuit: 16 02 27: Automatic ride control (LHD)

No	Description
C0001	Primary fusebox
C0002	Secondary fusebox
C0018	Automatic ride control control module
C0098	Driver's information panel
C0115	Left-hand front damper valve
C0122	Right-hand front damper valve
C0128	Left-hand rear damper valve
C0131	Right-hand rear damper valve
C0462	Ignition relay - primary fusebox
C0485	Fuse F14, 15 amp - secondary fusebox
C0487	Fuse F16, 10 amp - secondary fusebox
C0570	Diagnostic connector
C0607	Cruise control switches
C0767	Speed sensitive modulating valve
C0866	Engine oil level transmitter
C0979	Fuse FL7, 40 amp - primary fusebox
C1074	Minor switch panel control module
C1079	Sport mode selection switch
G0164	Ground point header connector 6-way
G0182	Ground point header connector 6-way
G0185	Ground point header connector 10-way
G0280	Ground point connector
S1188	Splice - Black - steering wheel loom
S1579	Splice - Brown/pink - front main loom
S1586	Splice - White/yellow - front main loom
S1834	Splice - Yellow/Pink - front main loom
X2740	Front main loom to left-hand drive facia loom plug and socket 23-way
X2748	Front main loom to left-hand drive facia loom plug and socket 22-way
X2760	Front main loom to left-hand drive facia loom plug and socket 20-way
X2825	Front main loom to rear main loom plug and socket 22-way
X2826	Front main loom to rear main loom plug and socket 20-way
X2830	Front main loom to left-hand drive console loom plug and socket 20-way
X3565	Steering wheel loom plug and socket 5-way
X3566	Steering wheel loom plug and socket 5-way
X3582	Left-hand cruise control switches connector 4-way
X3585	Right-hand cruise control switches connector 5-way
X3721	Minor switch panel connector 18-way
X3772	Rear main loom to left-hand drive facia loom plug and socket 20-way
X3943	Minor switch panel control module connector 20-way
X3996	Diagnostic connector 16-way
X4008	Driver's information panel connector 12-way
X4009	Driver's information panel connector 18-way
X4028	Left-hand drive facia loom to rotary coupler plug and socket 5-way
X4029	Left-hand drive facia loom to rotary coupler plug and socket 5-way
X4362	Header connector 20-way
X4369	Secondary fusebox connector 21-way
X4371	Primary fusebox connector 3-way
X4377	Automatic ride control control module connector 16-way
X4378	Automatic ride control control module connector 26-way
X4379	Automatic ride control control module connector 12-way
X4380	Primary fusebox connector 2-way

X4386	Engine compartment switch connector 2-way
X4396	Left-hand front damper valve connector 3-way
X4397	Right-hand front damper valve connector 3-way
X4411	Engine oil level transmitter connector 3-way
X4412	Speed sensitive modulating valve connector 2-way
X4413	Automatic ride control control module connector 26-way
X4948	Left-hand rear damper valve connector 3-way
X4949	Right-hand rear damper valve connector 3-way
X4999	Header connector 20-way
X5424	Left-hand rear damper valve connector 3-way
X5425	Right-hand rear damper valve connector 3-way
X5491	Header connector 20-way
X5535	Diagnostic connector 16-way
X5546	Driver's information panel connector 12-way
X5547	Driver's information panel connector 18-way

Circuit Links

Description	Circuit	Additional Information
D	050107	12 V+ from the battery