


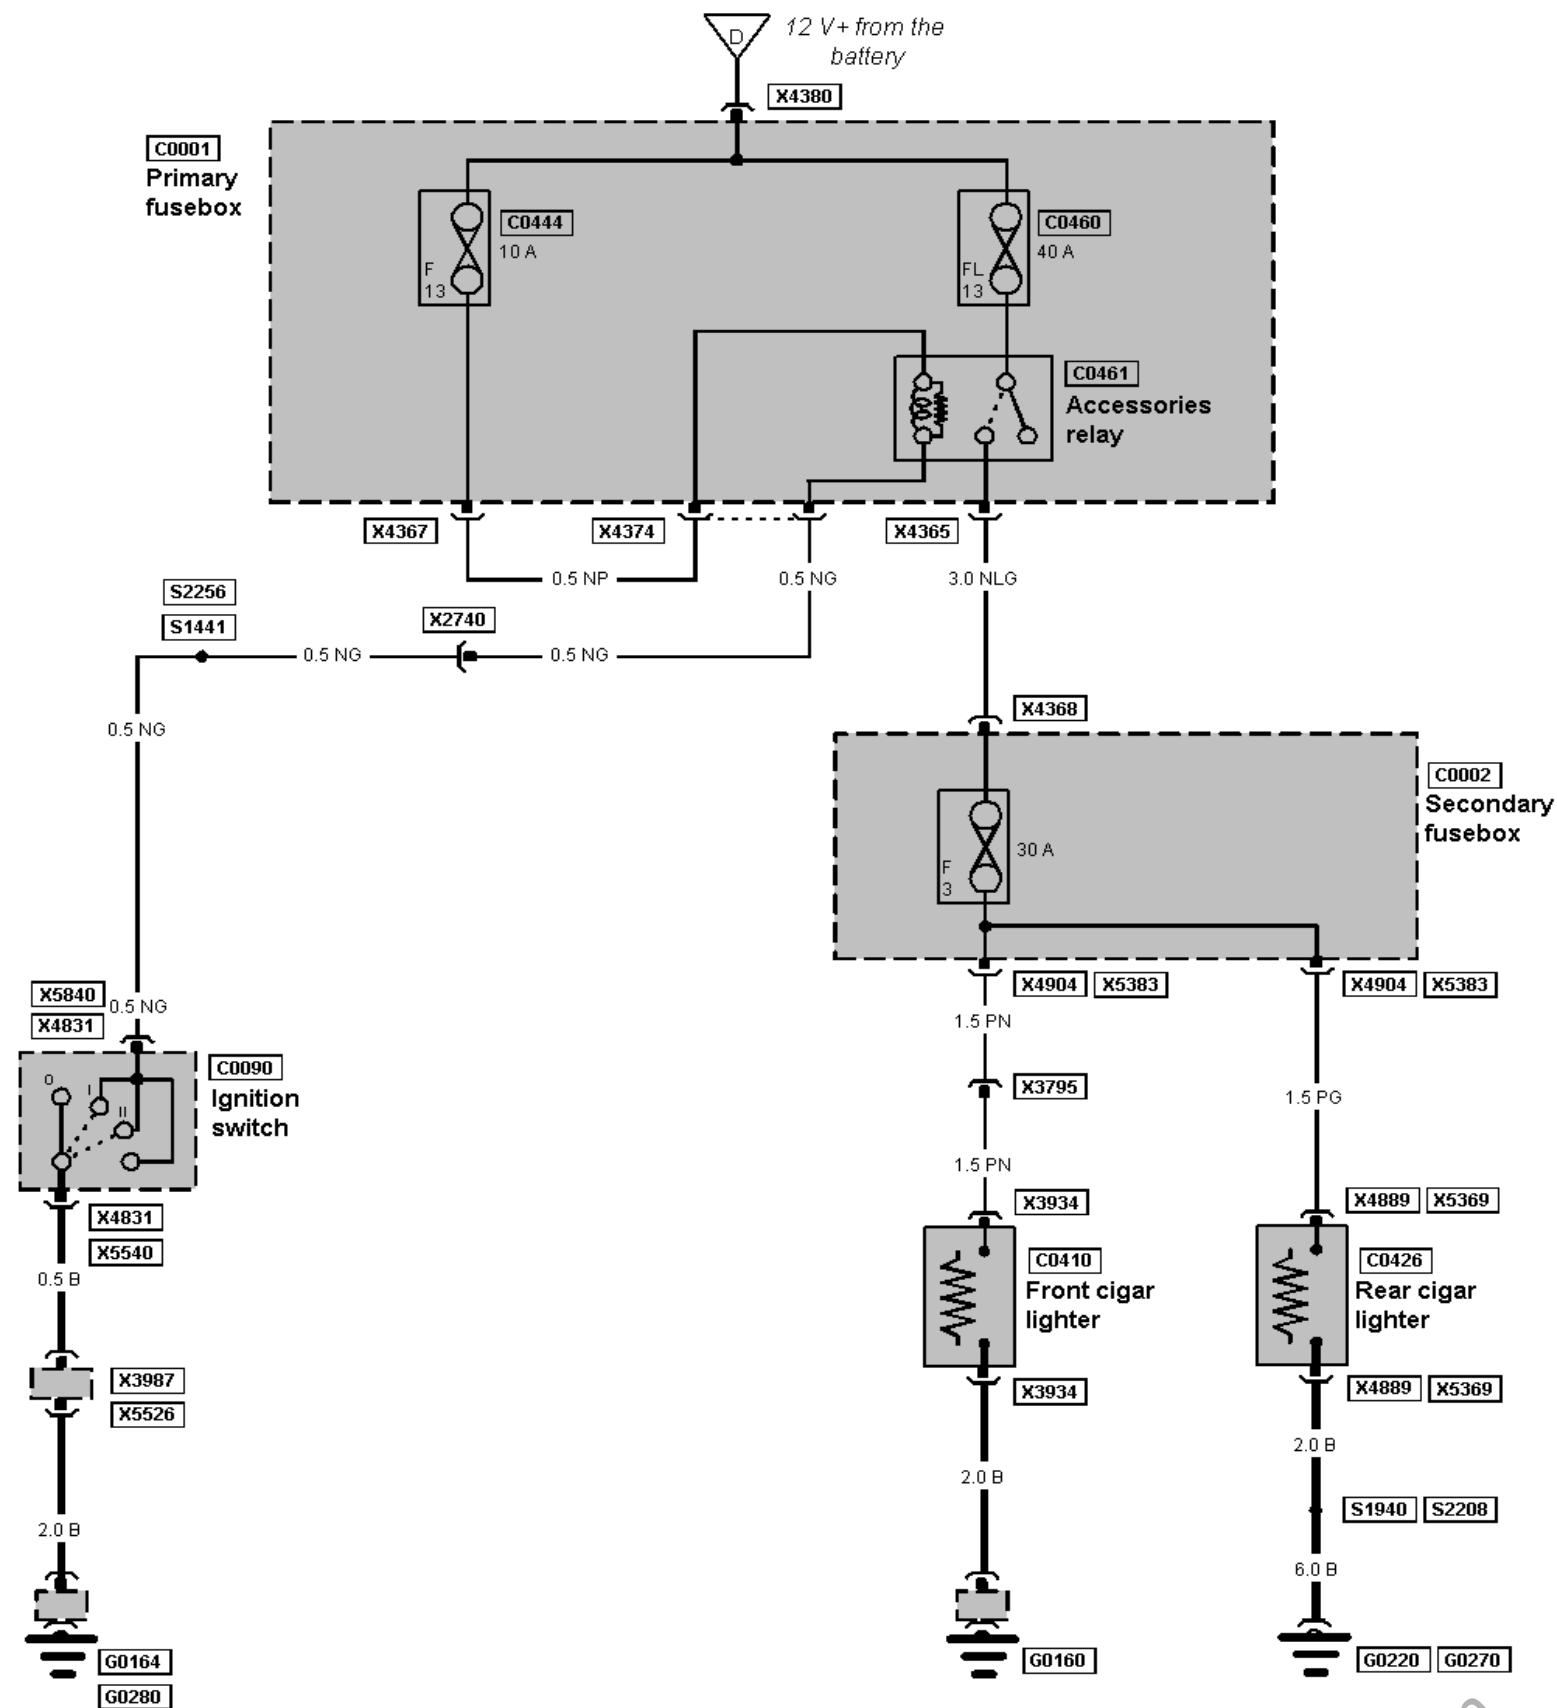

Electrical Circuit: 27 01 21: Cigar lighters (LHD)

No	Description
C0001	Primary fusebox
C0002	Secondary fusebox
C0090	Ignition switch
C0410	Front cigar lighter
C0426	Rear cigar lighter
C0444	Fuse F13, 10 amp - primary fusebox
C0460	Fuse FL13, 40 amp - primary fusebox
C0461	Accessories relay - primary fusebox
G0160	Ground point header connector
G0164	Ground point header connector 6-way
G0220	Ground point connector
G0270	Ground point connector
G0280	Ground point connector
S1441	Splice - Brown/green - left-hand drive facia loom
S1940	Splice - Black - rear main loom
S2208	Splice - Black - rear main loom
S2256	Splice - Brown/green - left-hand drive facia loom
X2740	Front main loom to left-hand drive facia loom plug and socket 23-way
X3795	Rear main loom to left-hand drive console loom plug and socket 20-way
X3934	Front cigar lighter socket 3-way
X3987	Header connector 20-way
X4365	Primary fusebox connector 3-way
X4367	Primary fusebox connector 12-way
X4368	Secondary fusebox connector 4-way
X4374	Primary fusebox connector 18-way
X4380	Primary fusebox connector 2-way
X4831	Switchbox connector 12-way
X4889	Rear cigar lighter connector 3-way
X4904	Secondary fusebox connector 9-way
X5369	Rear cigar lighter connector 3-way
X5383	Secondary fusebox connector 9-way
X5526	Header connector 20-way
X5540	Switchbox connector 12-way
X5840	SDARS Aerial lead connection to Head unit

Circuit Links

Description	Circuit	Additional Information
D	050107	12 V+ from the battery