



第四节 电器原理图

www.Car60.com


高压电控总成(1)

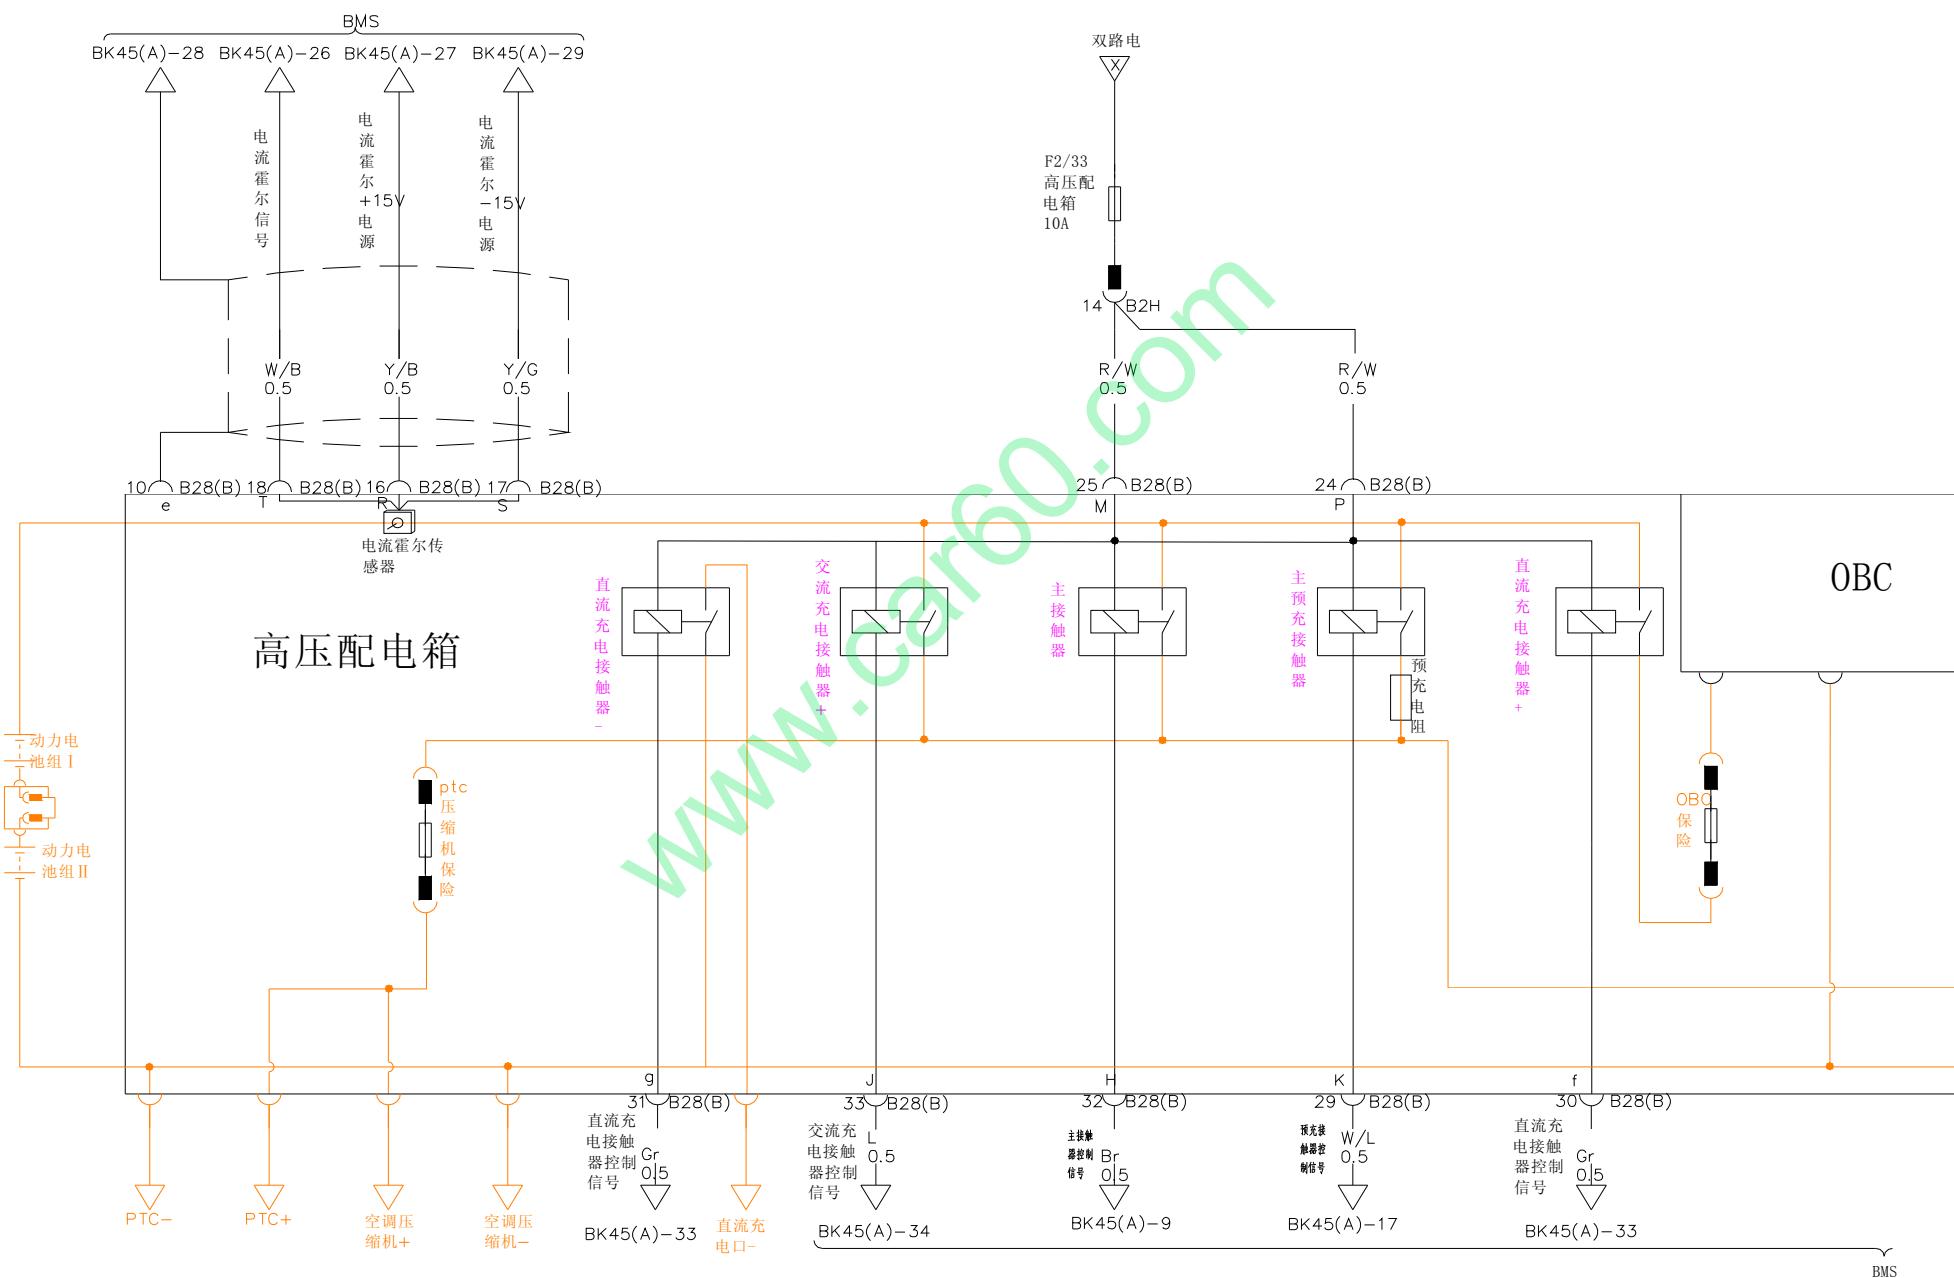


高压电控总成(2)

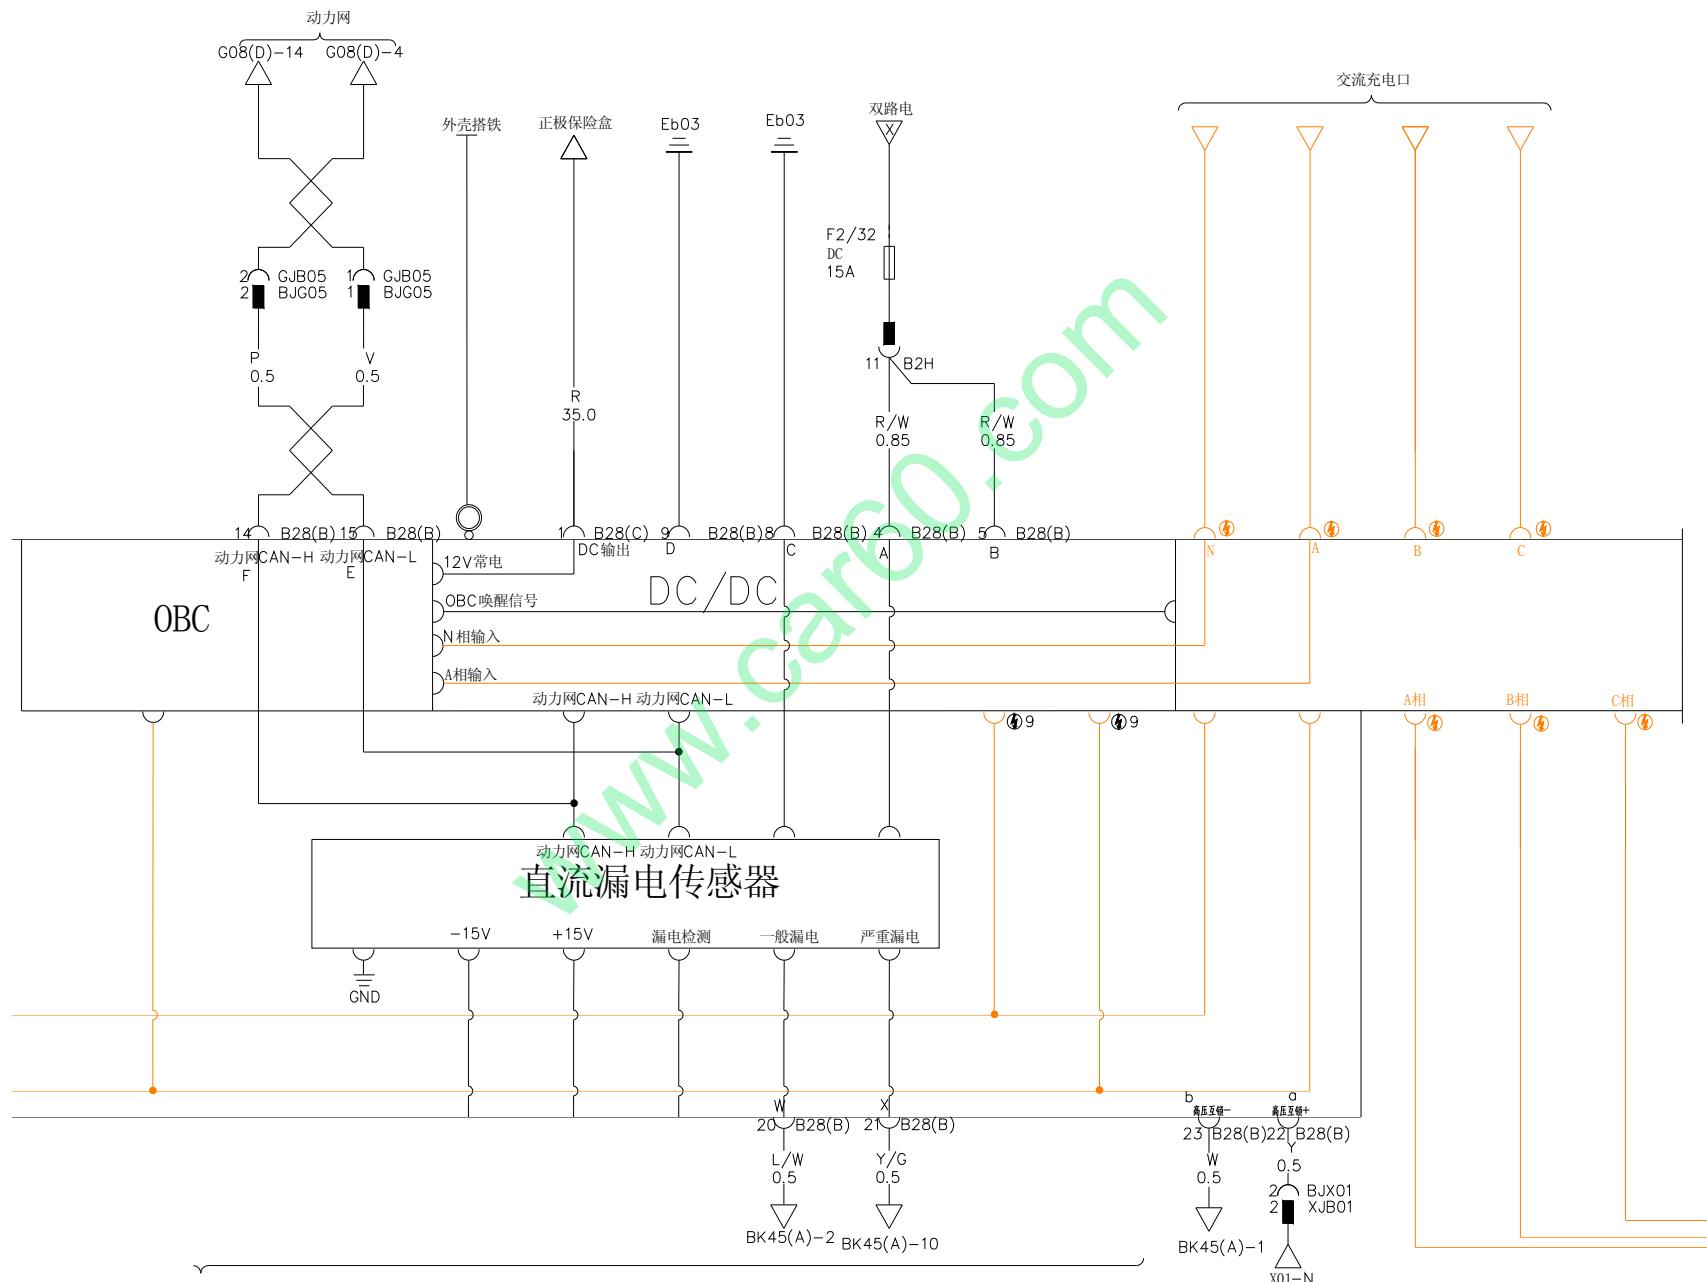


高压电控总成(3)

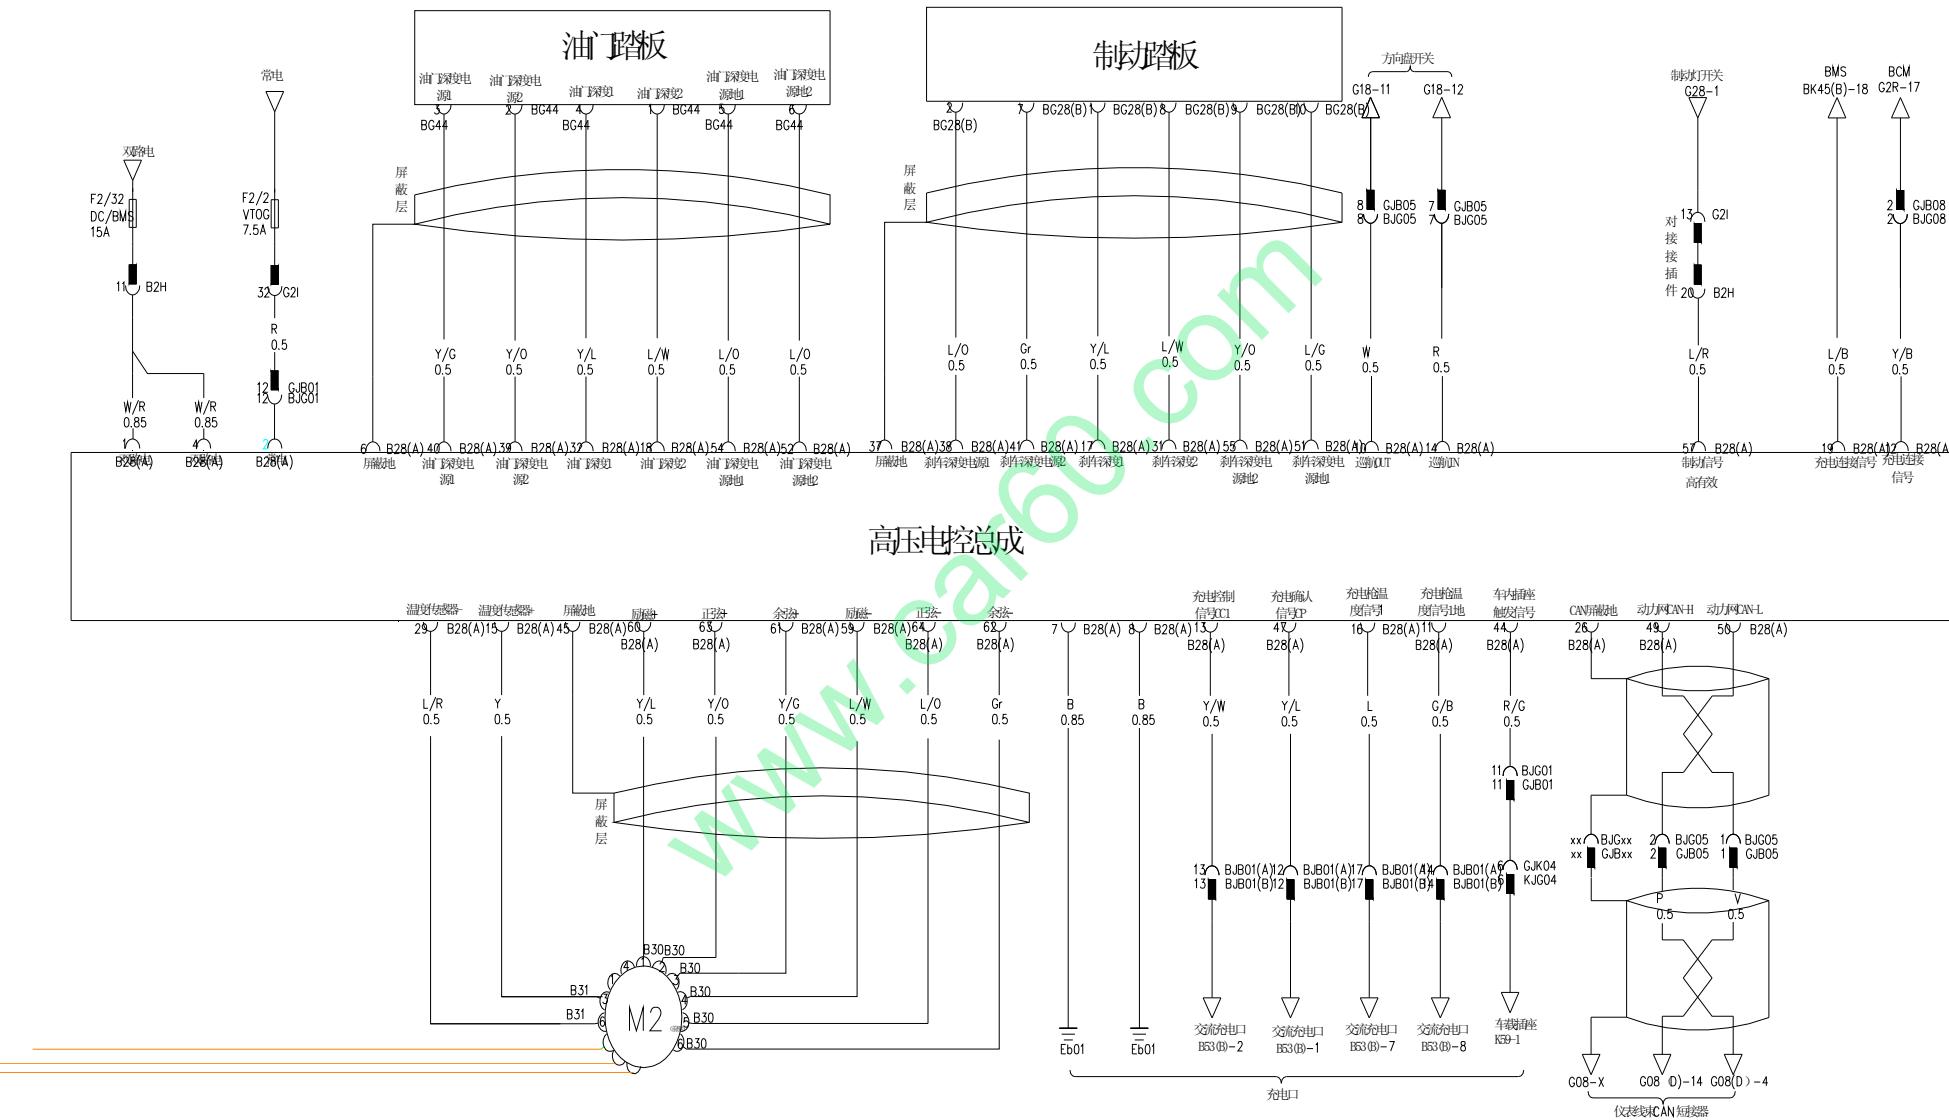


互锁

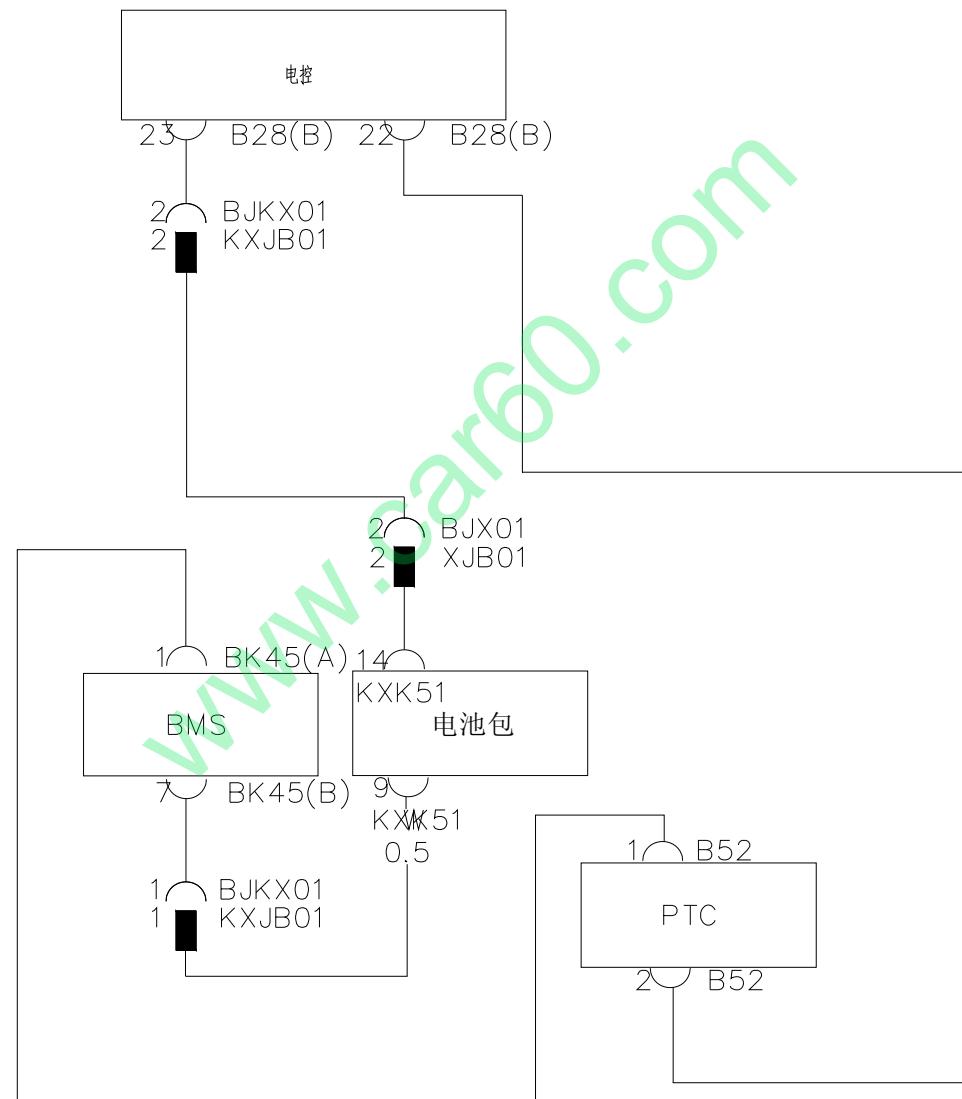


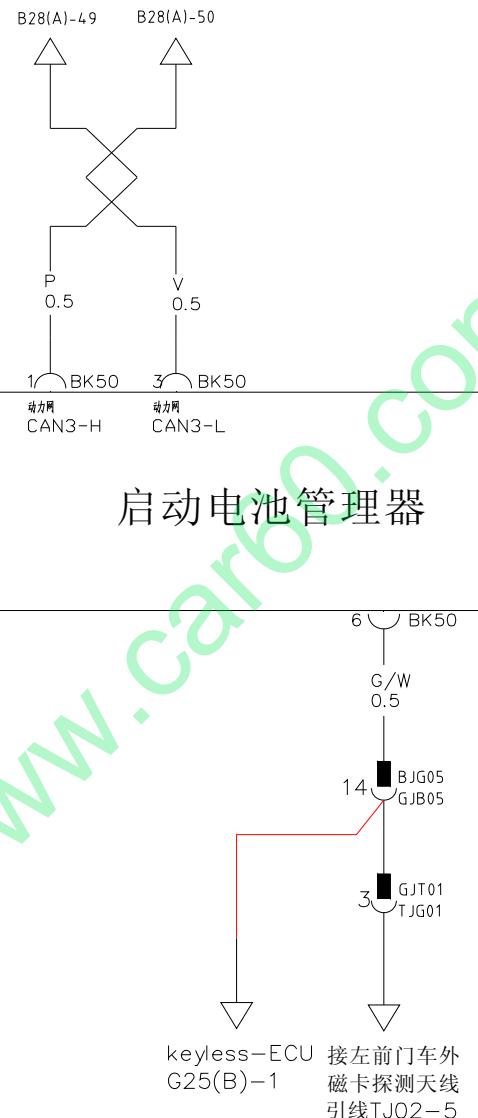


2. BMS

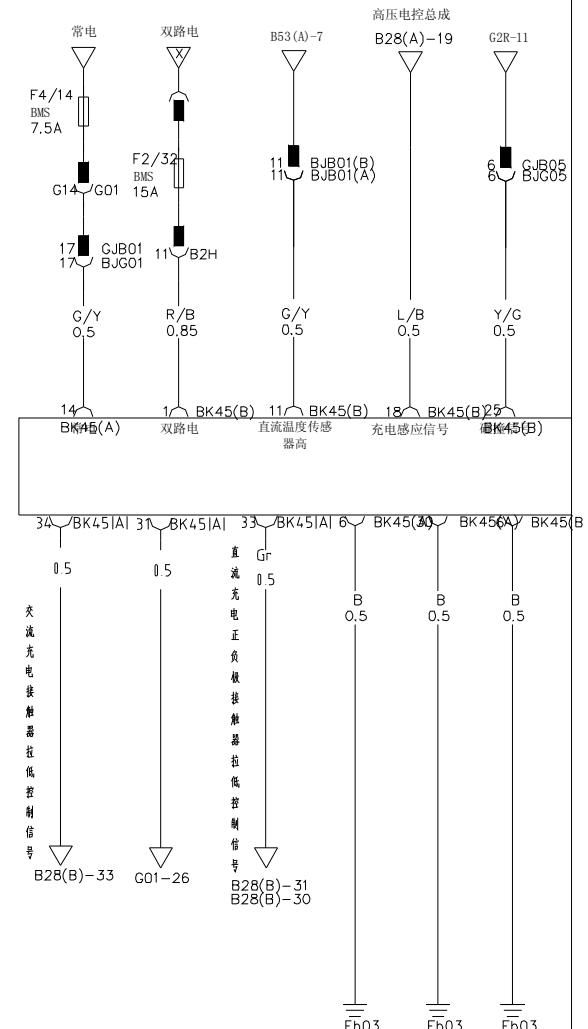


2. BMS

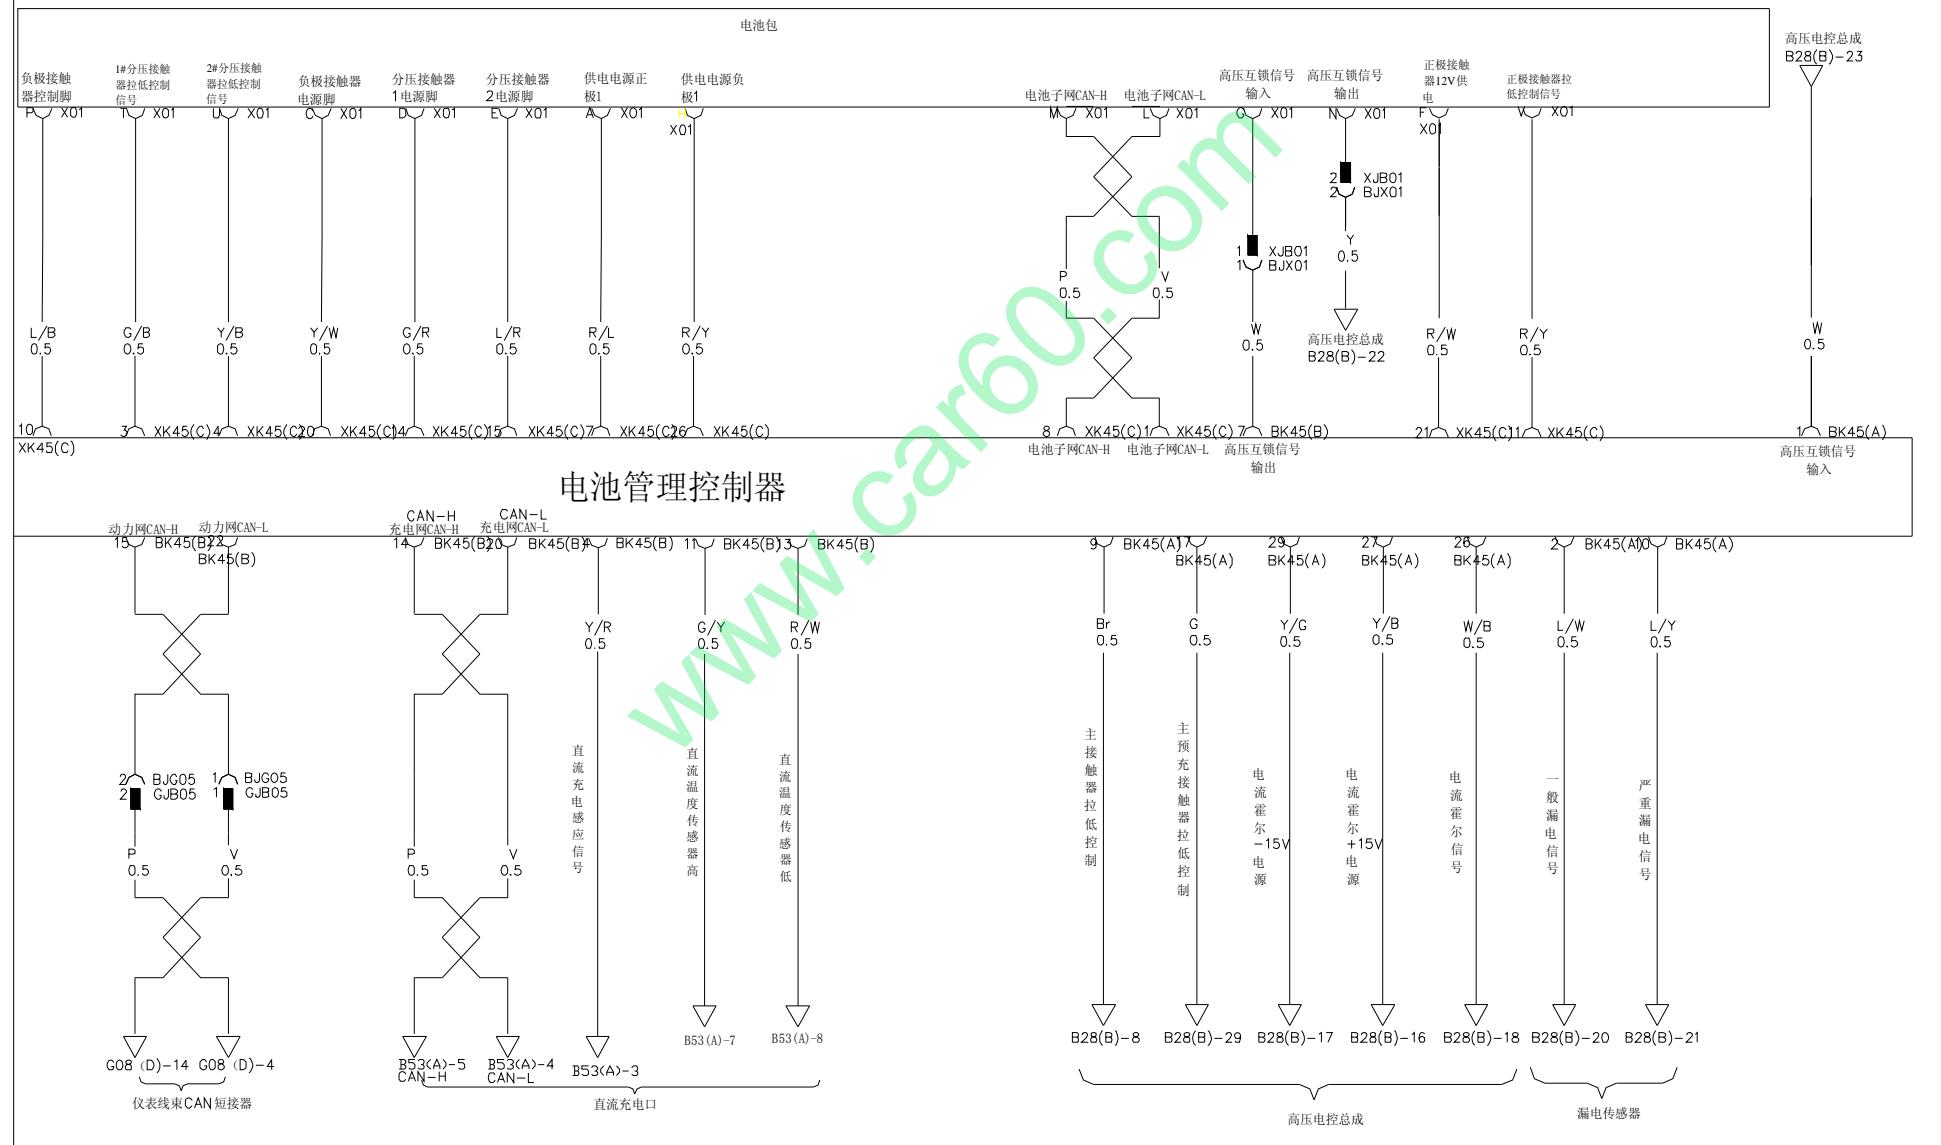


3. 交流、直流充电口

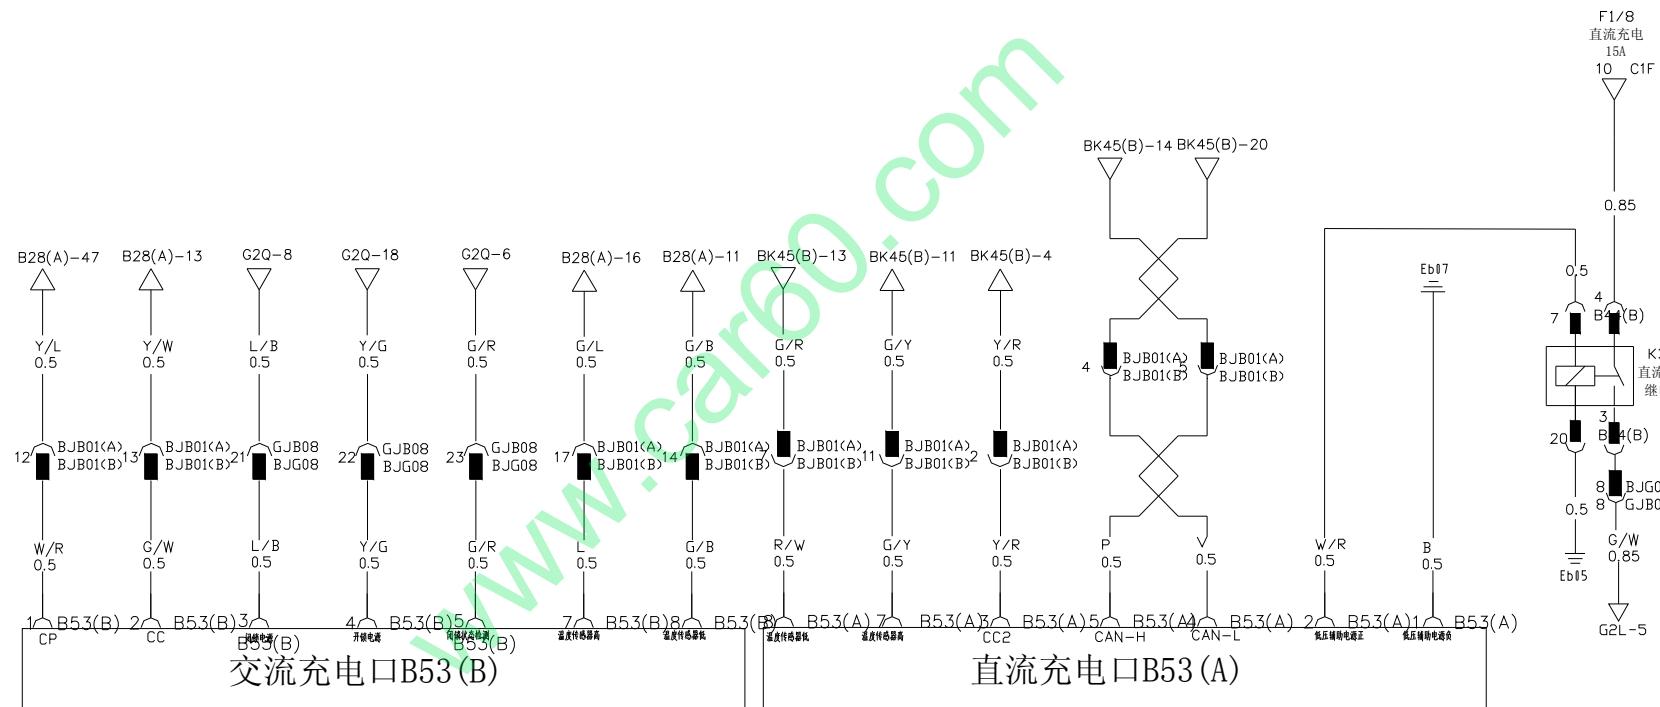


4. 主控制器

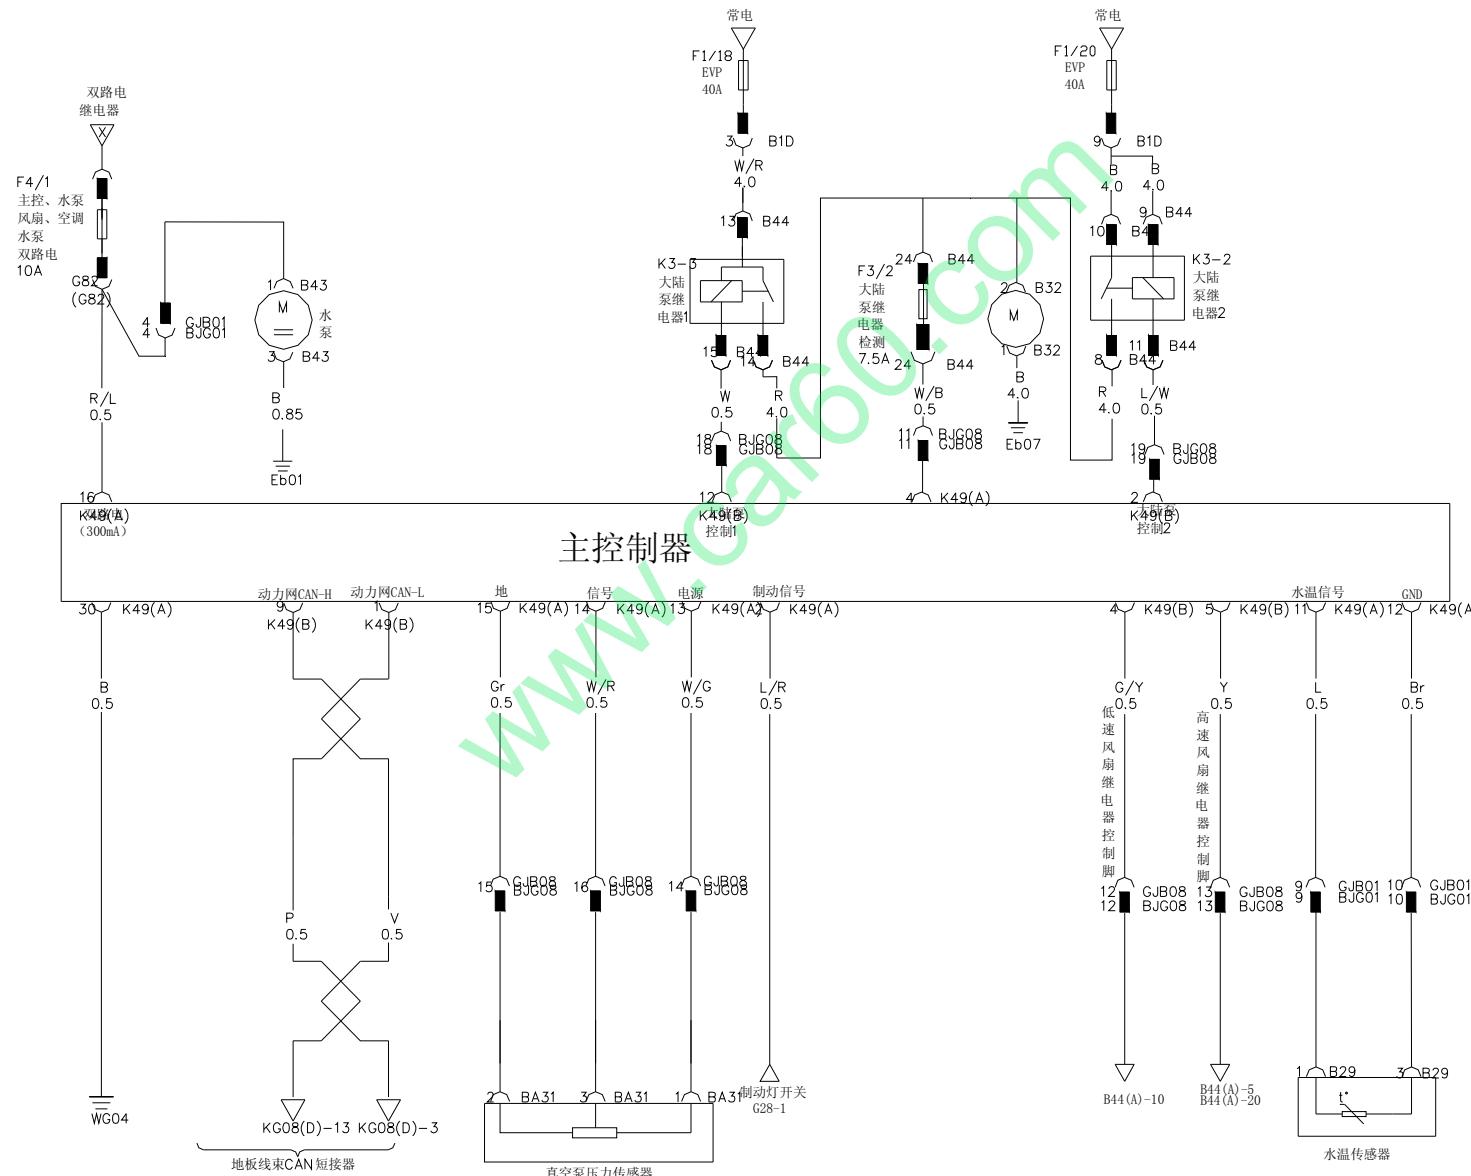


5. 档位控制器

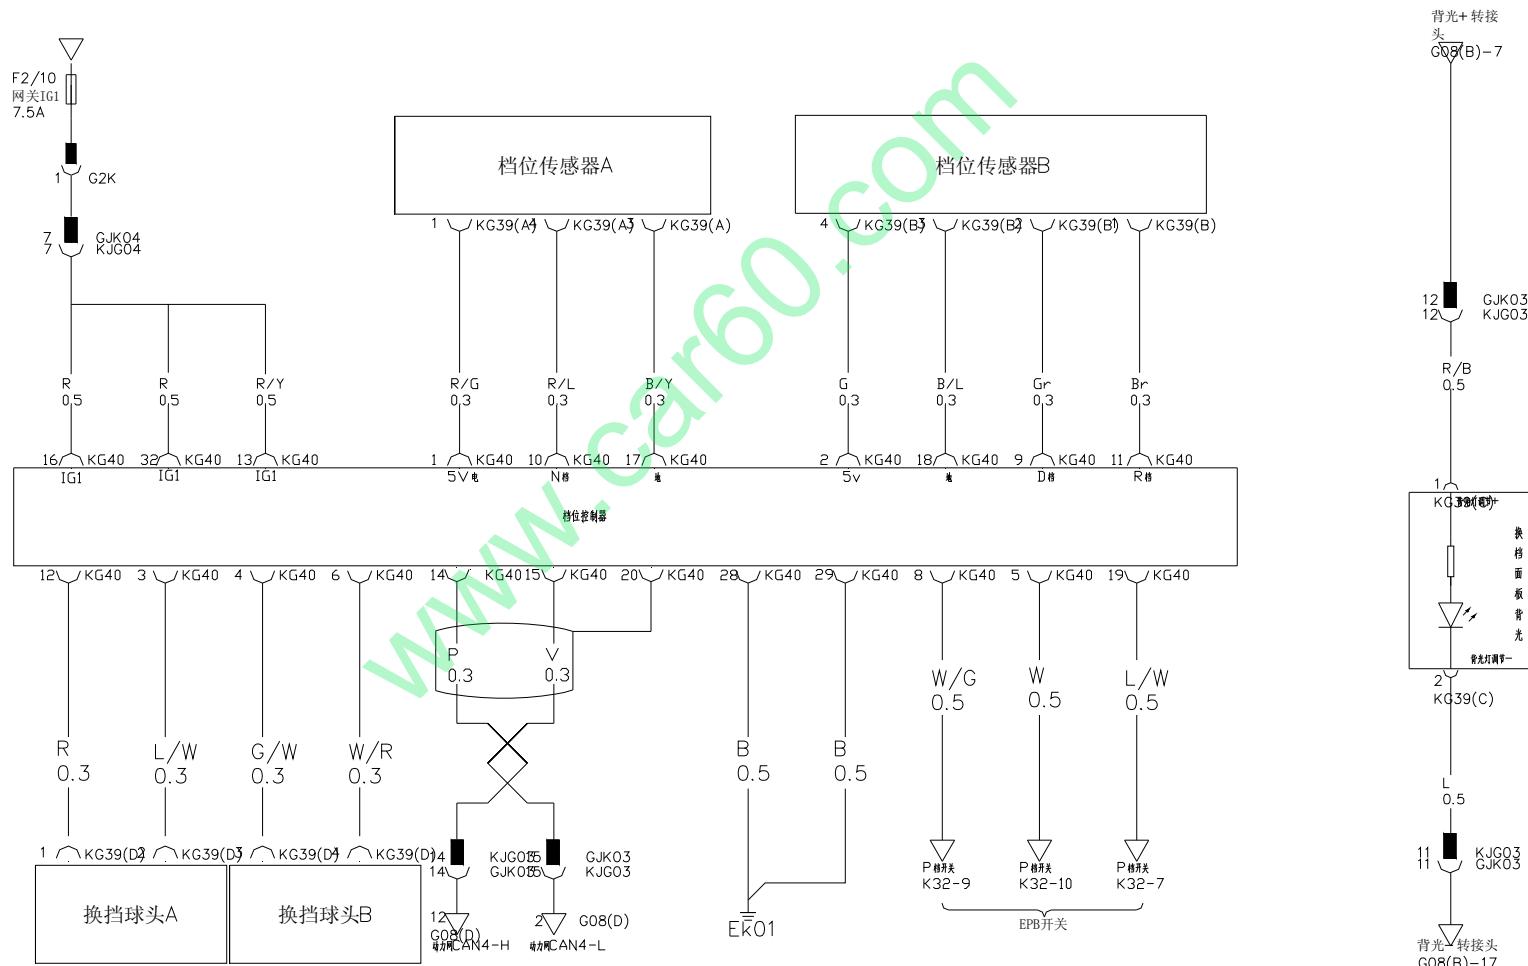


6. 车载终端

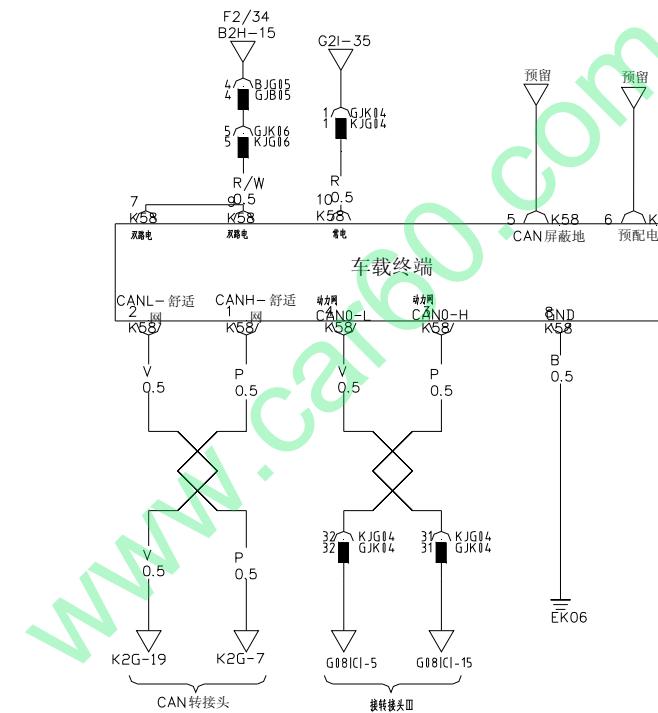


7. 行车记录仪

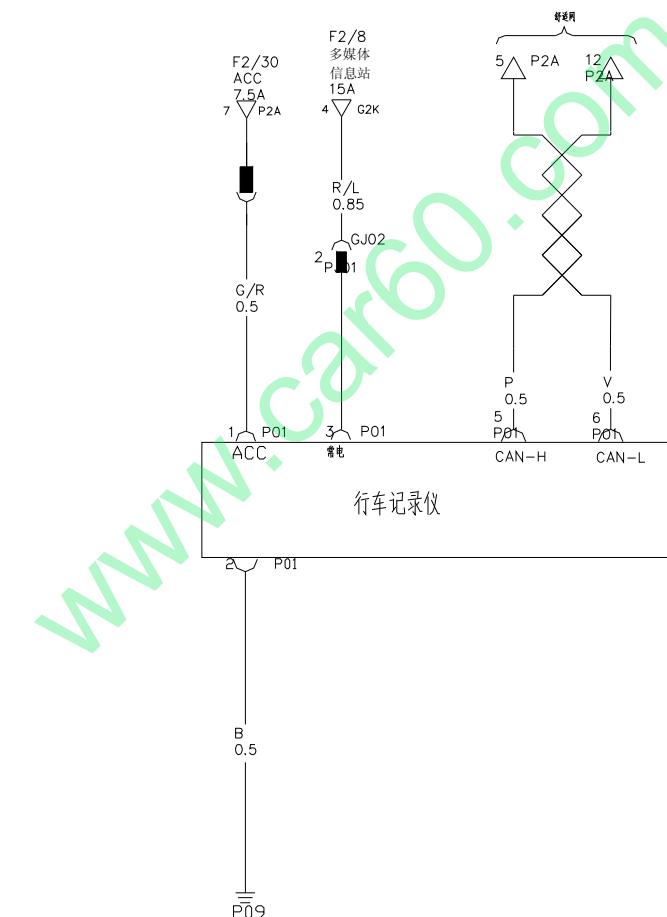


8. 双路电

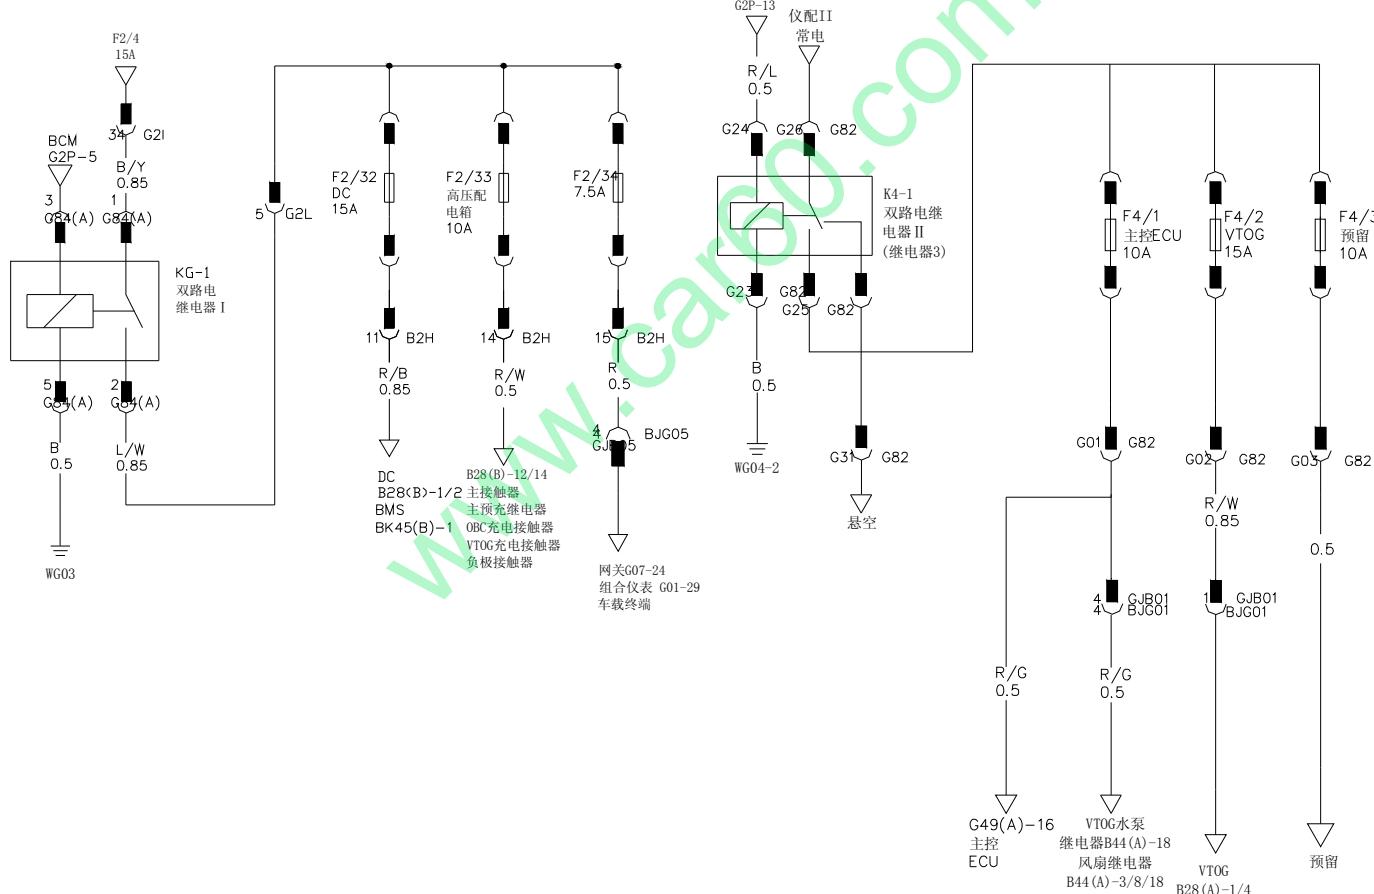


9. 充电口盖执行器

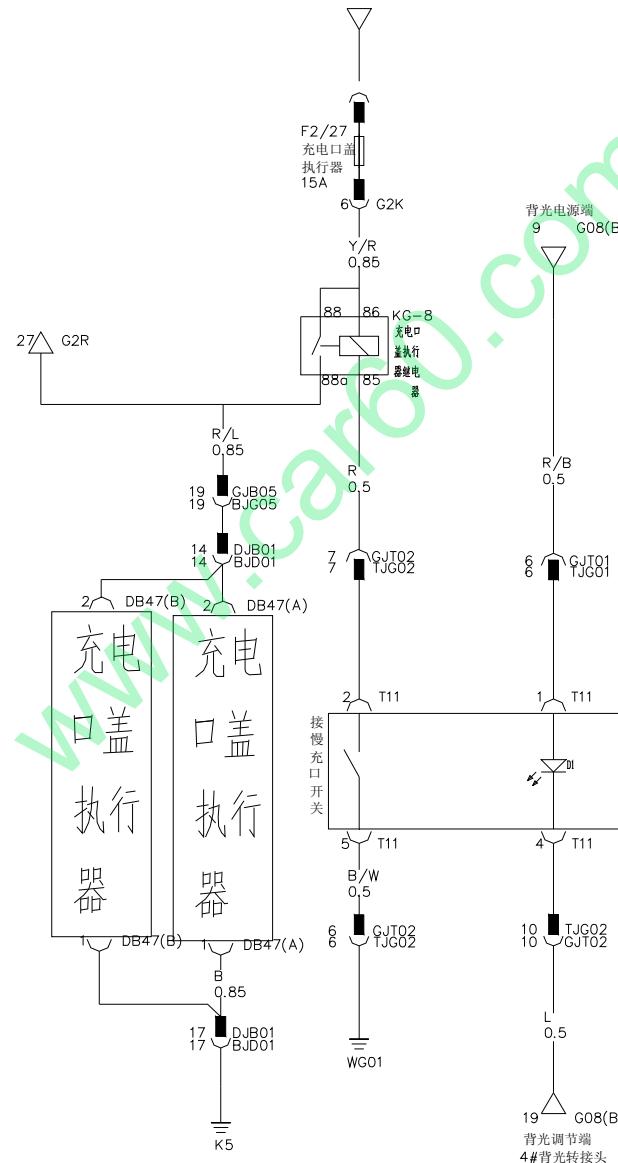


10. BCM

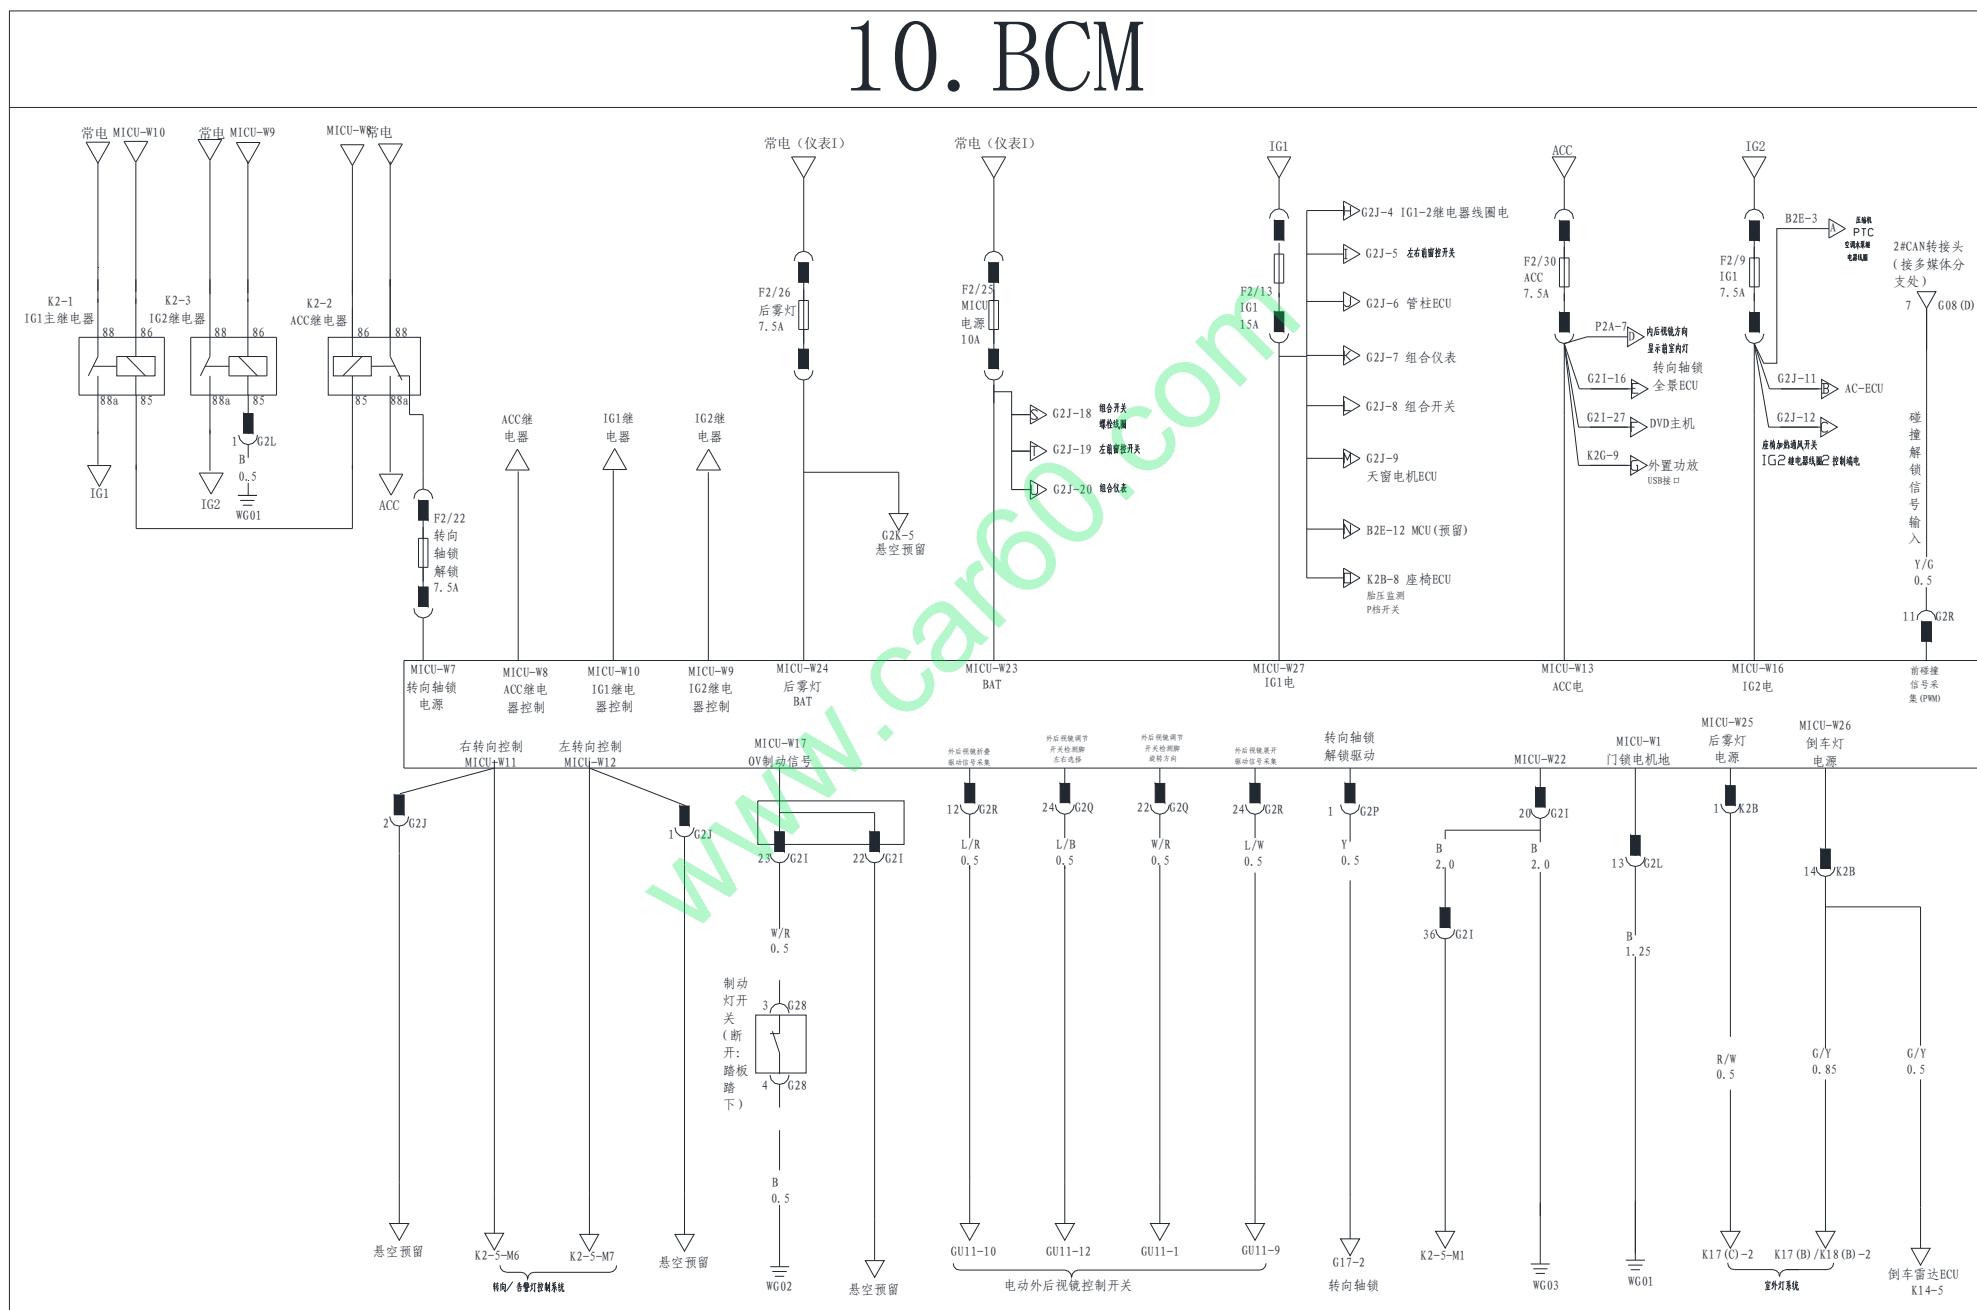


10. BCM

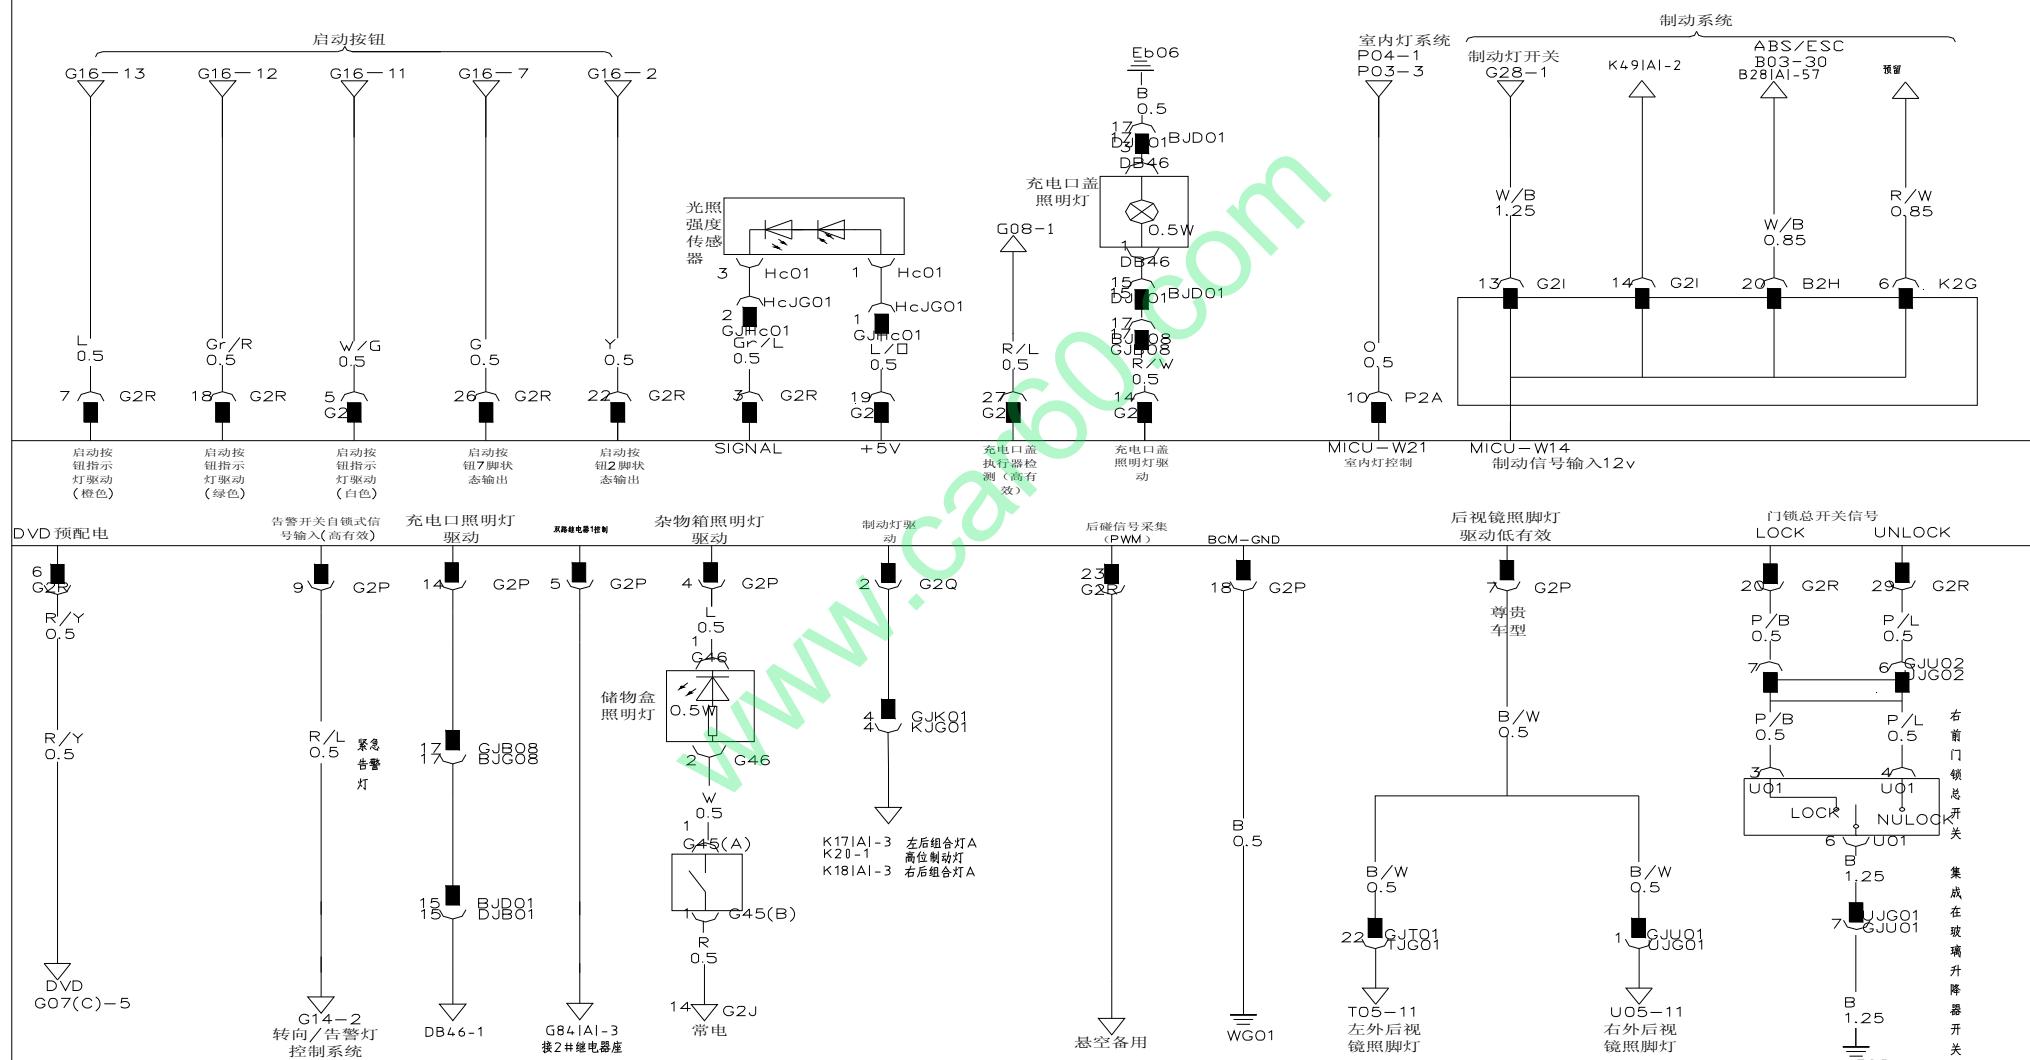


10. BCM

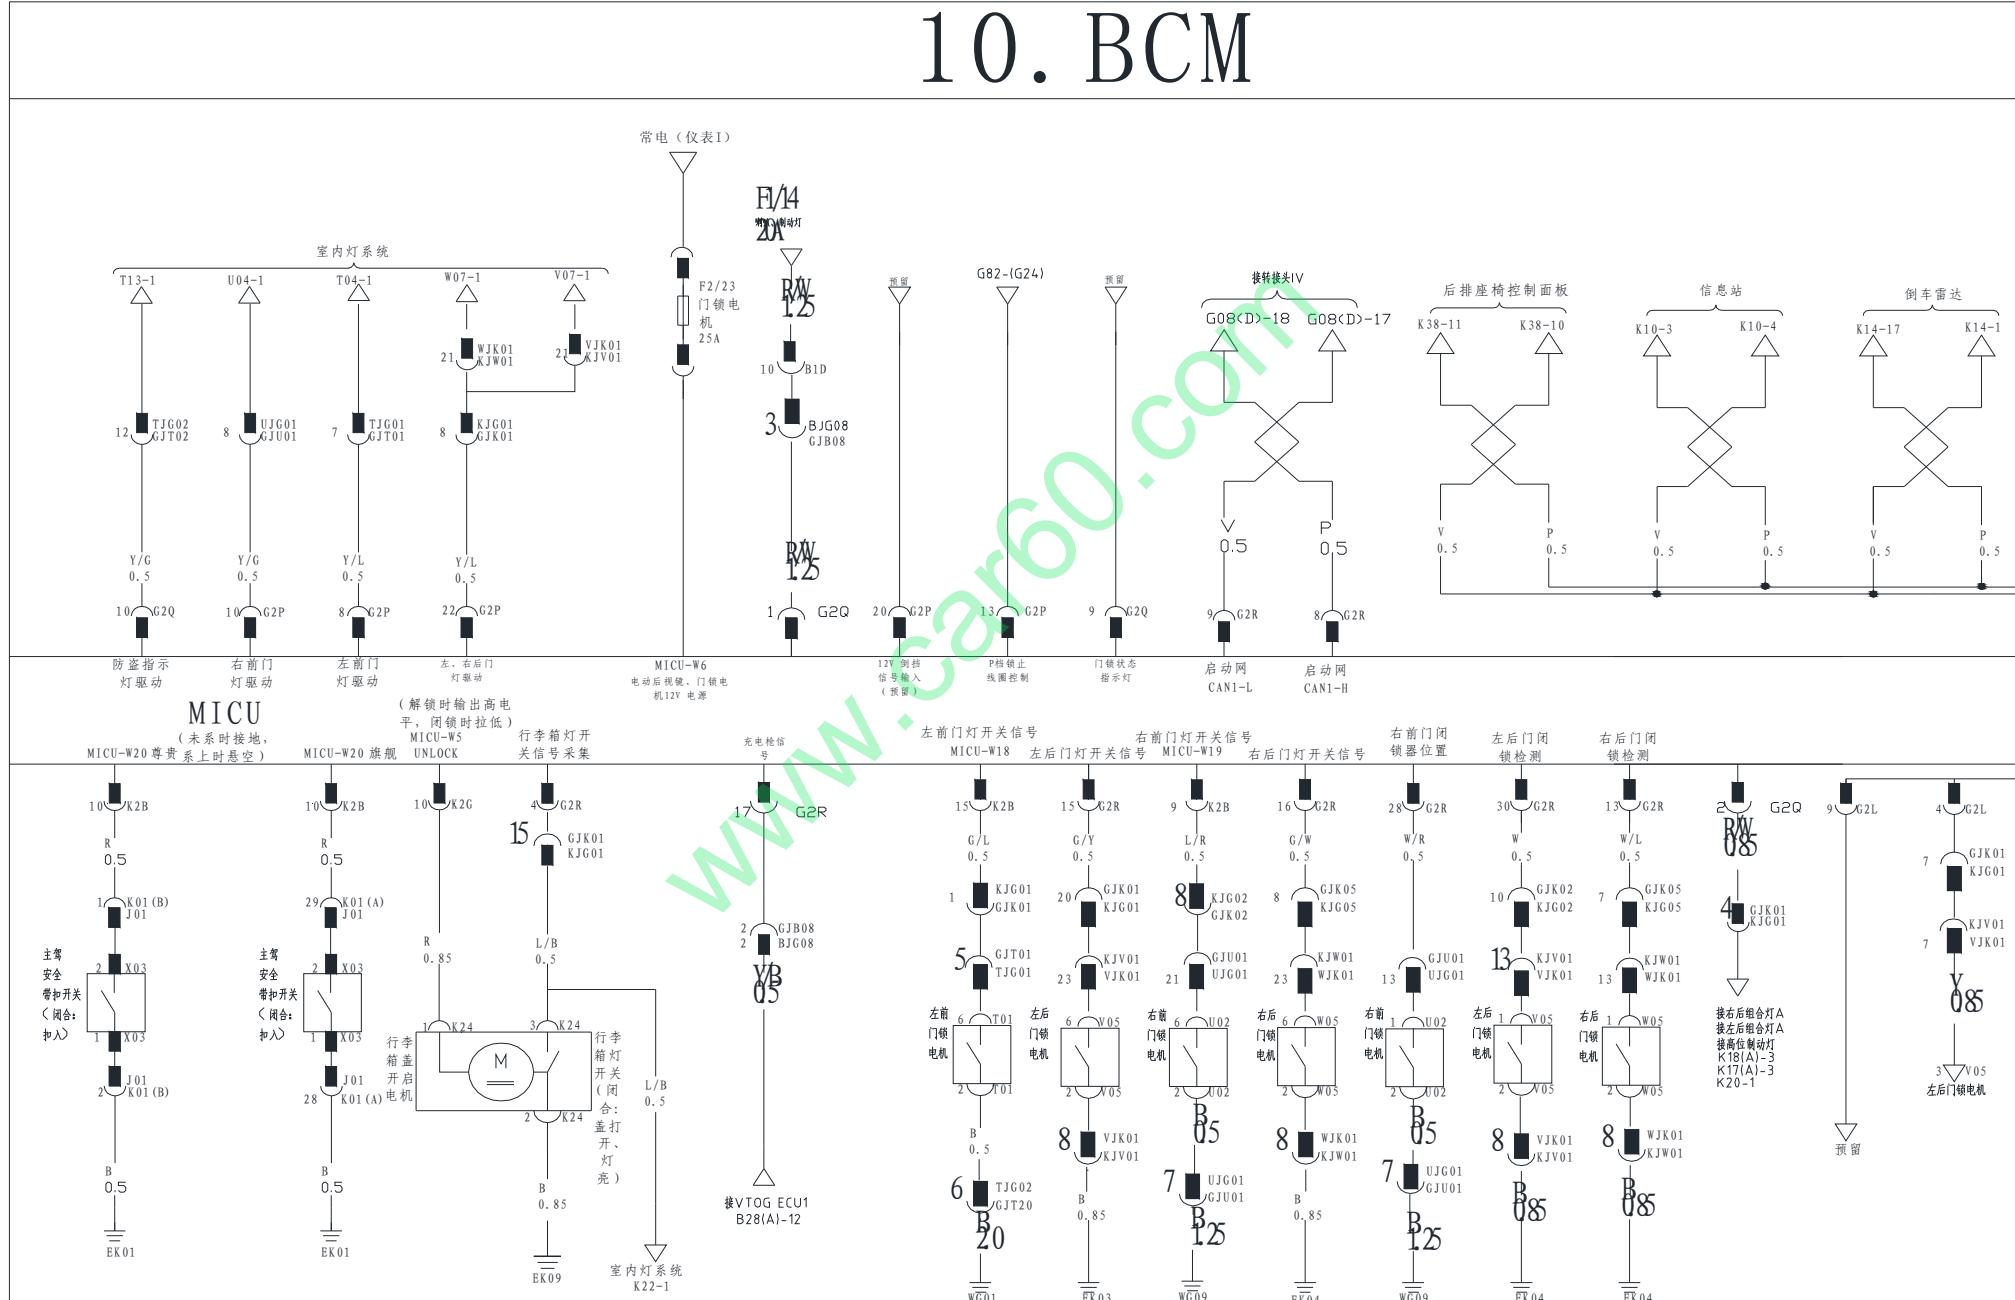

10. BCM

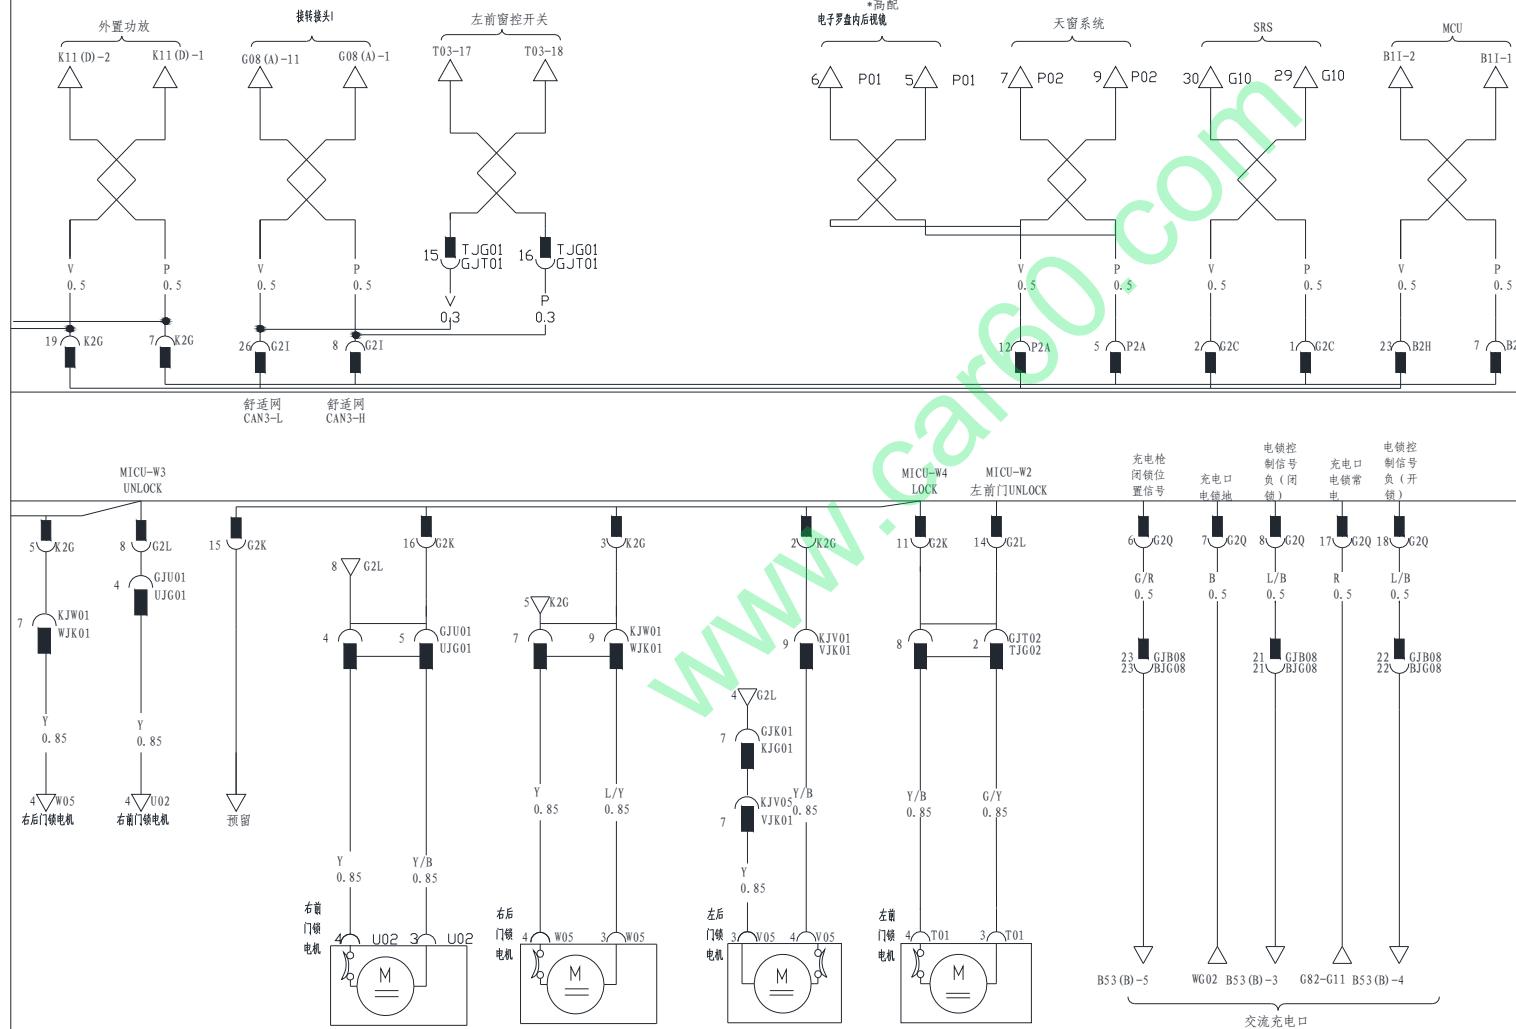


11. MCU

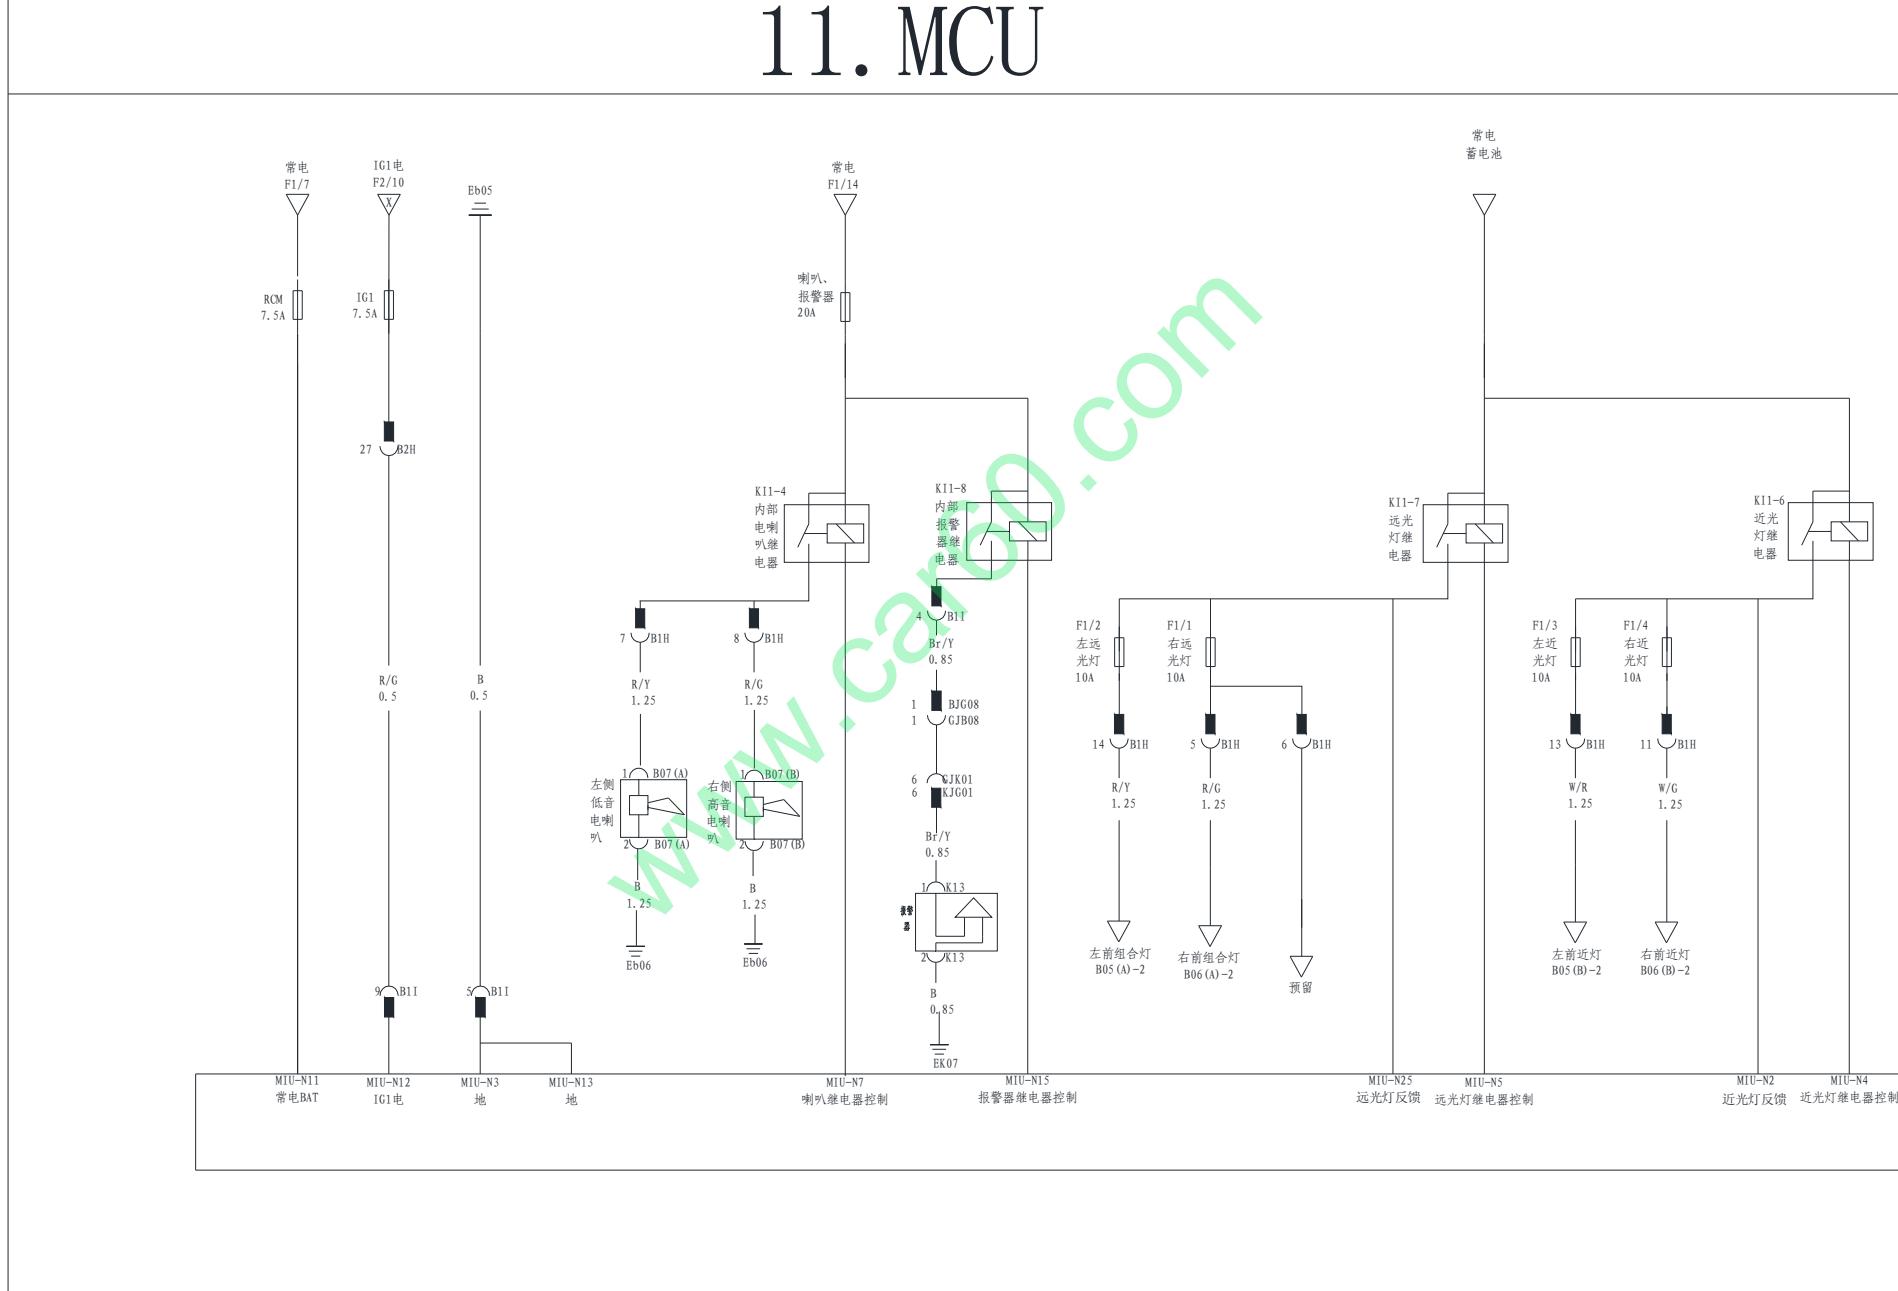


MCU(2)


11. MCU

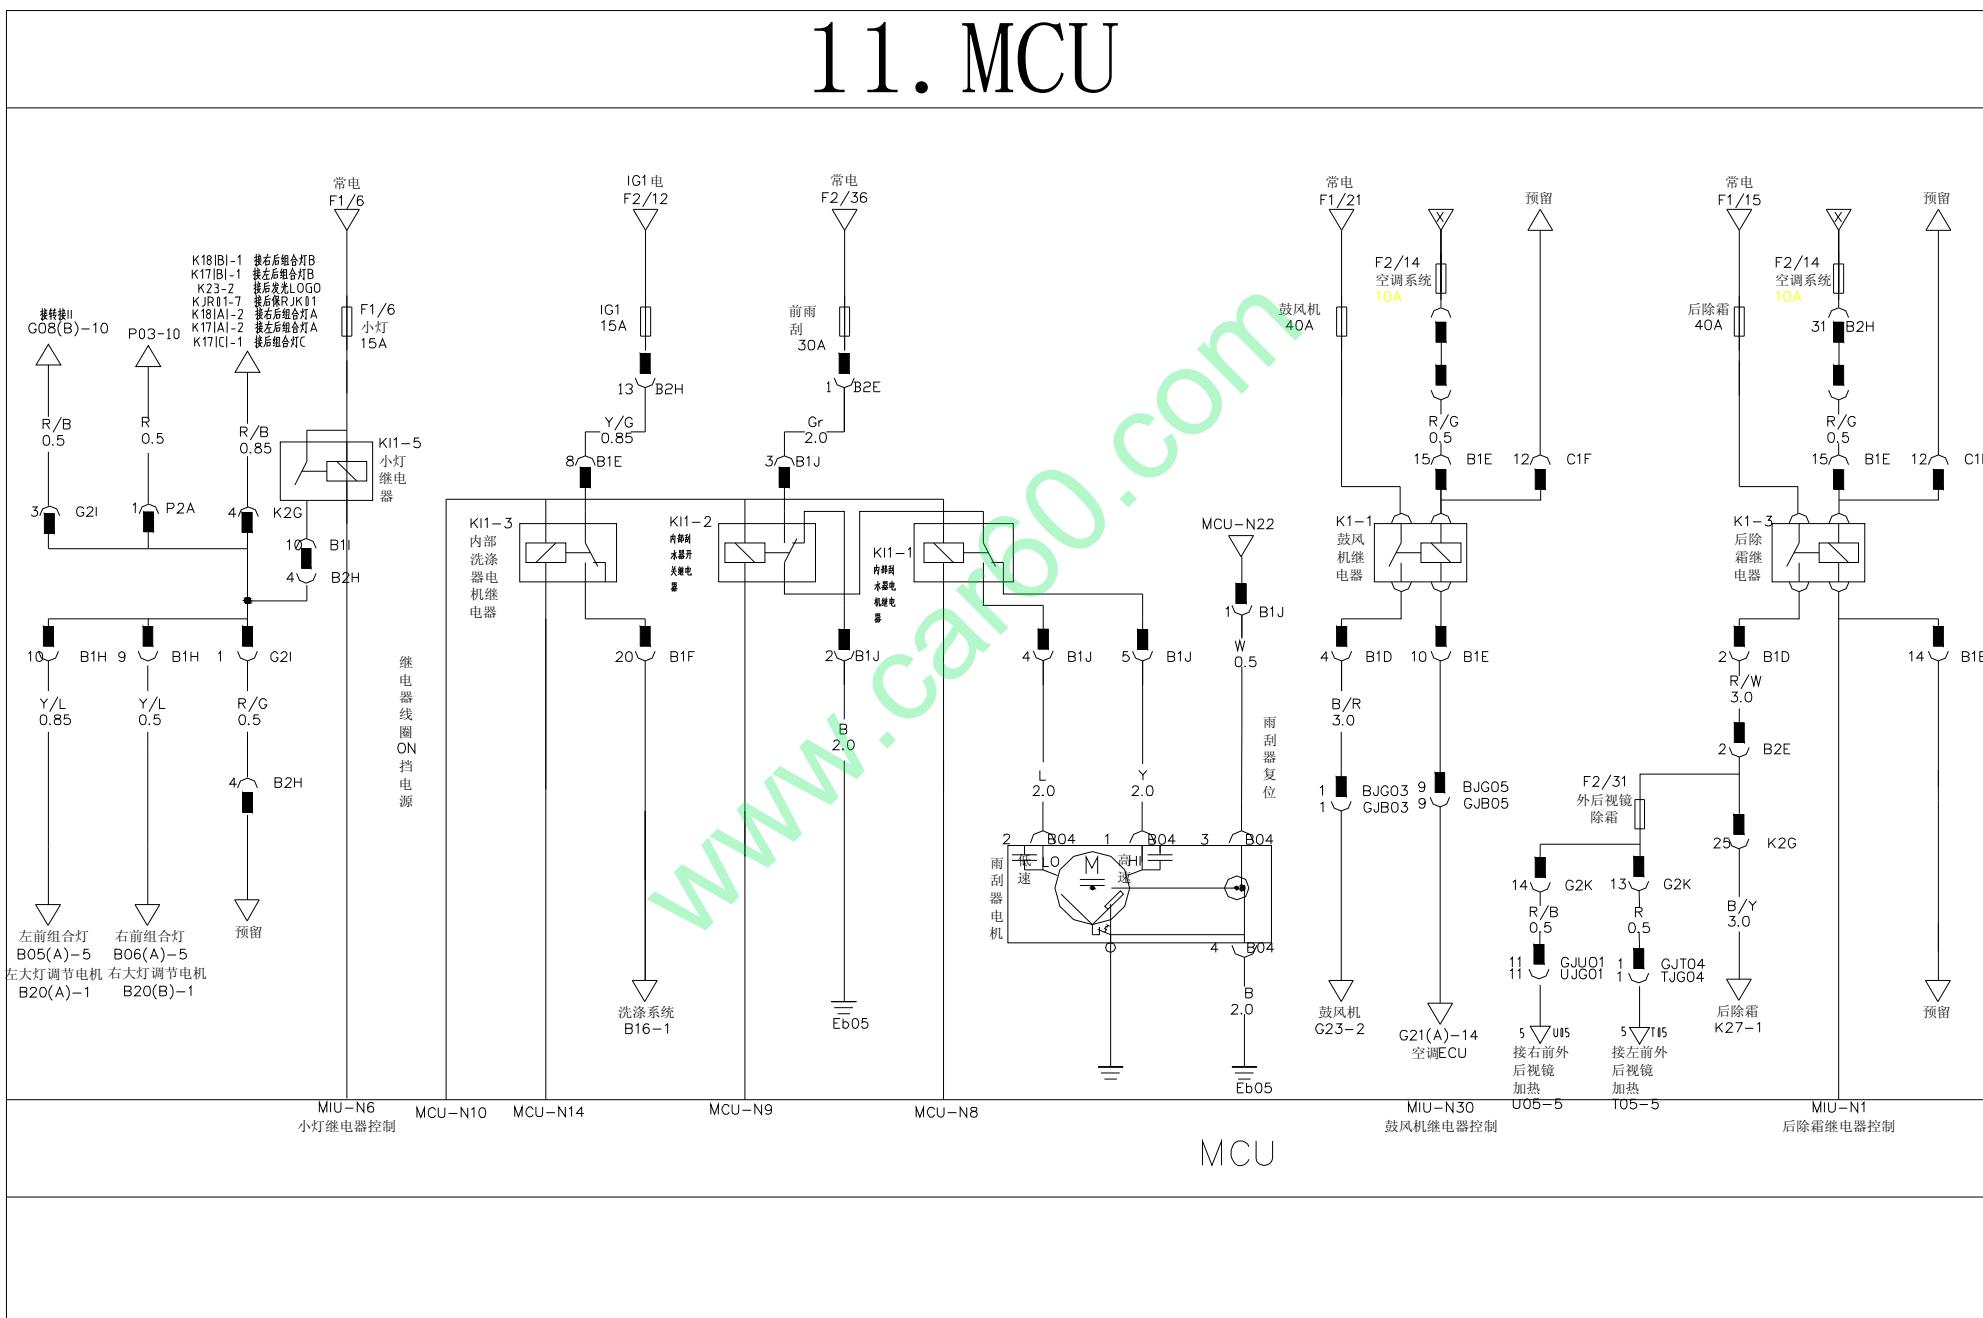


11. MCU

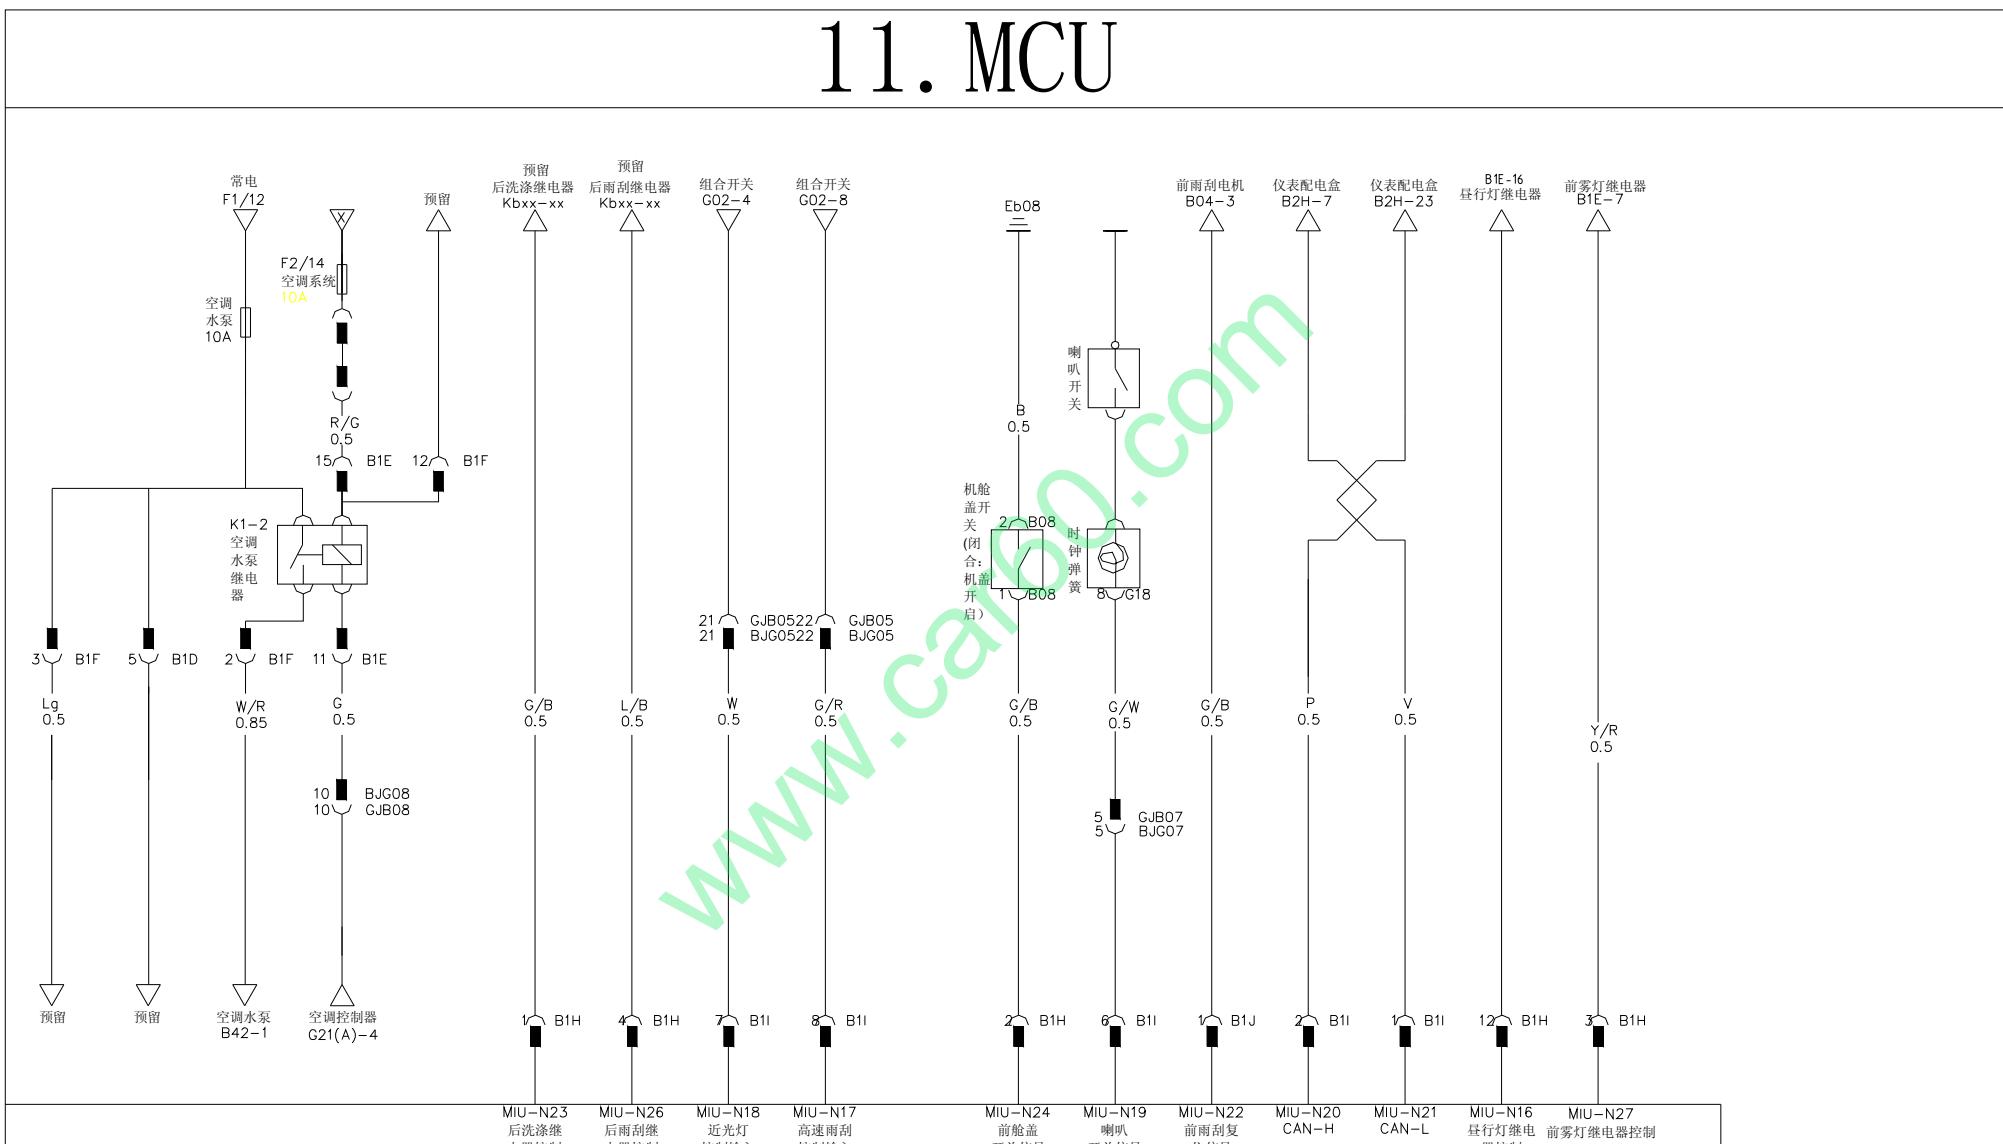


12. Keyless

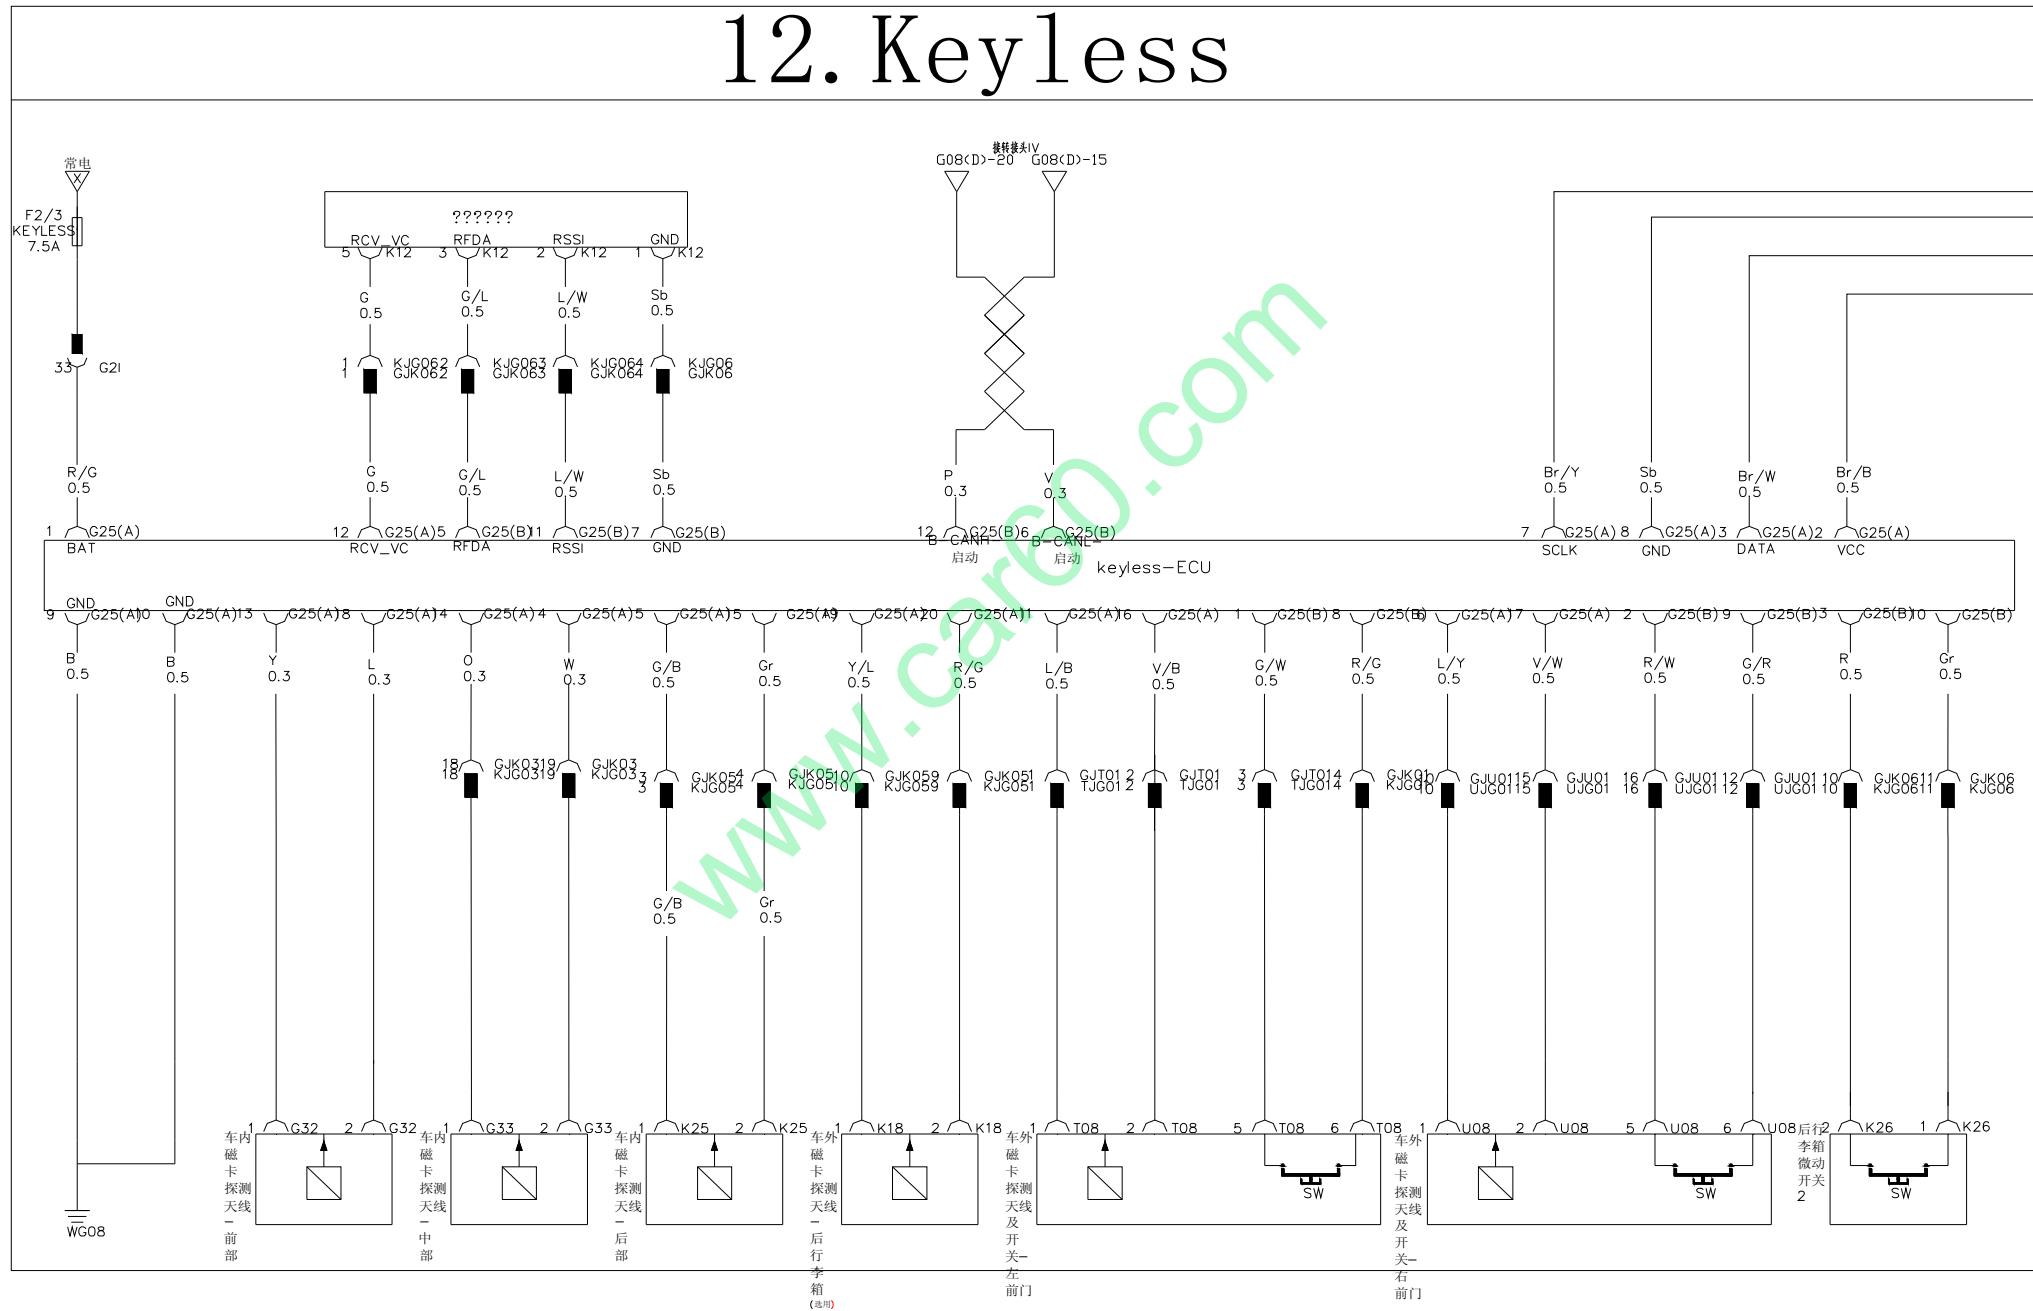


12. Keyless

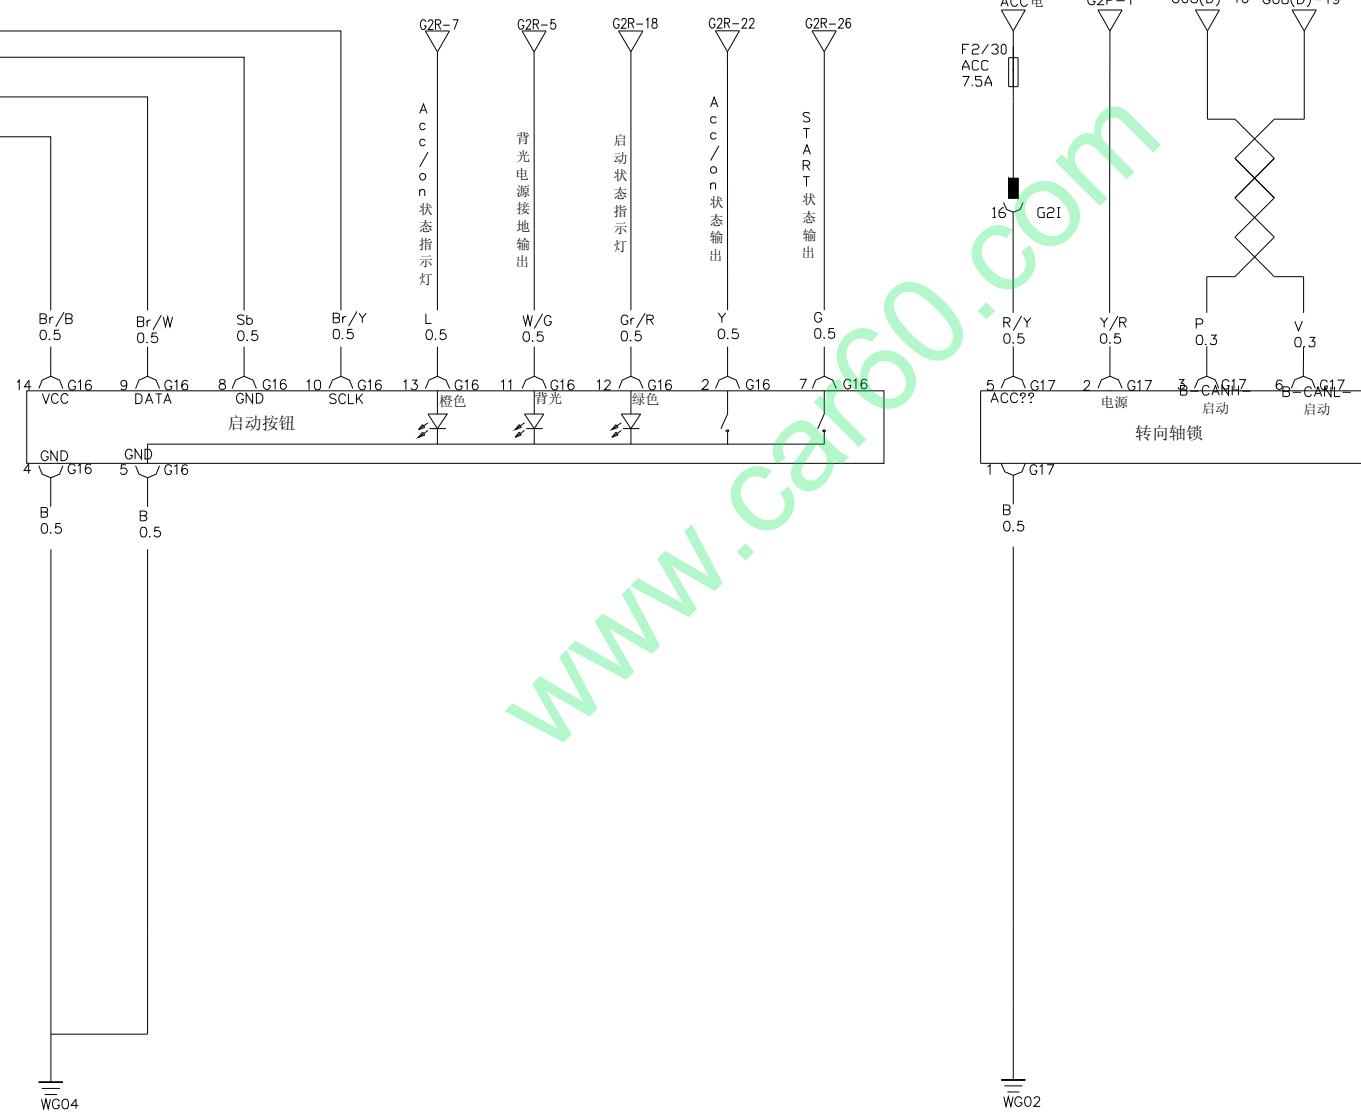


13. 组合仪表

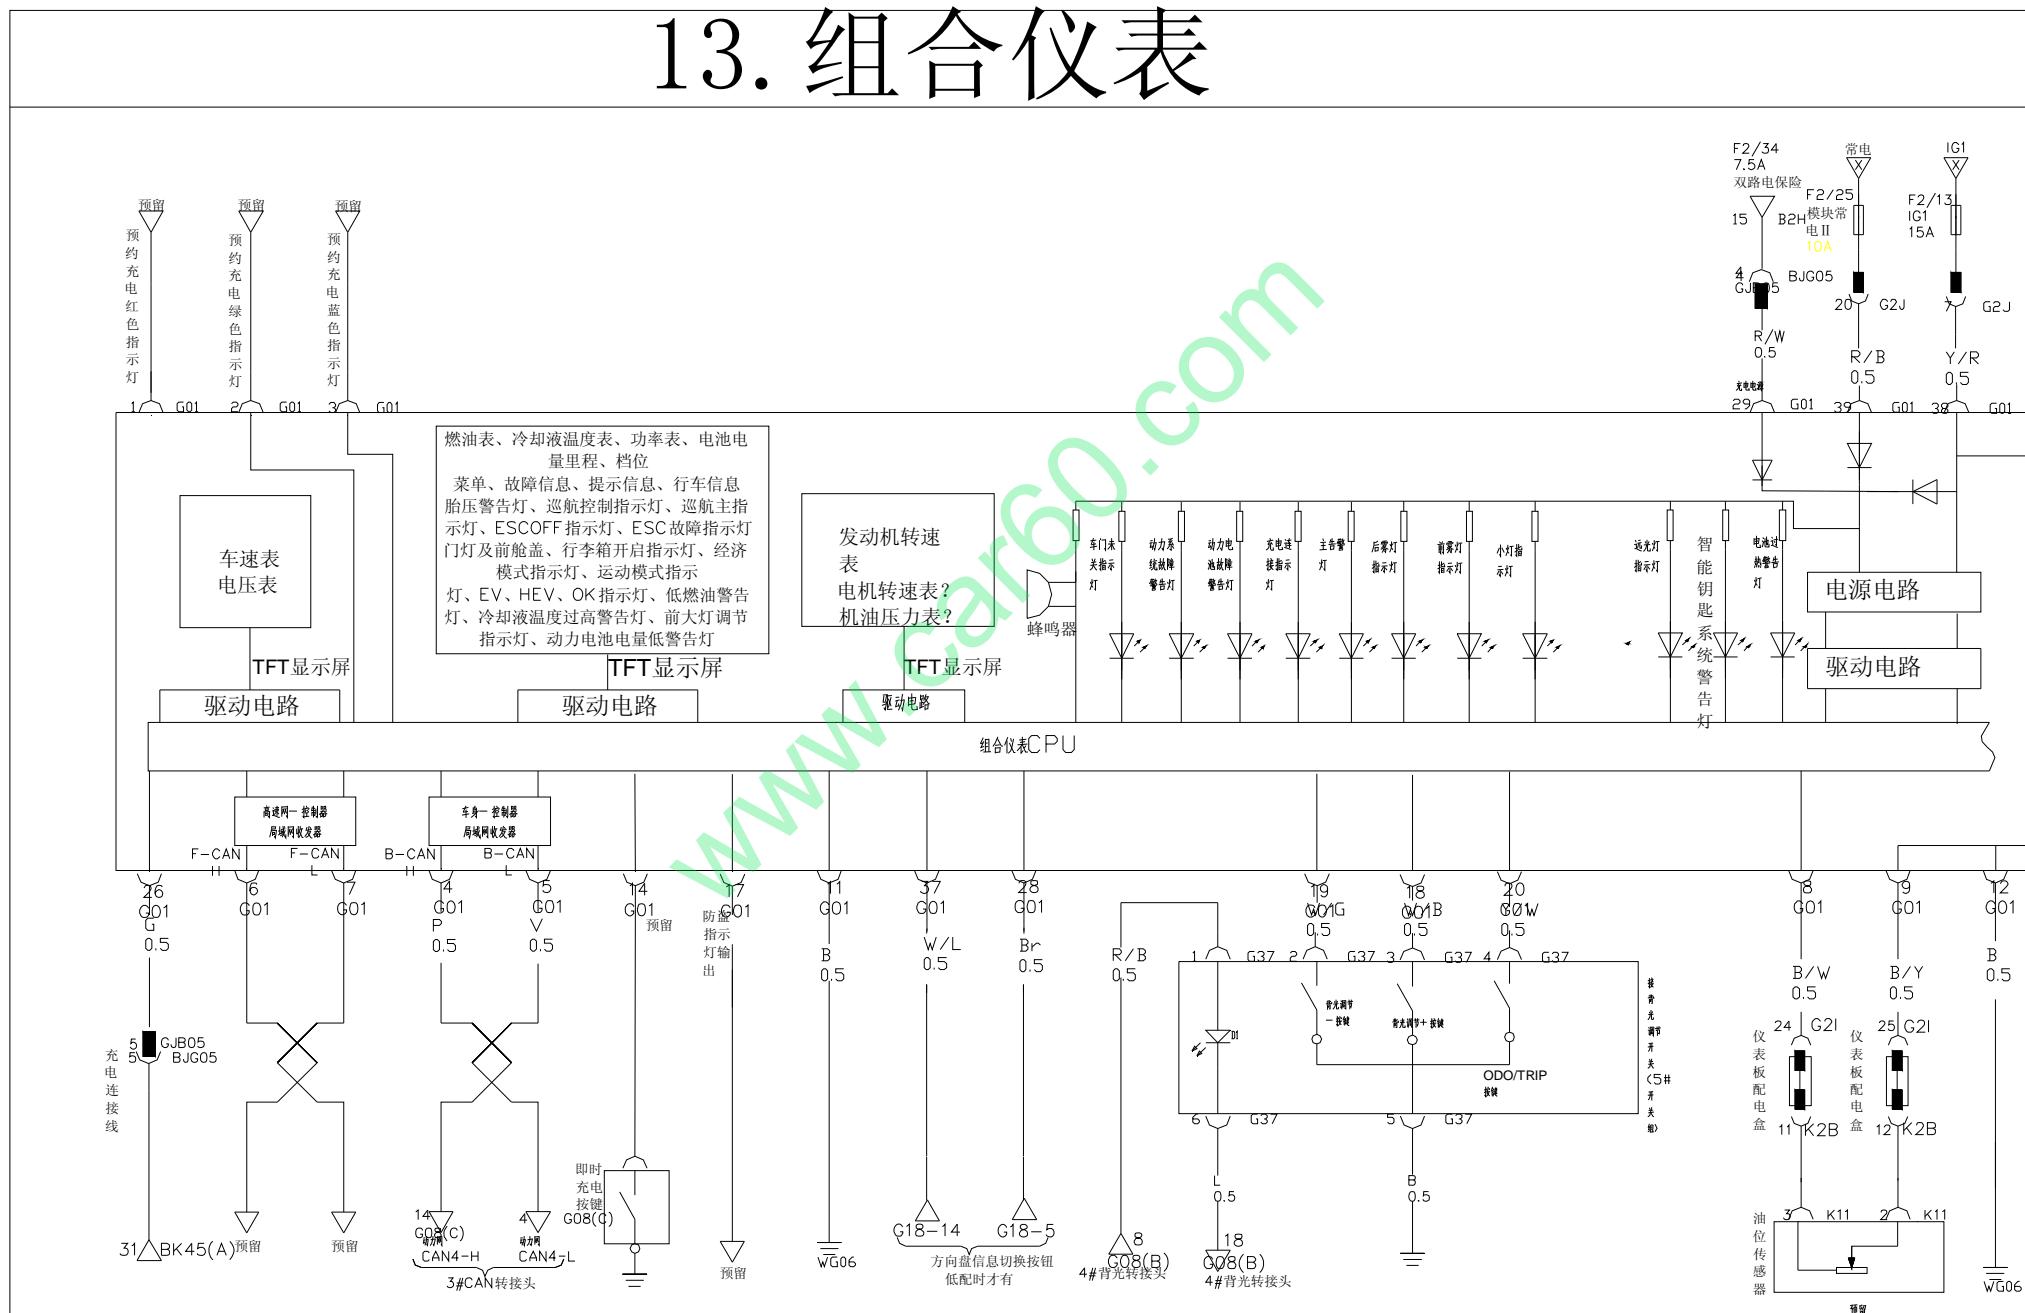


13. 组合仪表

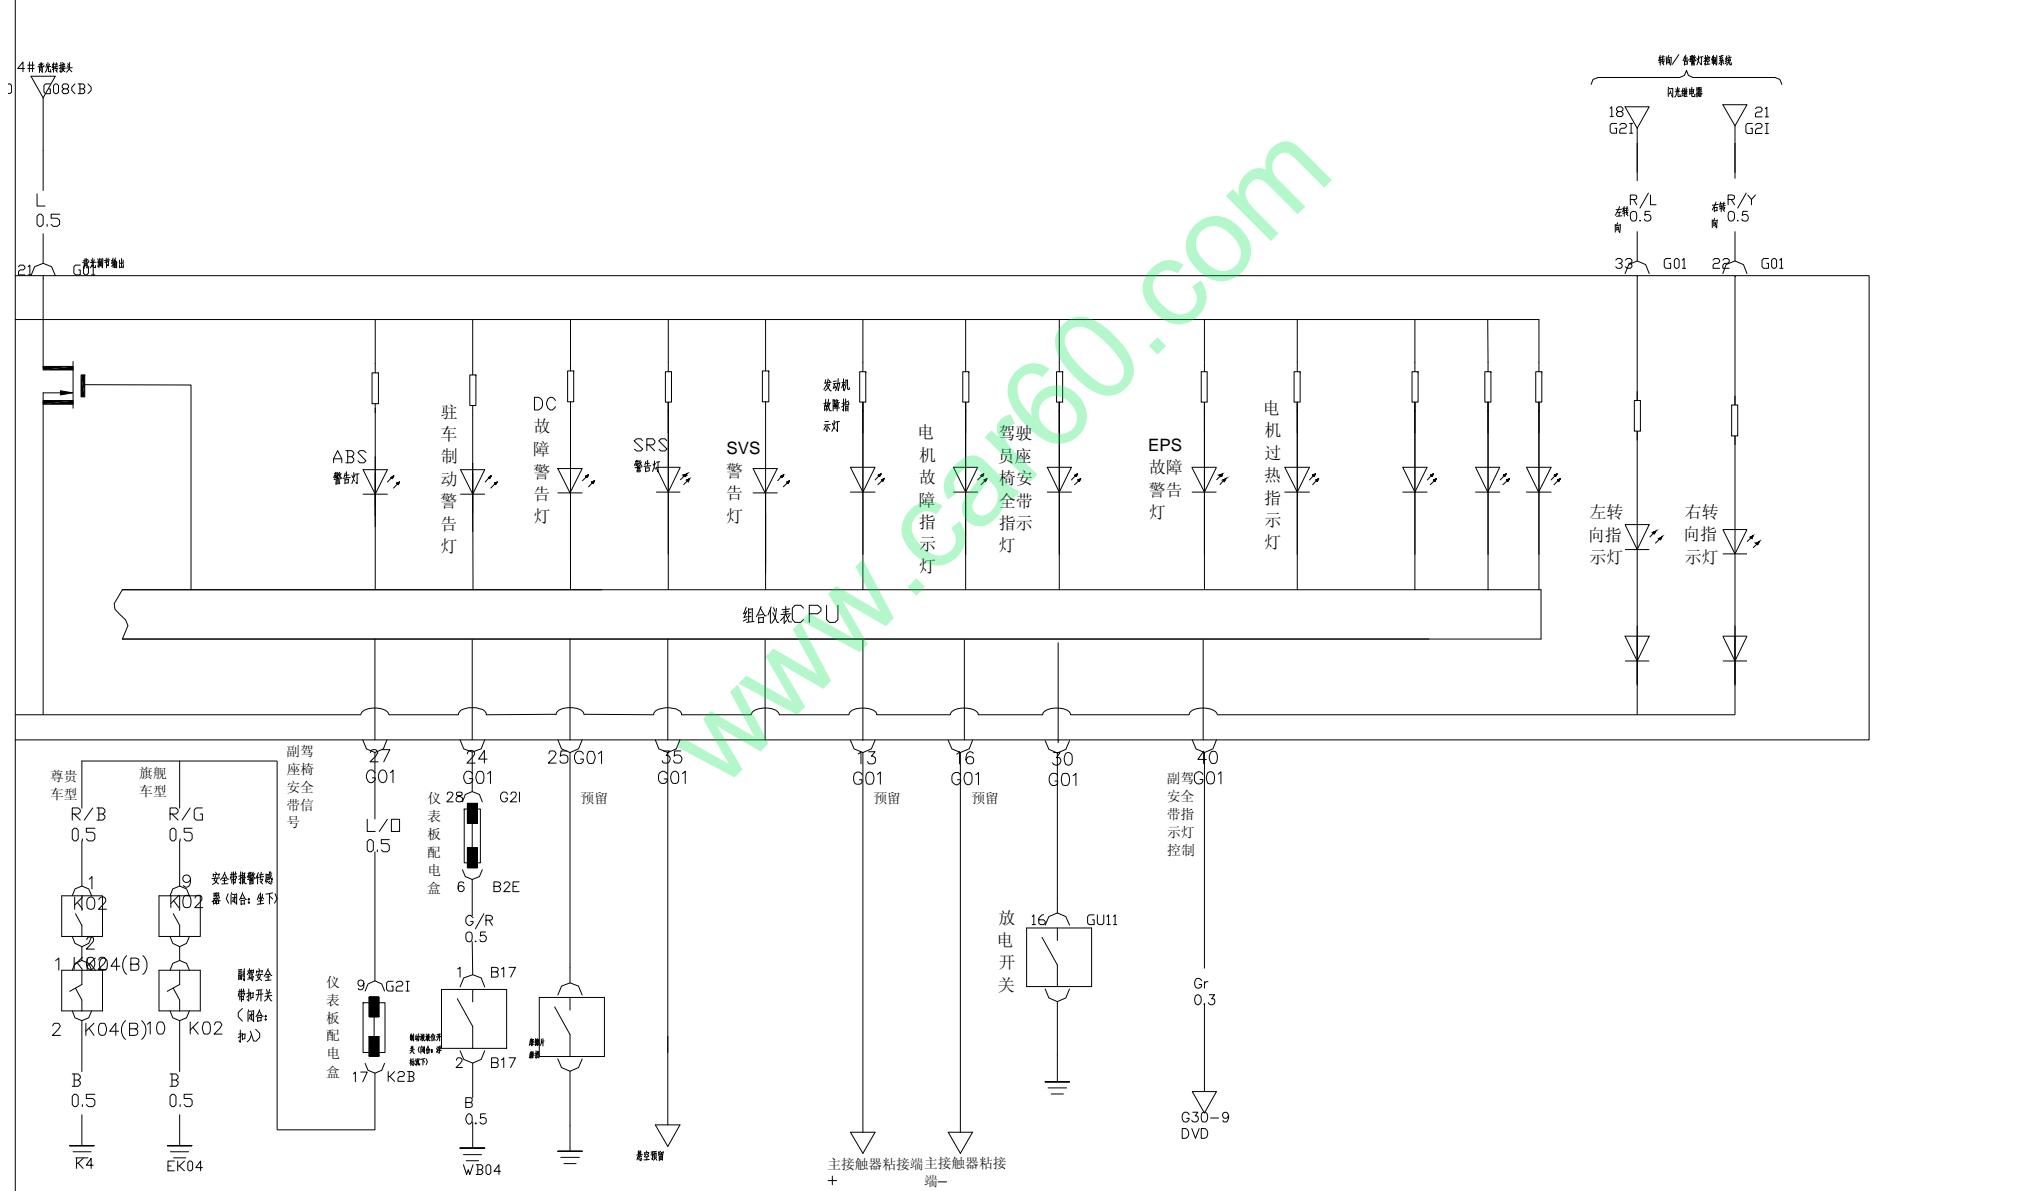


14. 驻车辅助模块

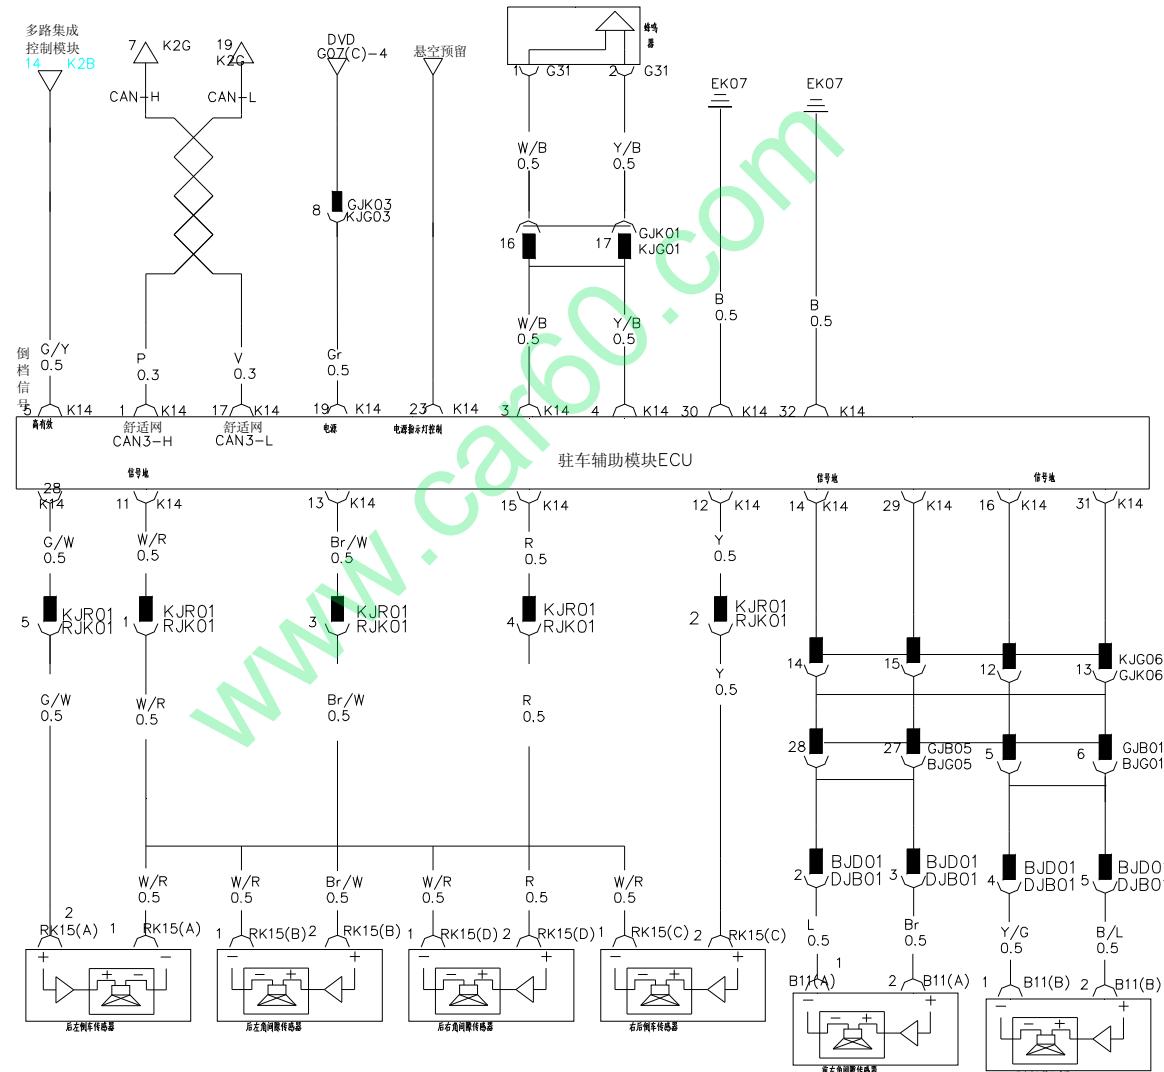


15. 正极保险盒

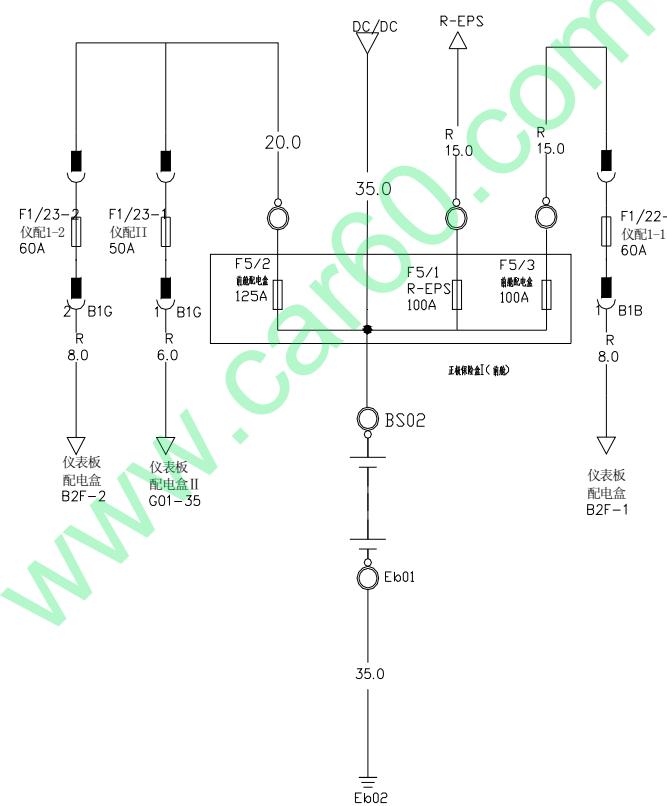


16. 全景影像系统

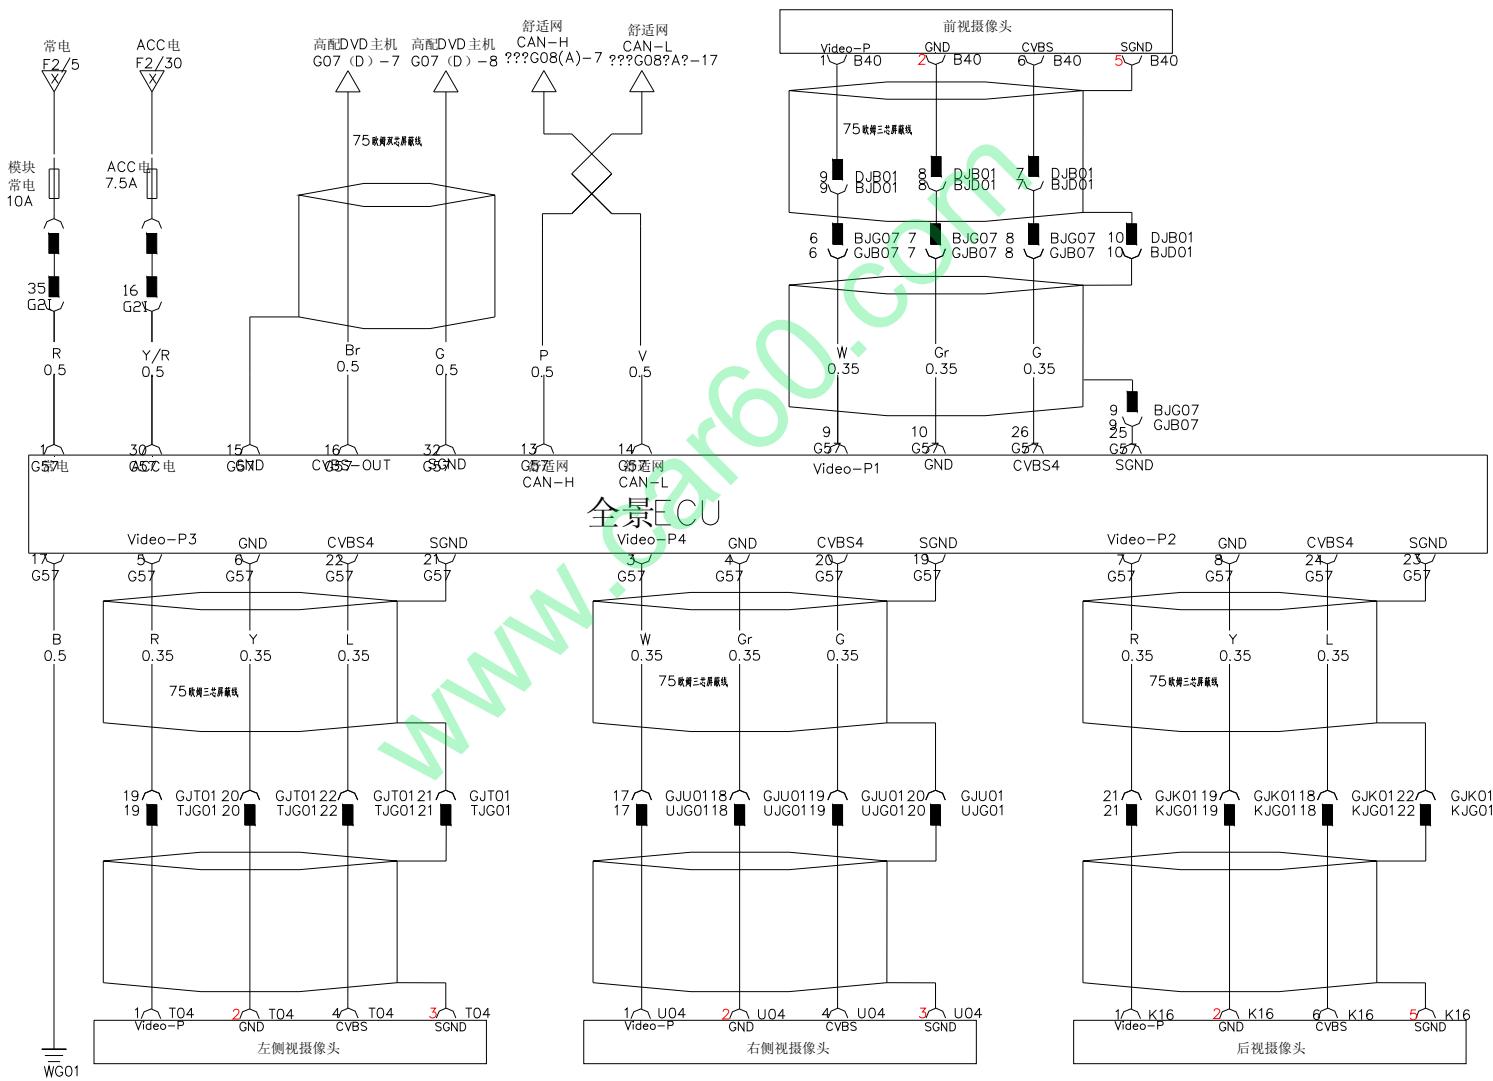


17. 多媒体系统

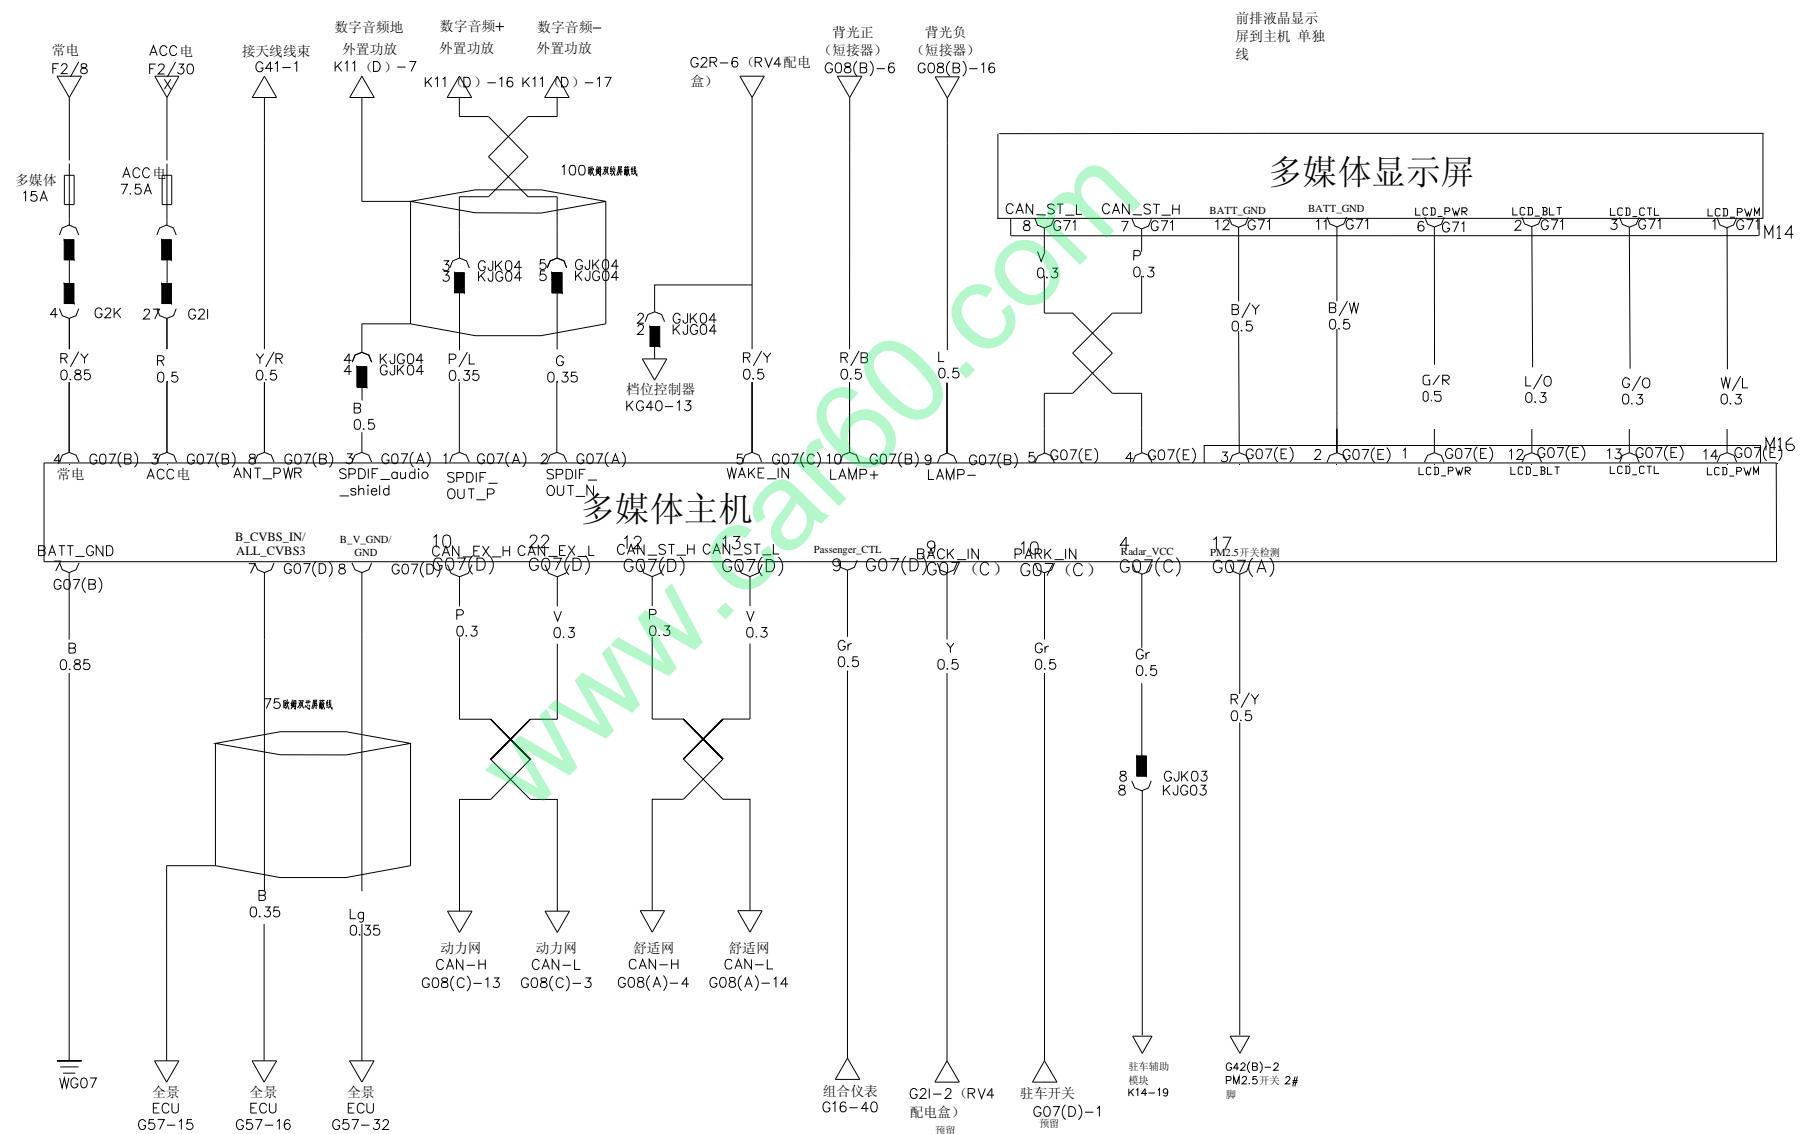


外置功放 (1)

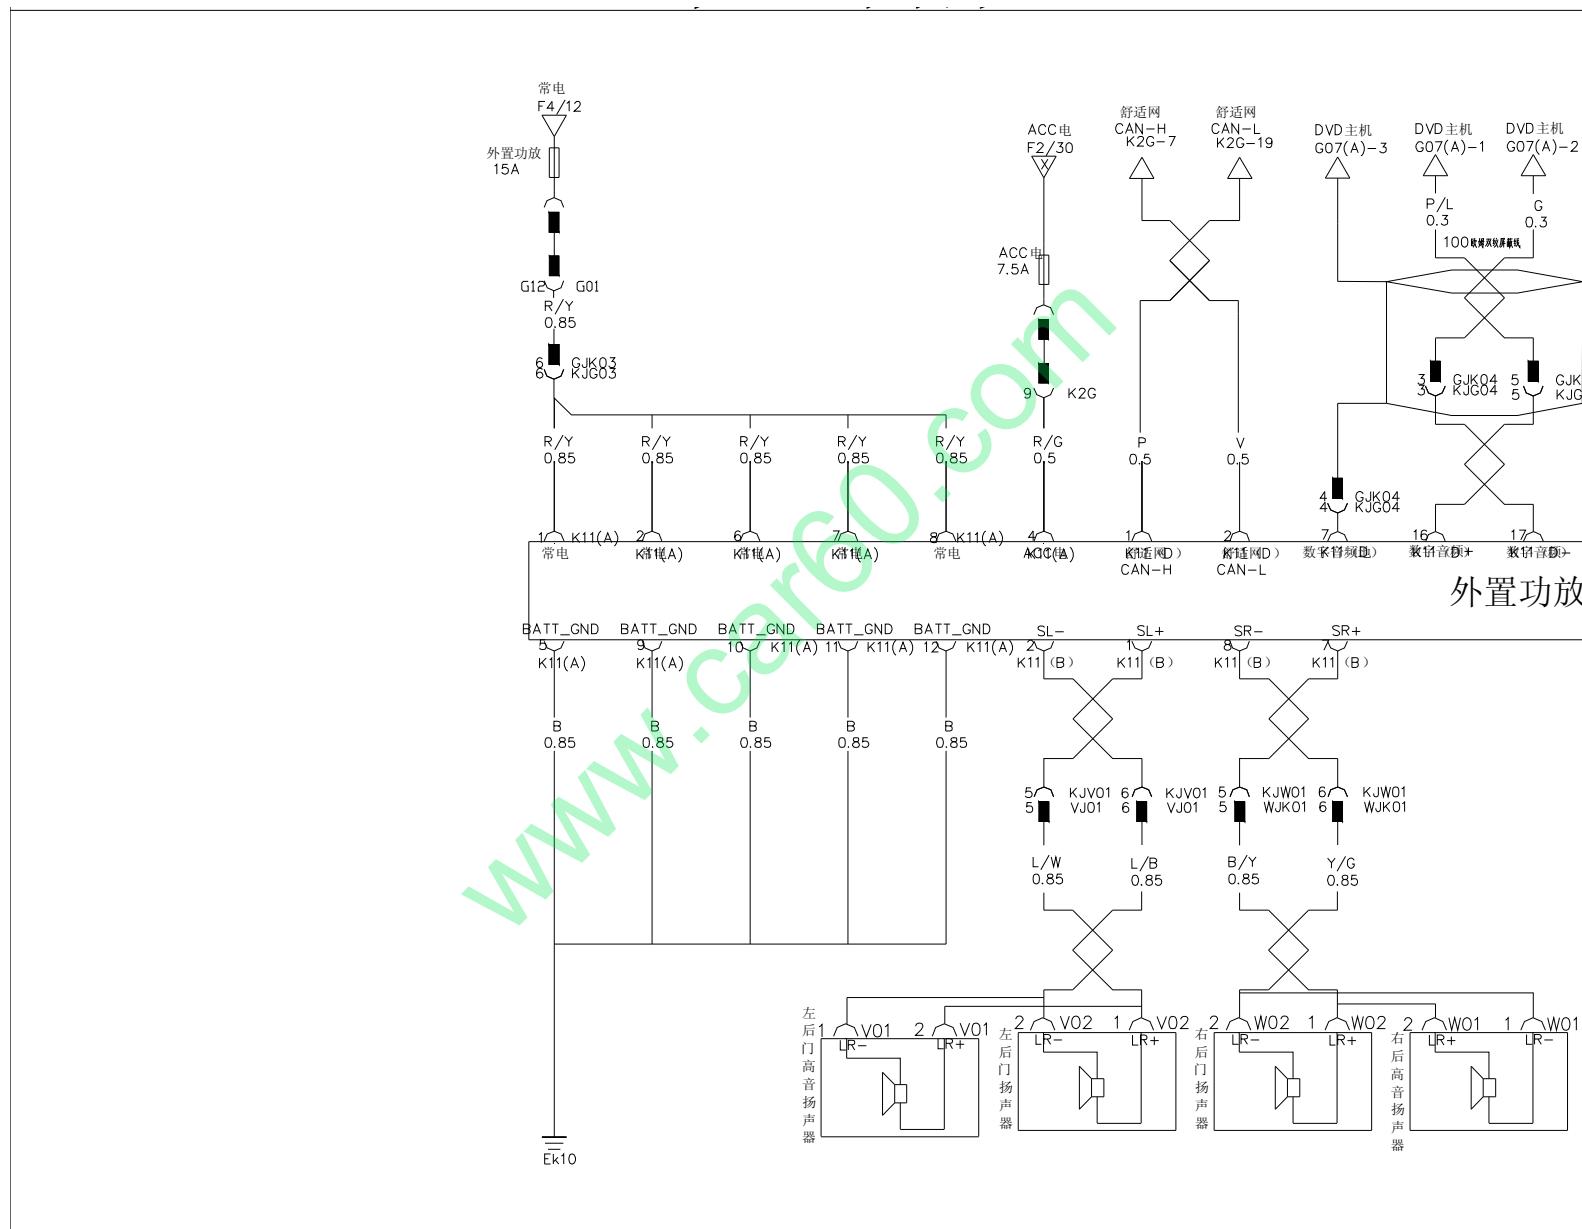


外置功放 (2)

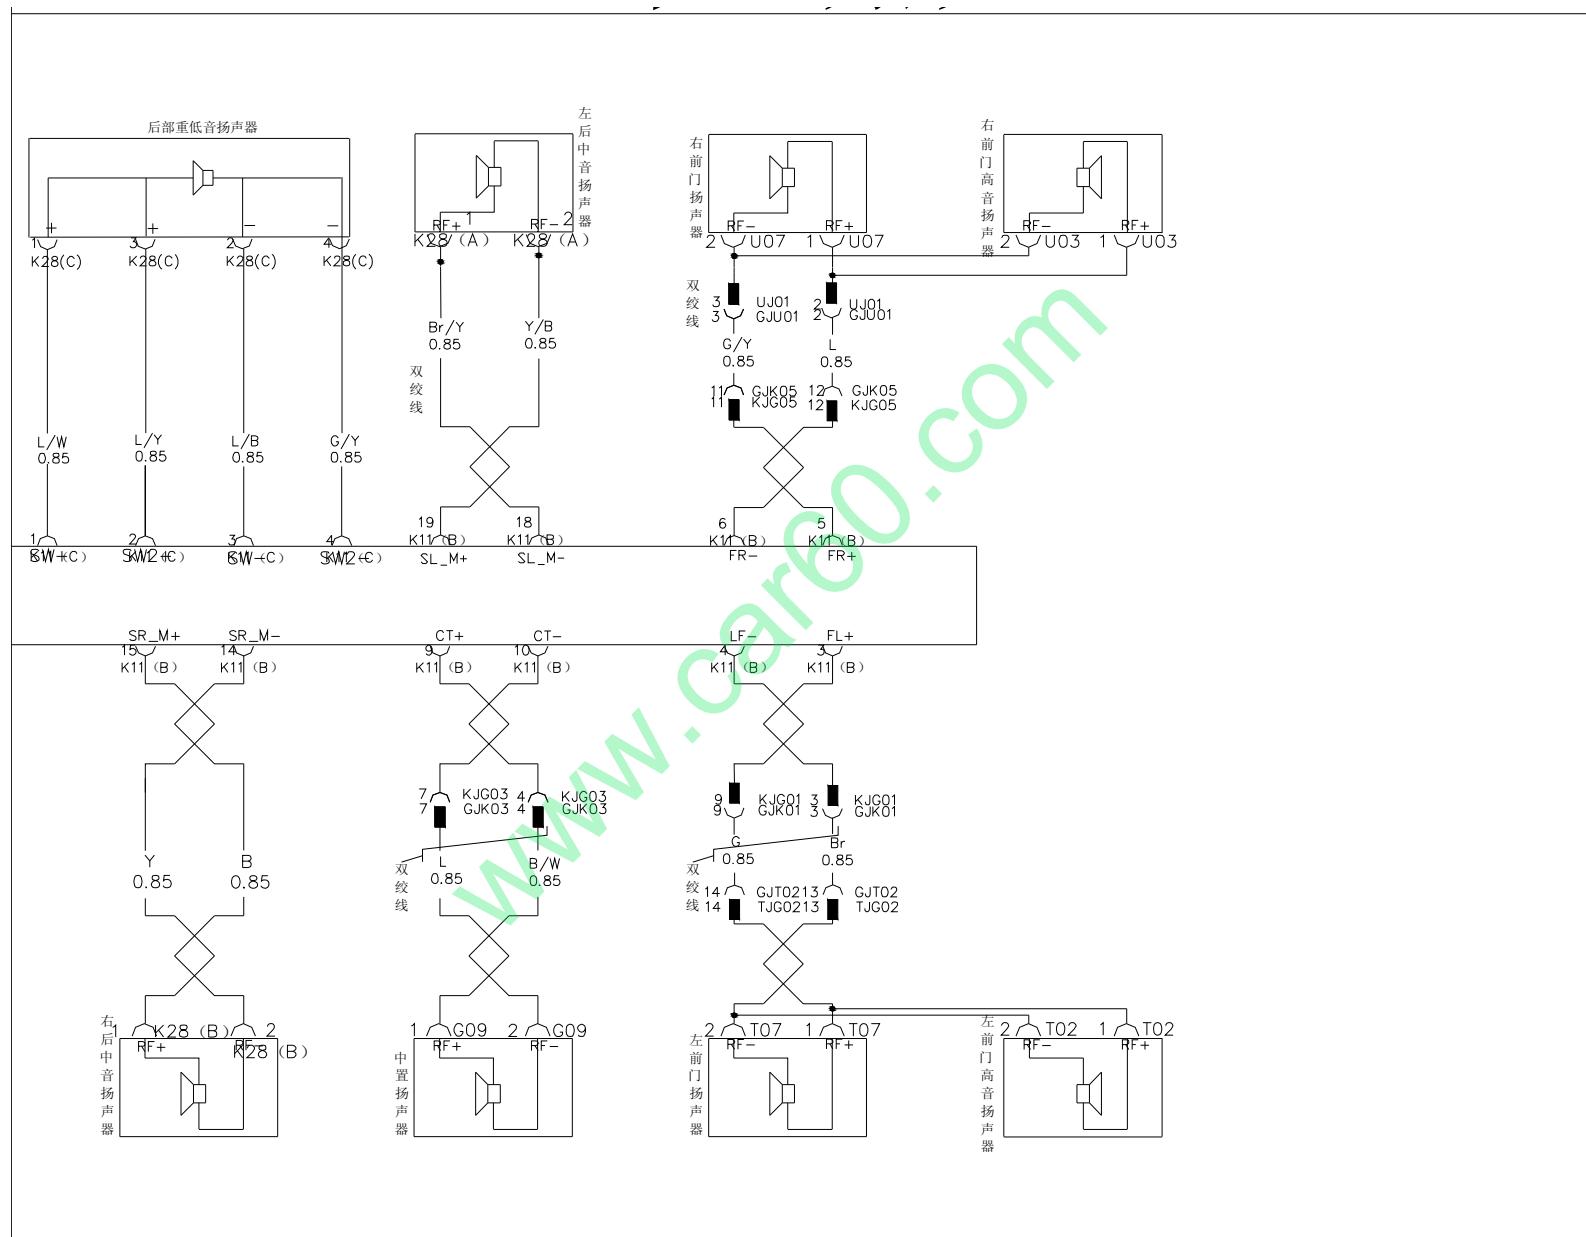


室外灯系统

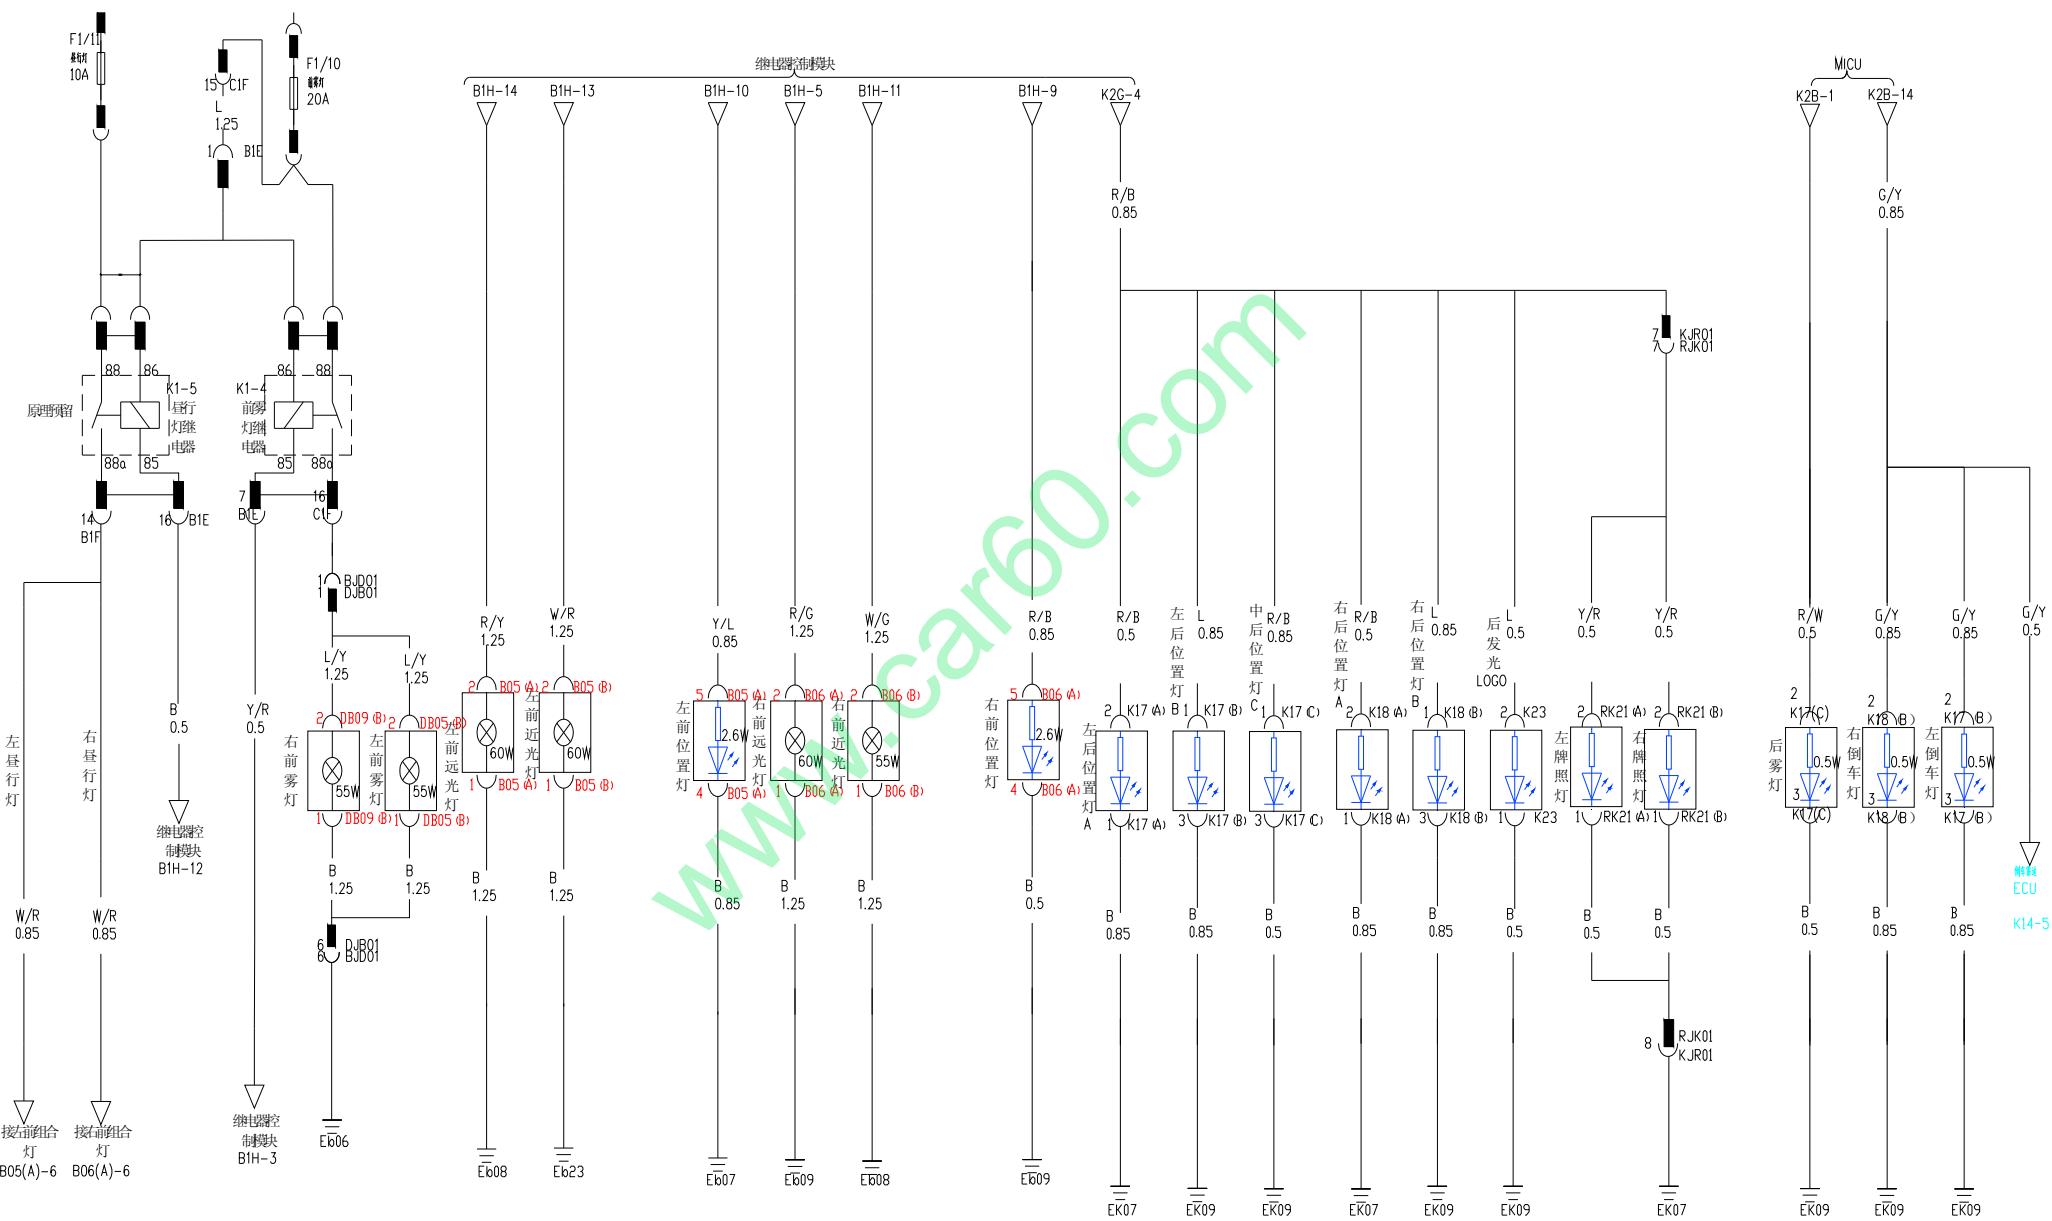


室内灯系统

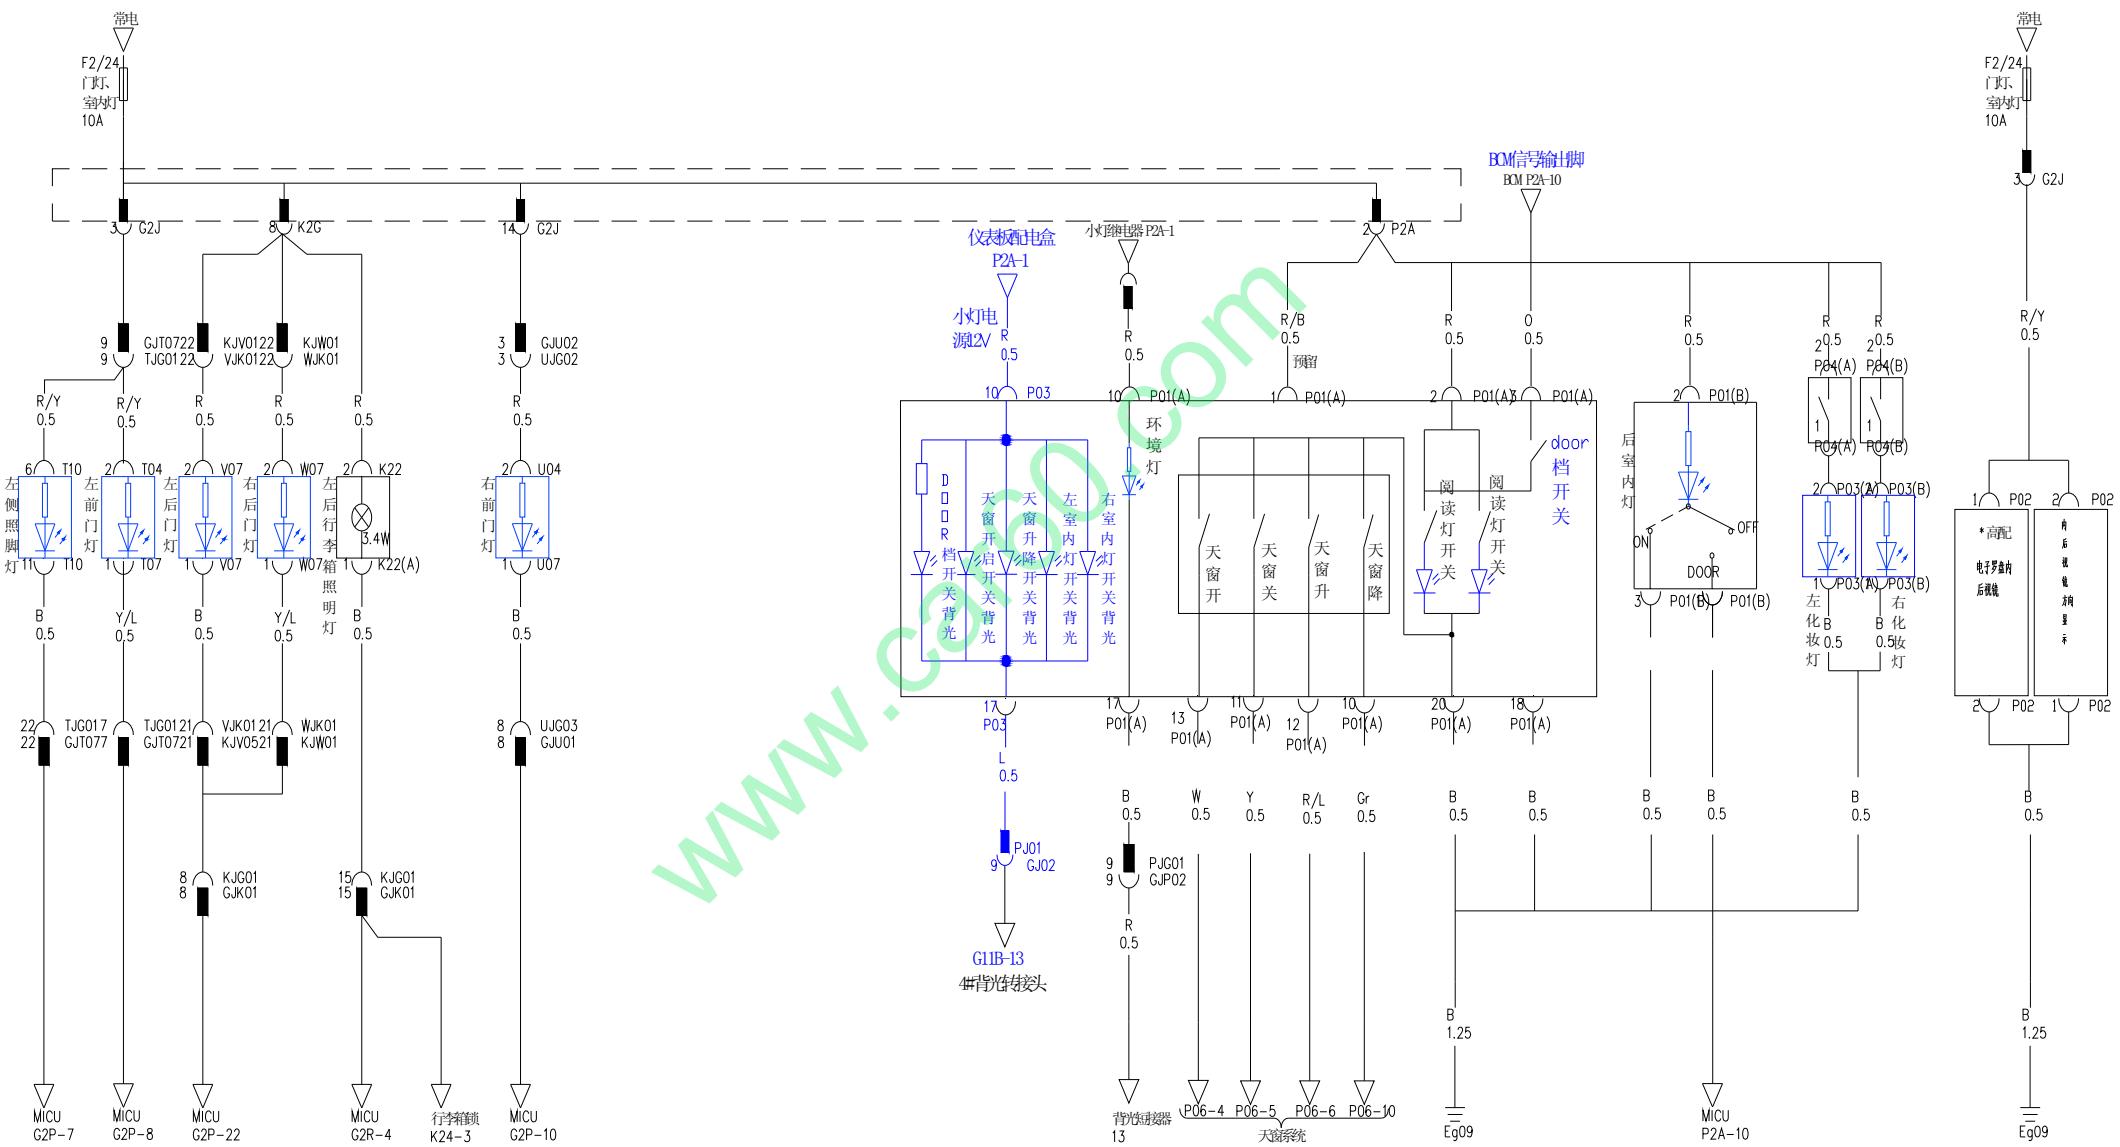


20. 转向/告警

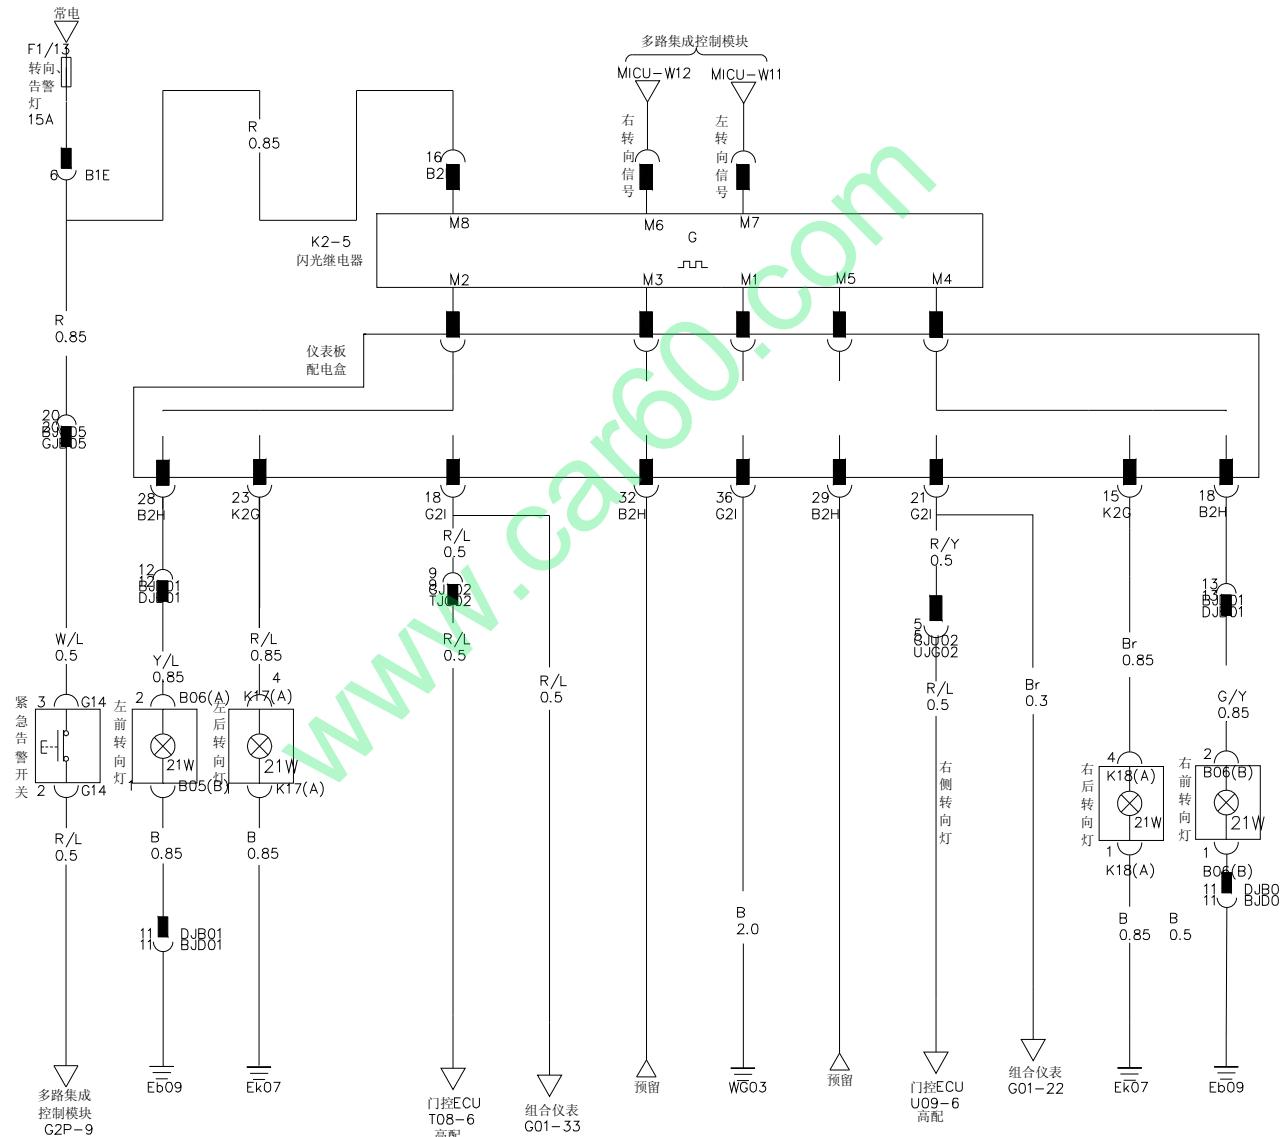


21. 制动灯及点烟器

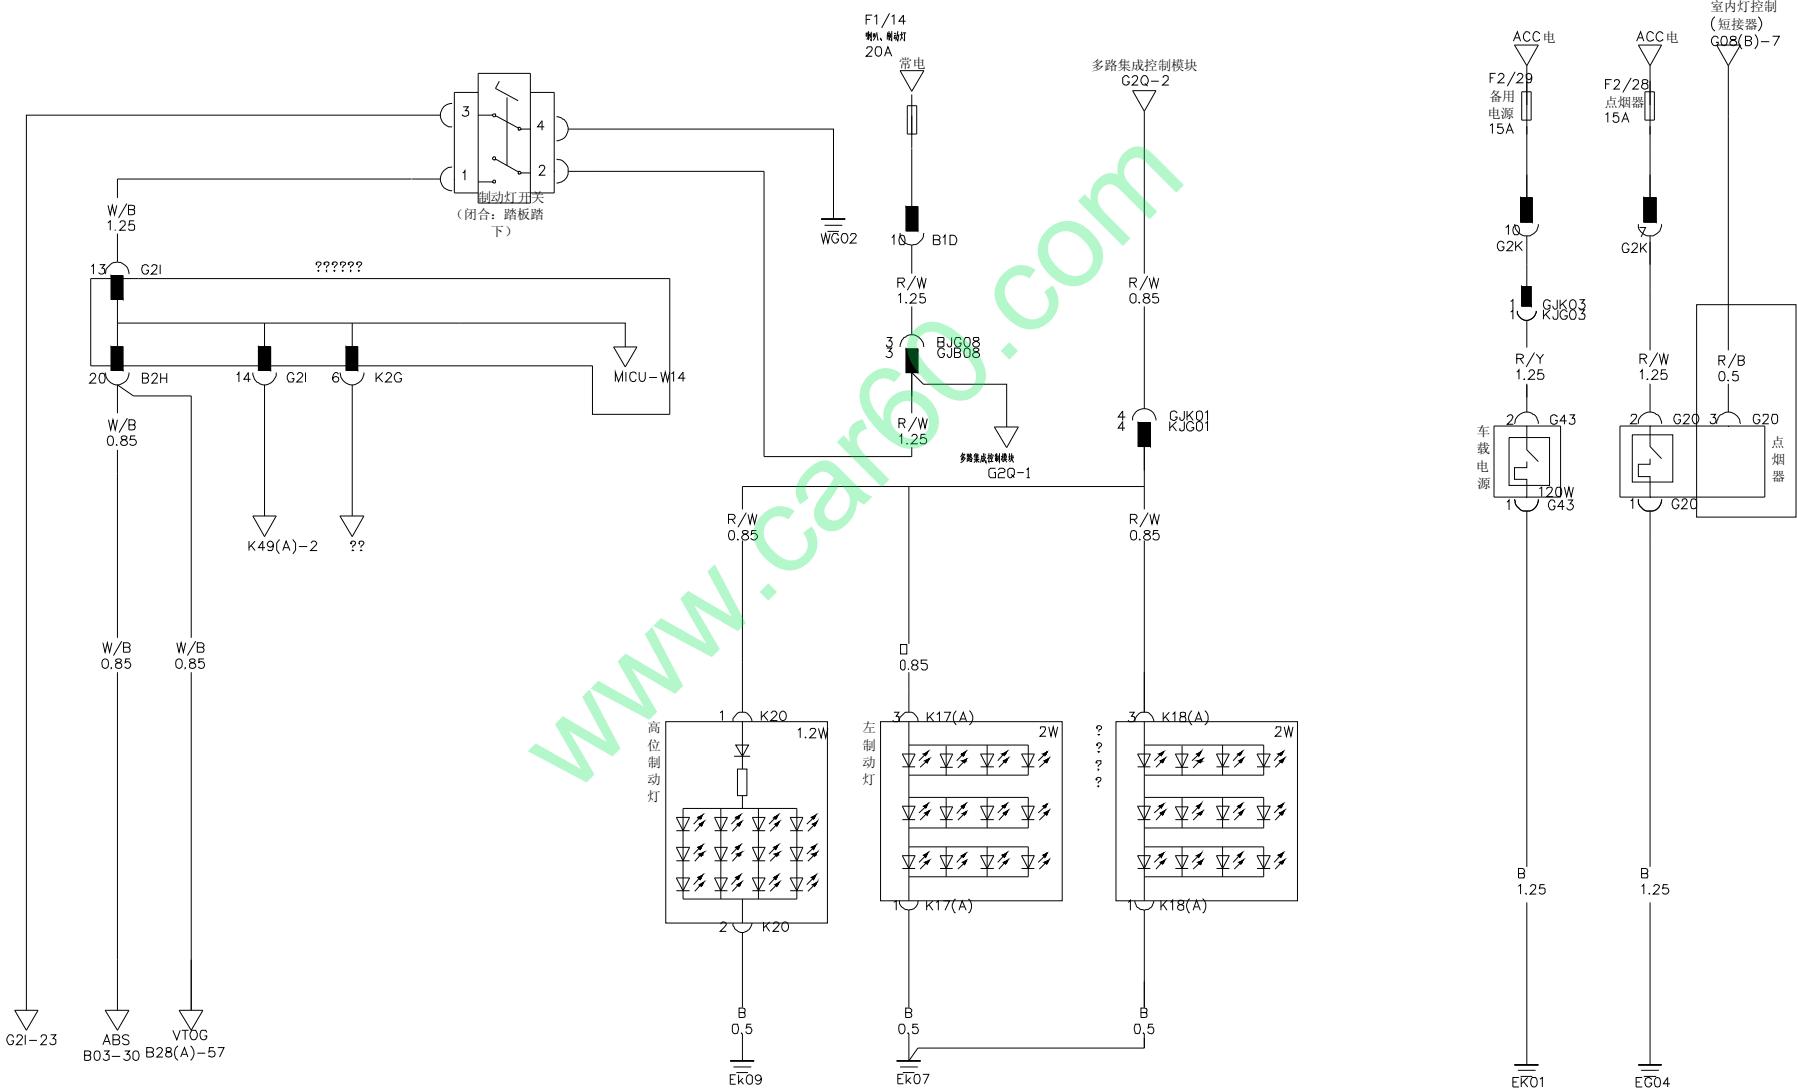


22. 背光

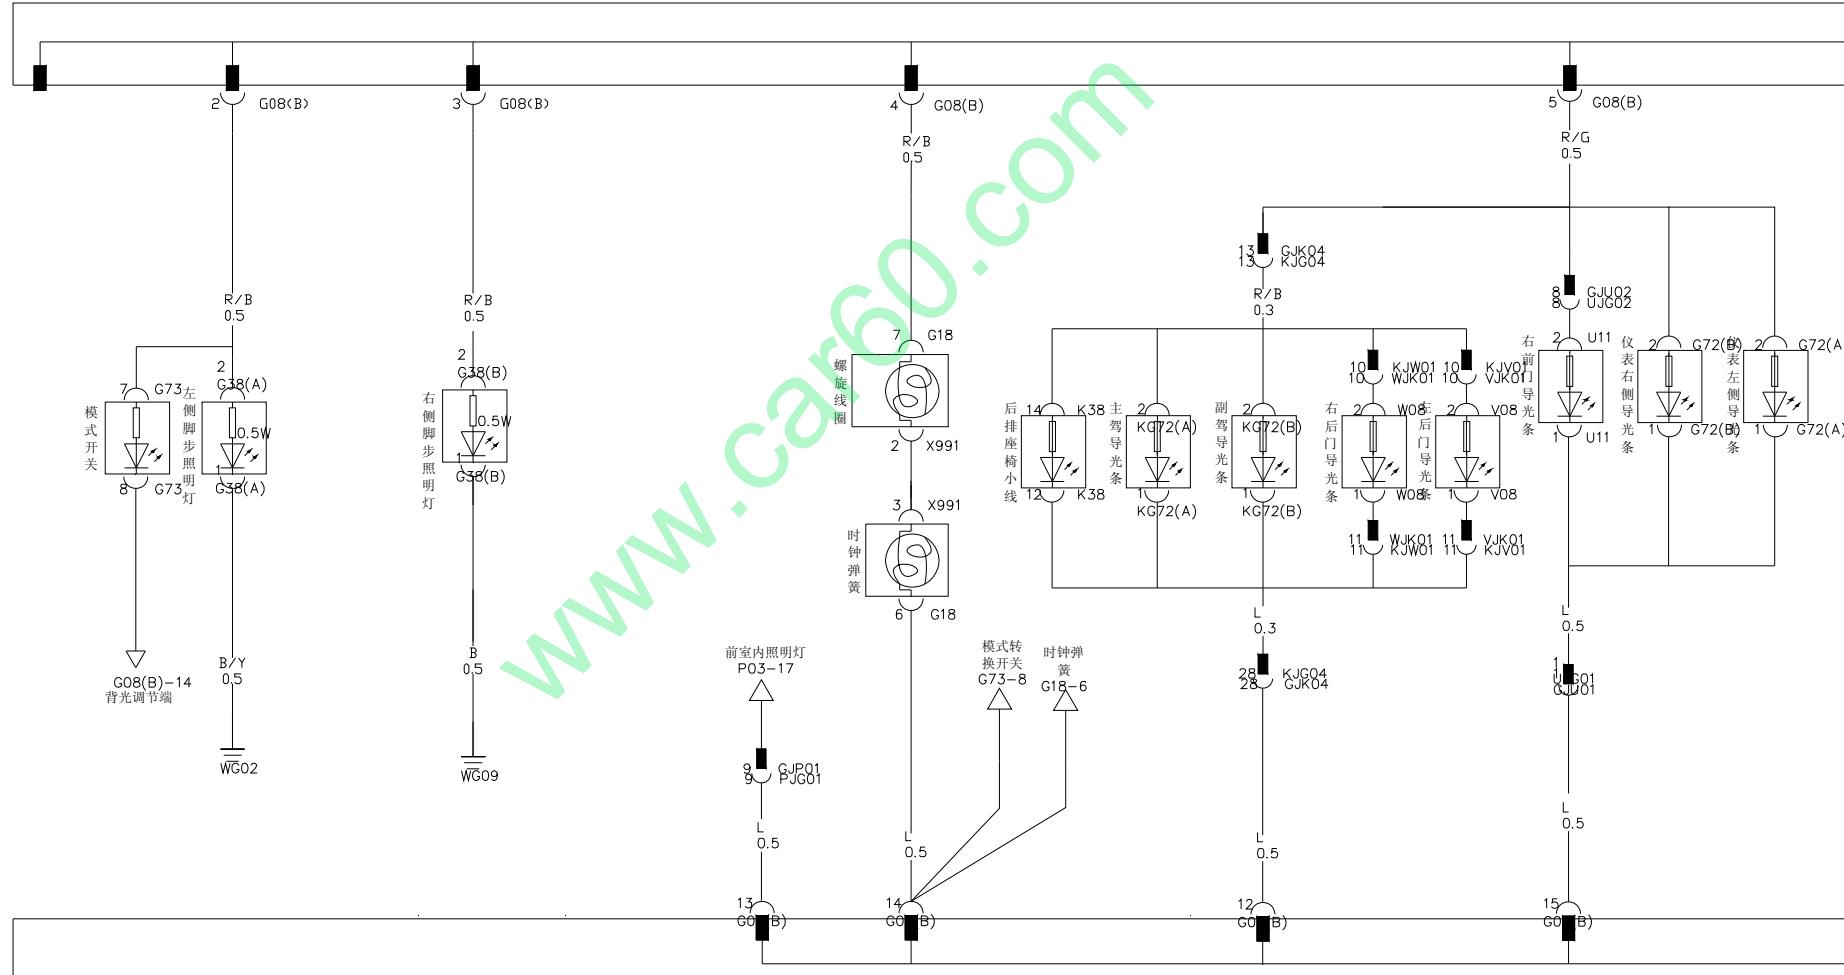


22. 背光

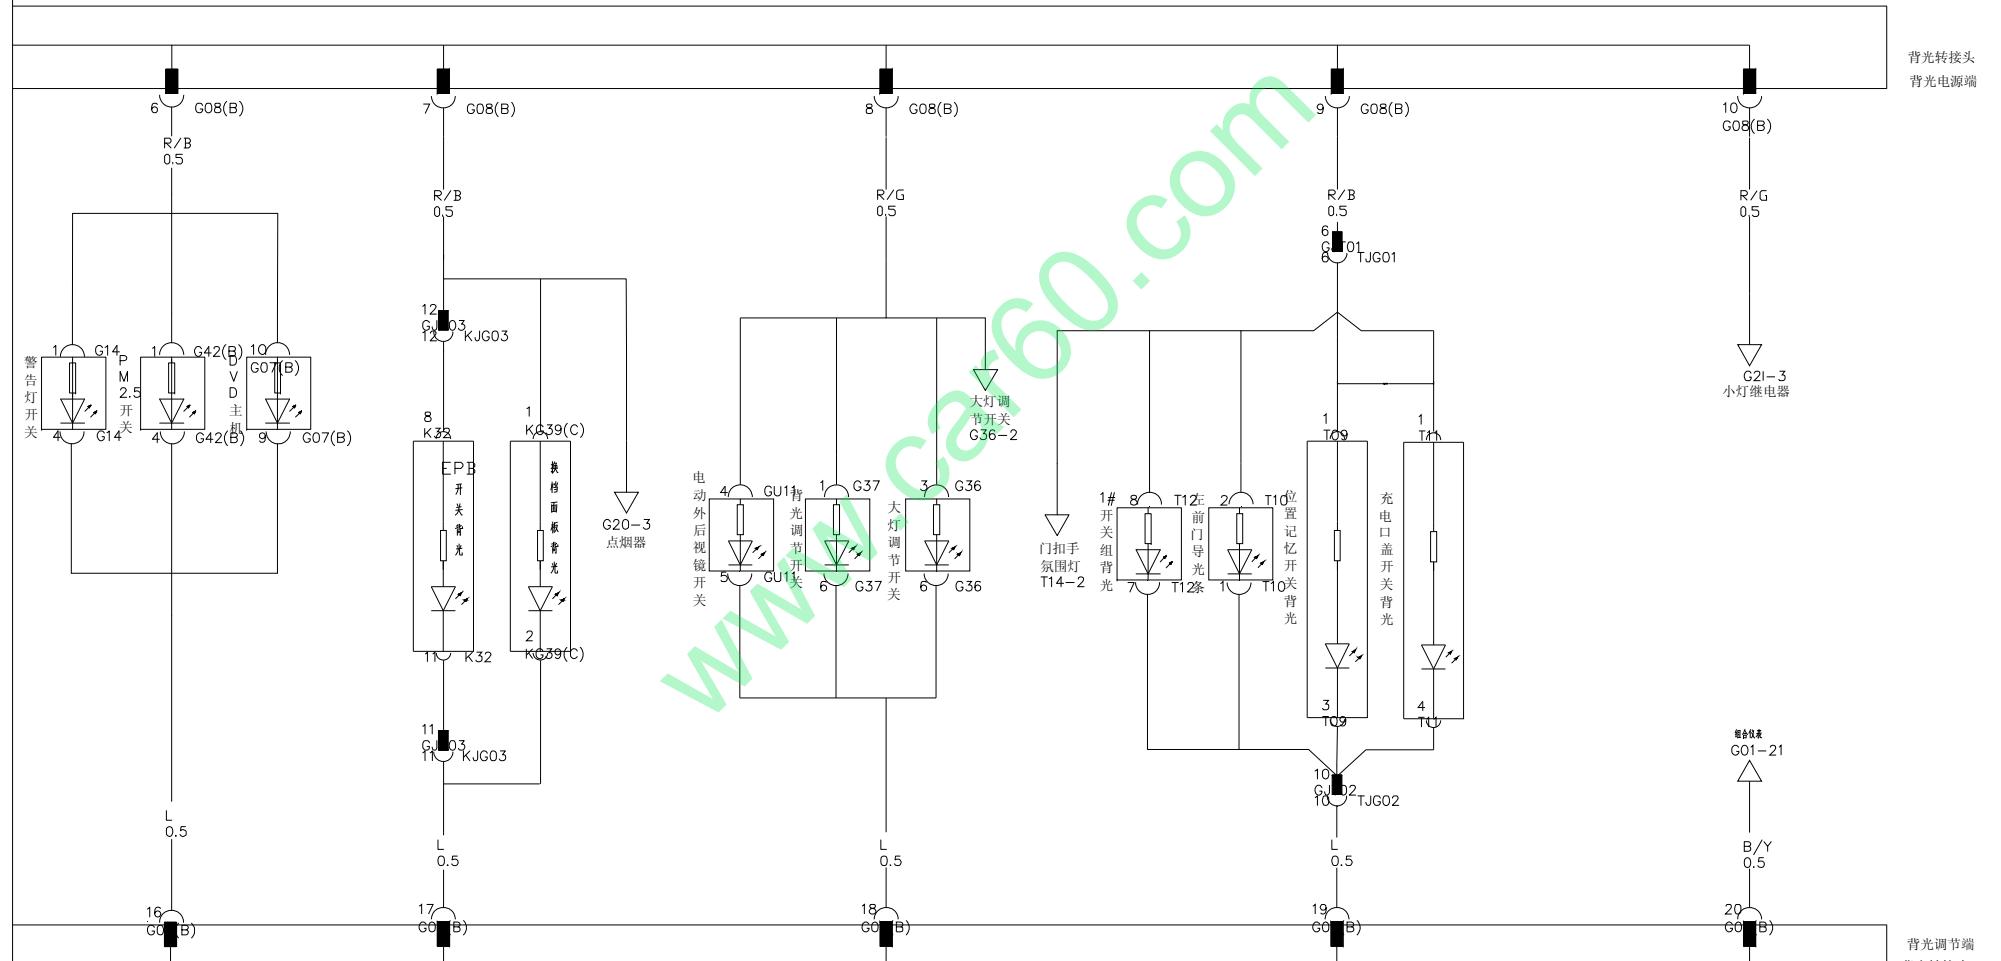


22. 背光

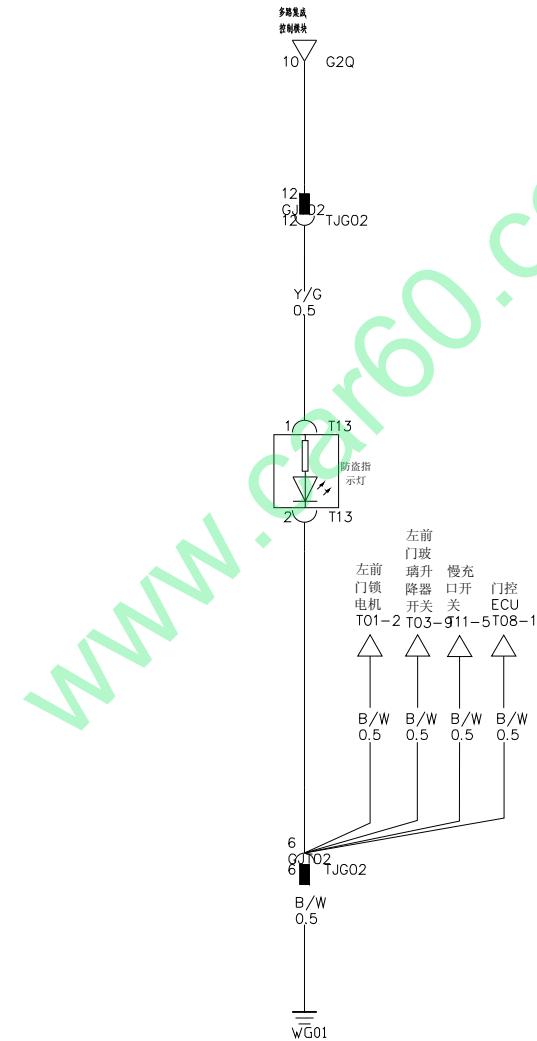


23. 大灯调节

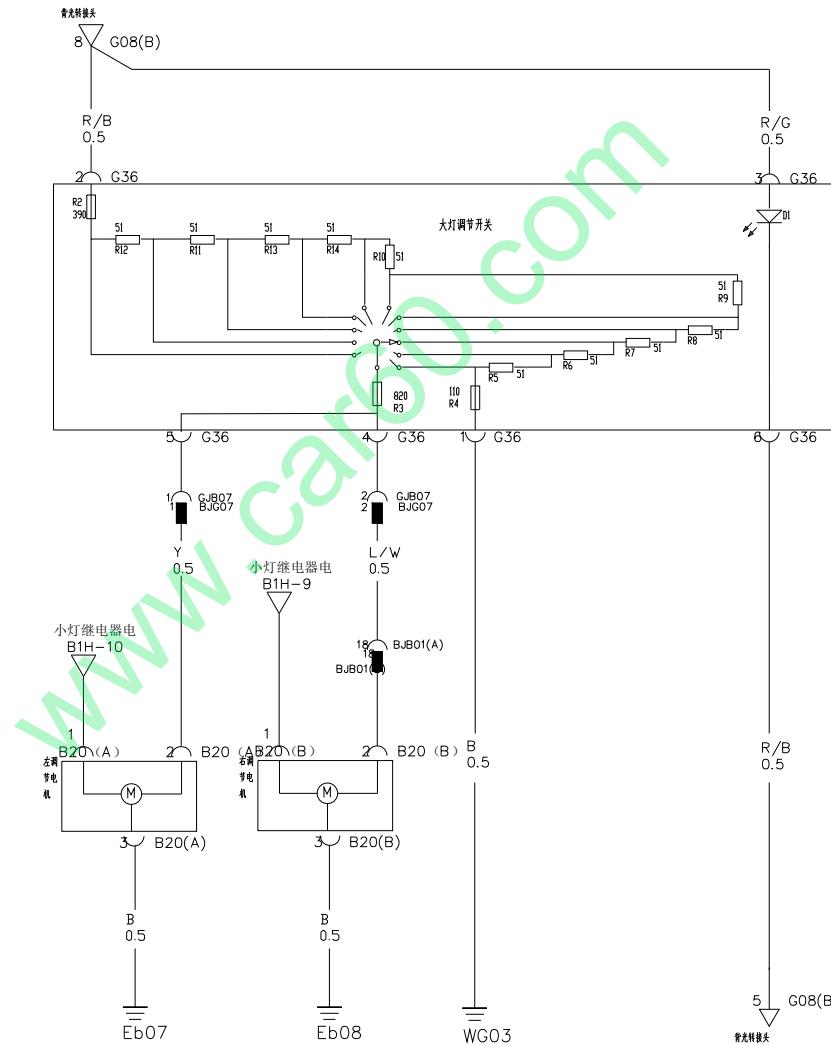


24. ESP

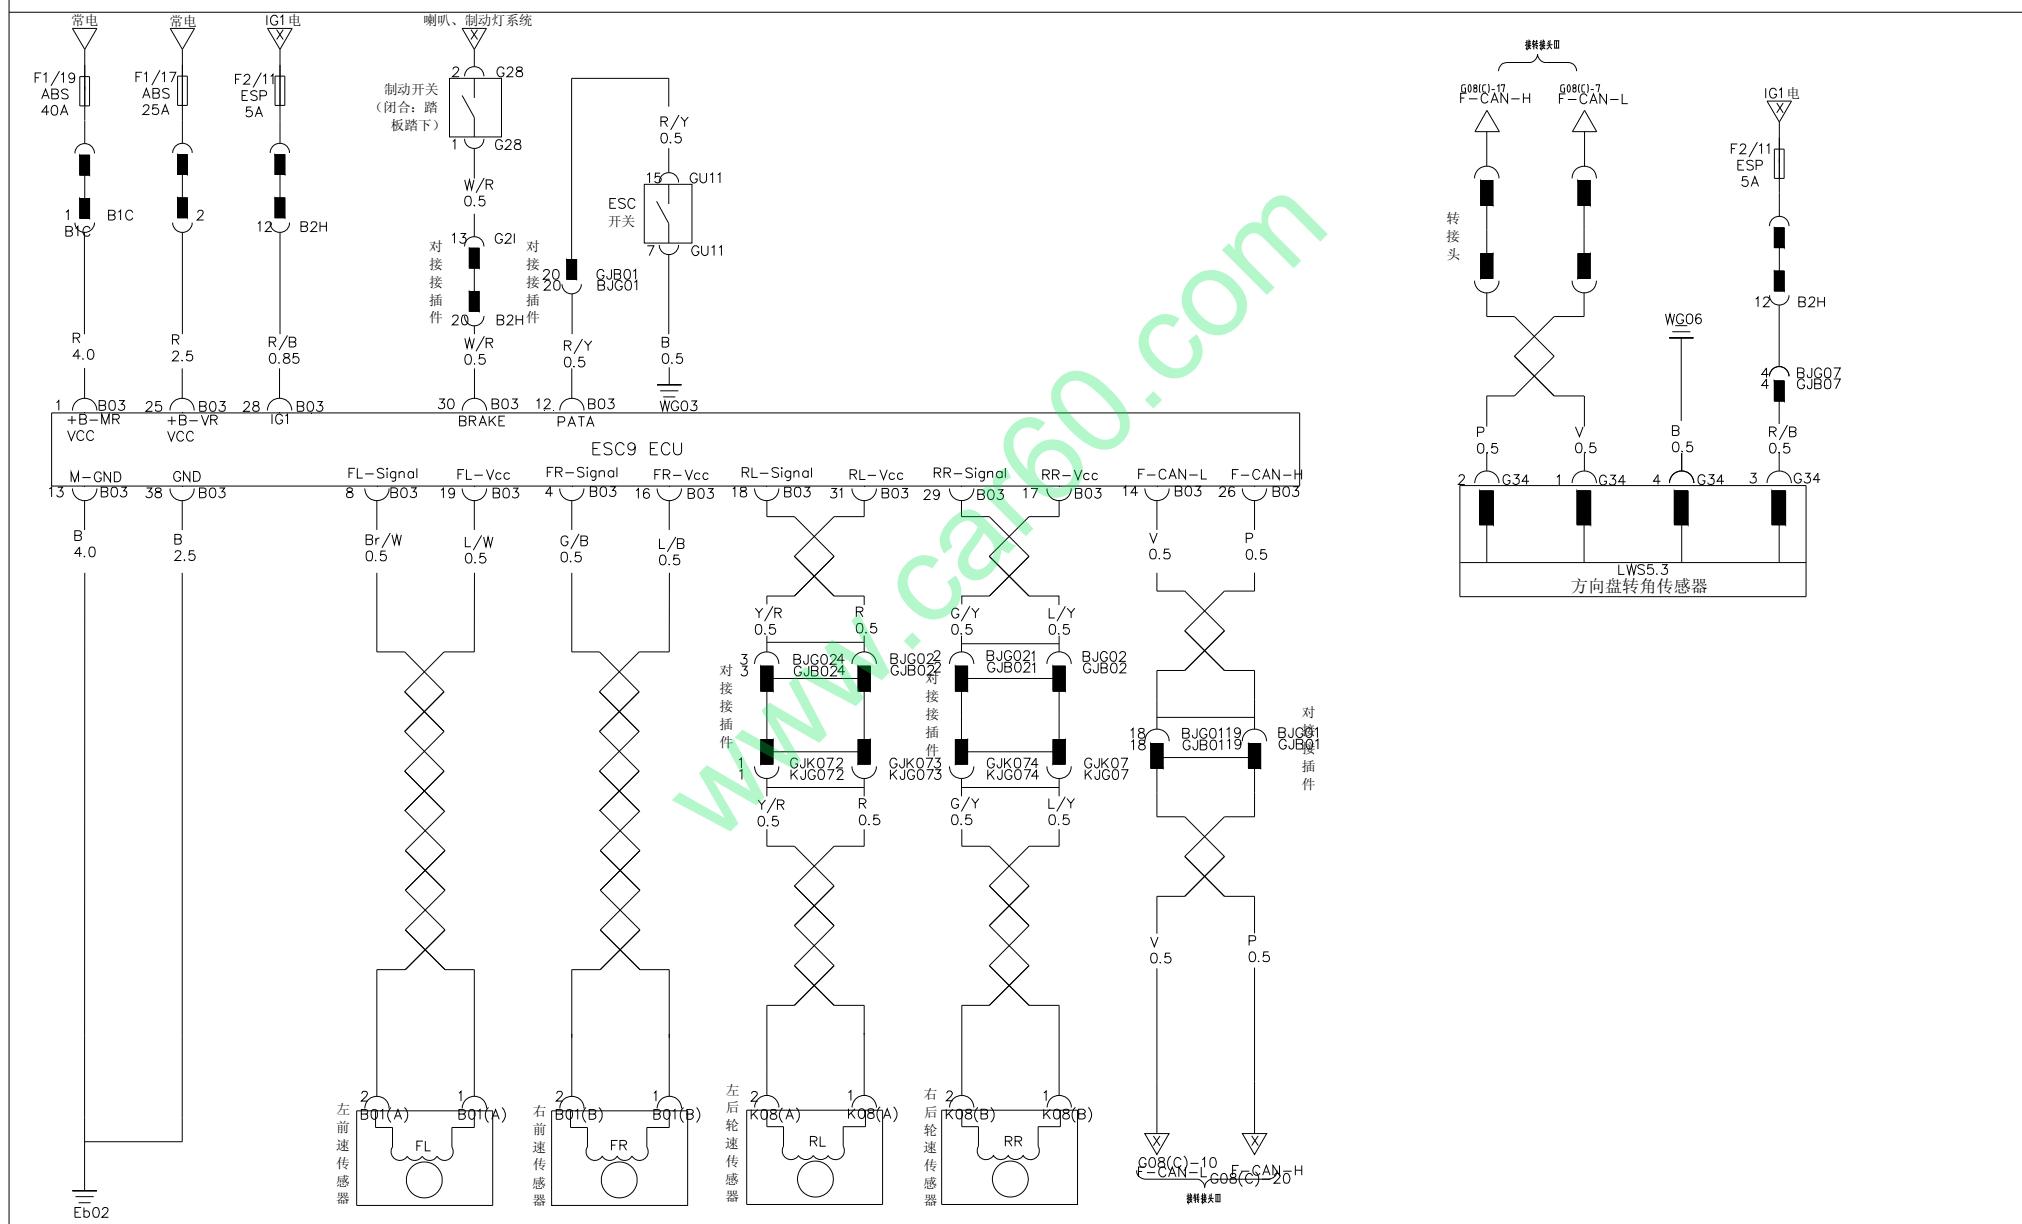


25. SRS

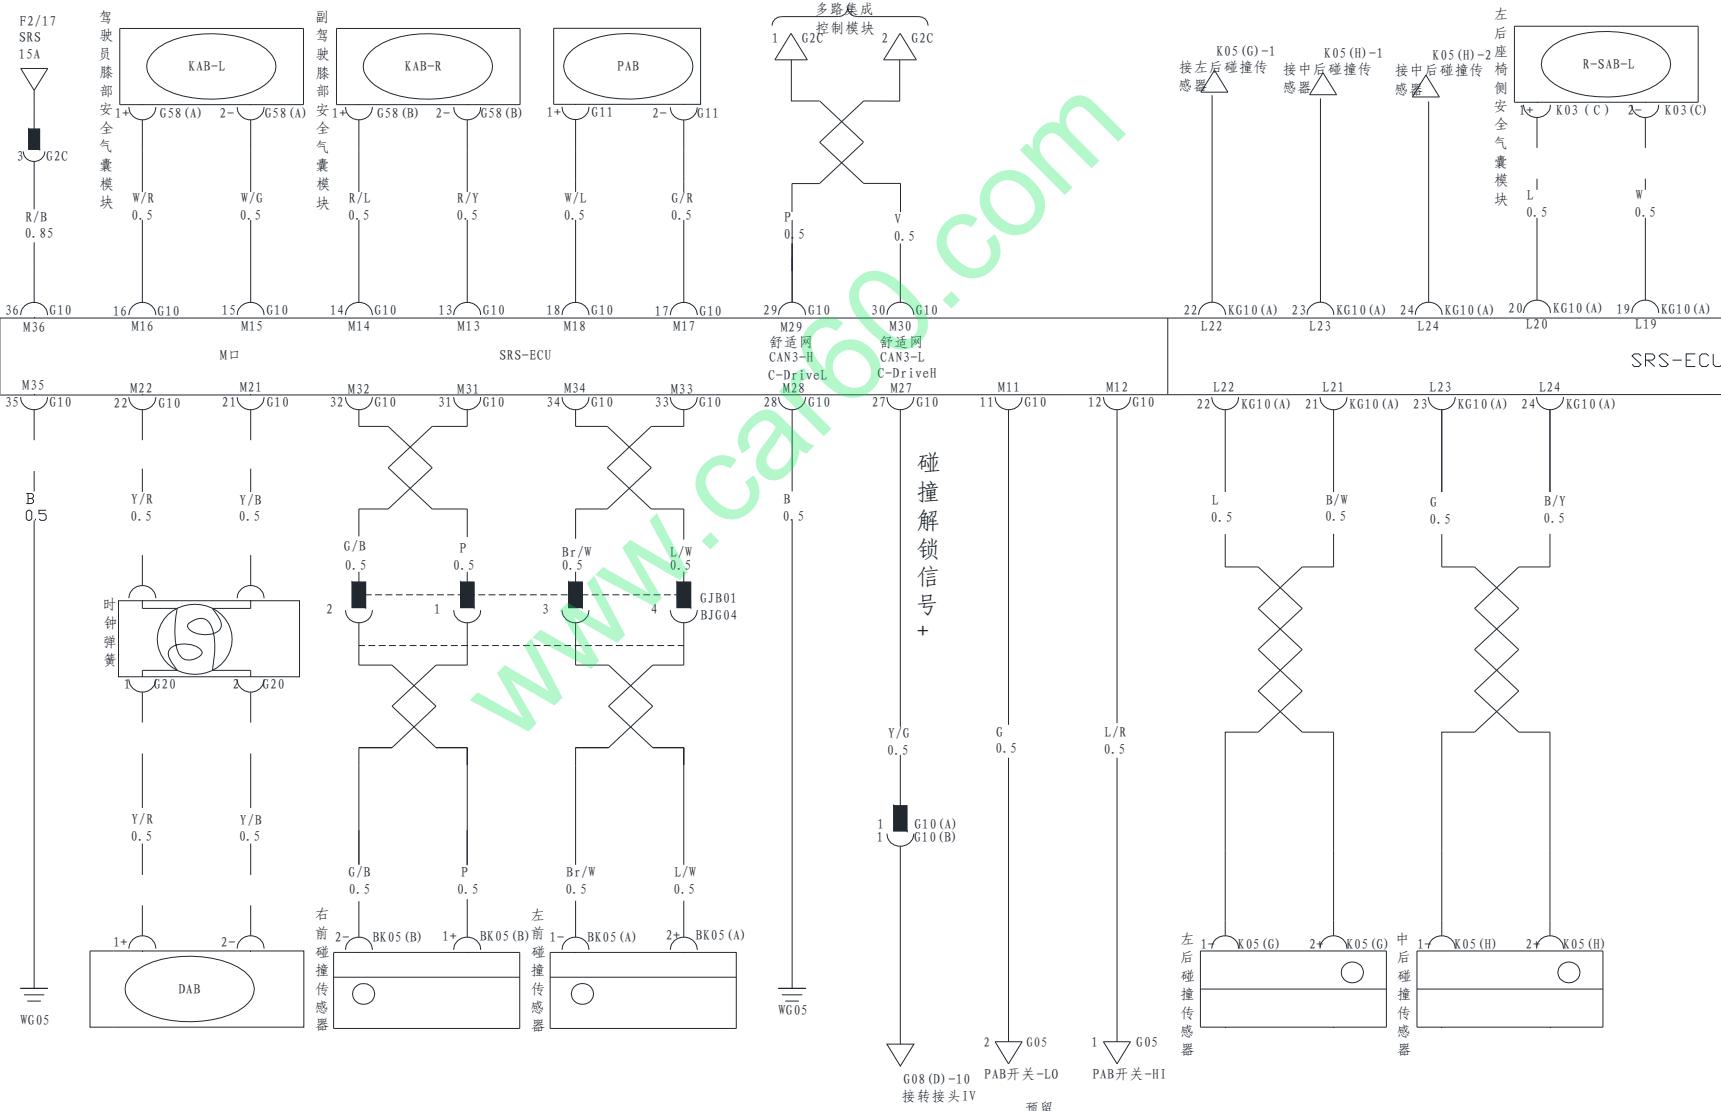


25. SRS

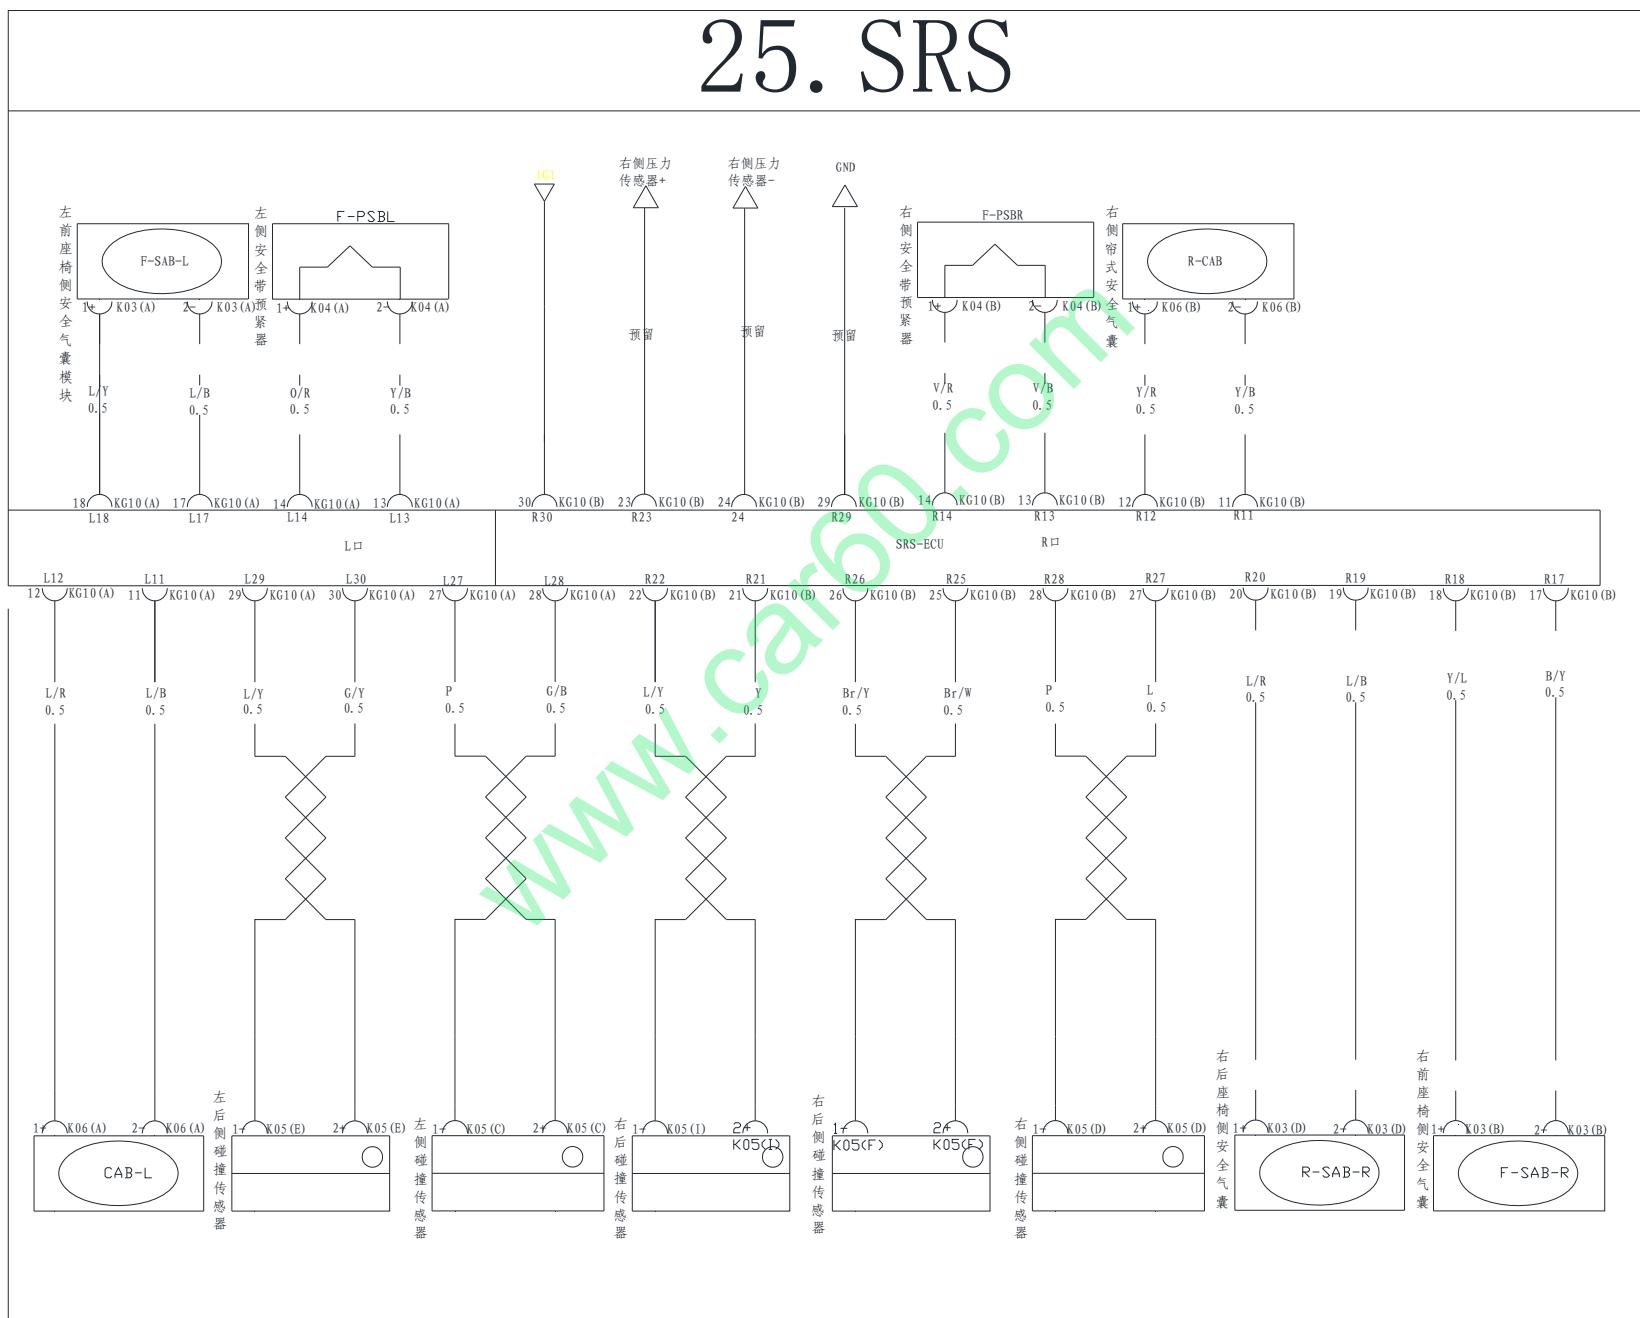


26. EPB ECU

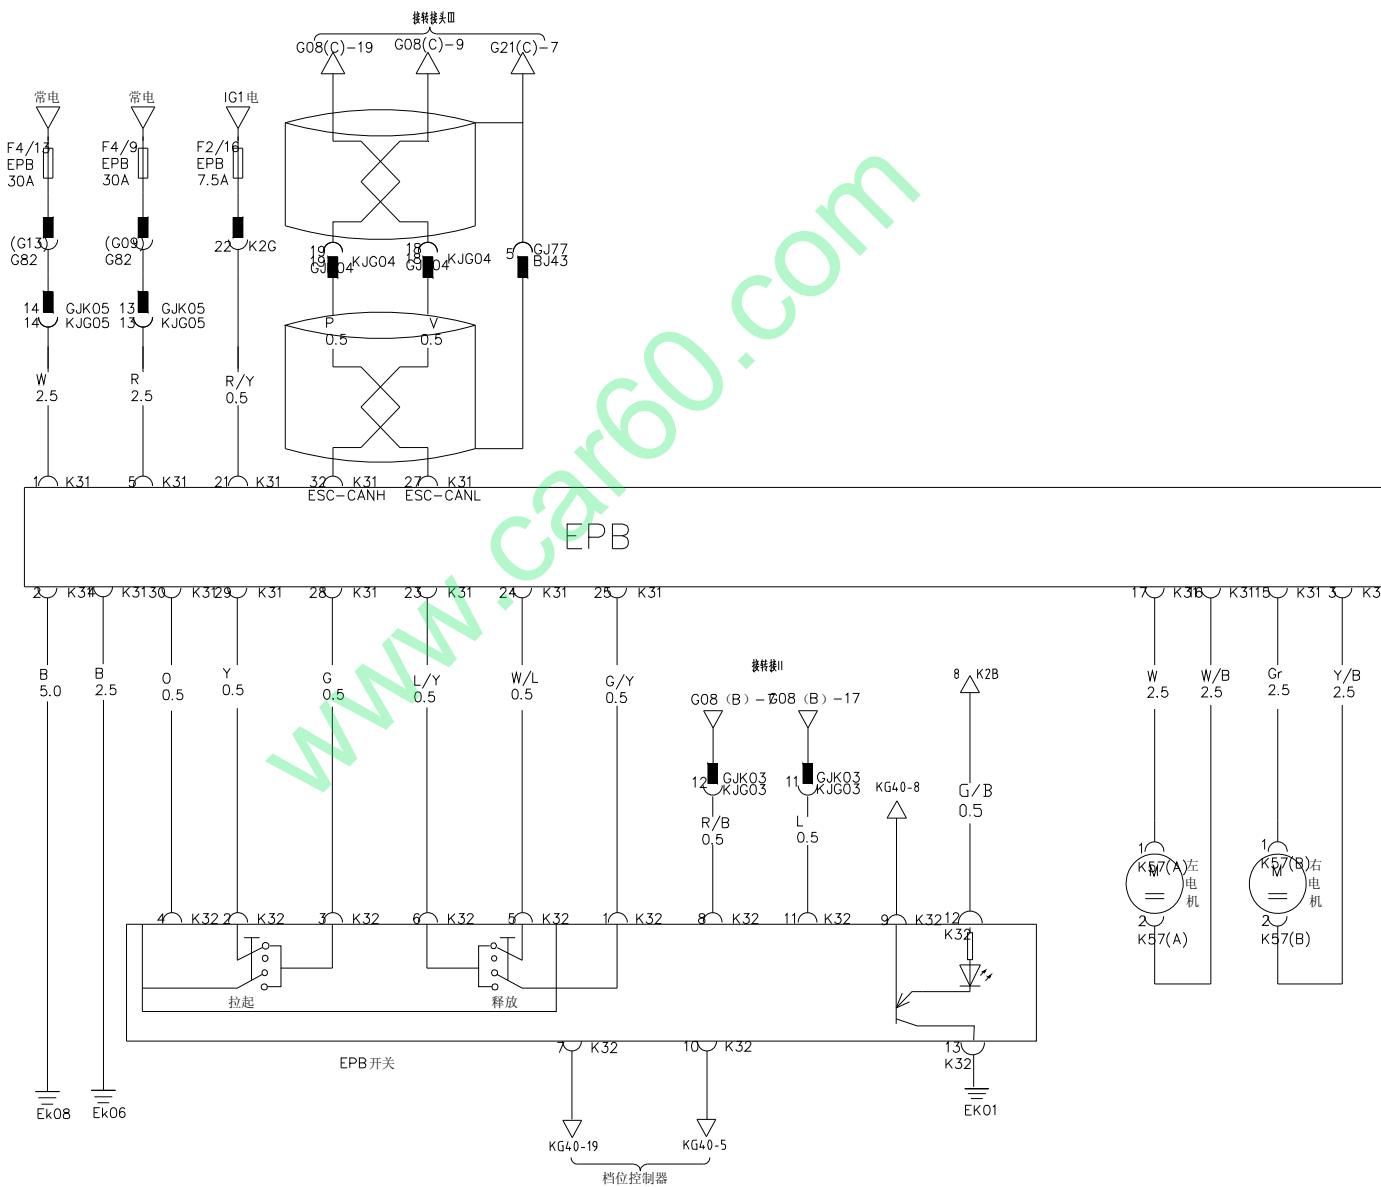


27. R-EPS

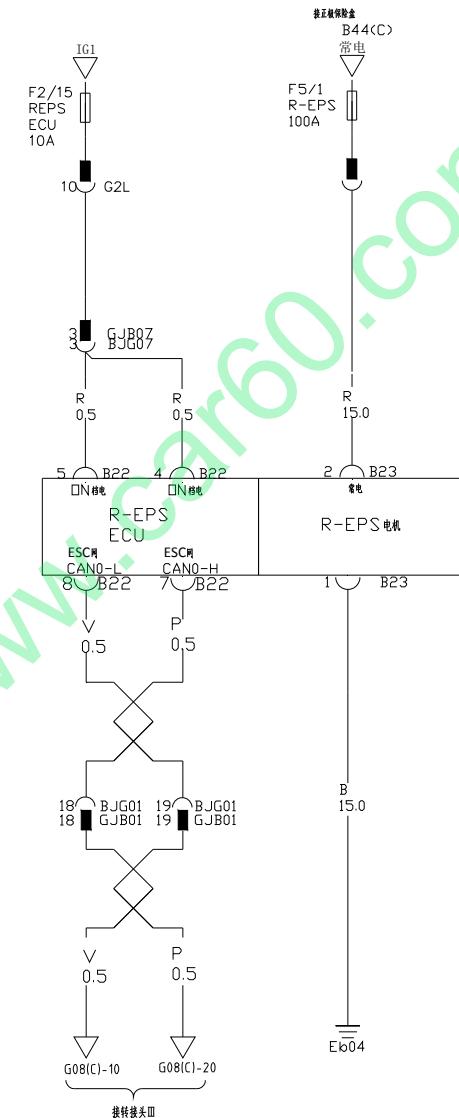


螺旋线圈(1)

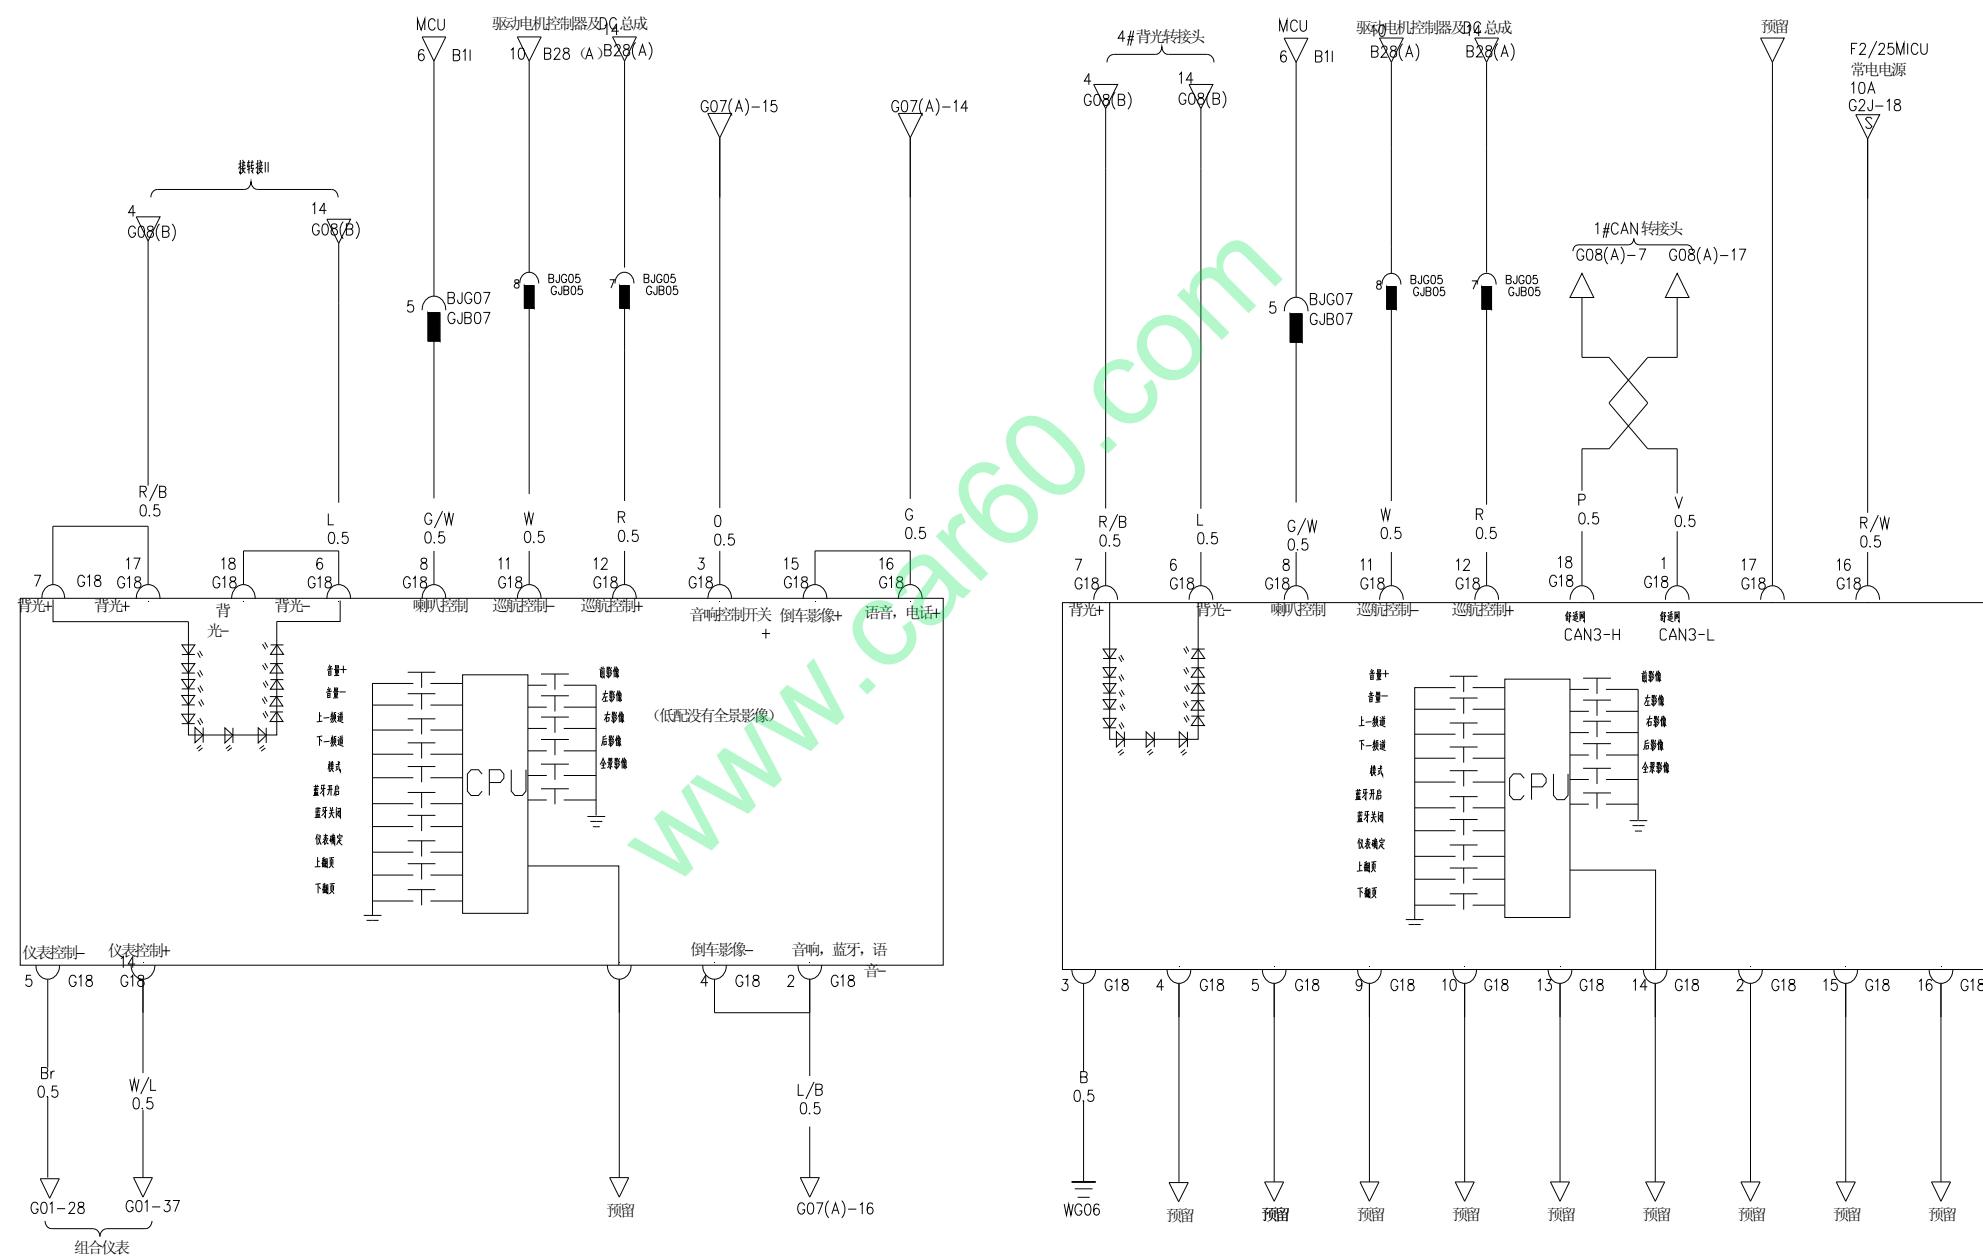


网关

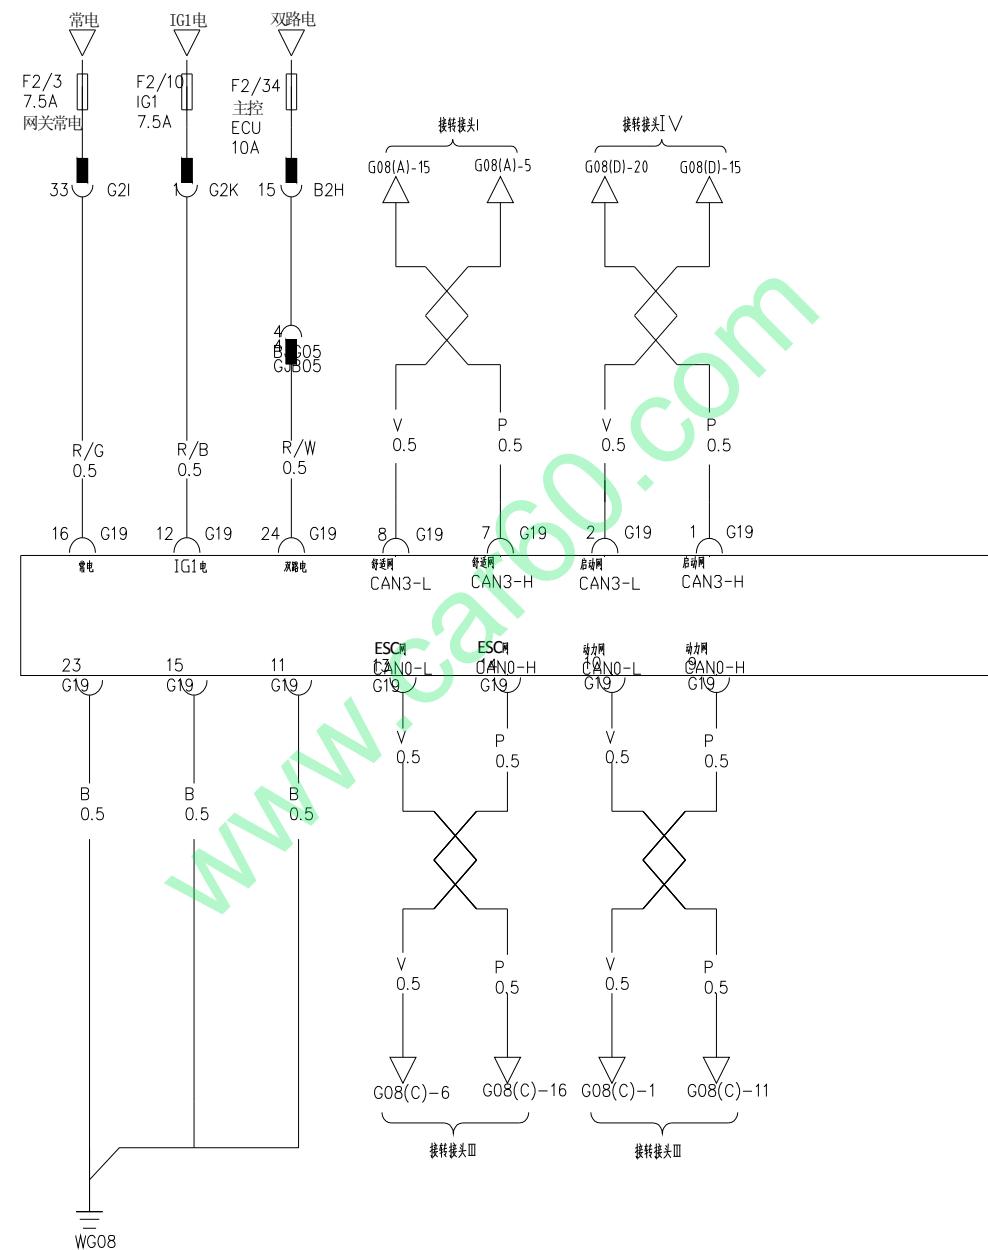

30. 诊断口

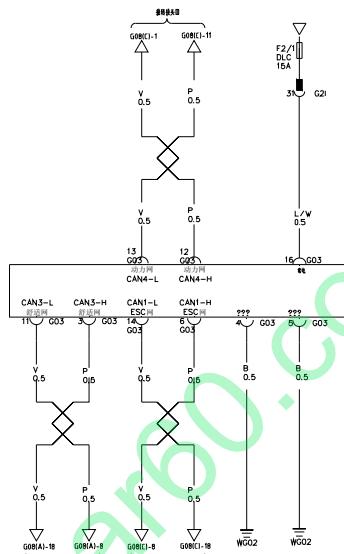


胎压监测

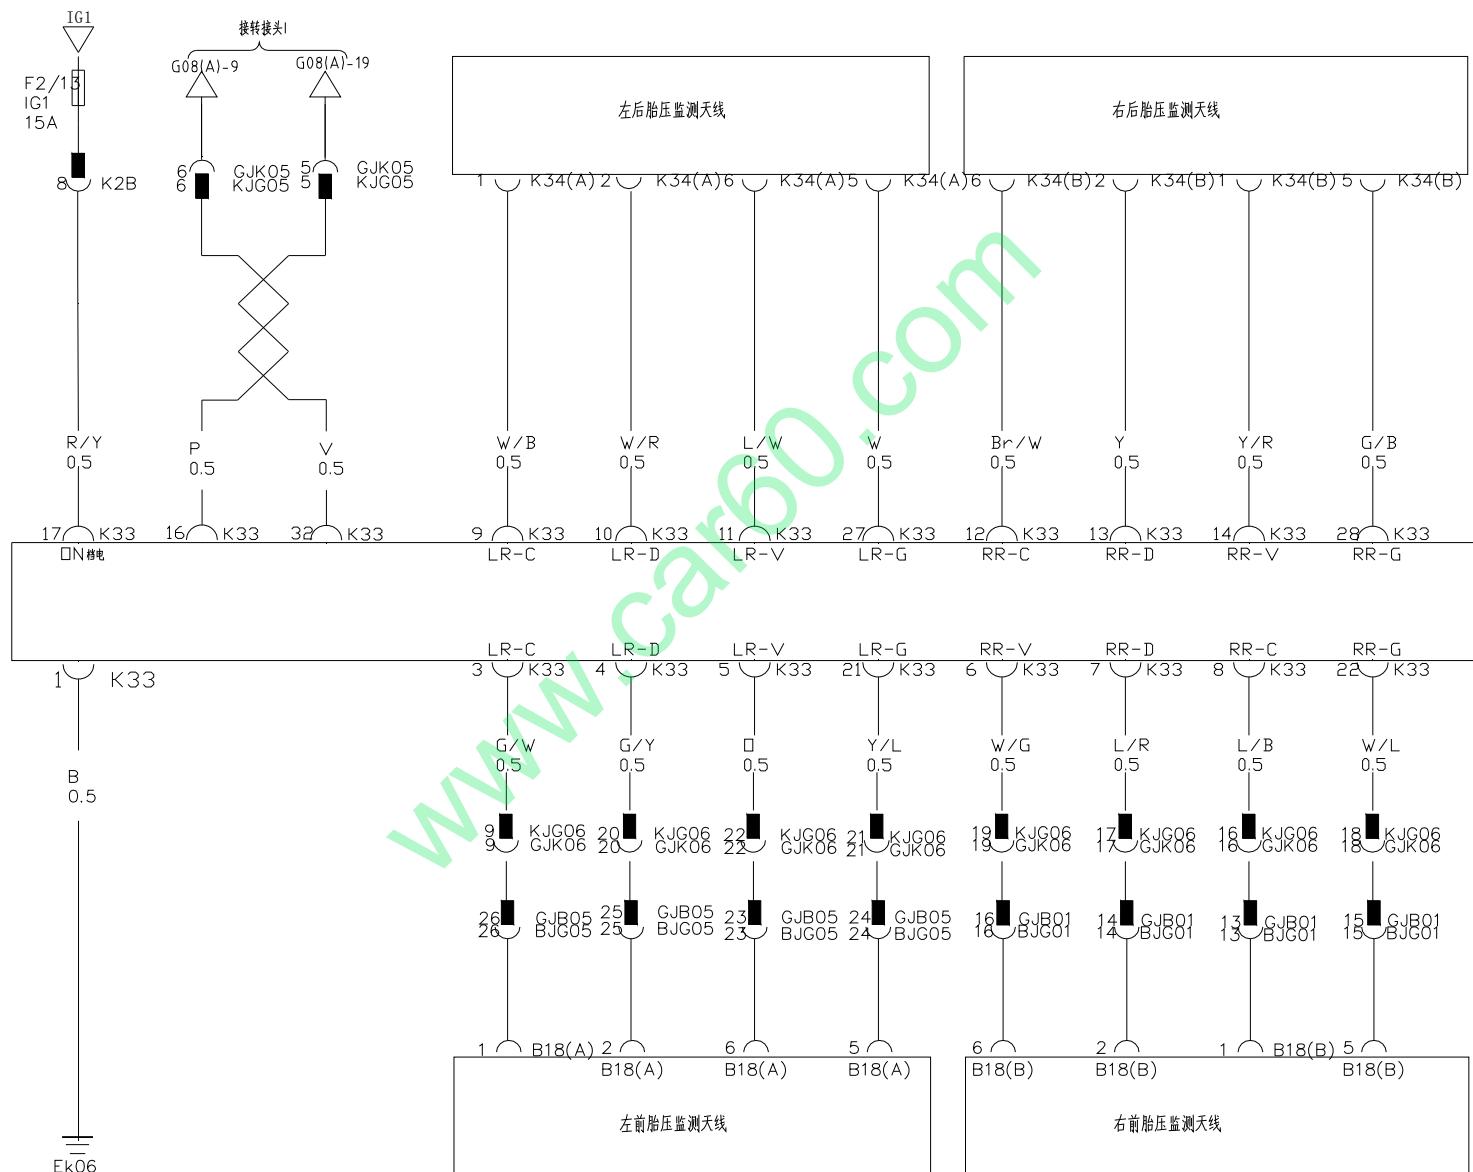

空调 (1)


www.cargo.com

32. 空调

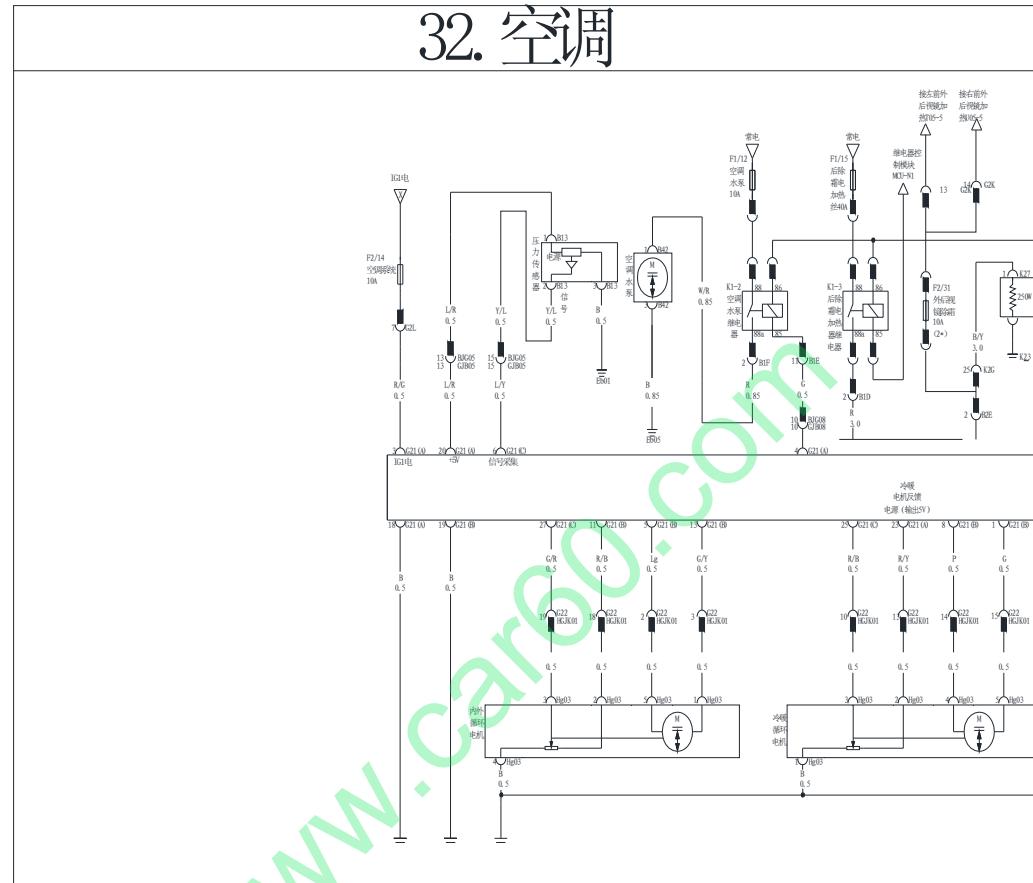


空调 (2)

32. 空调

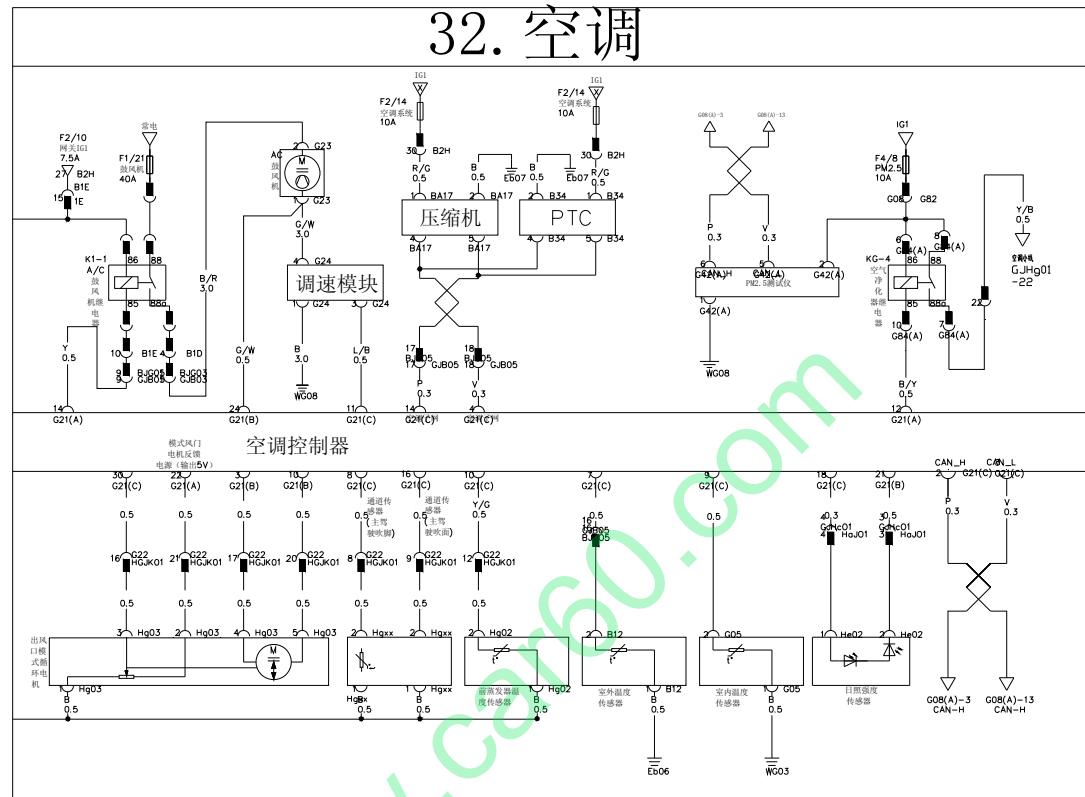


32. 空调

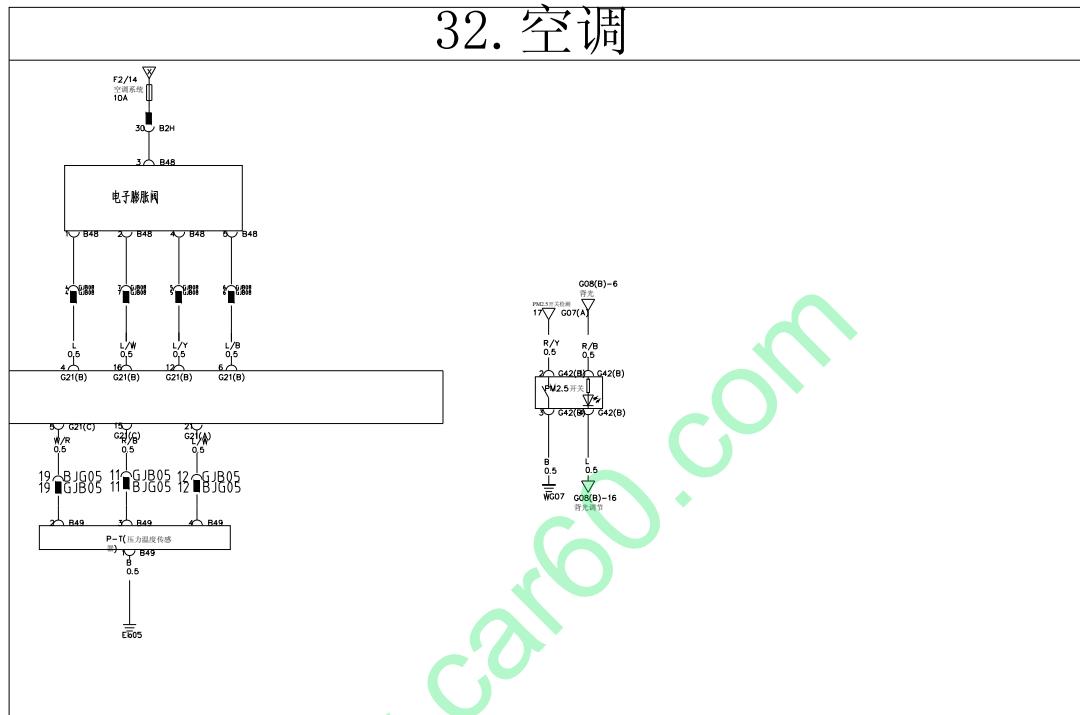


座椅系统 (1)

33. 座椅系统（带座椅ECU）

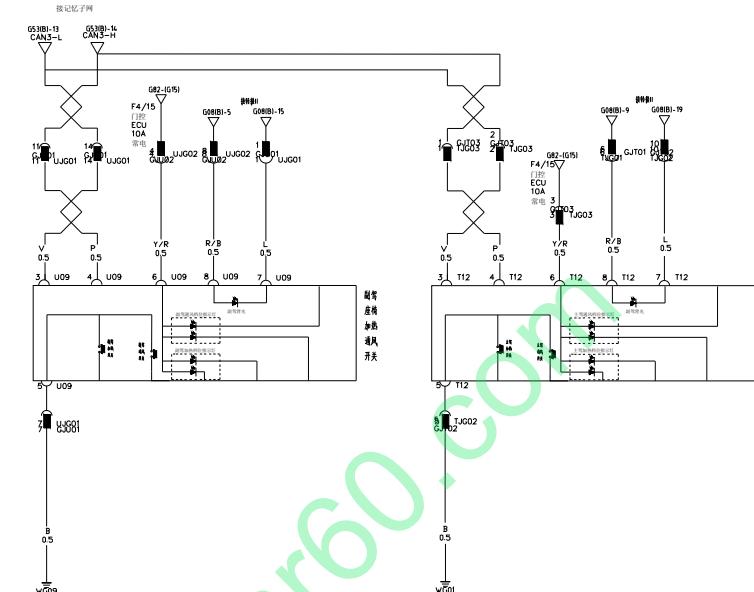


座椅系统 (2)

33. 座椅系统（带座椅ECU）

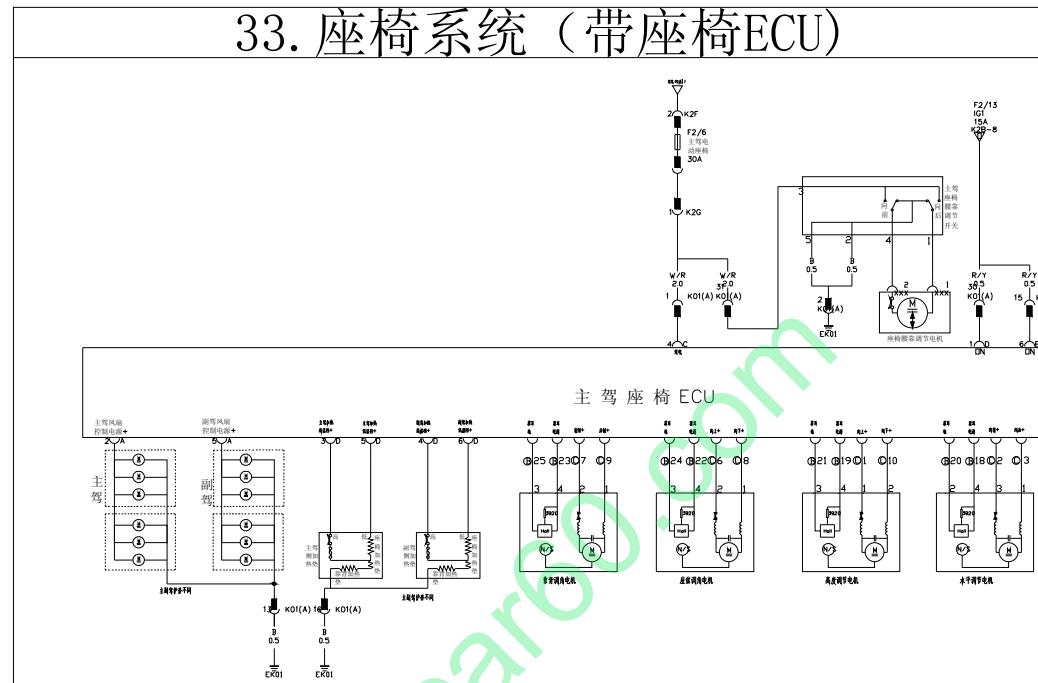


座椅系统 (3)

33. 座椅系統（帶座椅ECU）

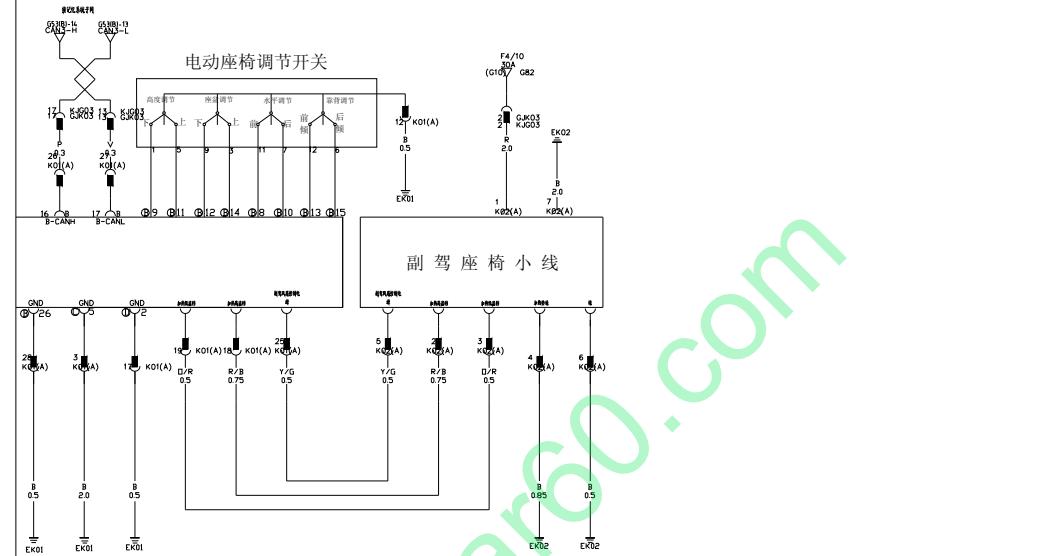


电动座椅 (低配)

34. 电动座椅（低配）

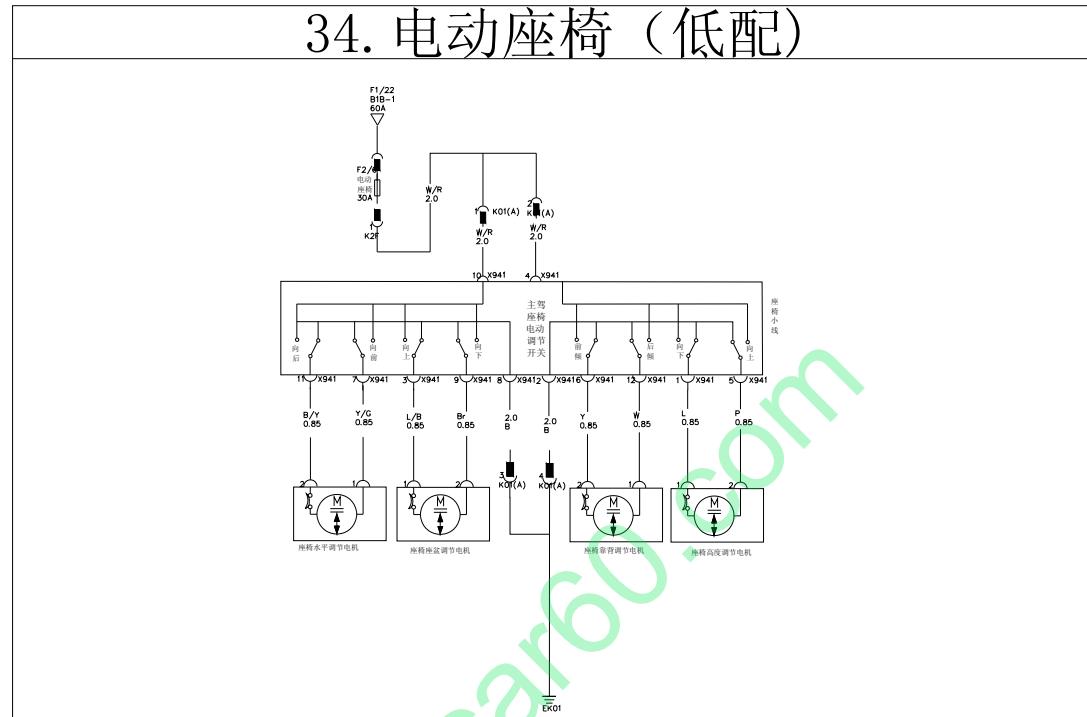


窗控系统 (1)

35. 窗控系统

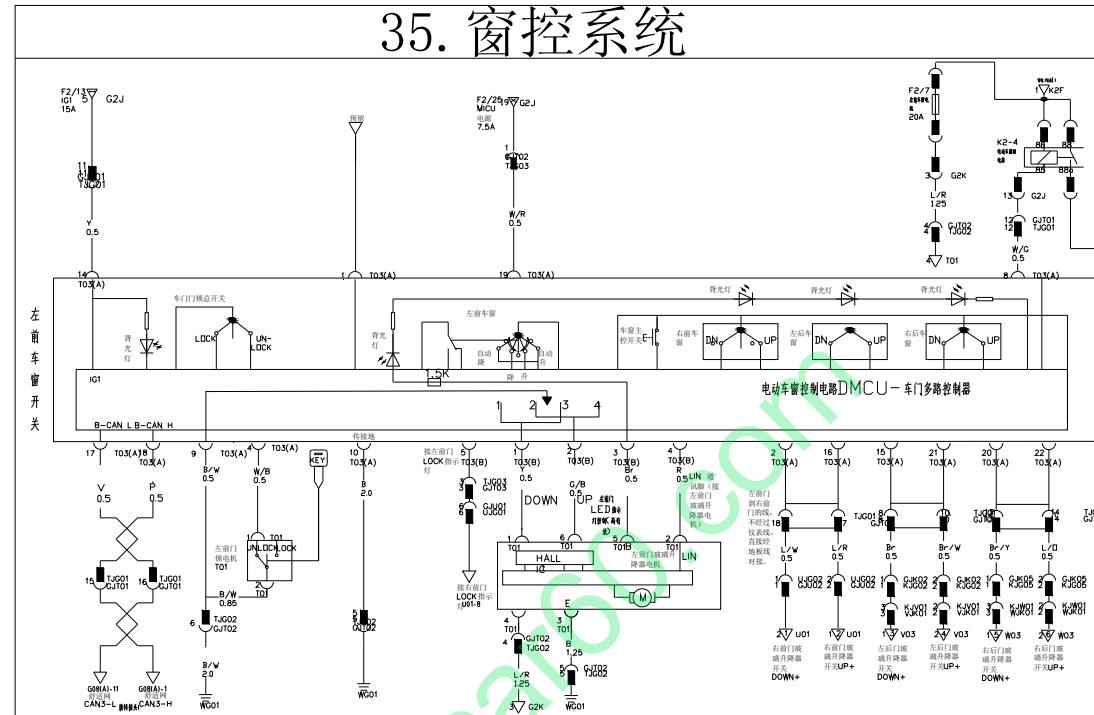


窗控系统（2）

35. 窗控系统

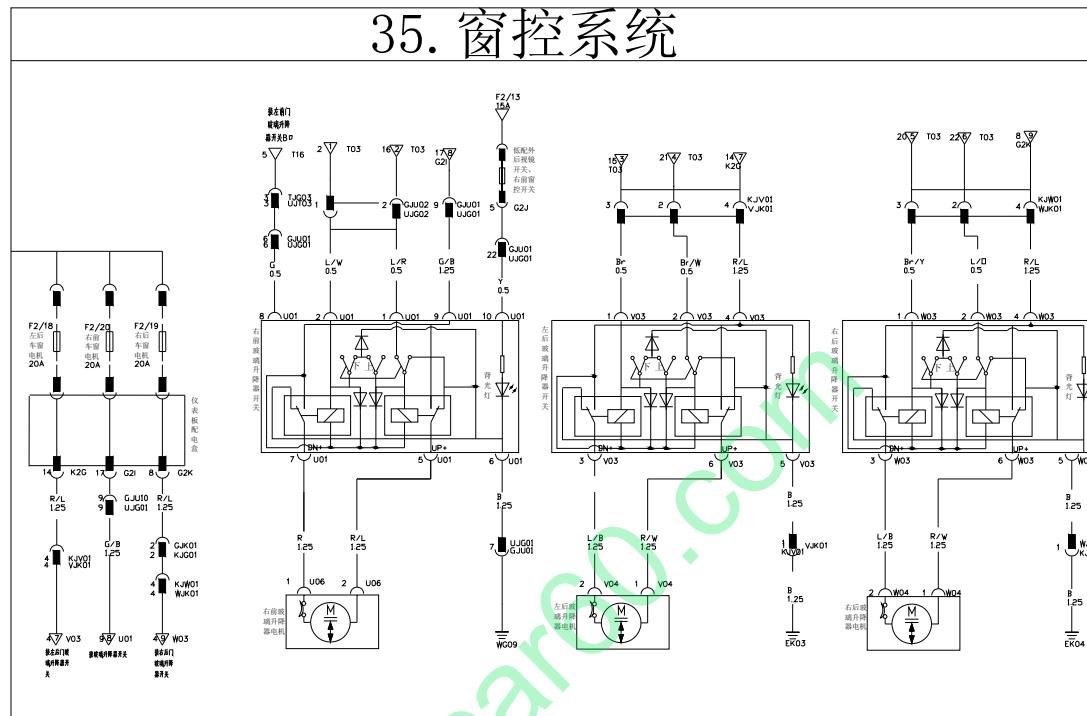


◆ 门控系统 (1)

36. 门控ECU

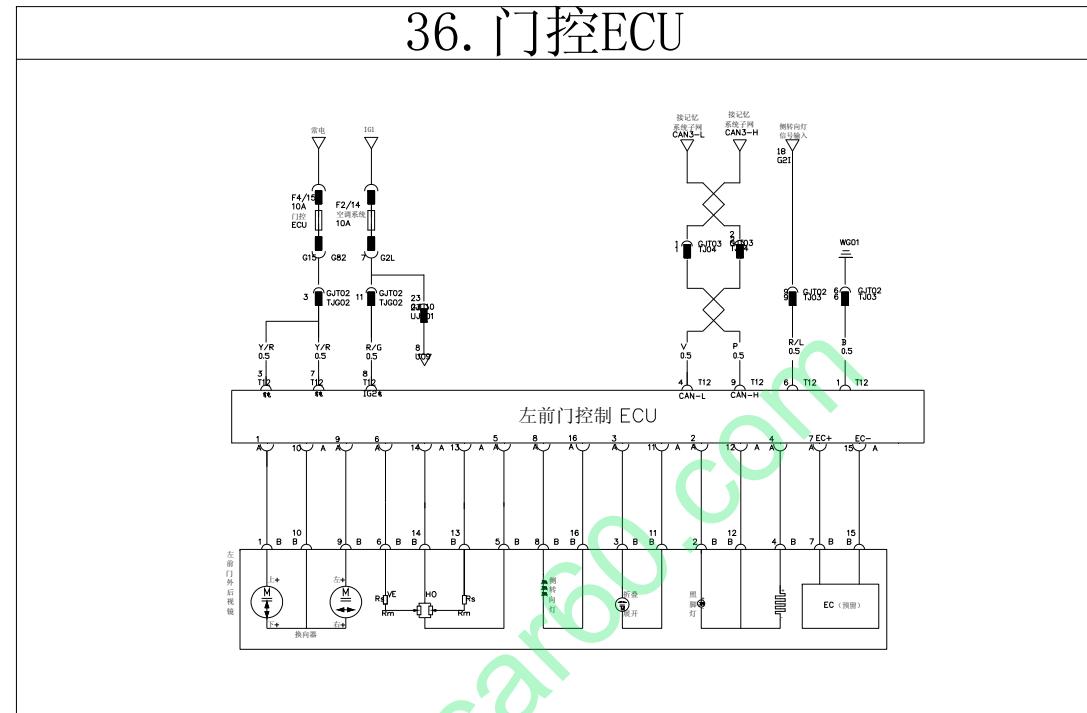


门控系统（2）

36. 门控ECU

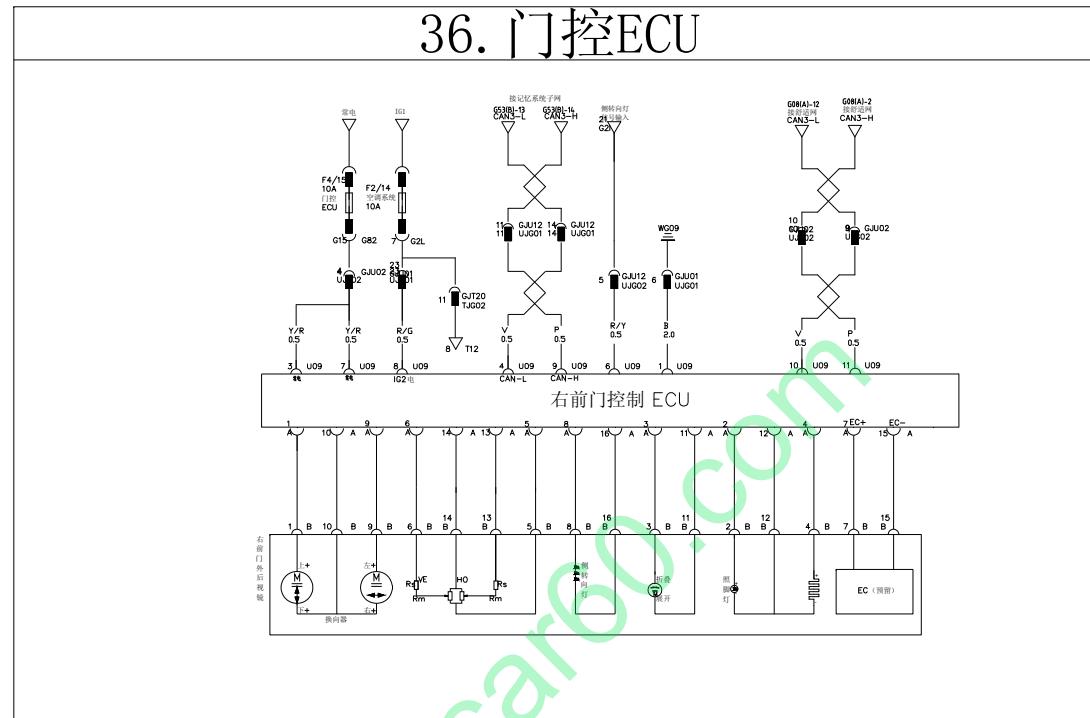


电动后视镜控制开关 (低配)


37. 电动后视镜控制开关（低配）

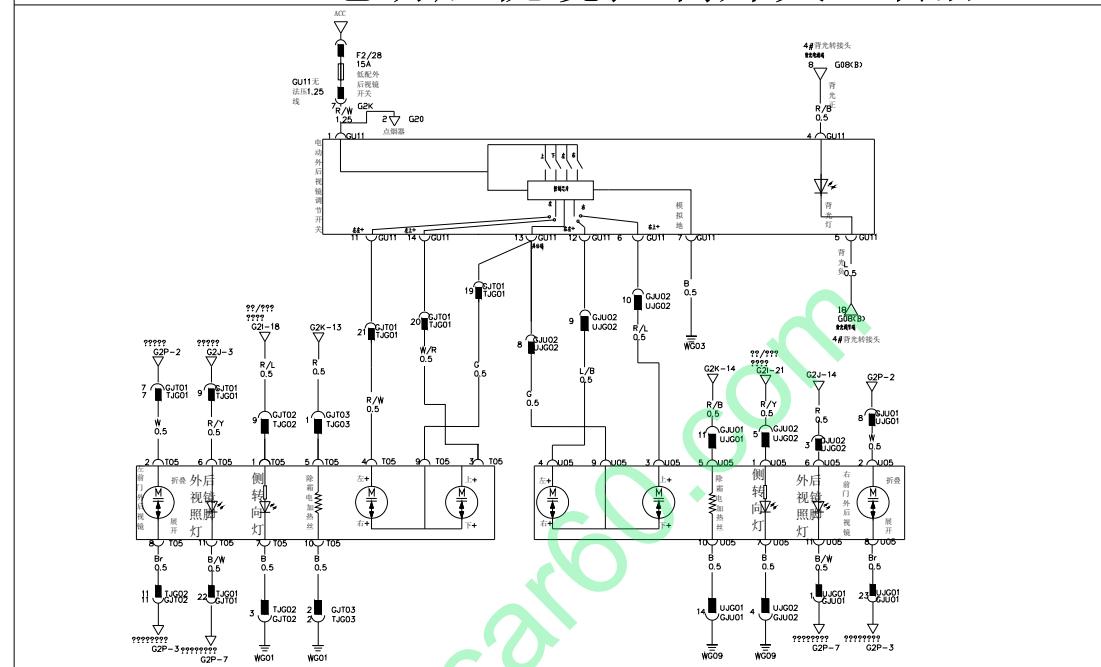


38. 电动后视镜控制开关（高配）

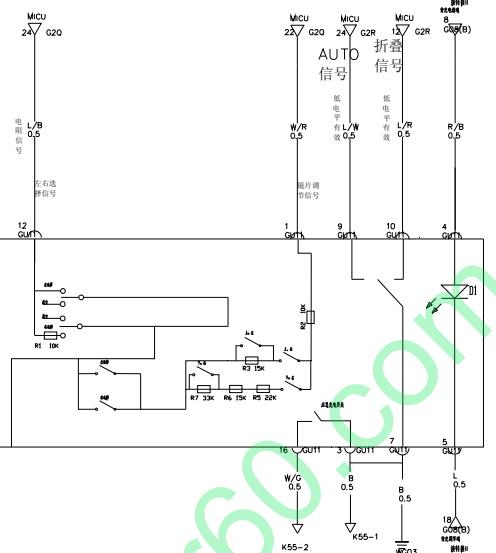

电动转向管柱

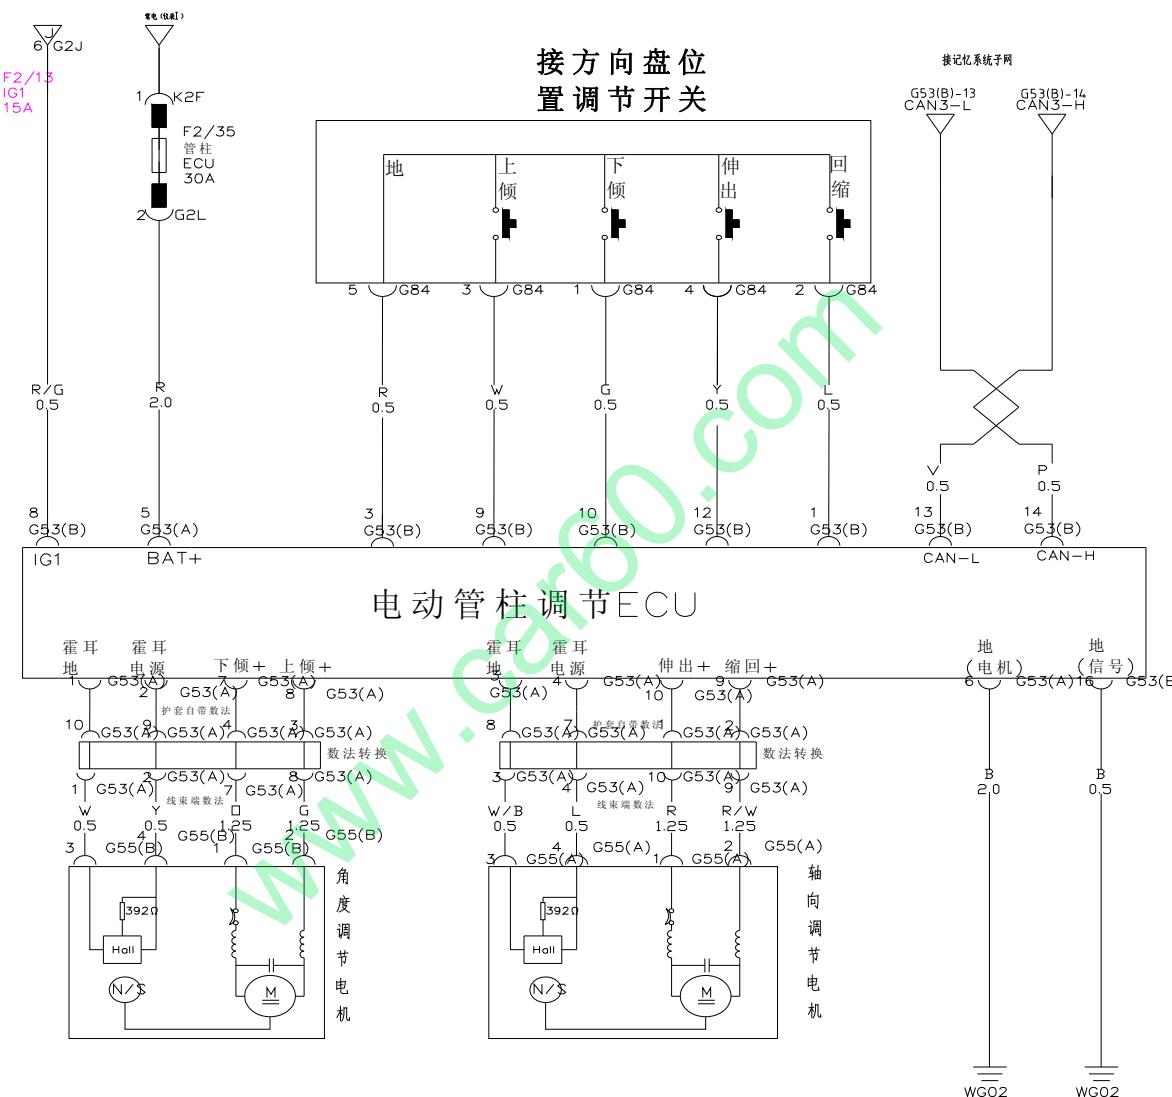


天窗

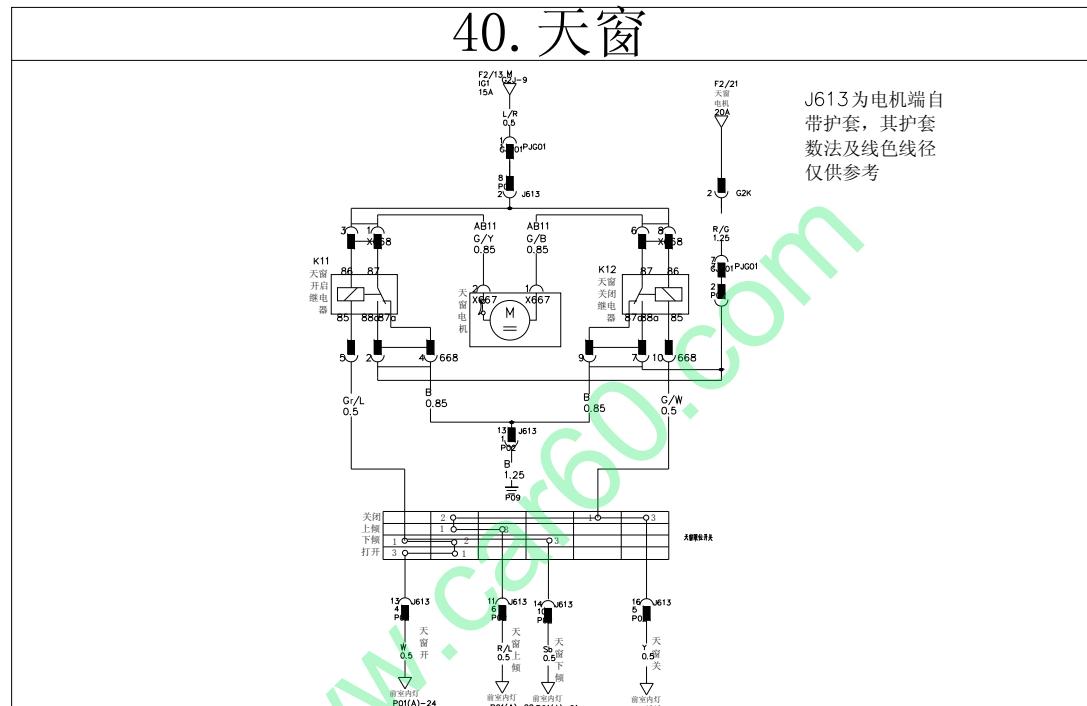


风扇

41. 风扇

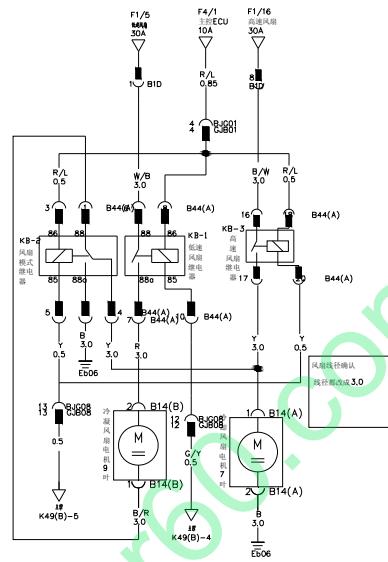


组合开关


42. 组合开关

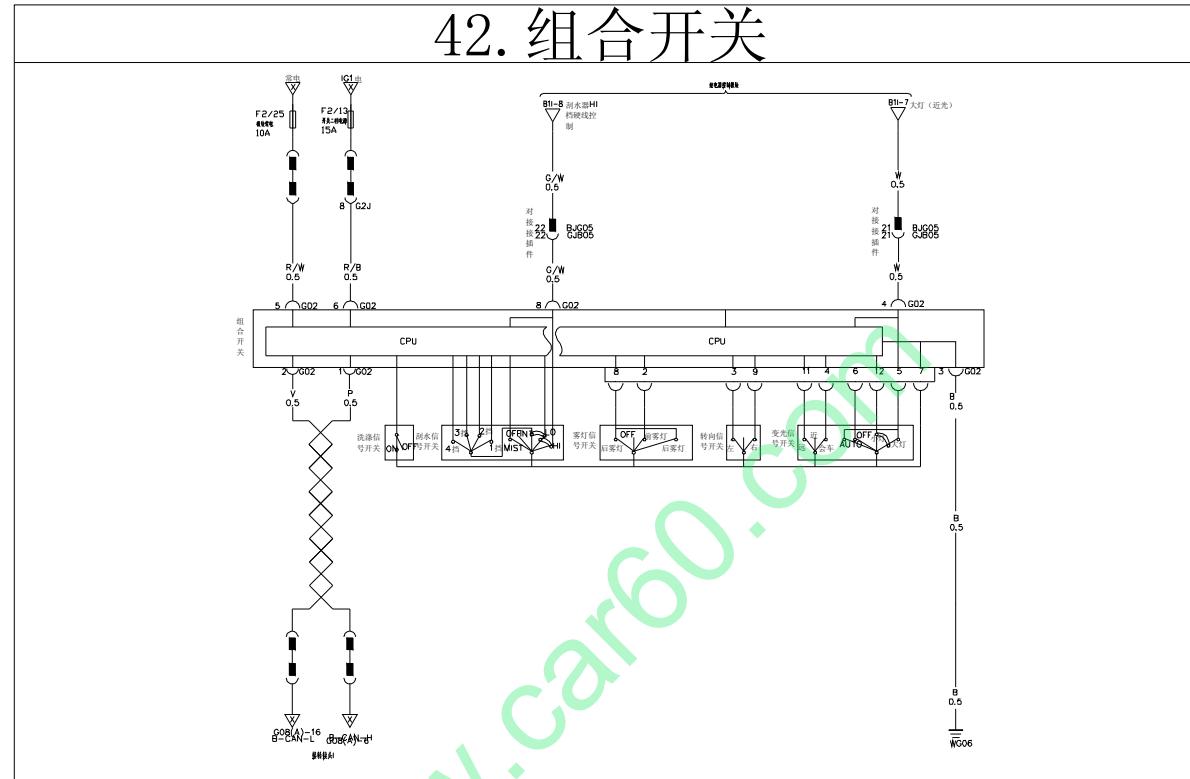


模式开关

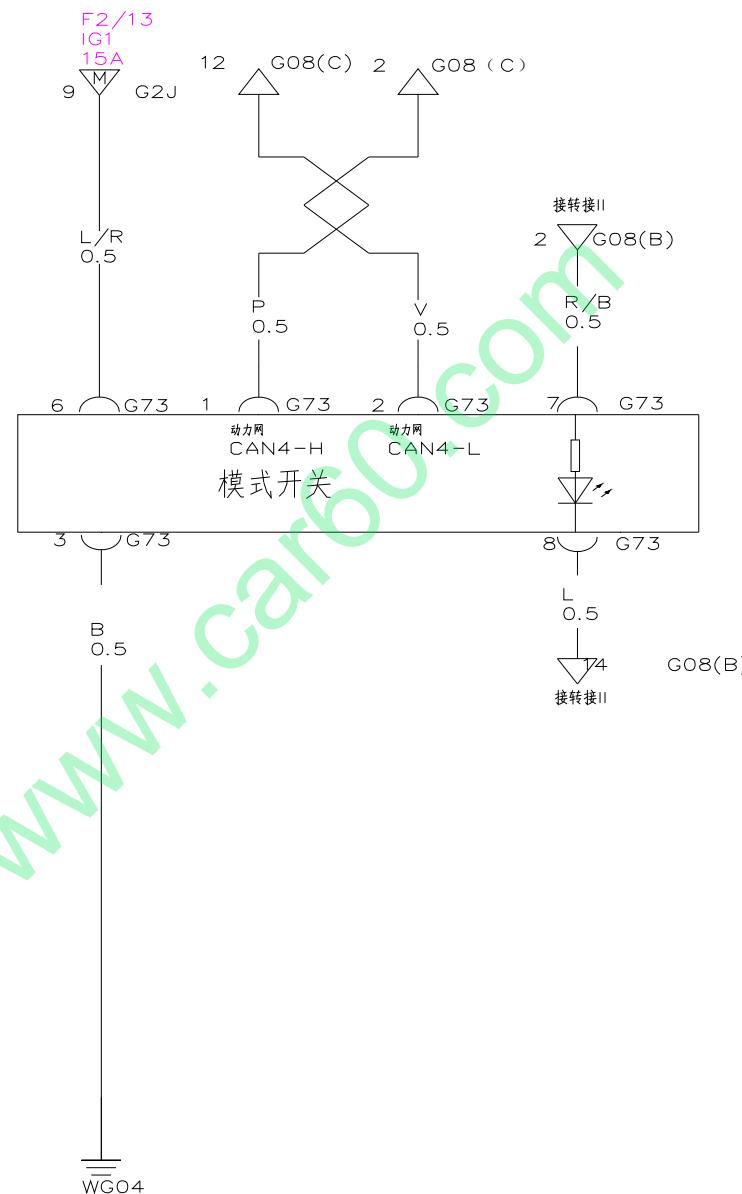


短接器 (1)

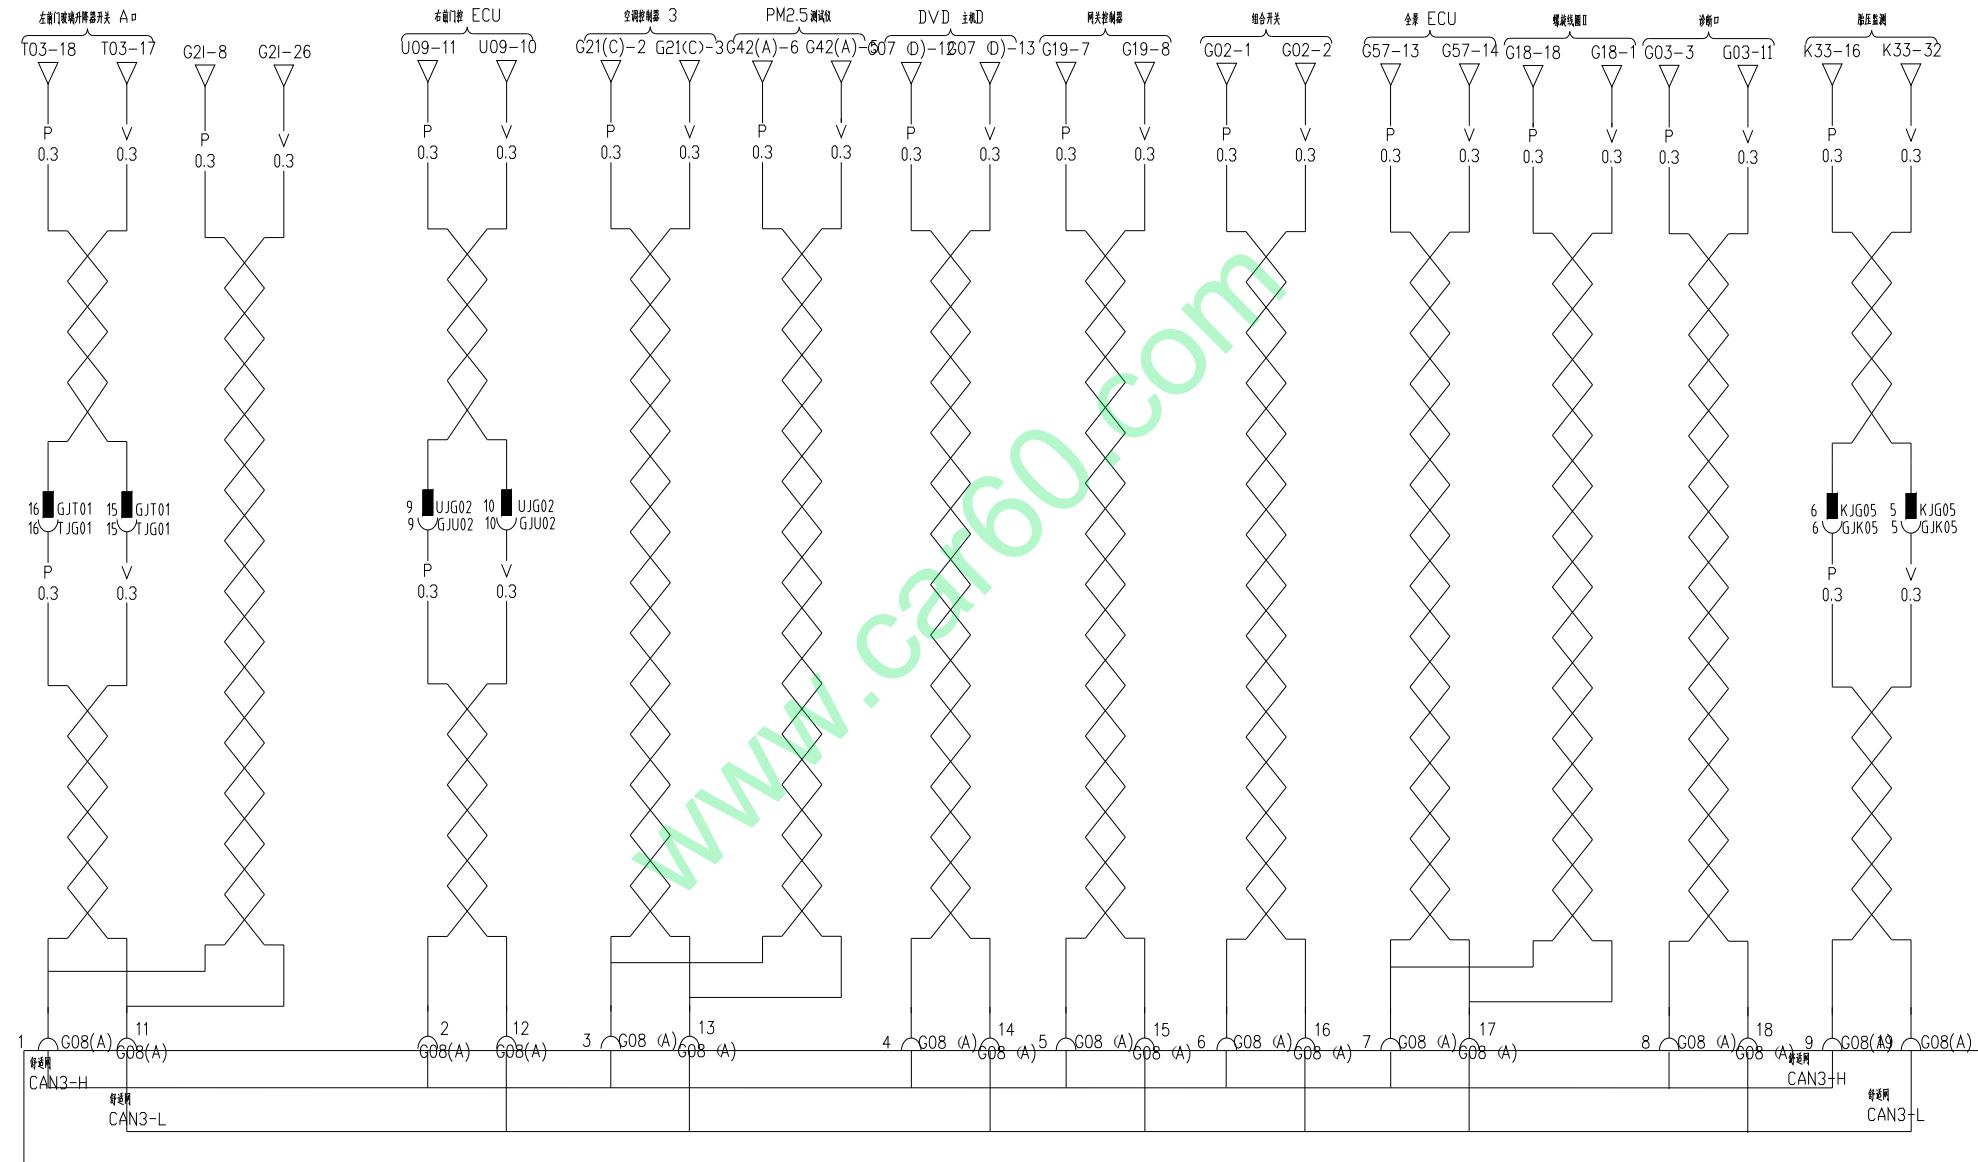

短接器 (2)

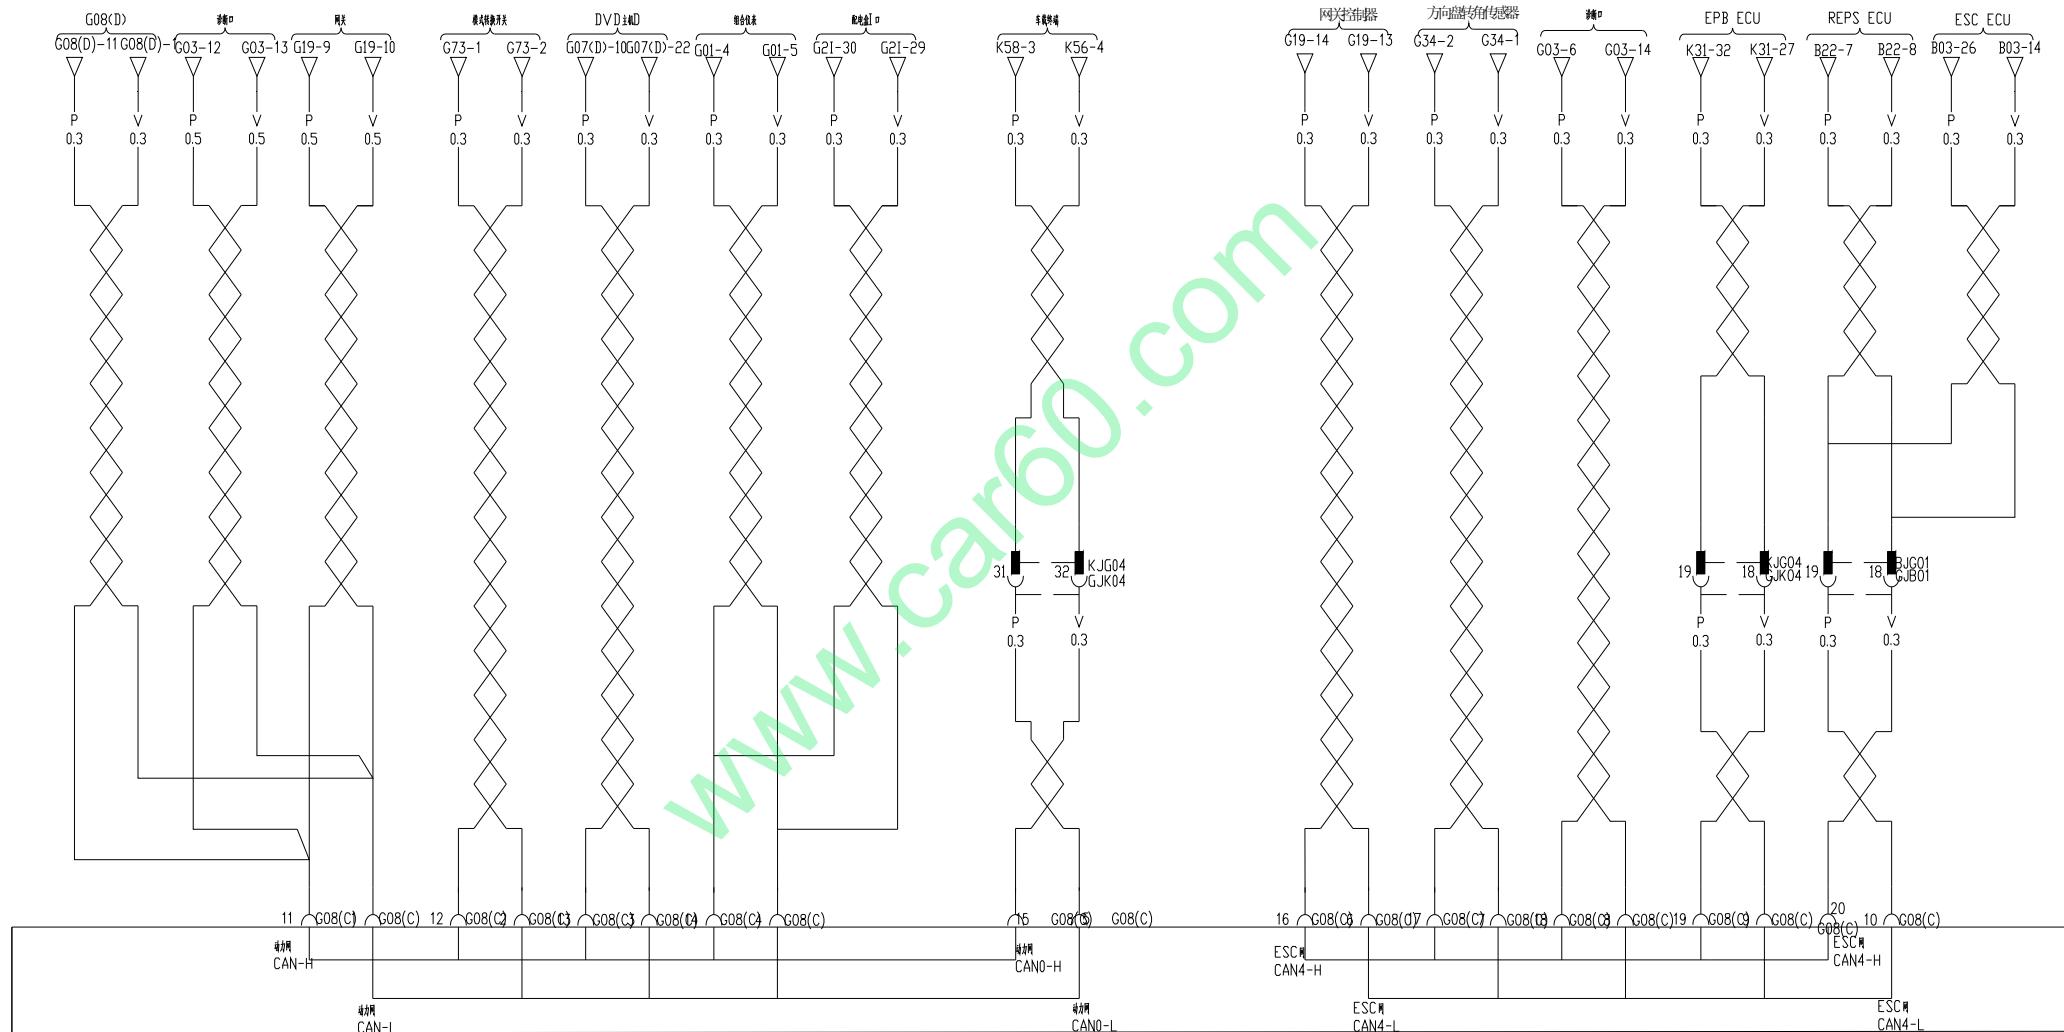

短接器 (3)

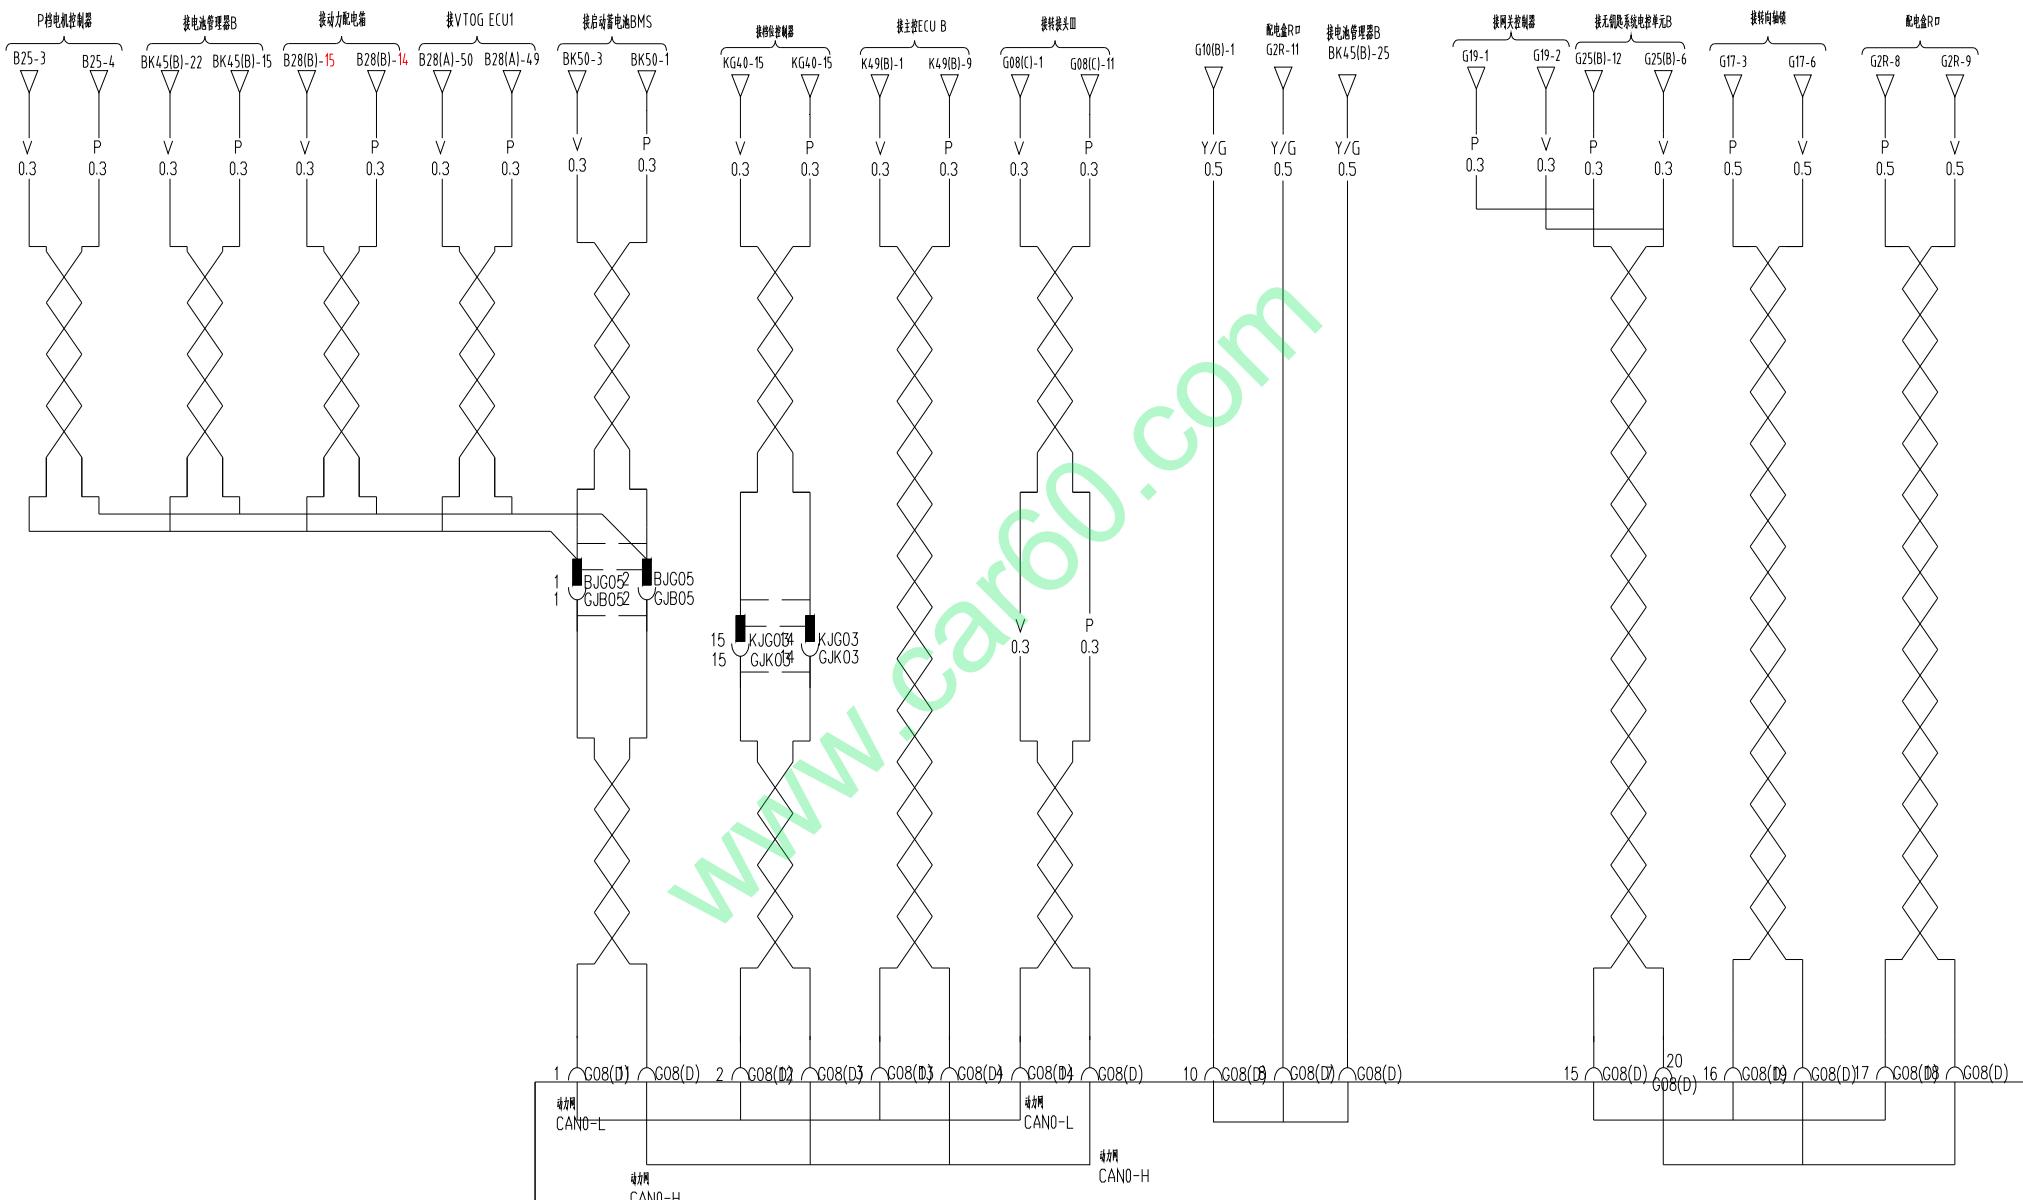

www.Car60.com