


10.0 SCHEMATIC DIAGRAMS

10.1 AIRBAG SYSTEM

10.1.1 BASE


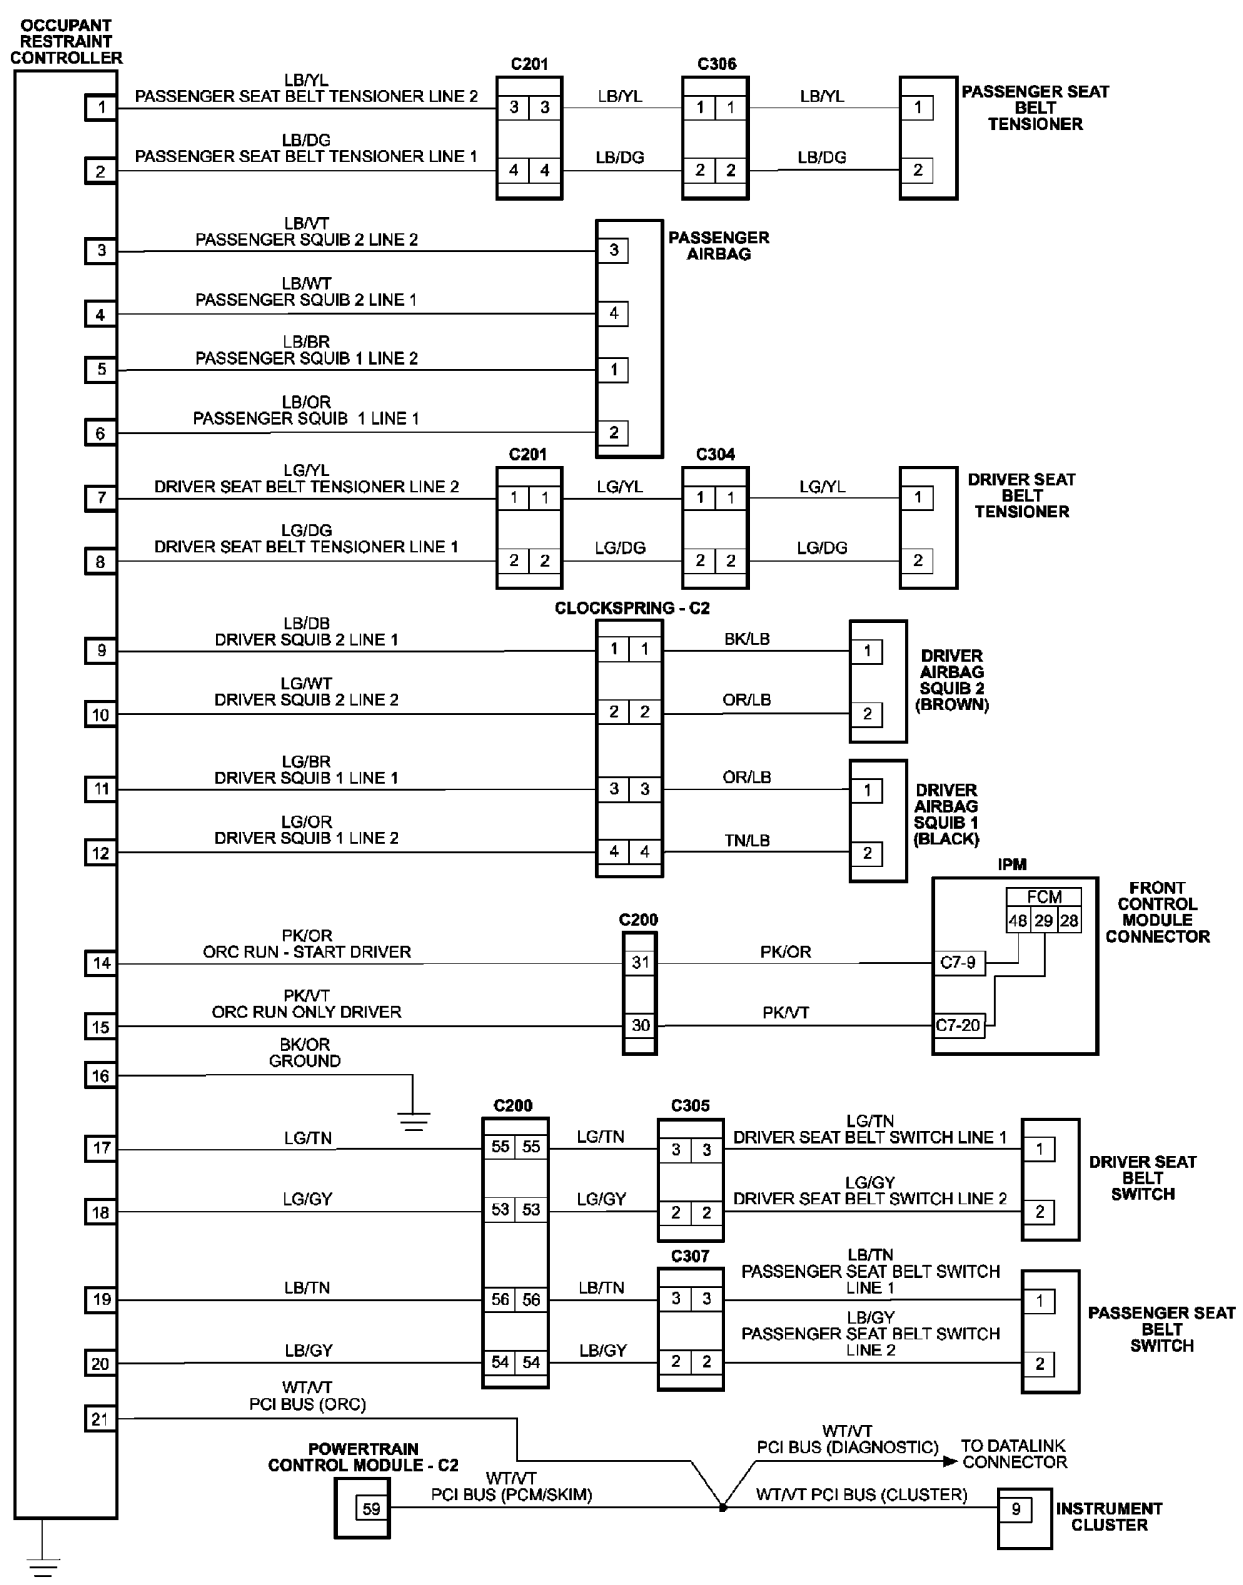


SCHEMATIC
DIAGRAMS

SCHEMATIC DIAGRAMS

10.1 AIRBAG SYSTEM (Continued)

10.1.2 PREMIUM

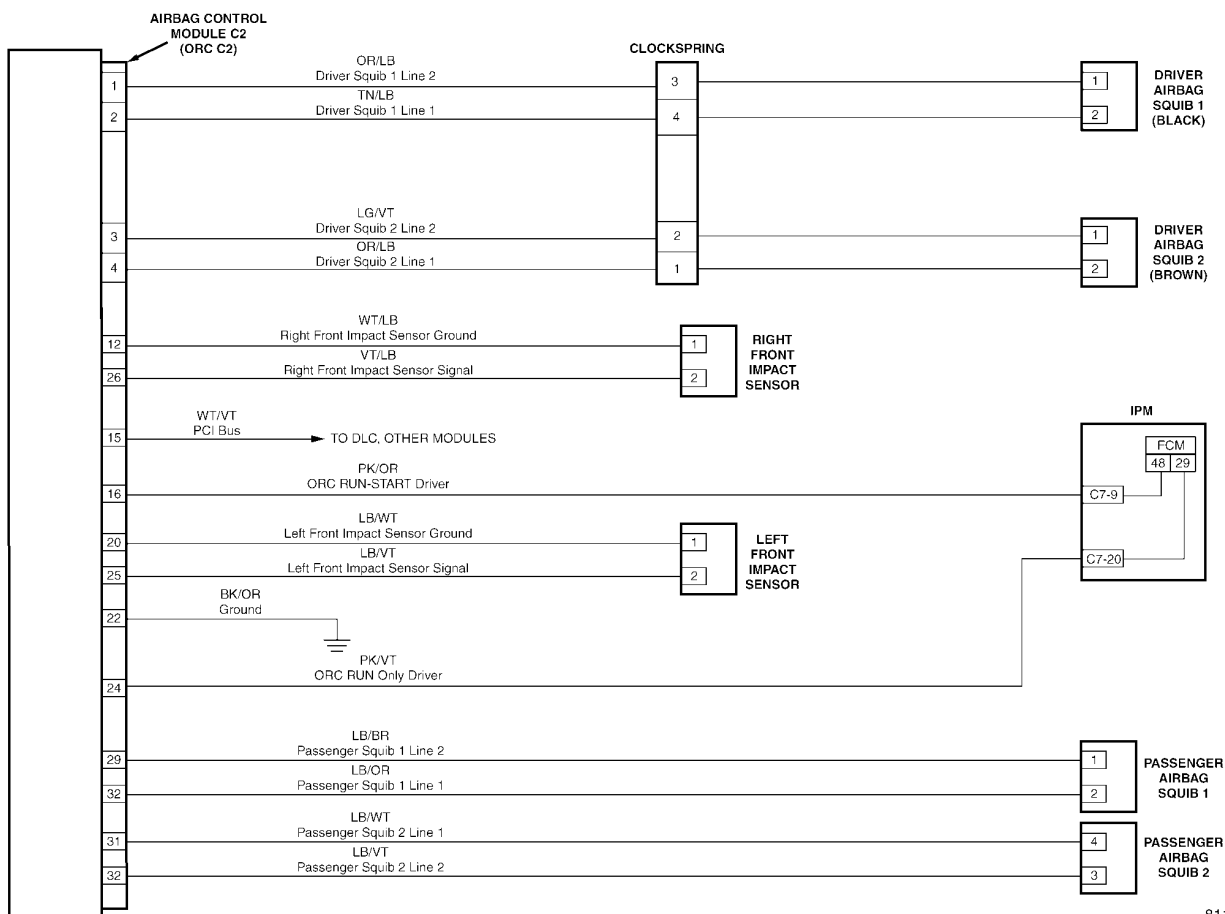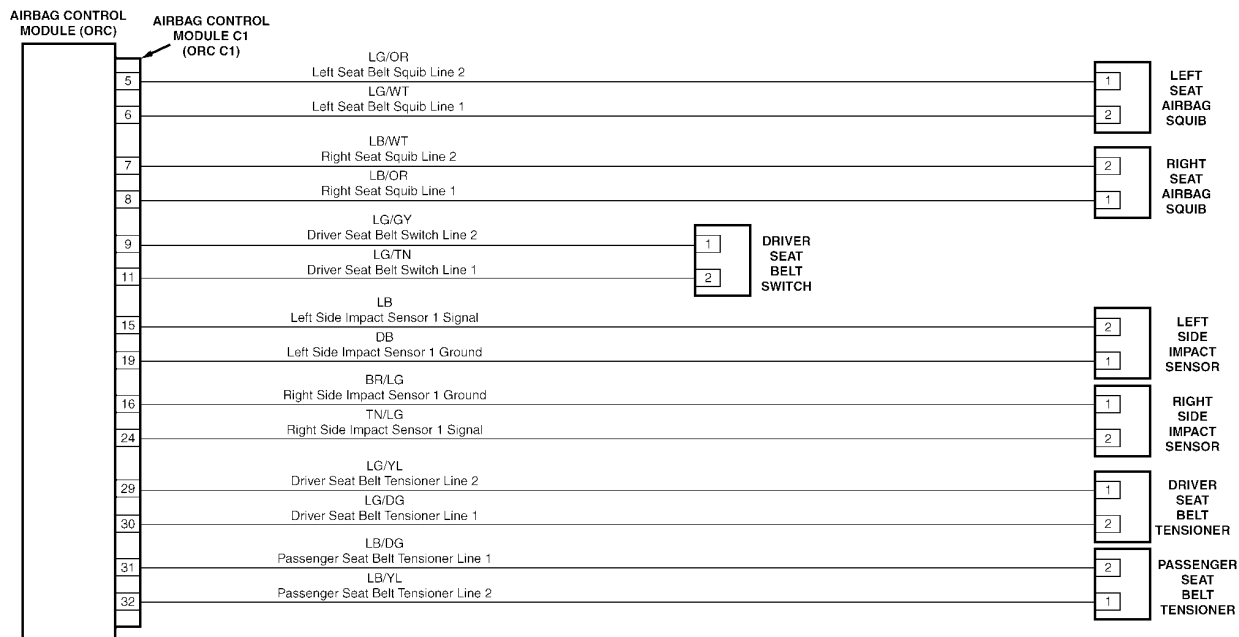


10.2.1 PREMIUM AUDIO SYSTEM



SCHEMATIC DIAGRAMS


10.2 AUDIO SYSTEM (Continued)

10.2.2 BASE AUDIO SYSTEM

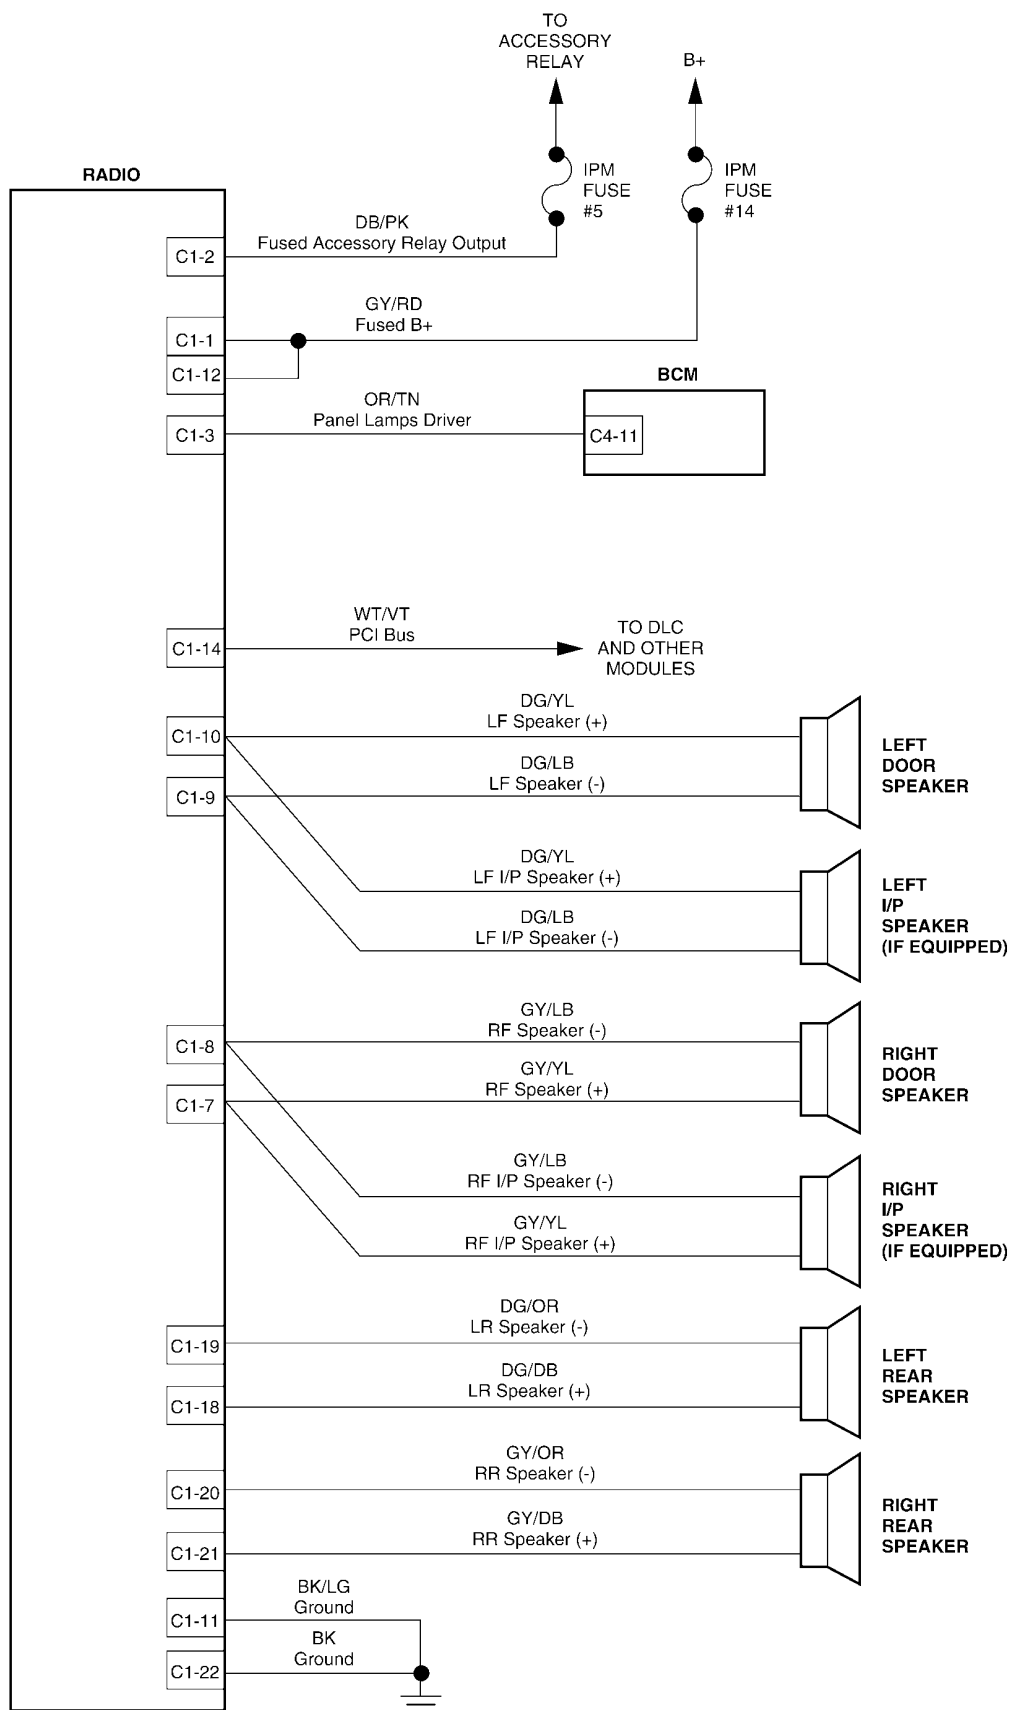


8120b370

10.2.3 CD CHANGER

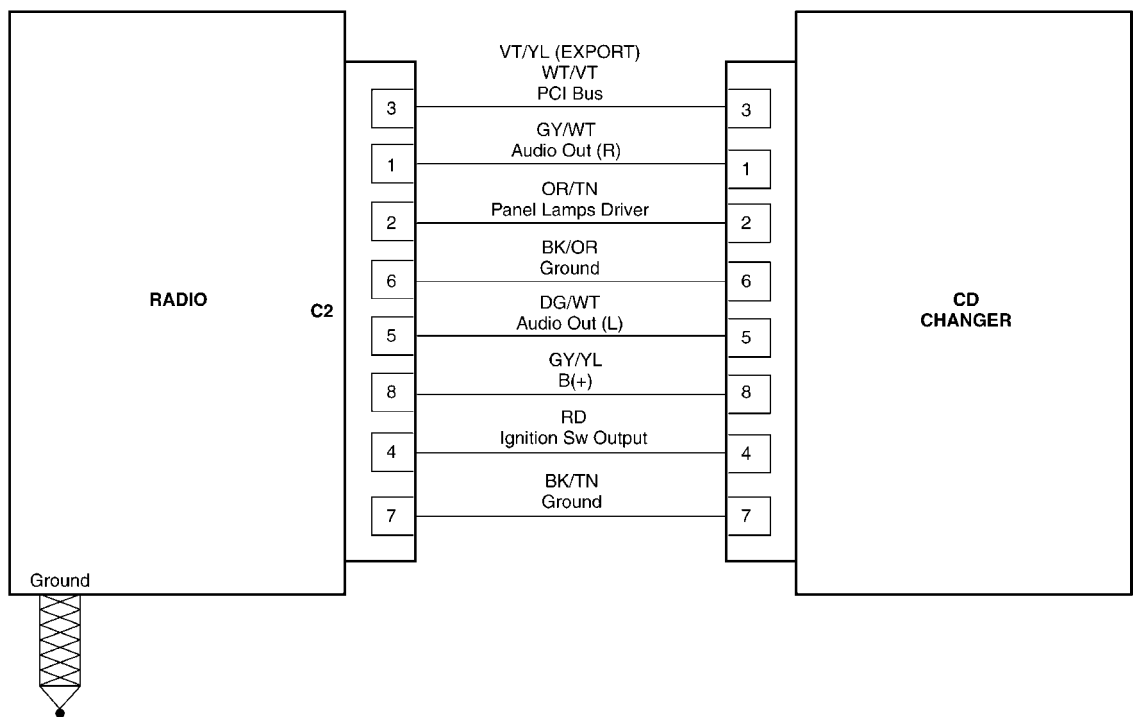

80dcbcf6

10.2.4 DVD/CD CHANGER

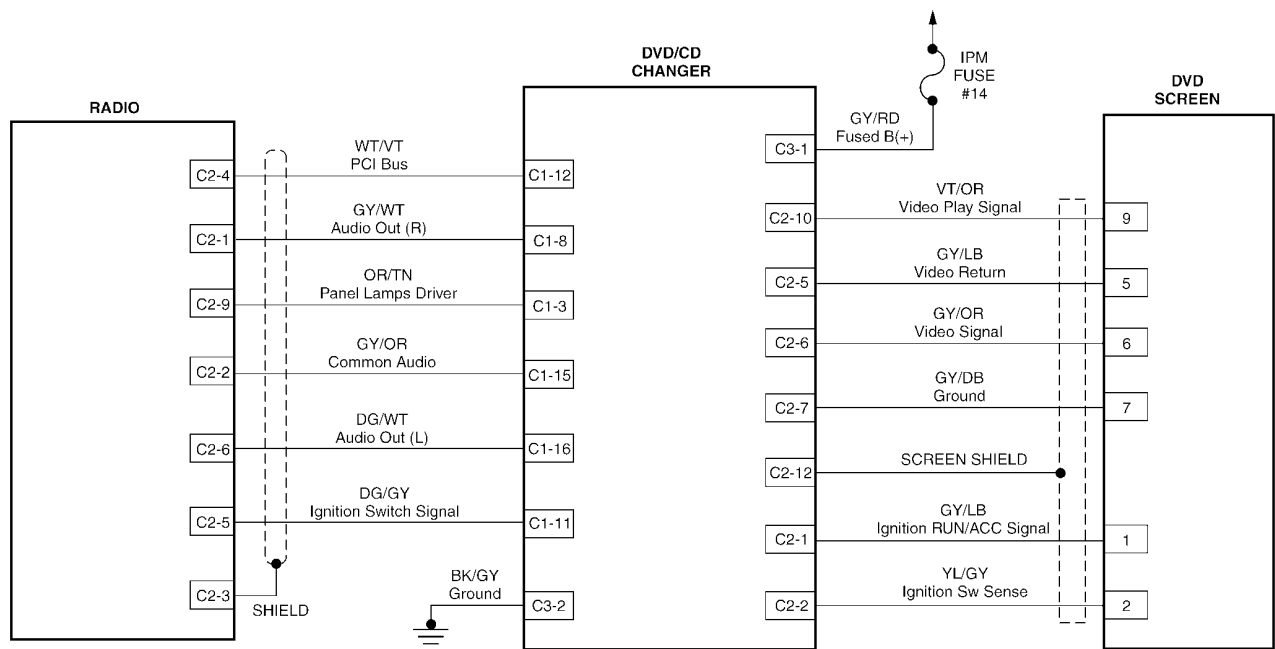


81220826

SCHEMATIC DIAGRAMS

10.2 AUDIO SYSTEM (Continued)


10.2.5 REMOTE RADIO CONTROLS

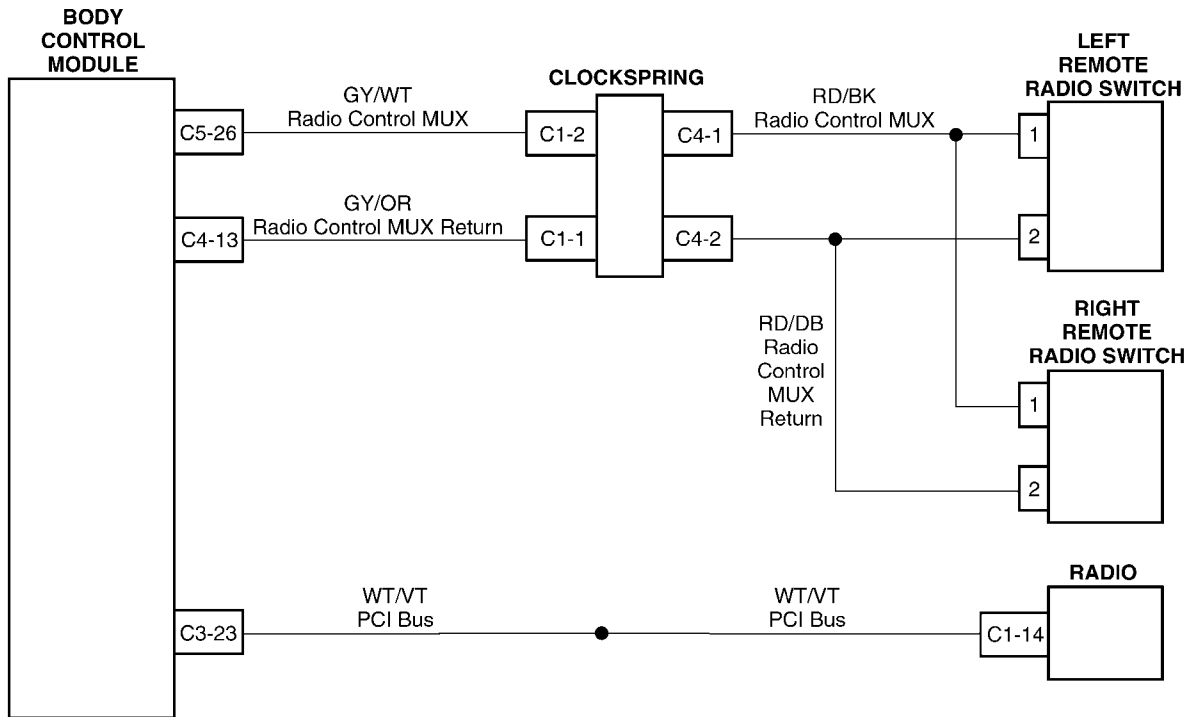

80f862d1

10.3 AUTOMATIC TEMPERATURE CONTROL SYSTEM

10.3.1 FRONT ATC - LHD

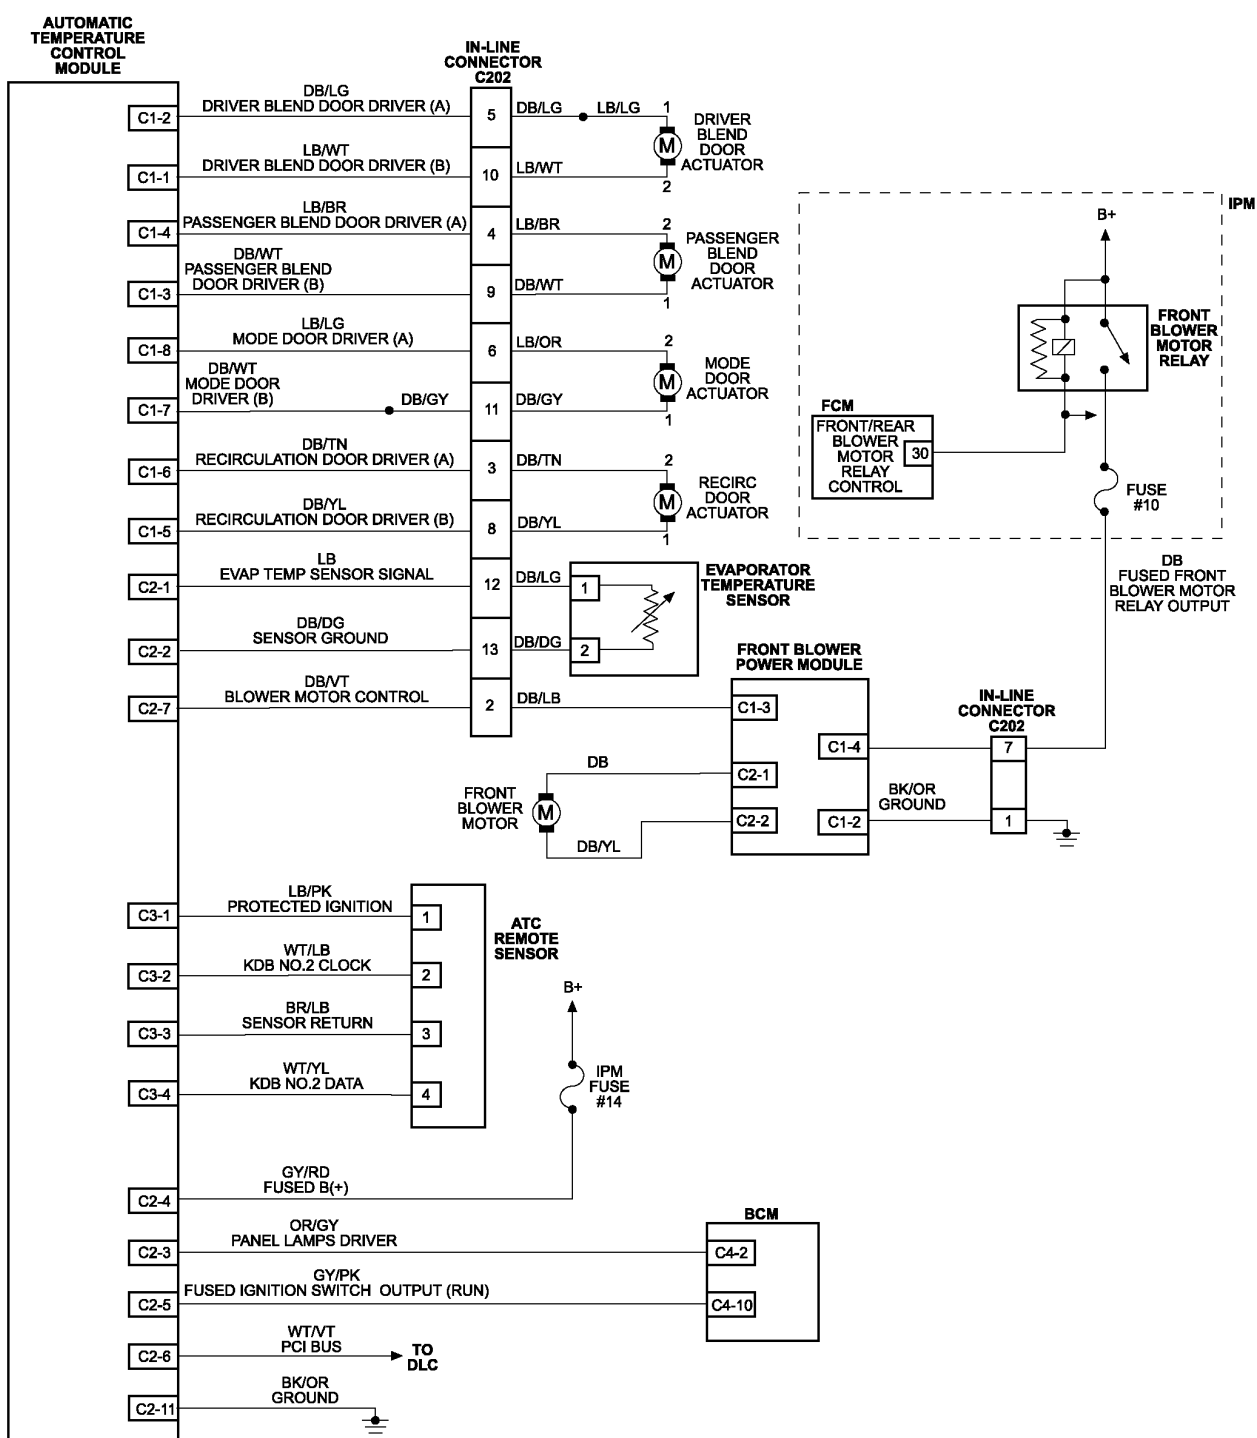


SCHEMATIC DIAGRAMS


SCHEMATIC DIAGRAMS

10.3 AUTOMATIC TEMPERATURE CONTROL SYSTEM (Continued)

10.3.2 FRONT ATC - RHD

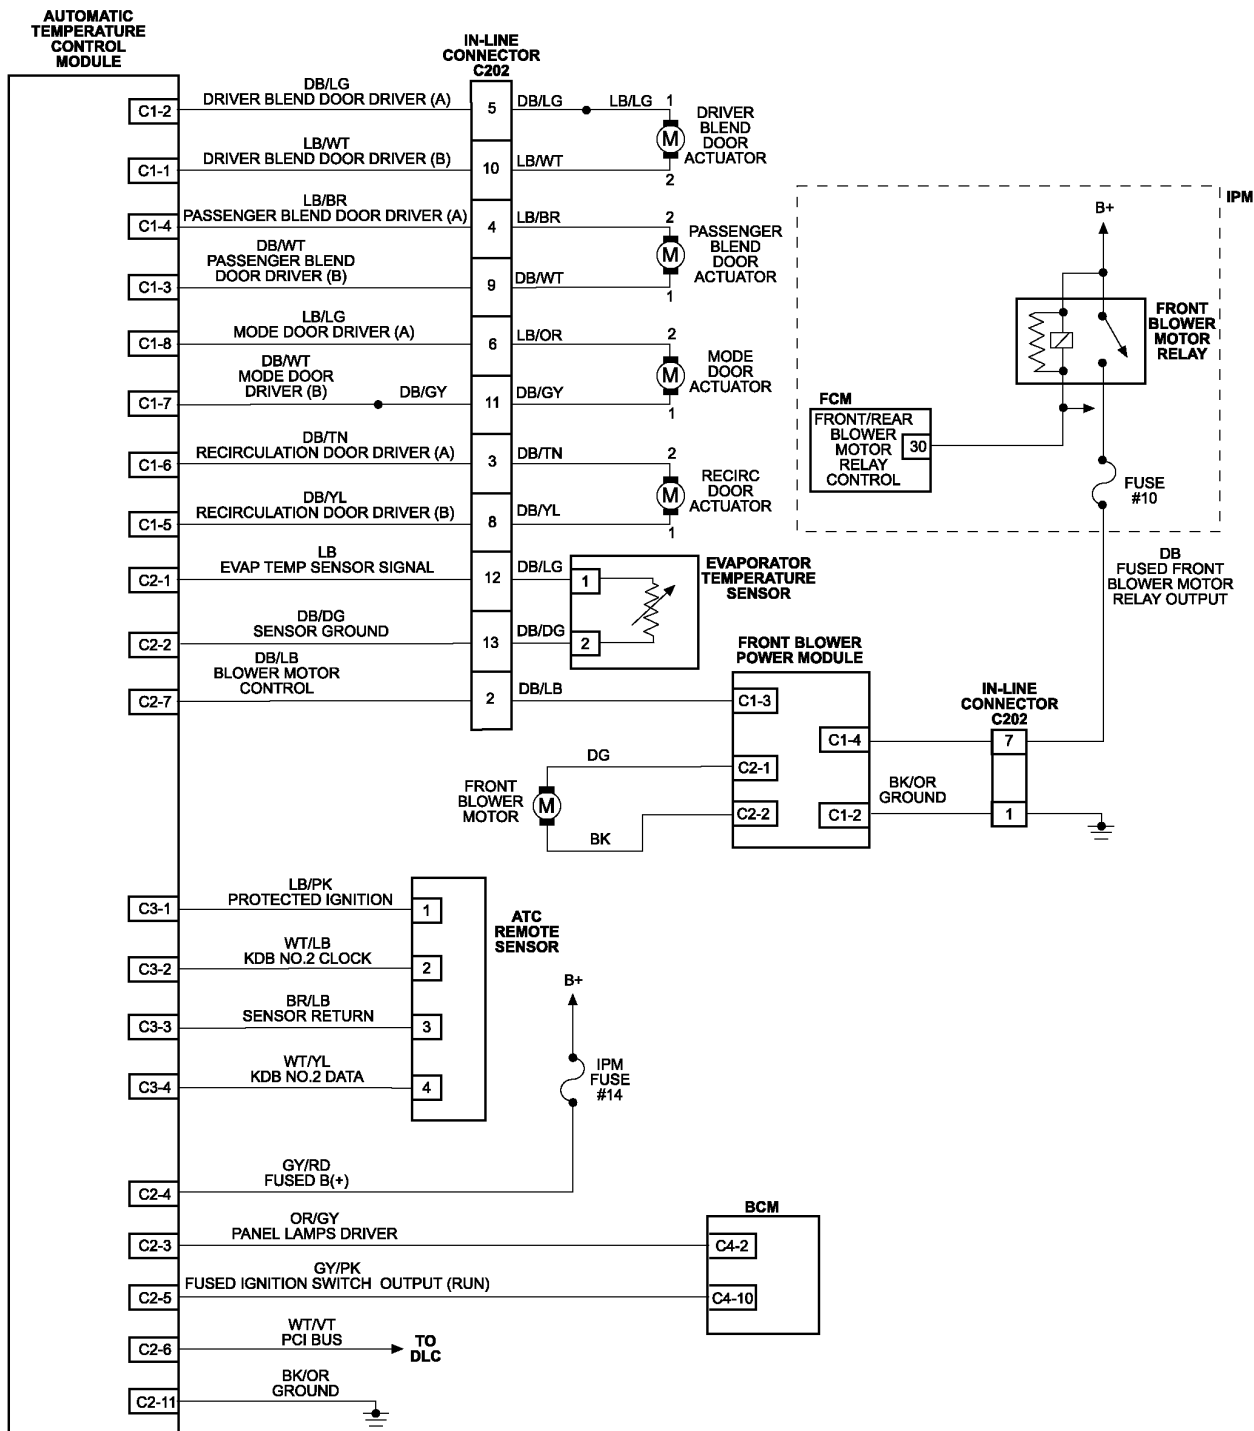


10.3.3 REAR ATC - THREE ZONE

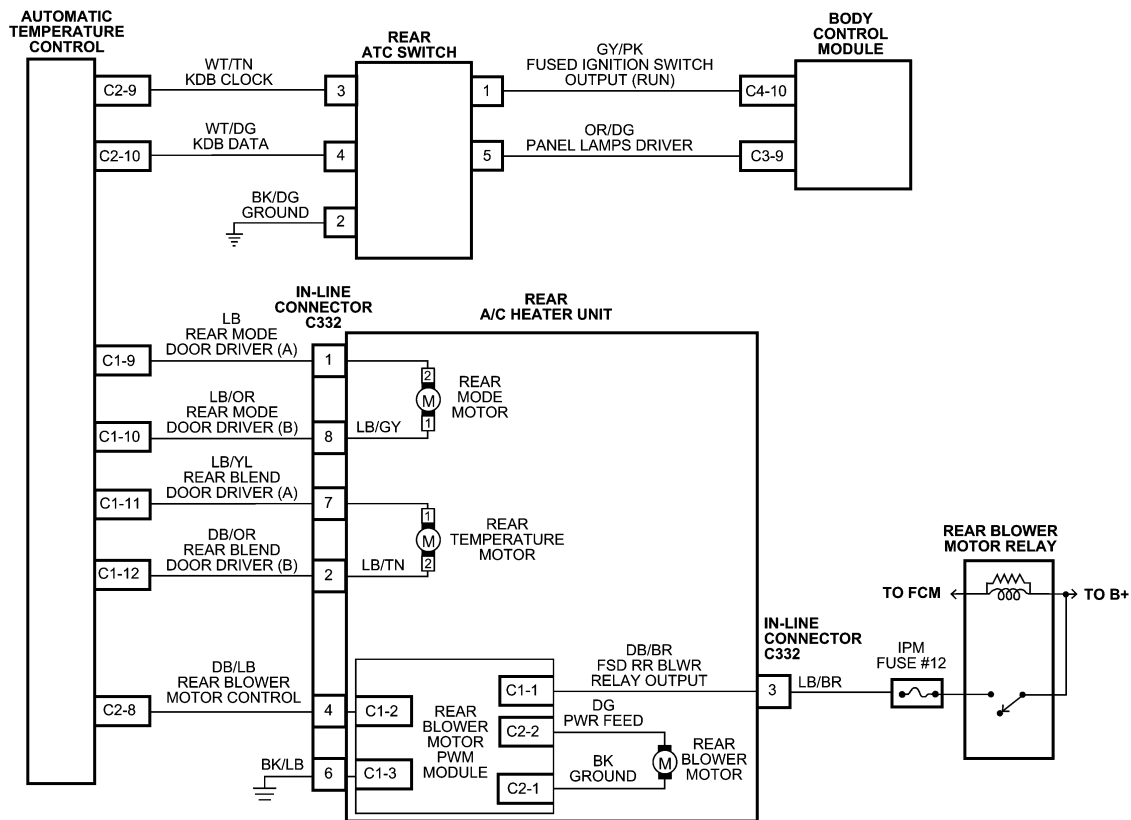

80fa0e80


10.4 CABIN HEATER

10.4.1 DIESEL CABIN HEATER ASSIST (DCHA)

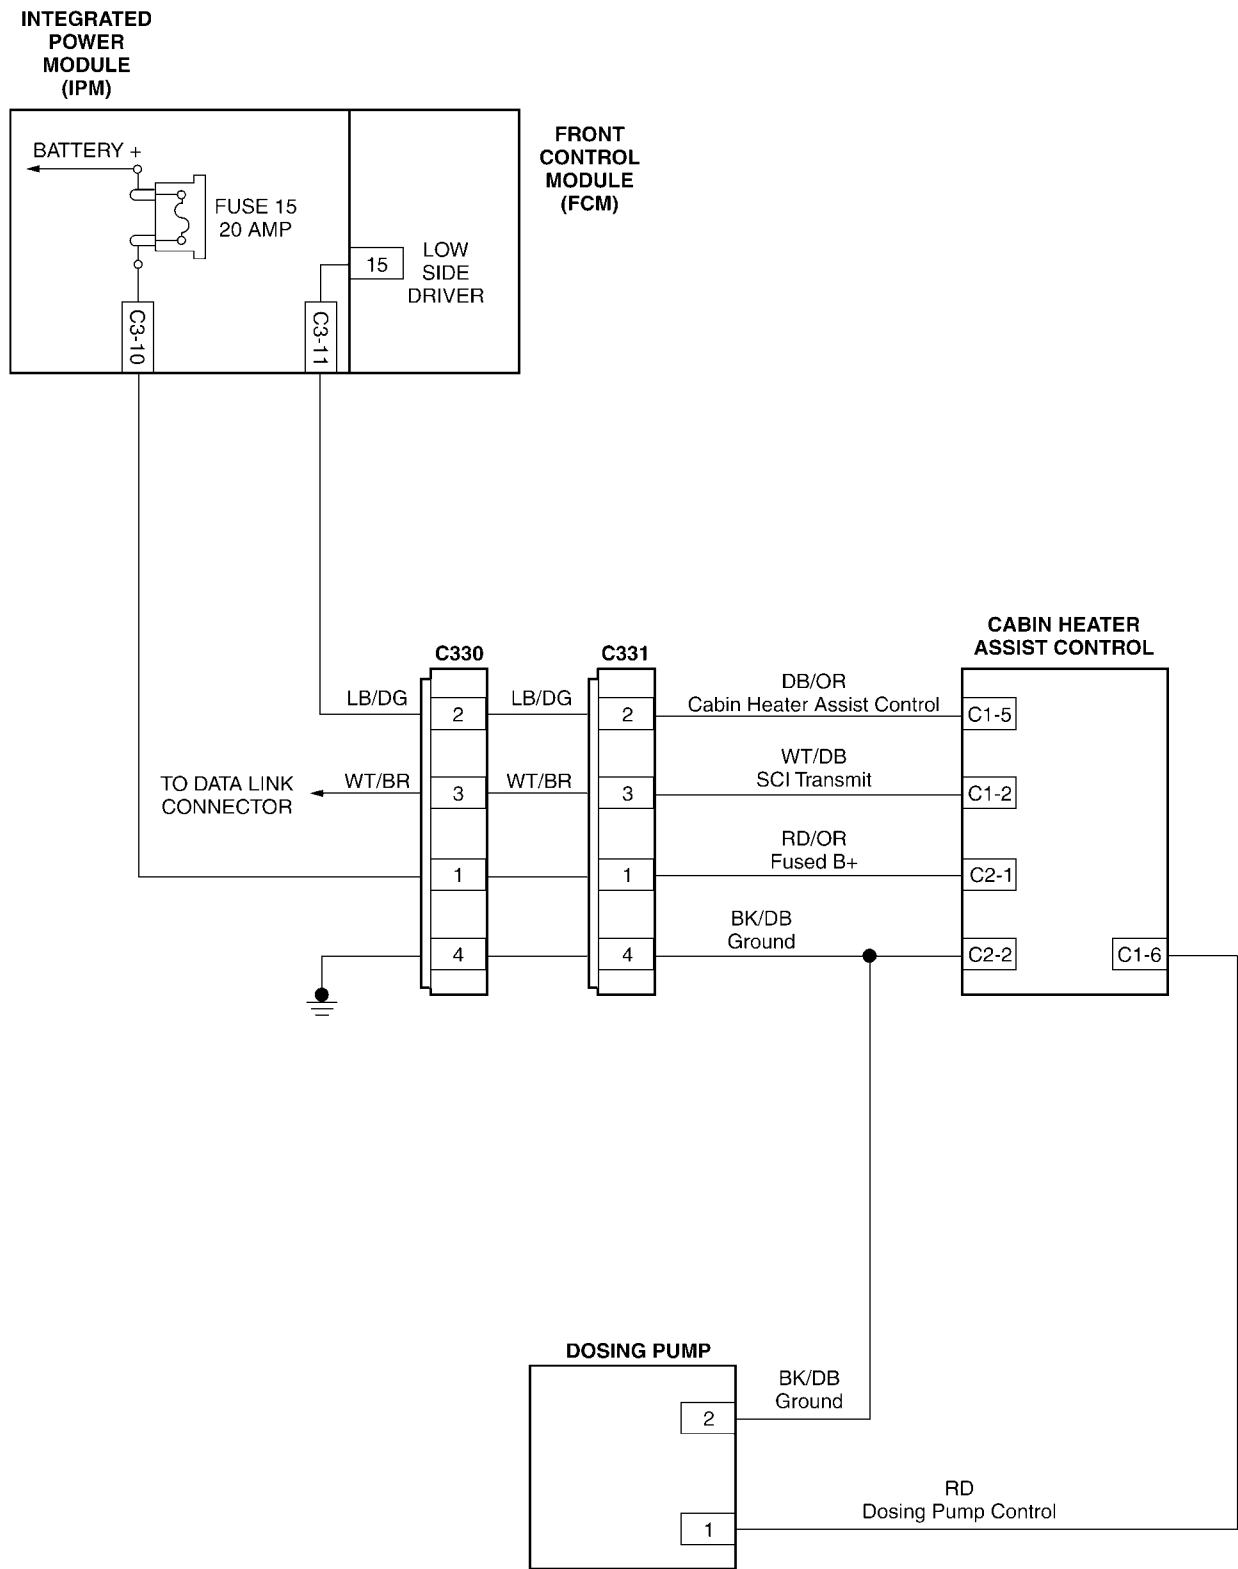


10.5 COMMUNICATION (Continued)

10.5.1 PCM COMMUNICATION - NGC

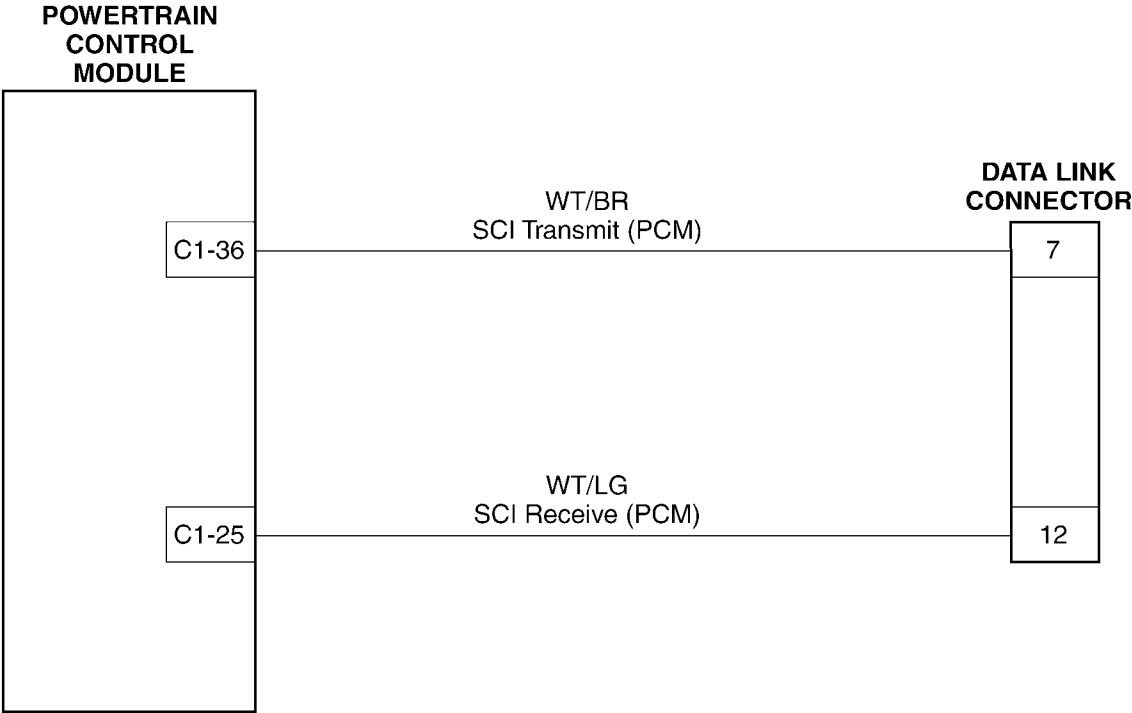

80f861fe


10.5.2 ECM & CABIN HEATER ASSIST COMMUNICATION - DIESEL ONLY

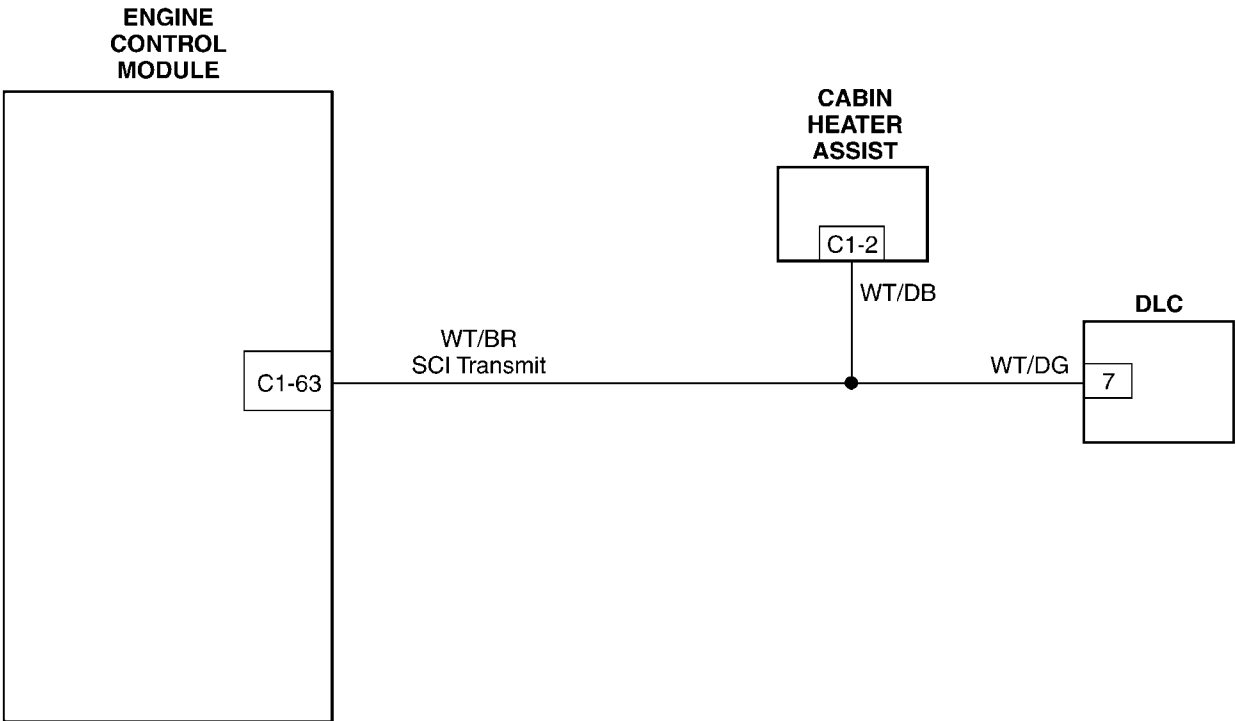

80dcc0c8

10.6 DOOR AJAR SYSTEM

10.6.1 DOOR AJAR SYSTEM WITH POWER SLIDING DOORS

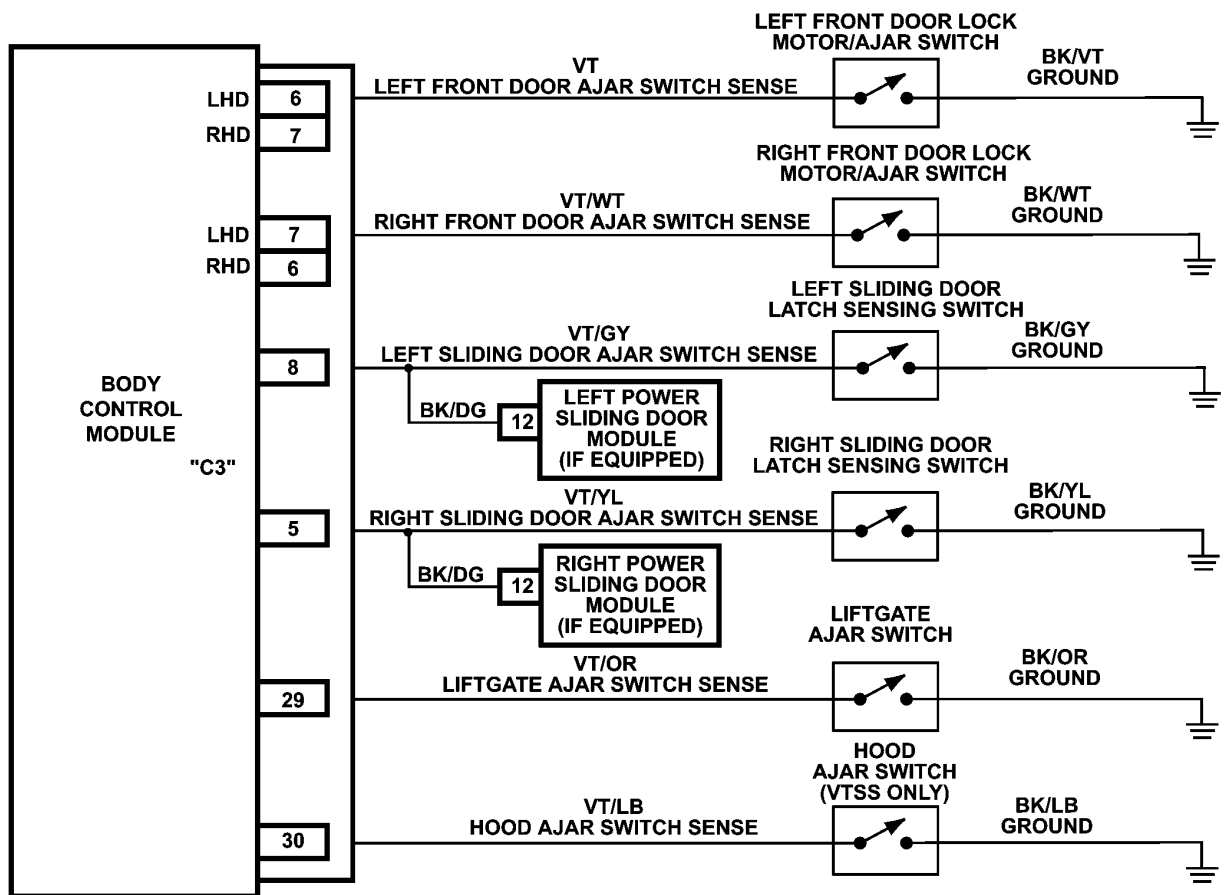


80d85f29


SCHEMATIC DIAGRAMS

10.6 DOOR AJAR SYSTEM (Continued)

10.6.2 DOOR AJAR WITHOUT POWER SLIDING DOORS

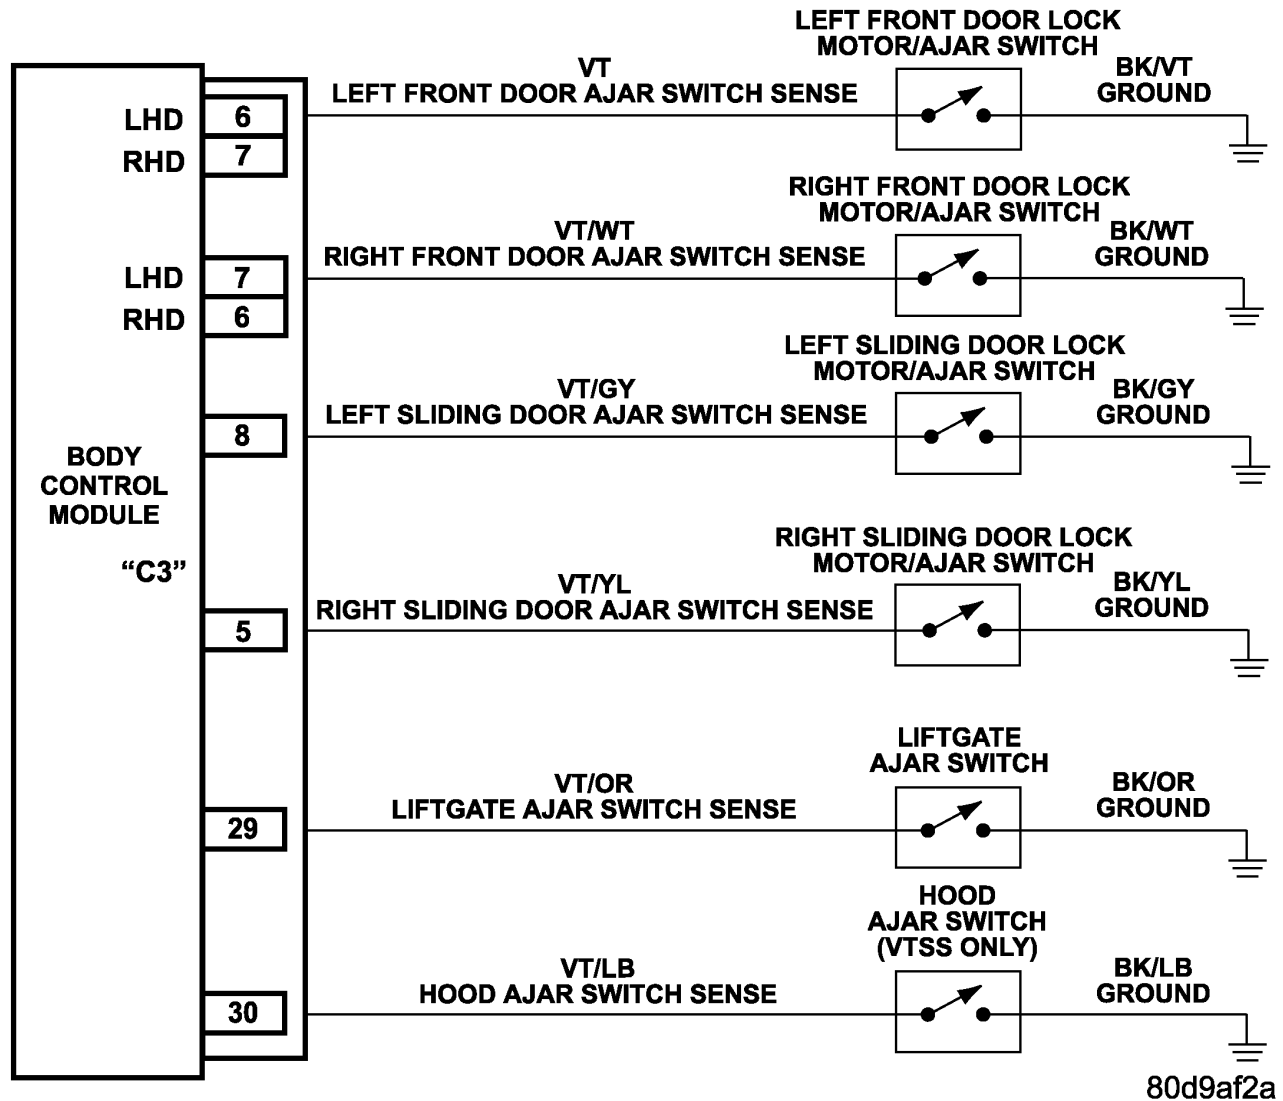

10.7 EXTERIOR LIGHTING

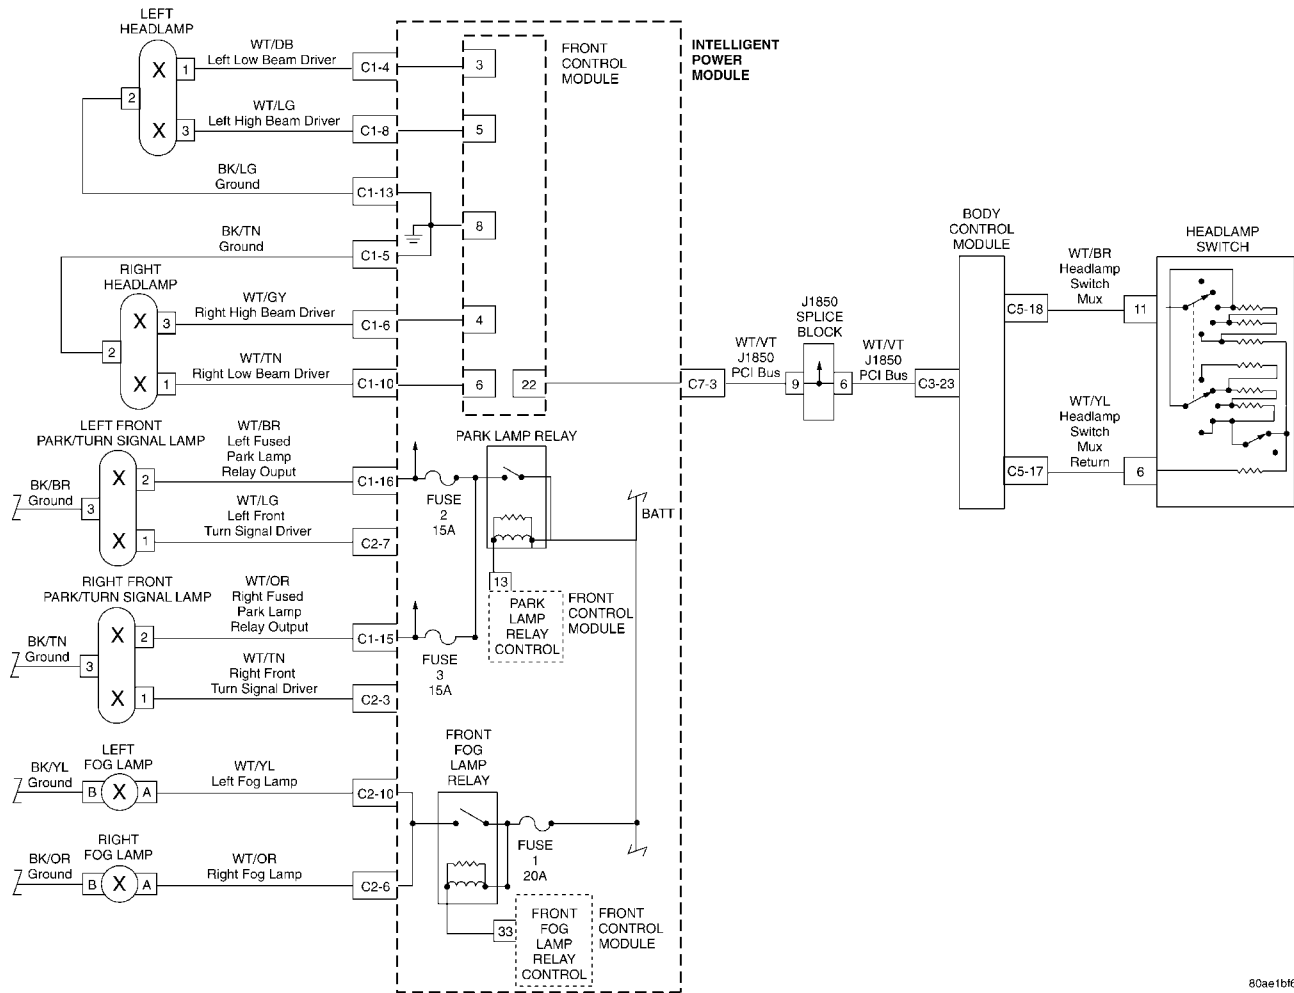


80ae1b16


SCHEMATIC DIAGRAMS

10.8 IGNITION, POWER, ACCESSORY

10.8.1 HORN SYSTEM

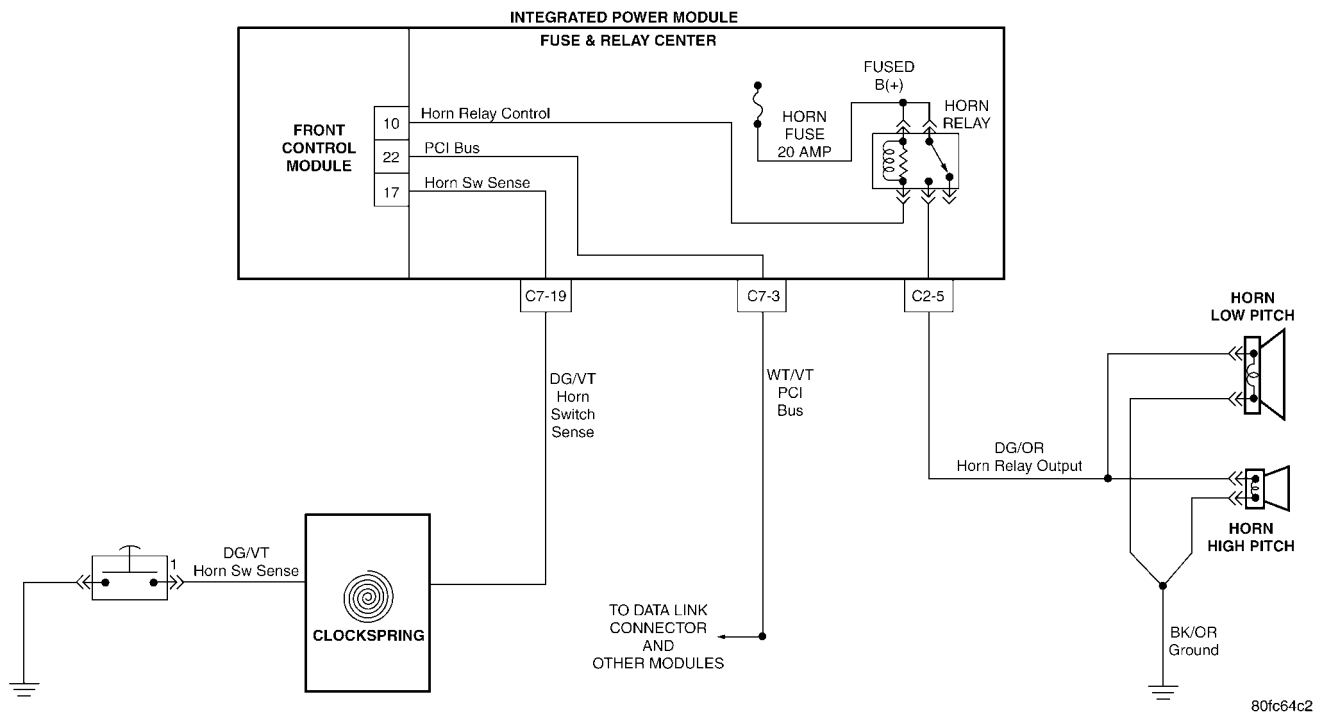

10.8.2 IGNITION SWITCH

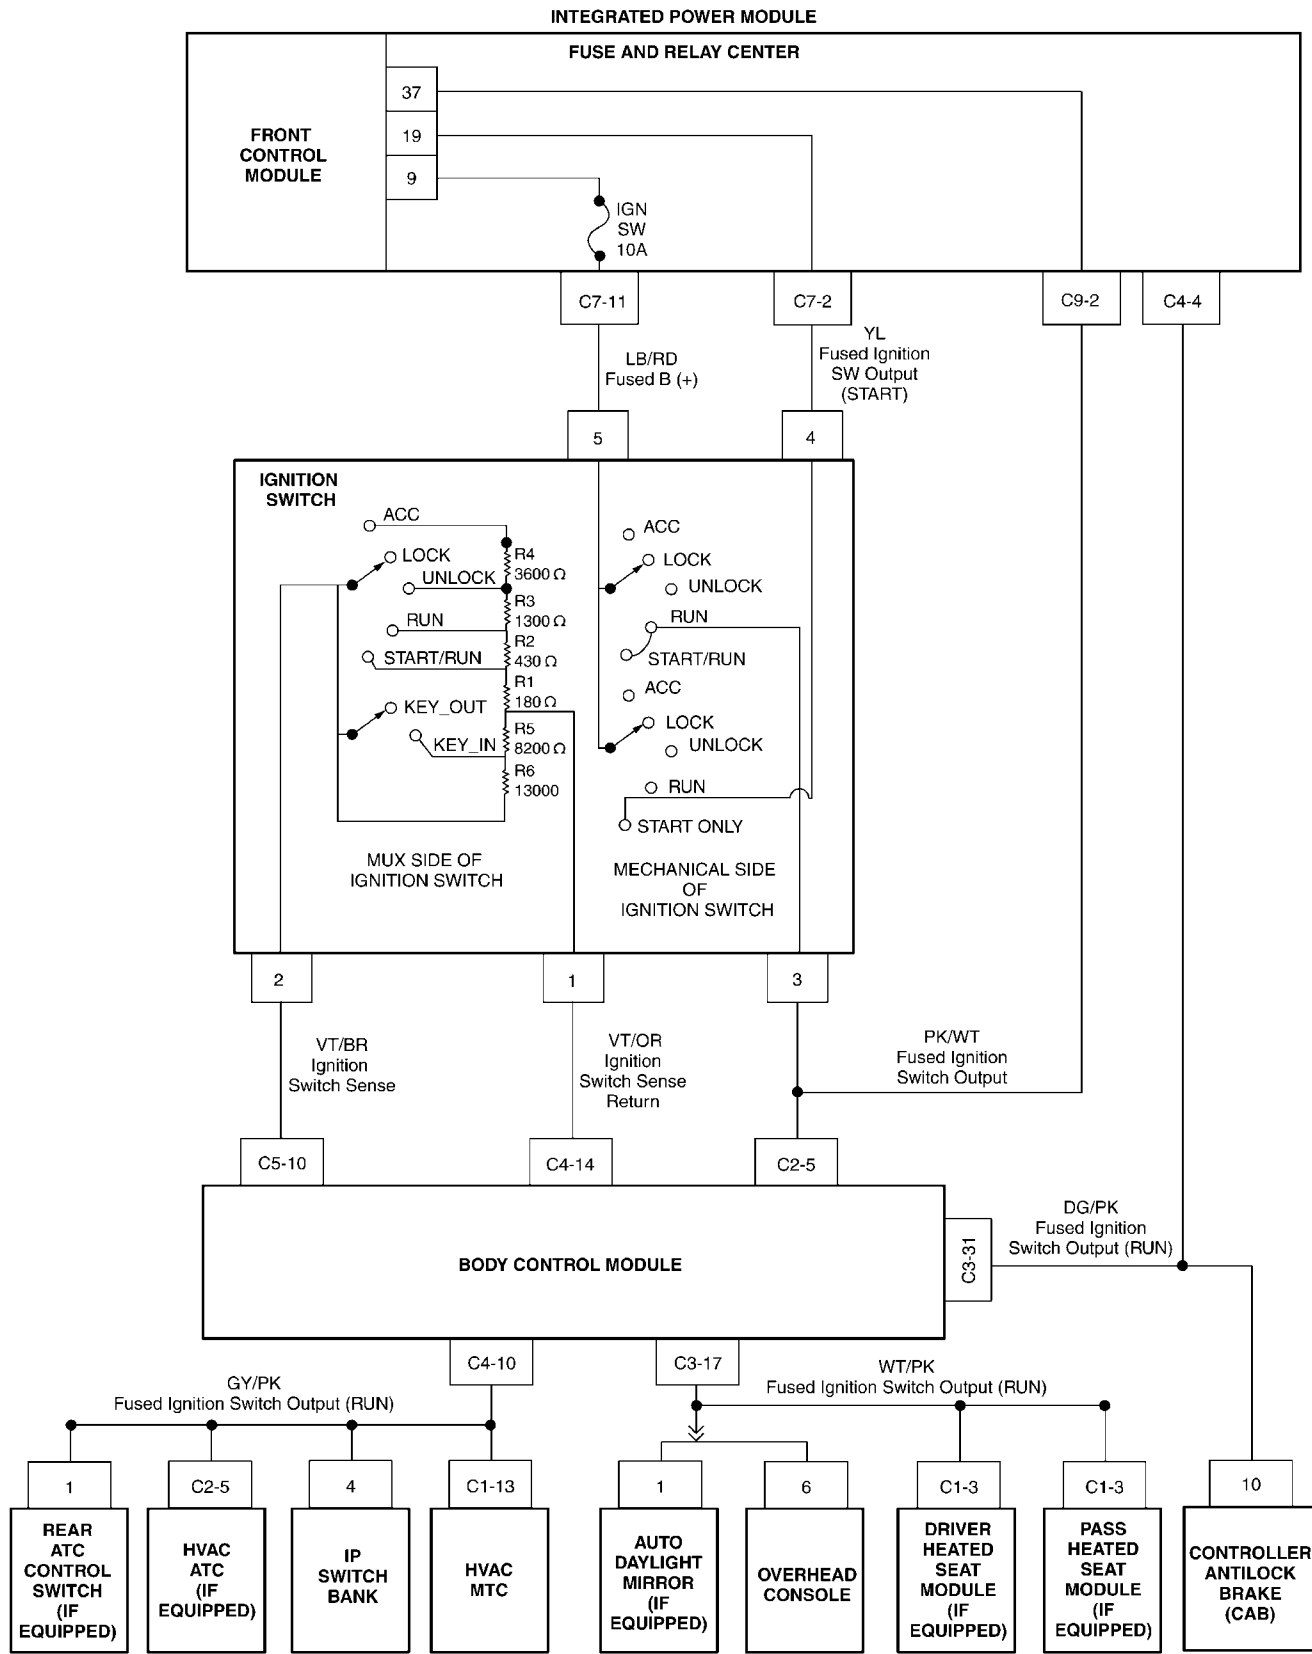


80de516a

SCHEMATIC DIAGRAMS

10.8 IGNITION, POWER, ACCESSORY (Continued)


10.8.3 INTEGRATED POWER MODULE/BODY CONTROL MODULE POWER AND GROUNDS

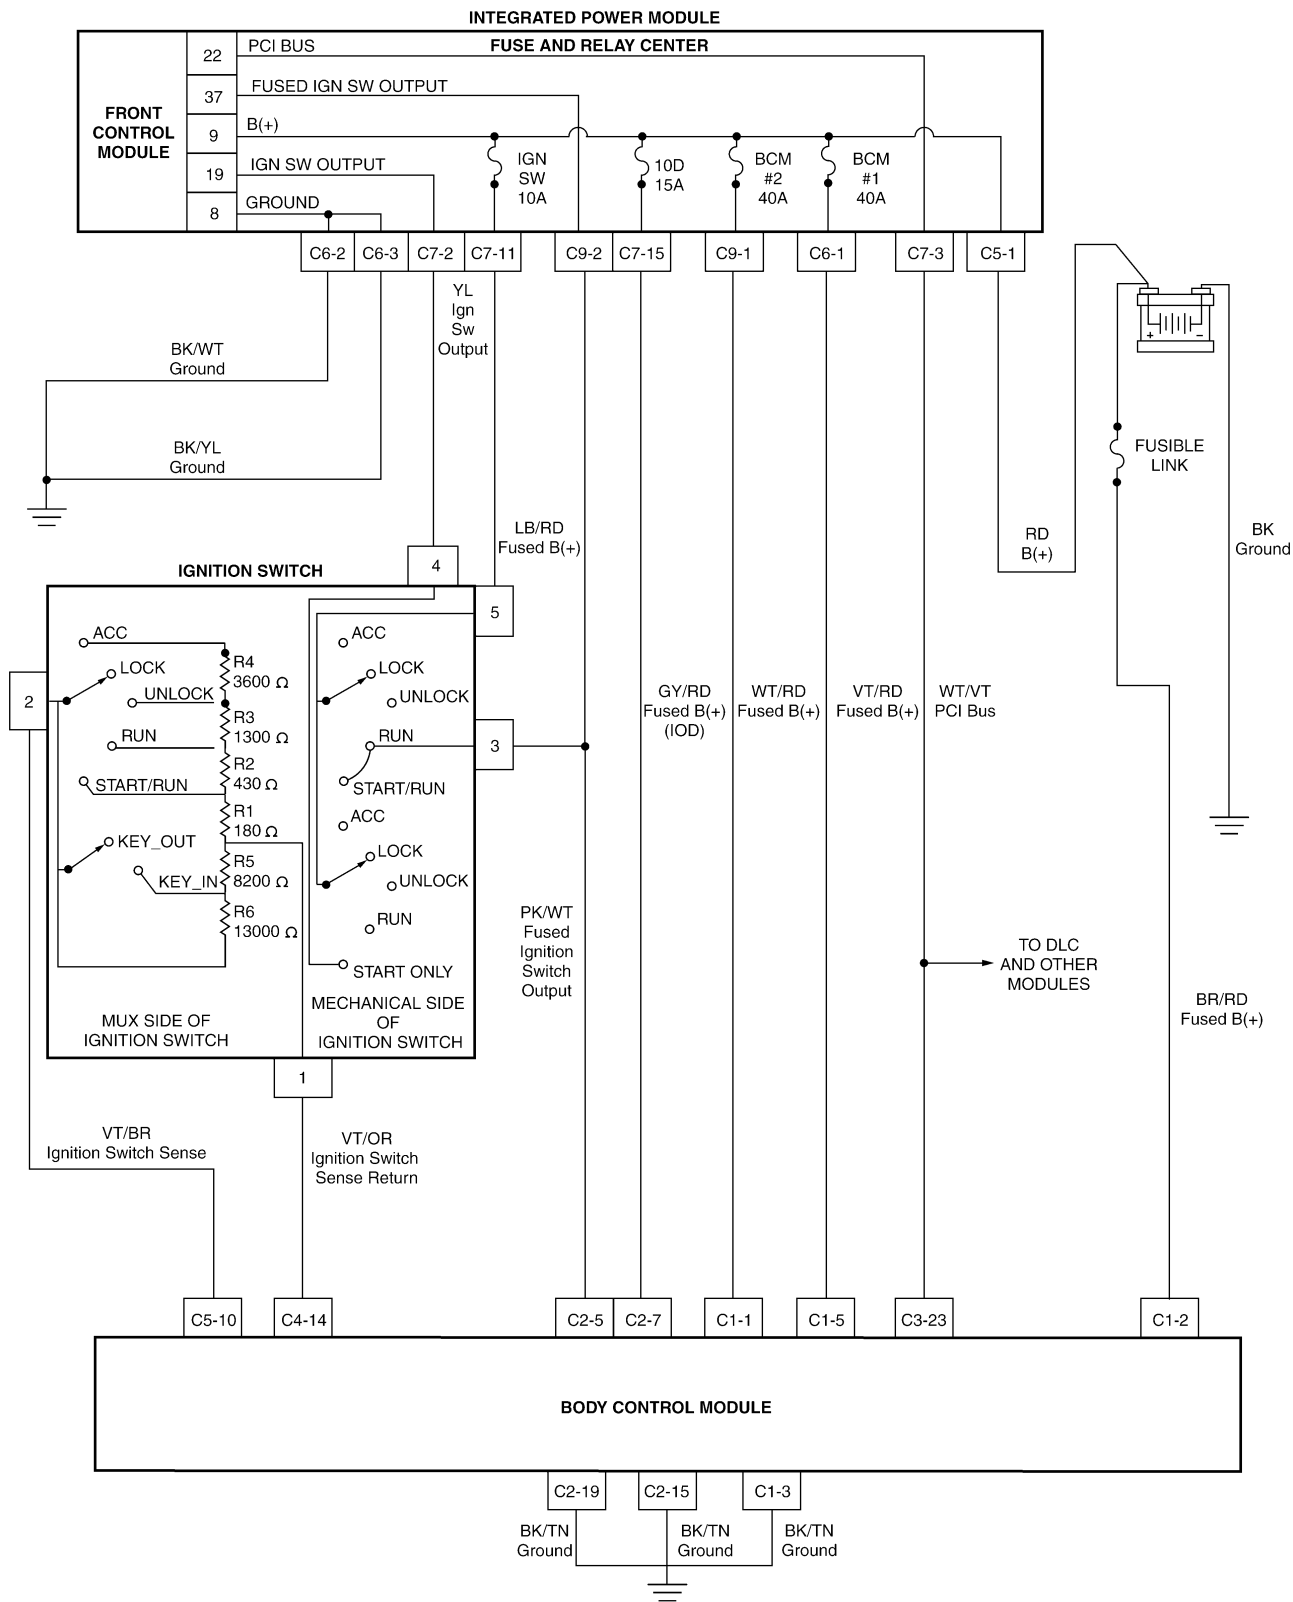

SCHEMATIC
DIAGRAMS

10.9 INSTRUMENT CLUSTER

10.9.1 INSTRUMENT CLUSTER — BASE

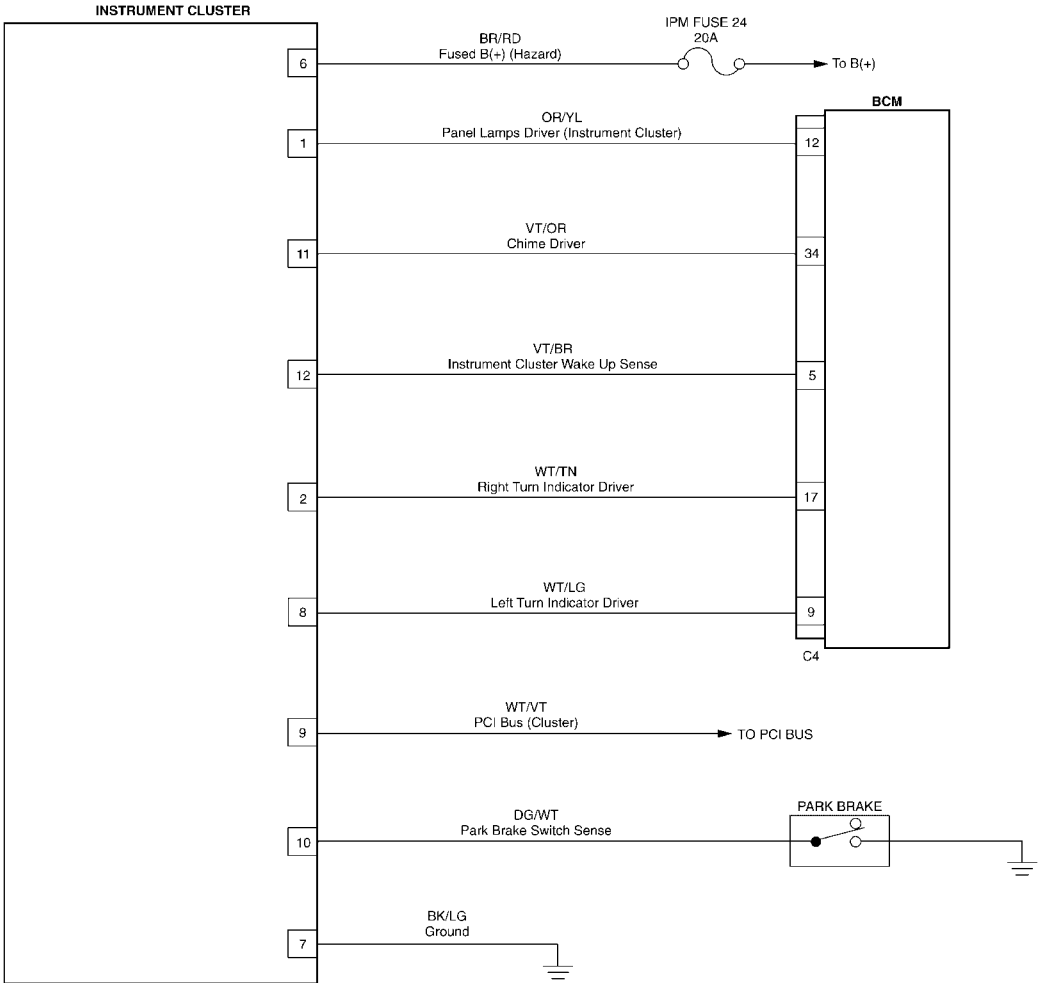


80ad0e50

SCHEMATIC DIAGRAMS


10.9 INSTRUMENT CLUSTER (Continued)

10.9.2 INSTRUMENT CLUSTER & MESSAGE CENTER

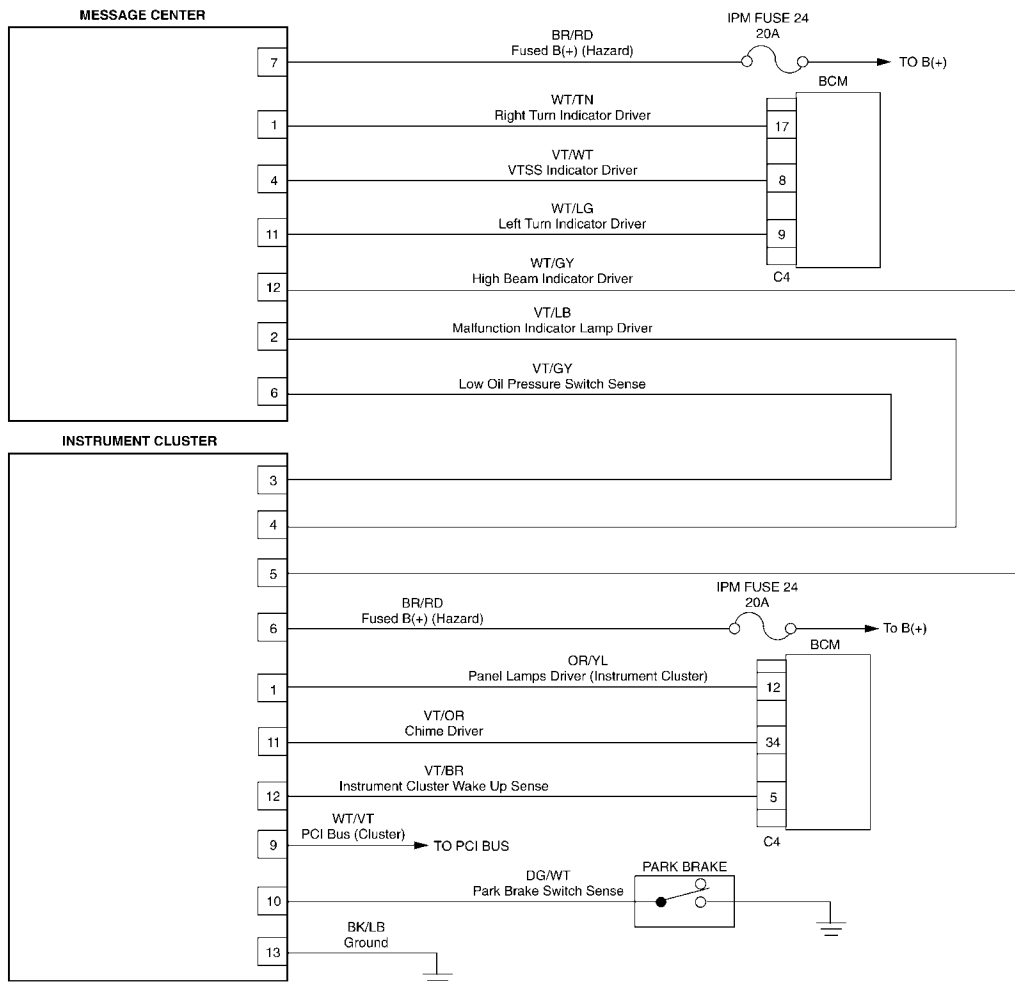

80ad0dee


10.10 INTERIOR LIGHTING

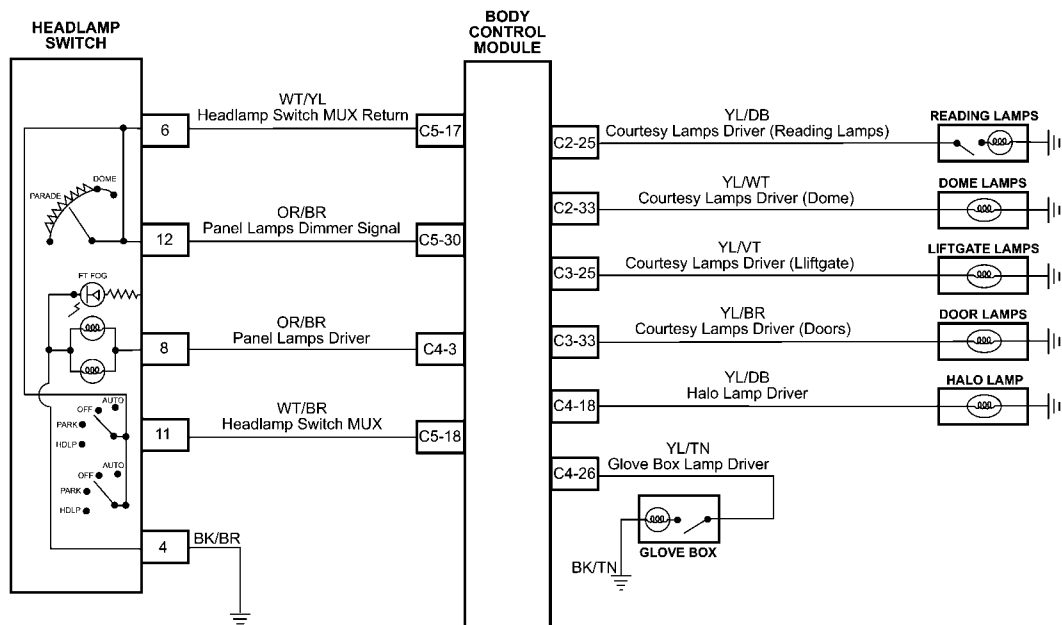

80a7e7e8

10.11 MANUAL TEMPERATURE CONTROLS

10.11.1 BASE MANUAL TEMPERATURE CONTROL SYSTEM, LHD

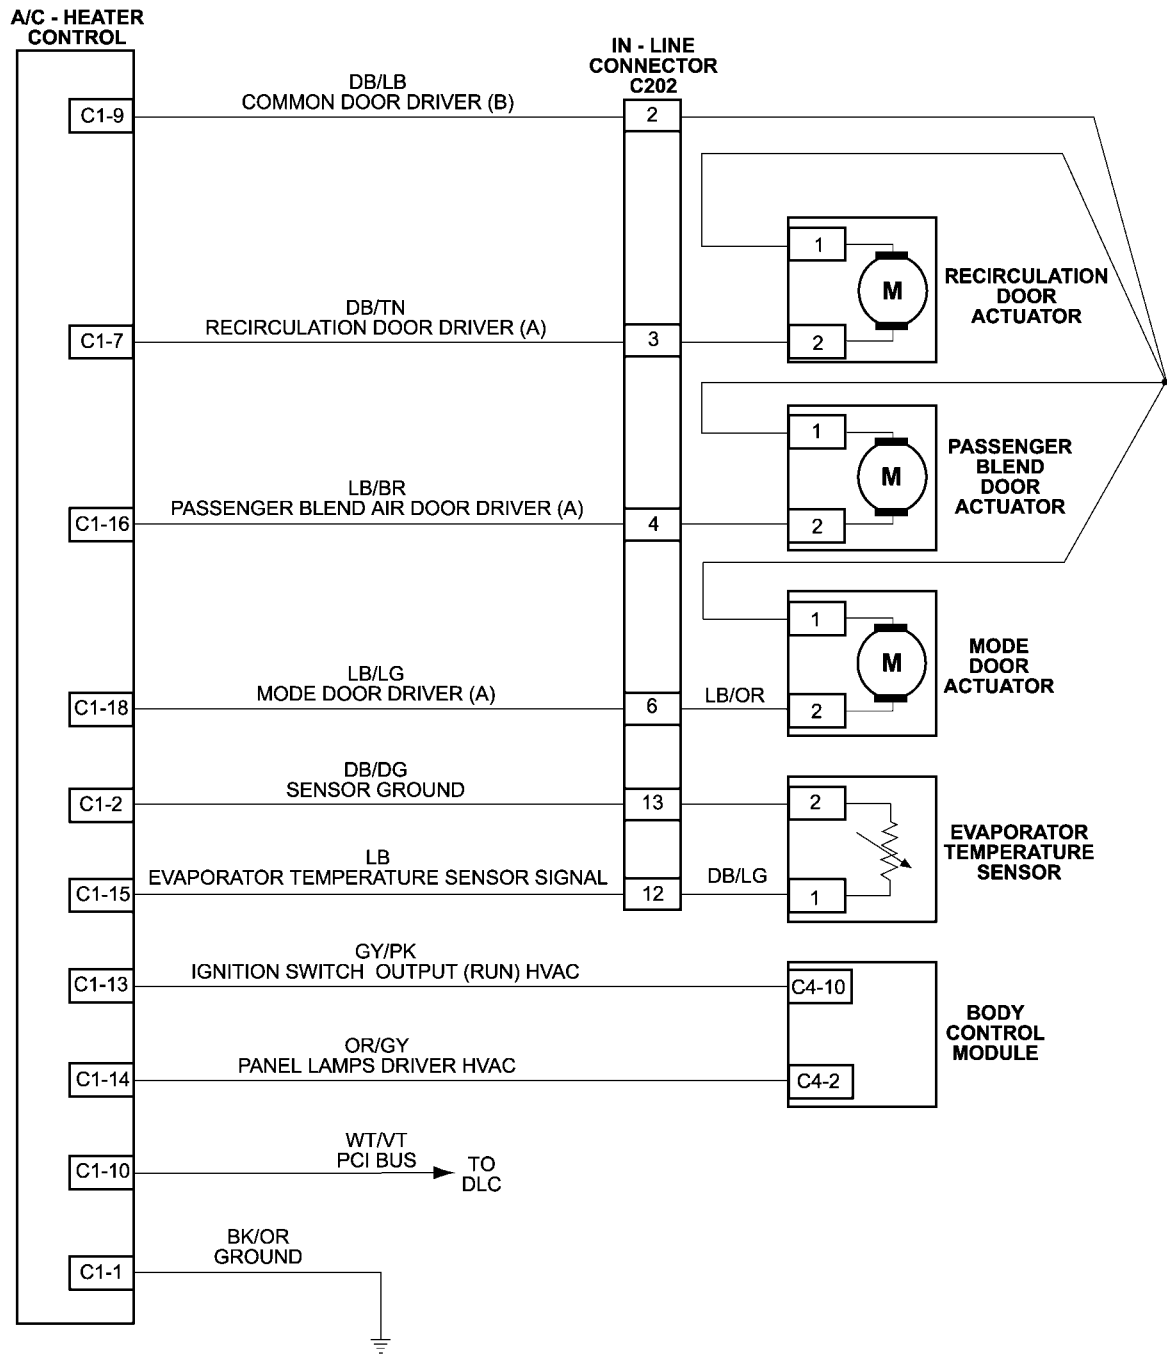


80f9dd78

SCHEMATIC DIAGRAMS


10.11 MANUAL TEMPERATURE CONTROLS (Continued)

10.11.2 BASE MANUAL TEMPERATURE CONTROL SYSTEM, RHD

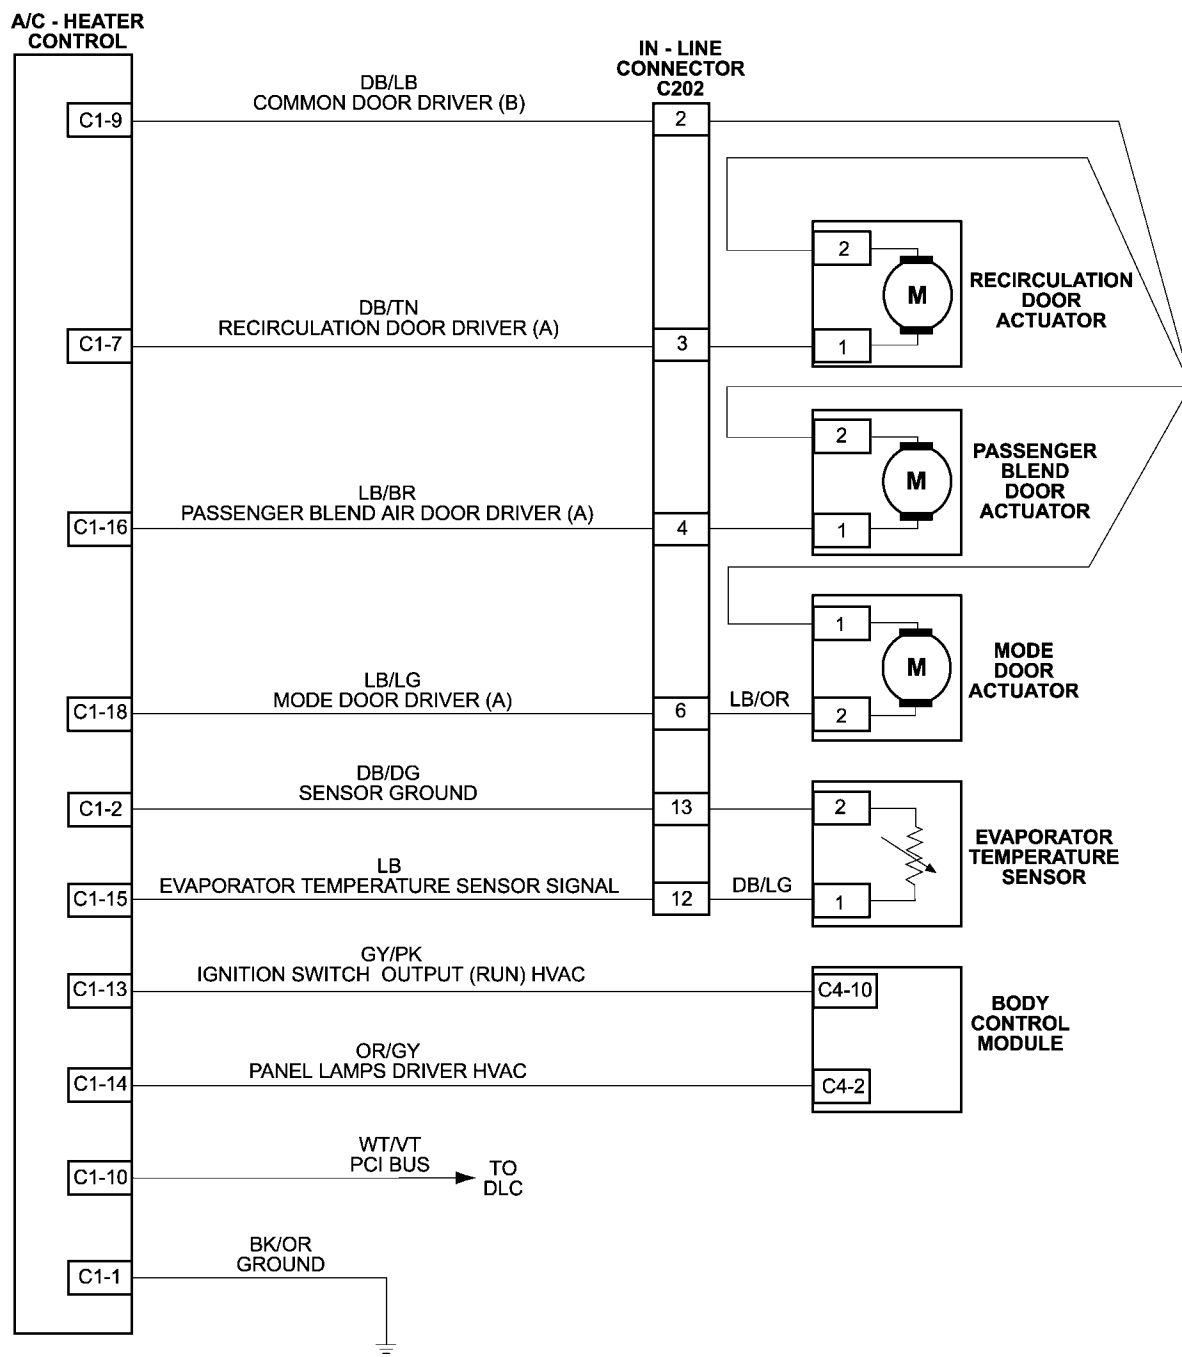

SCHEMATIC DIAGRAMS

10.11.3 DUAL-ZONE & THREE-ZONE (FRONT) MANUAL TEMPERATURE CONTROL SYSTEM, LHD

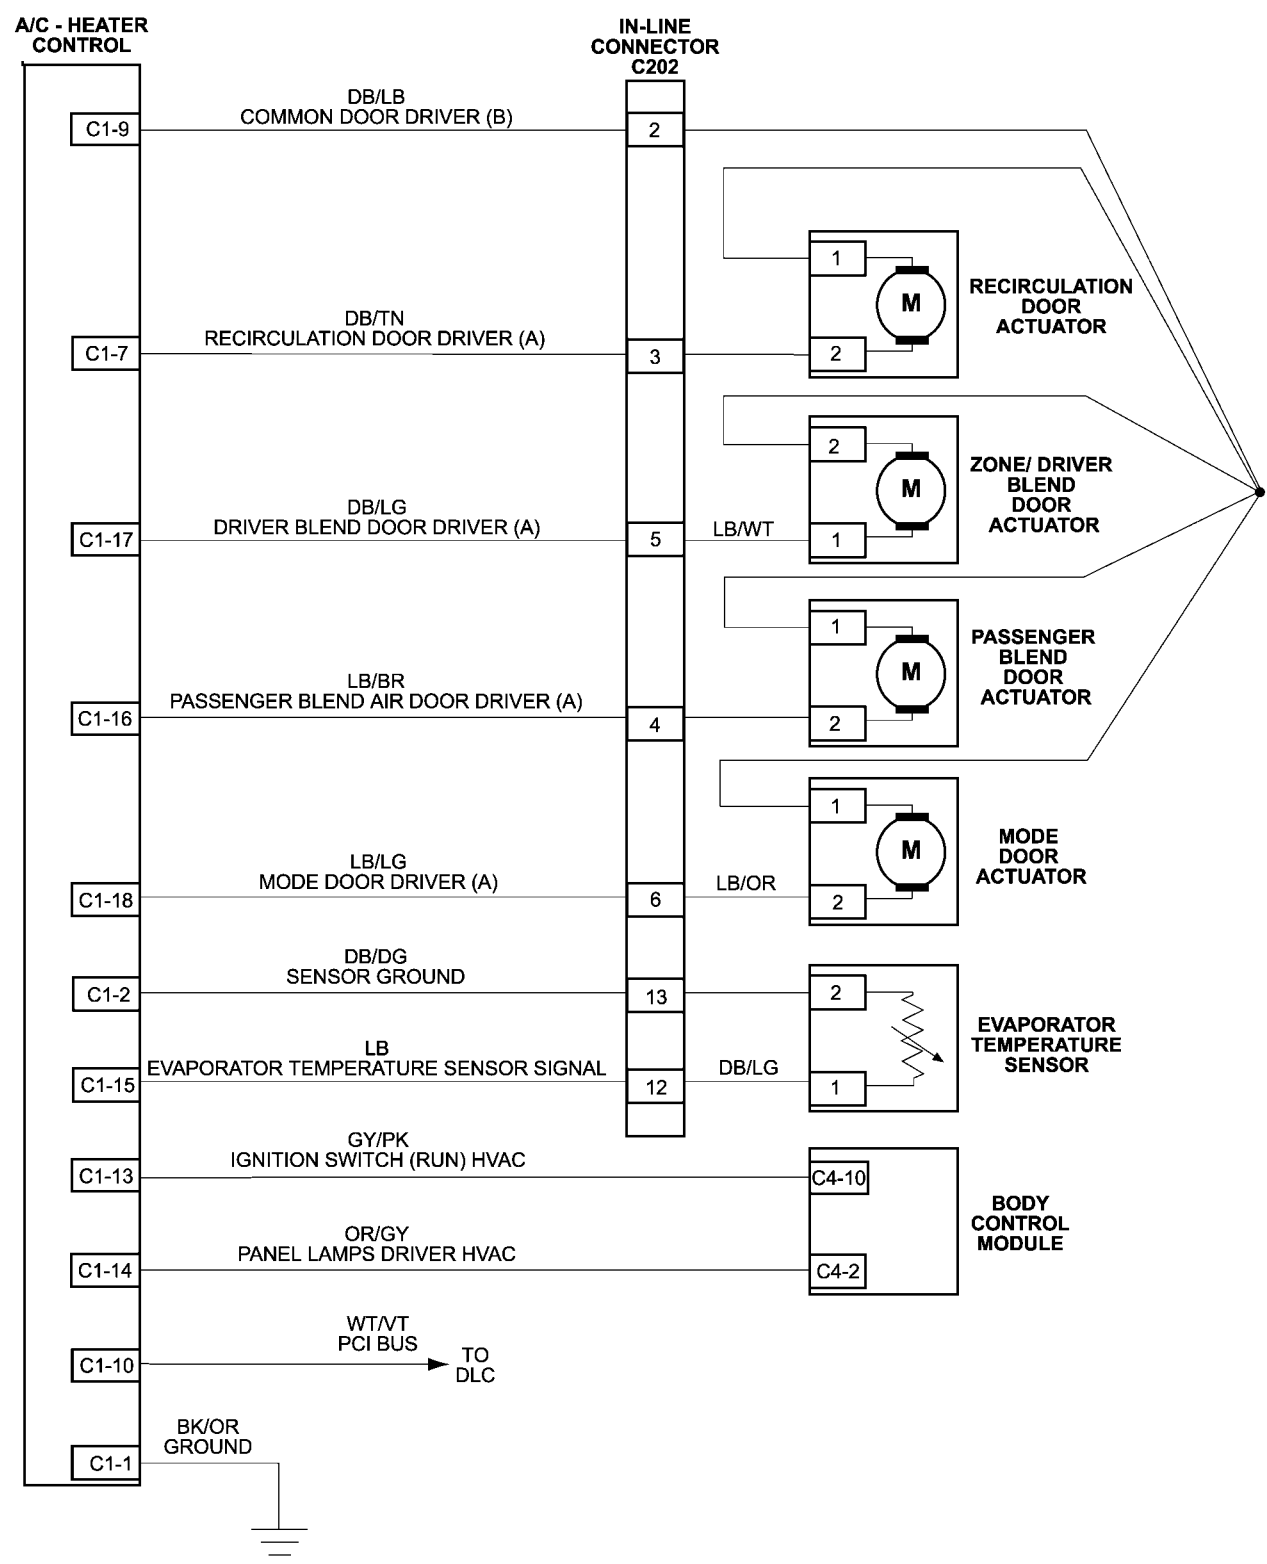


80f9ddad


SCHEMATIC DIAGRAMS

10.11 MANUAL TEMPERATURE CONTROLS (Continued)

10.11.4 DUAL-ZONE (FRONT) MANUAL TEMPERATURE CONTROL SYSTEM, RHD

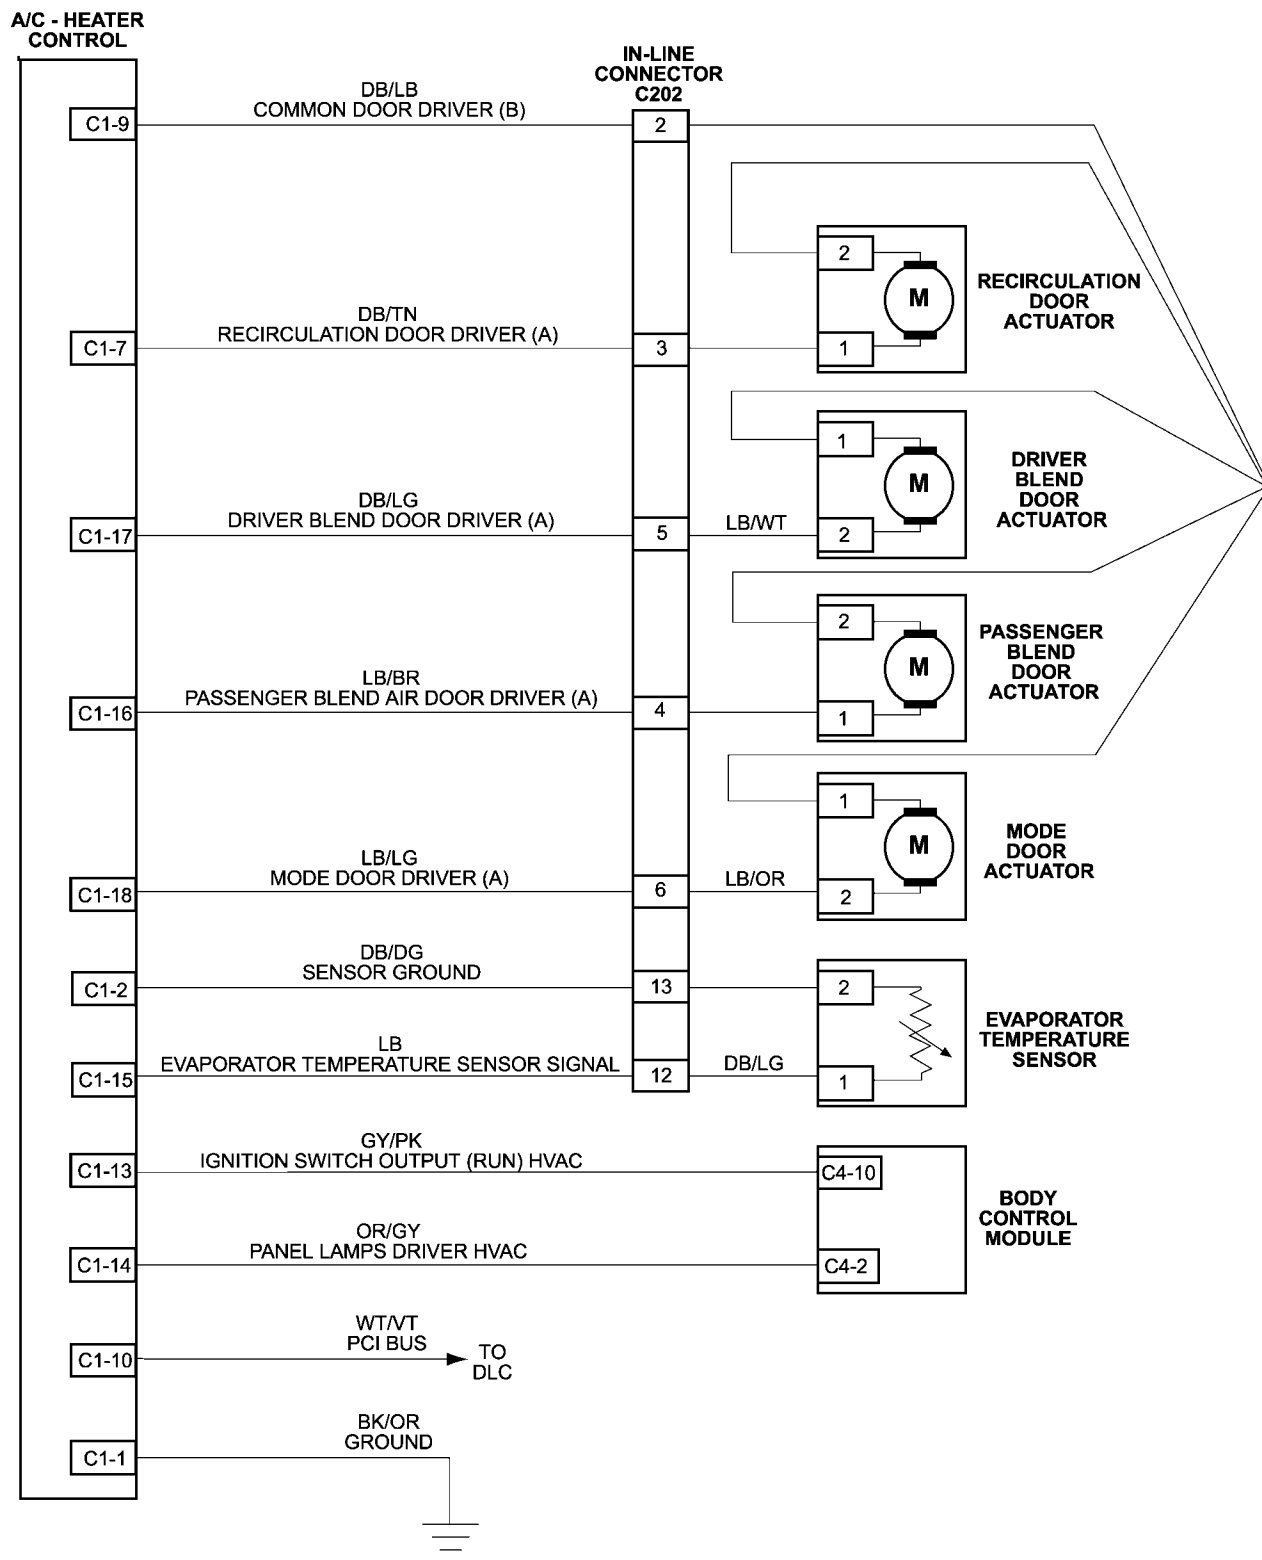

10.11.5 THREE ZONE REAR MANUAL TEMPERATURE CONTROL SYSTEM

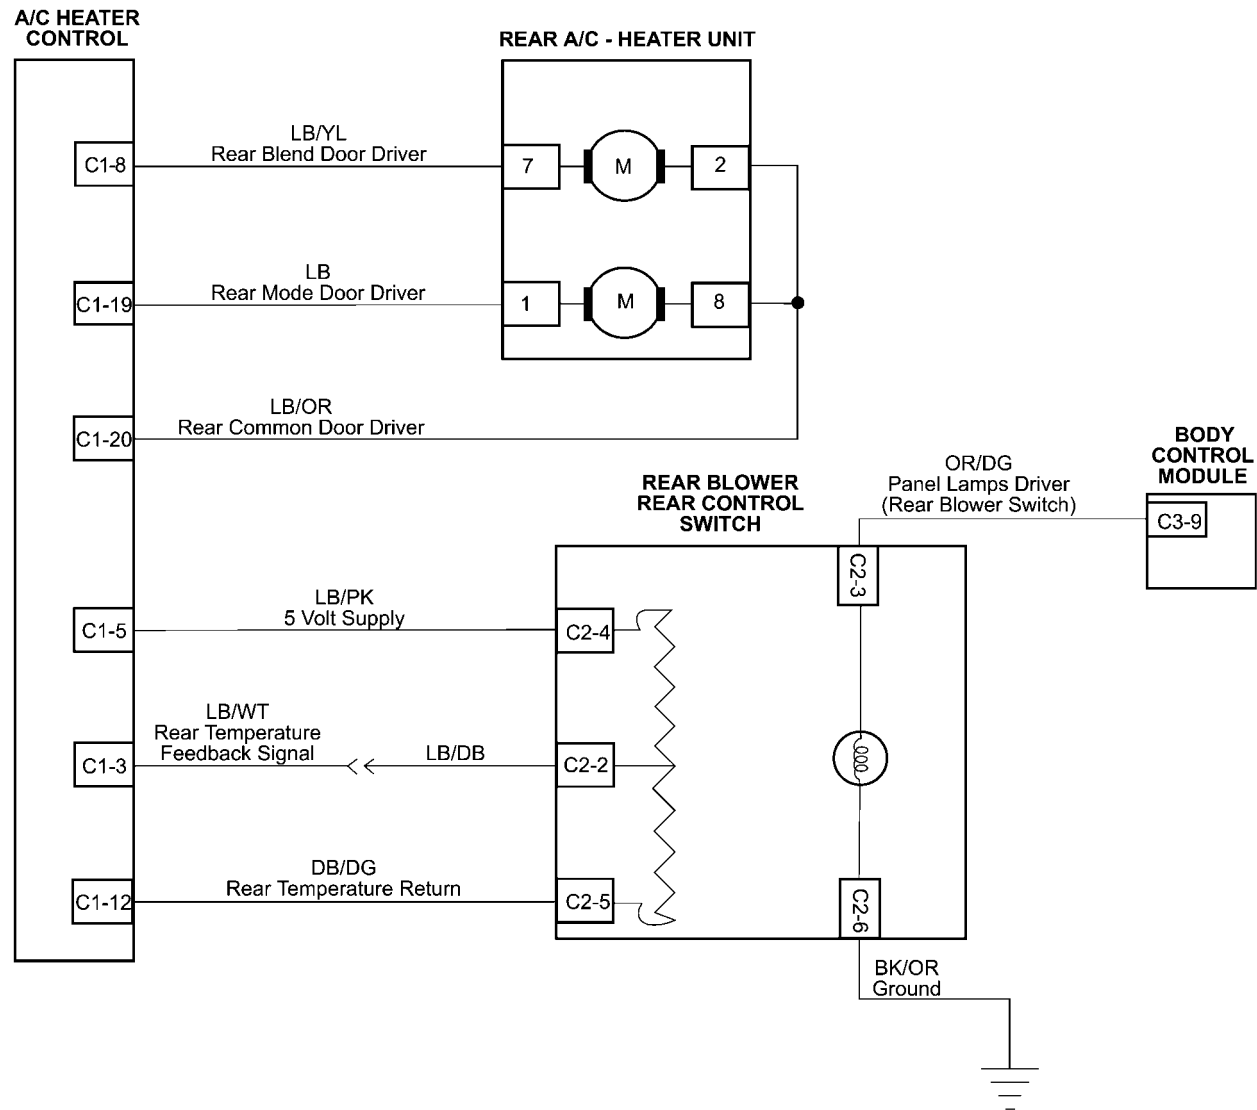


80d4e48b

SCHEMATIC DIAGRAMS


10.11 MANUAL TEMPERATURE CONTROLS (Continued)

10.11.6 FRONT BLOWER MOTOR - RS

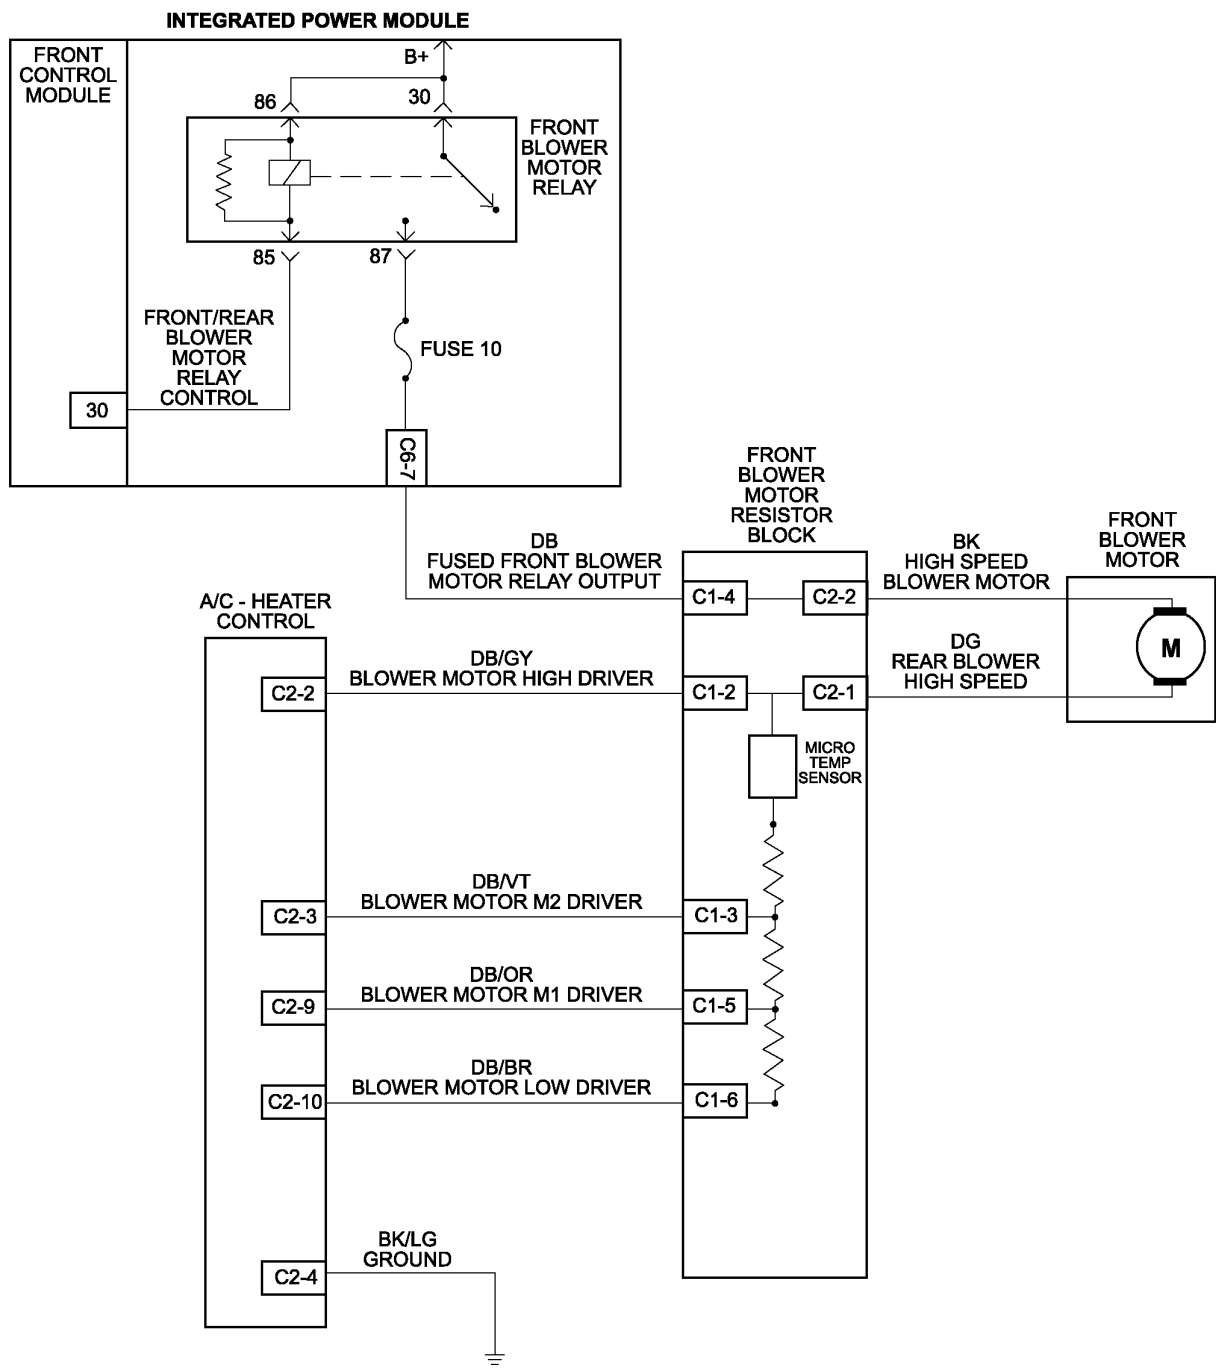

811f6fcb

10.11.7 FRONT BLOWER MOTOR - RG

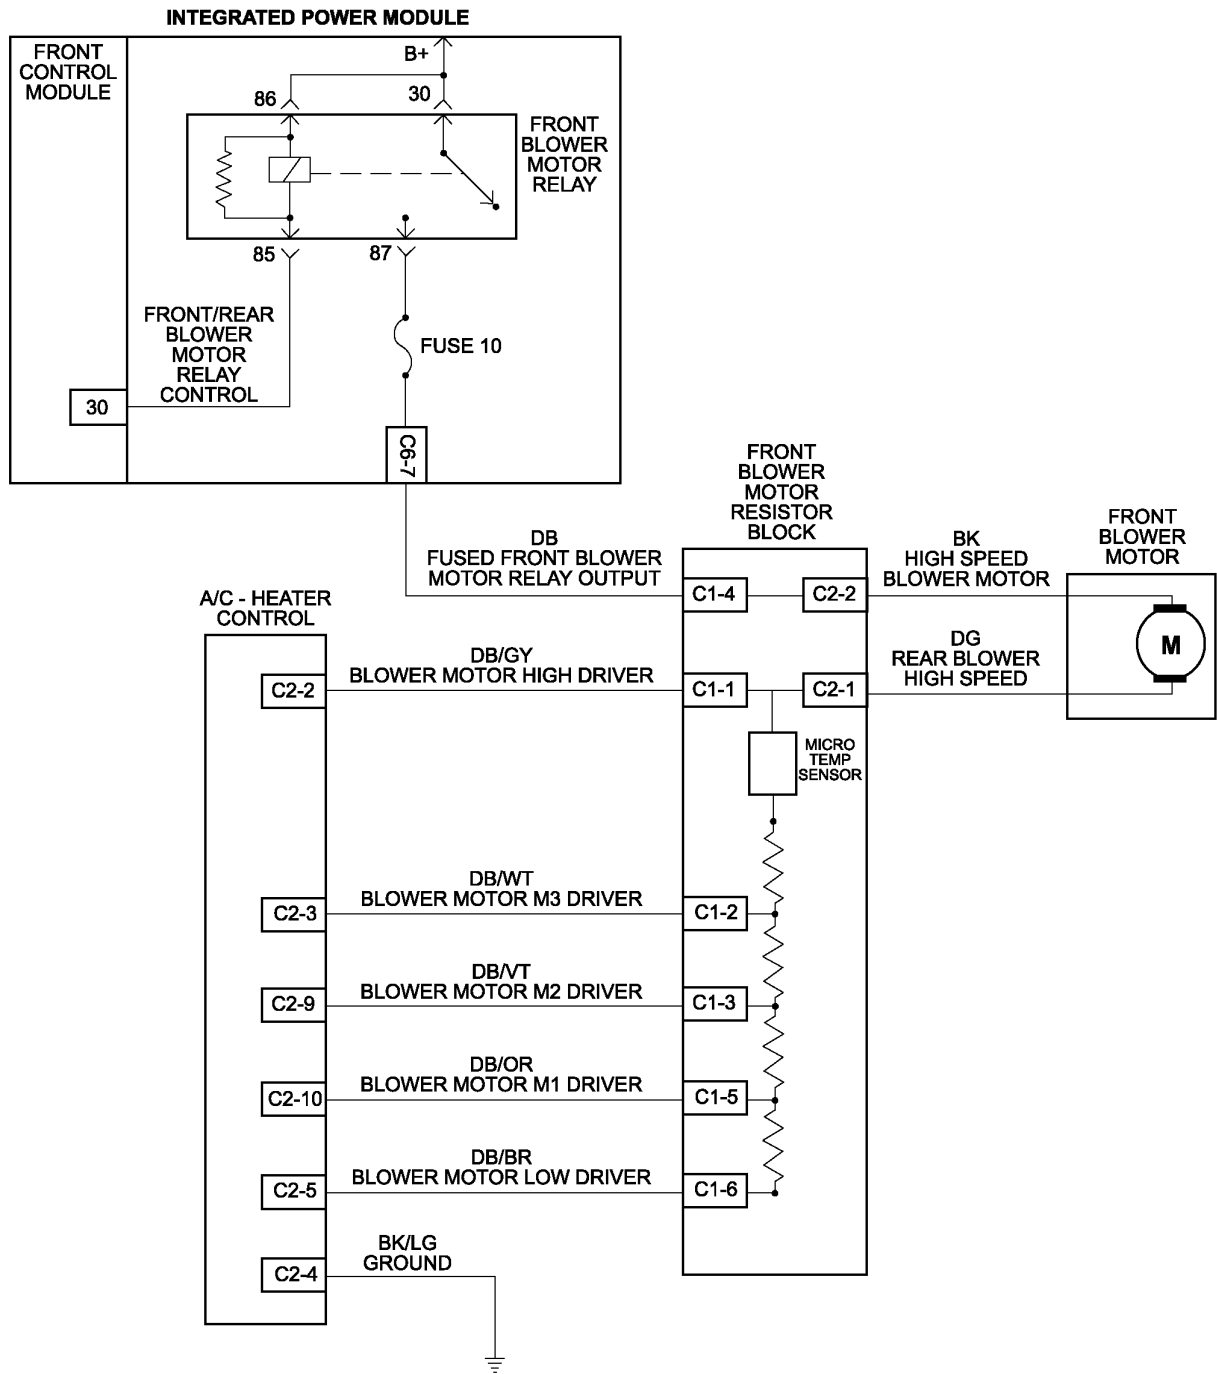


811f6fab

SCHEMATIC DIAGRAMS


10.11 MANUAL TEMPERATURE CONTROLS (Continued)

10.11.8 REAR BLOWER MOTOR

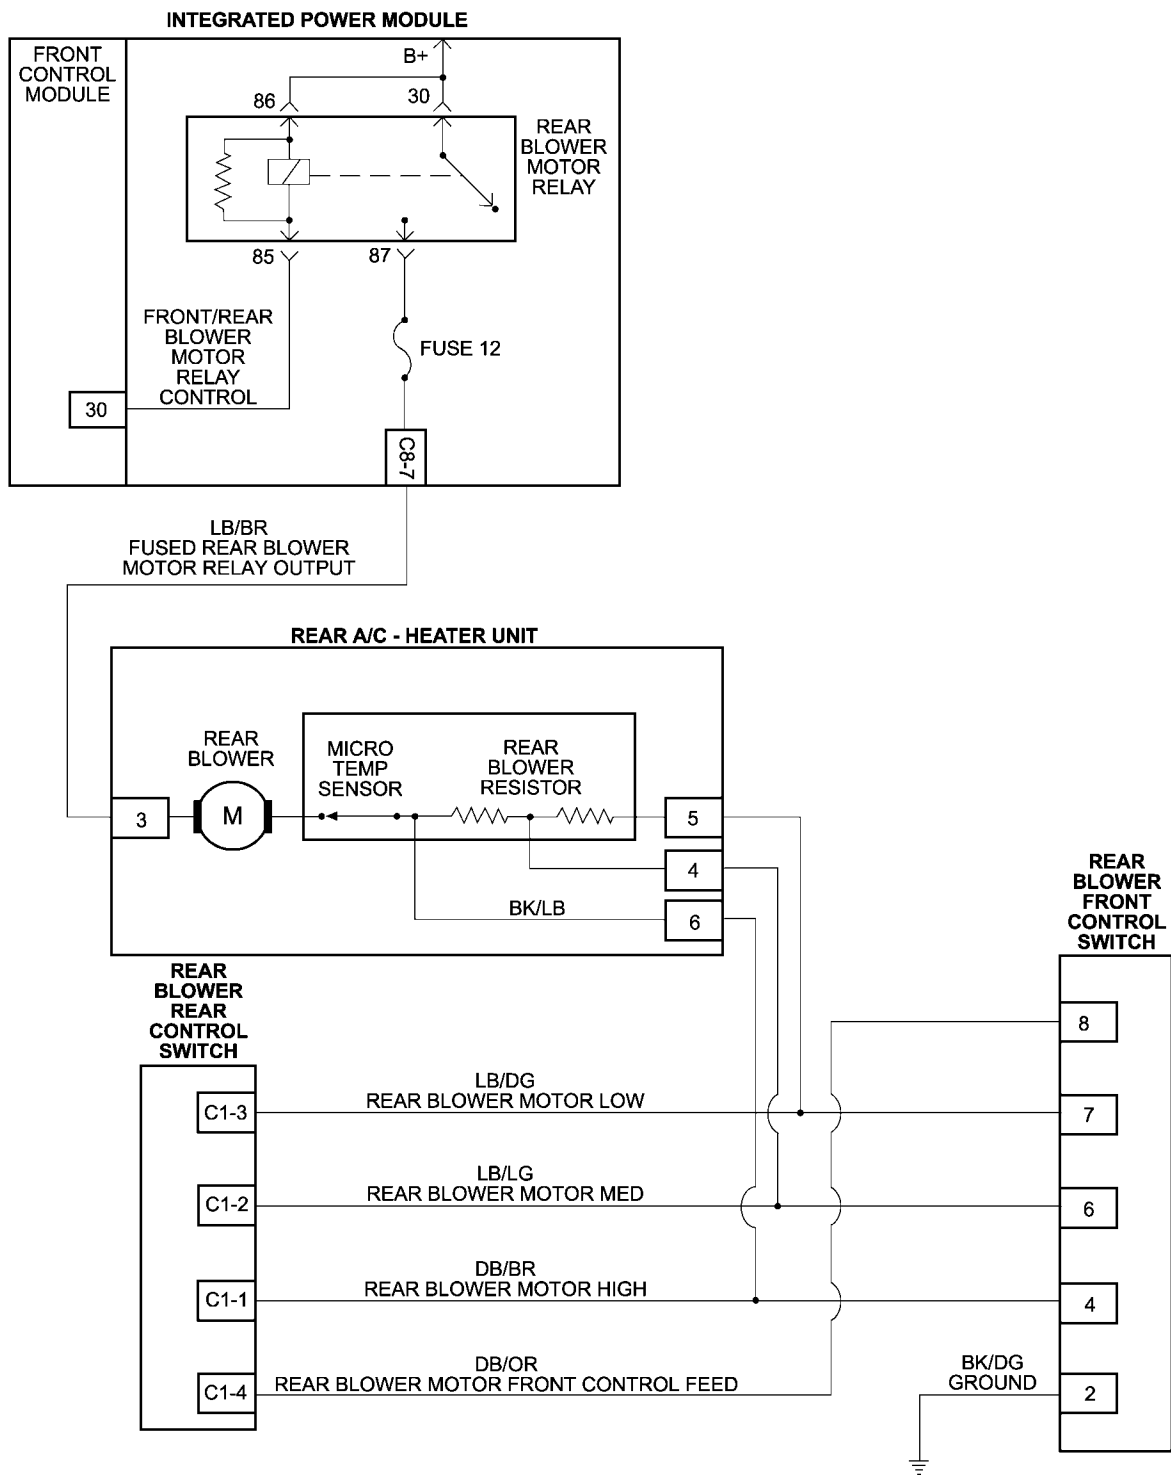


80f9ddf2

10.12 MEMORY SYSTEM

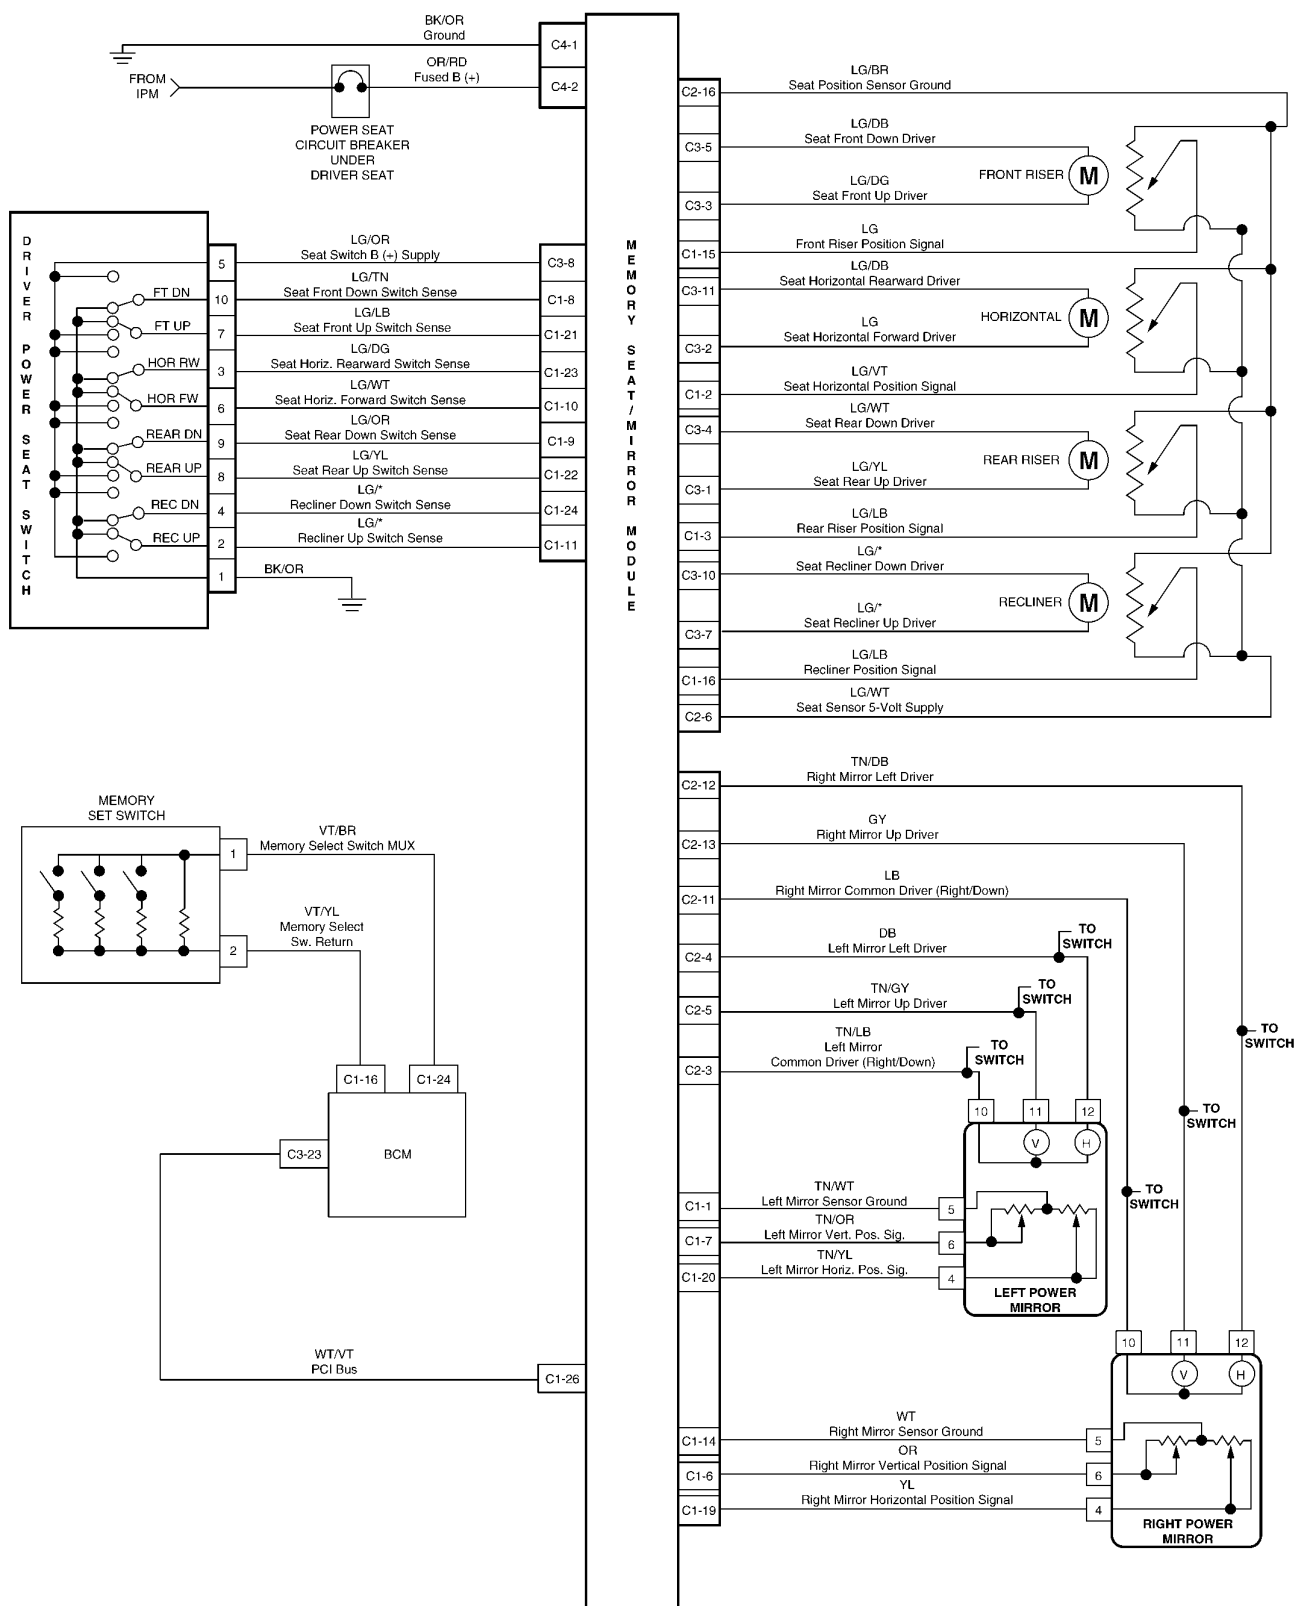


8120605c

10.13 OVERHEAD CONSOLE

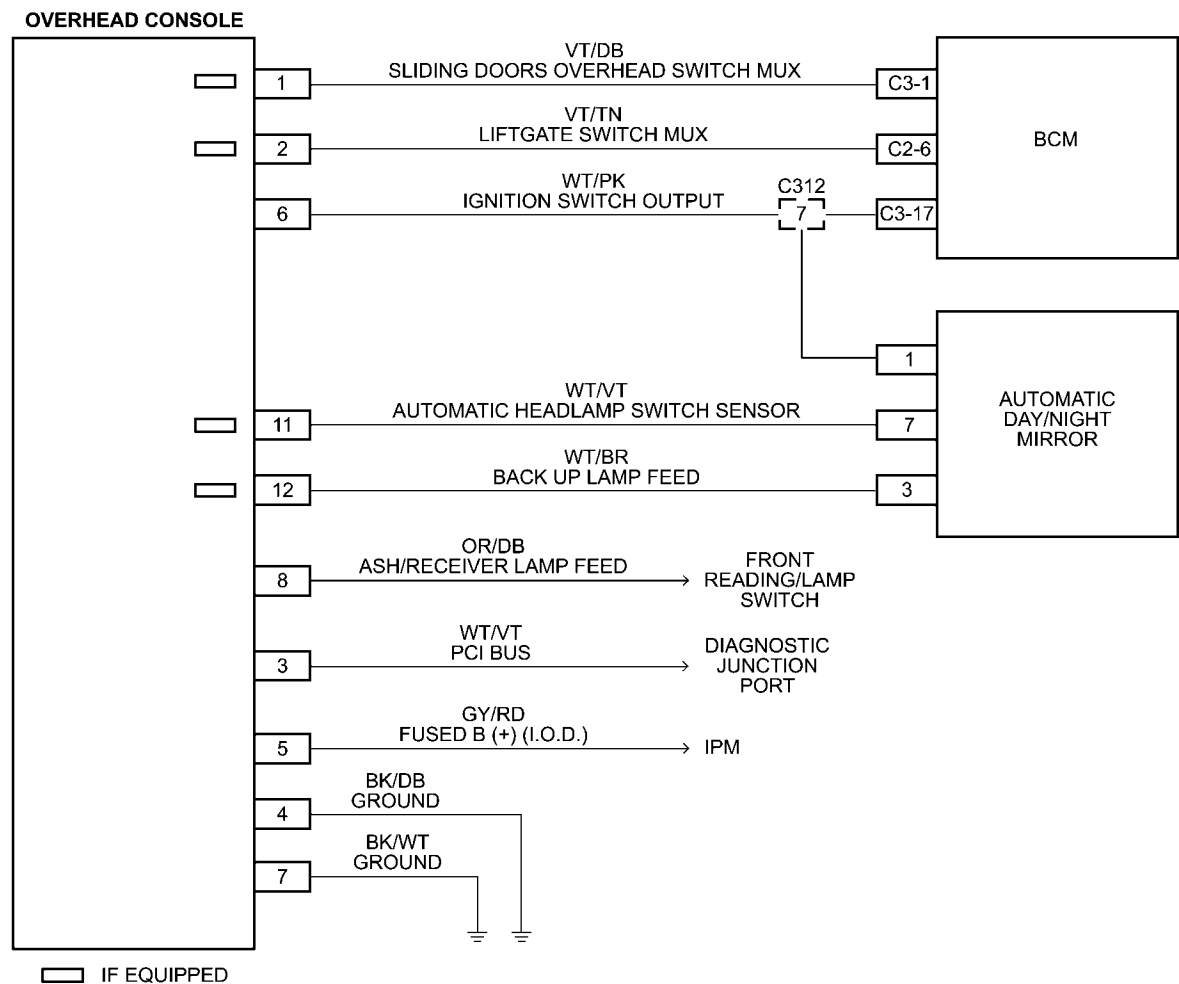

80af5332


10.14 POWER DOOR LOCKS/RKE

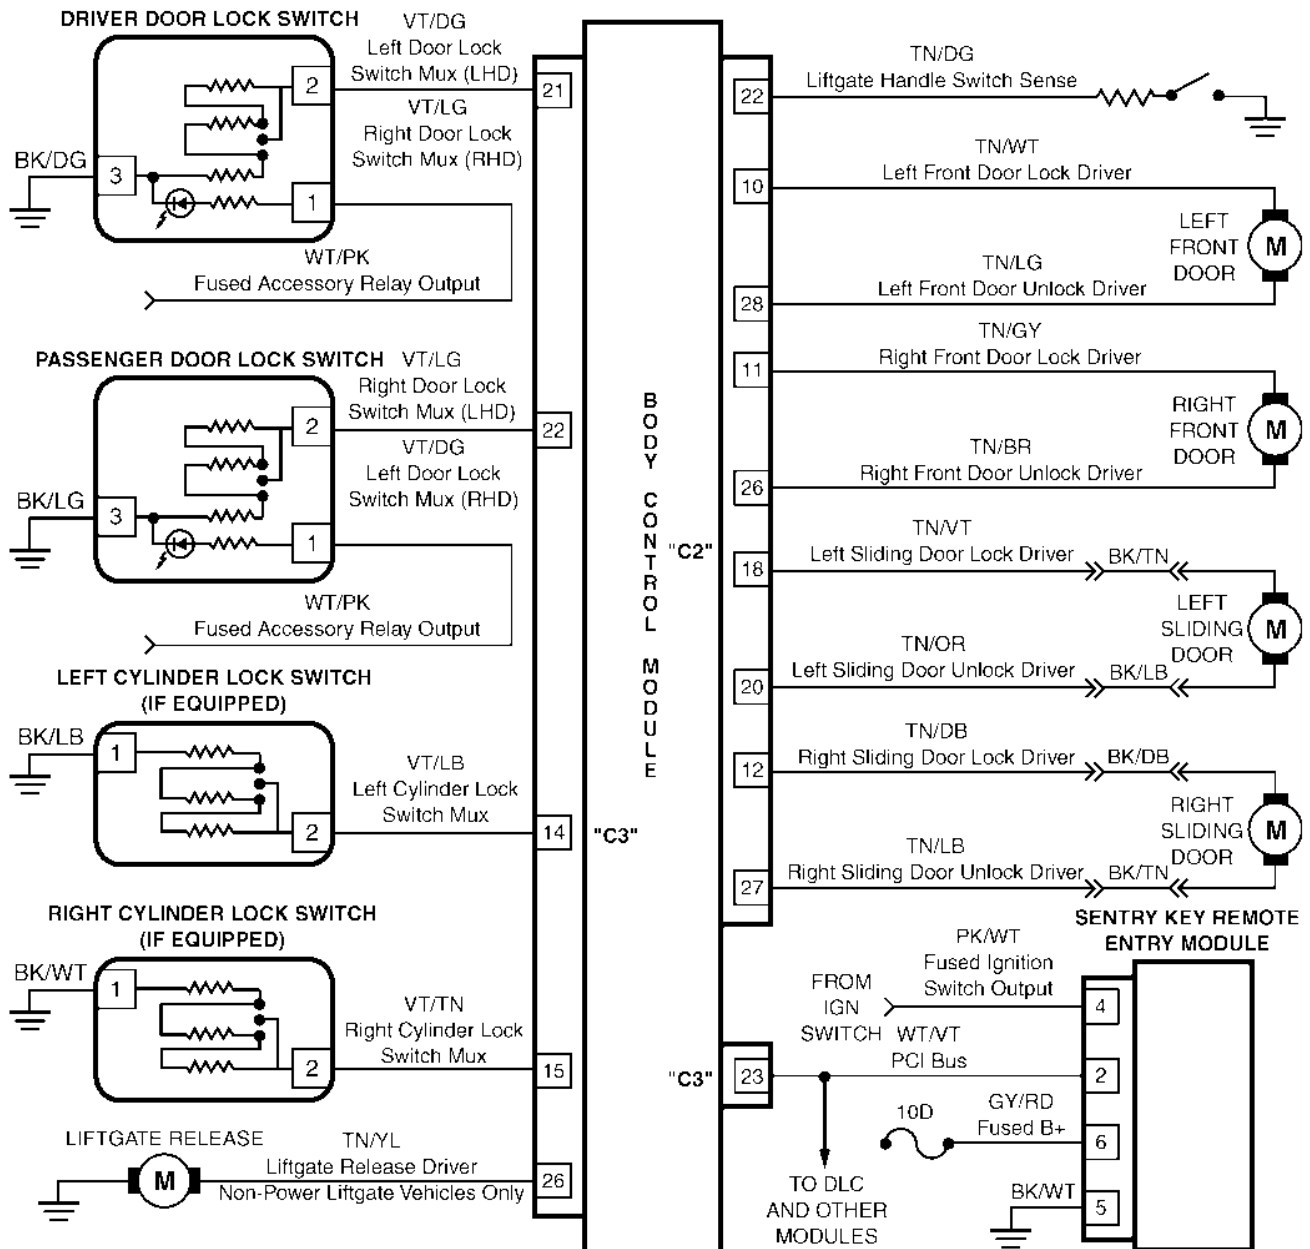


SCHEMATIC DIAGRAMS

10.15 POWER FOLDING MIRROR

10.15.1 LHD (EXPORT ONLY)

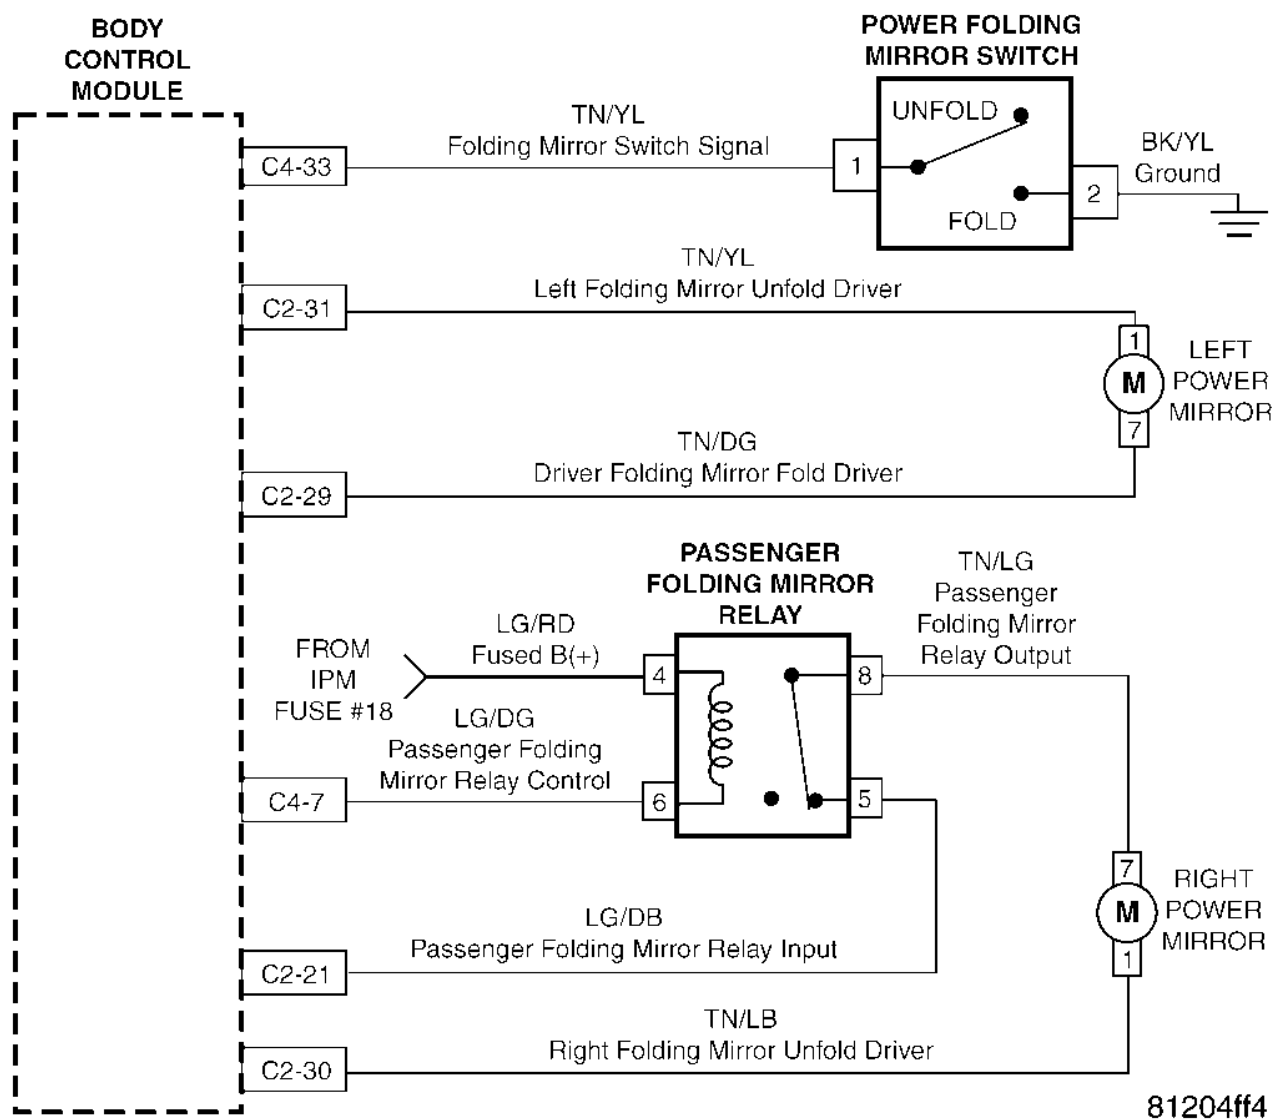


10.15.2 RHD (EXPORT ONLY)

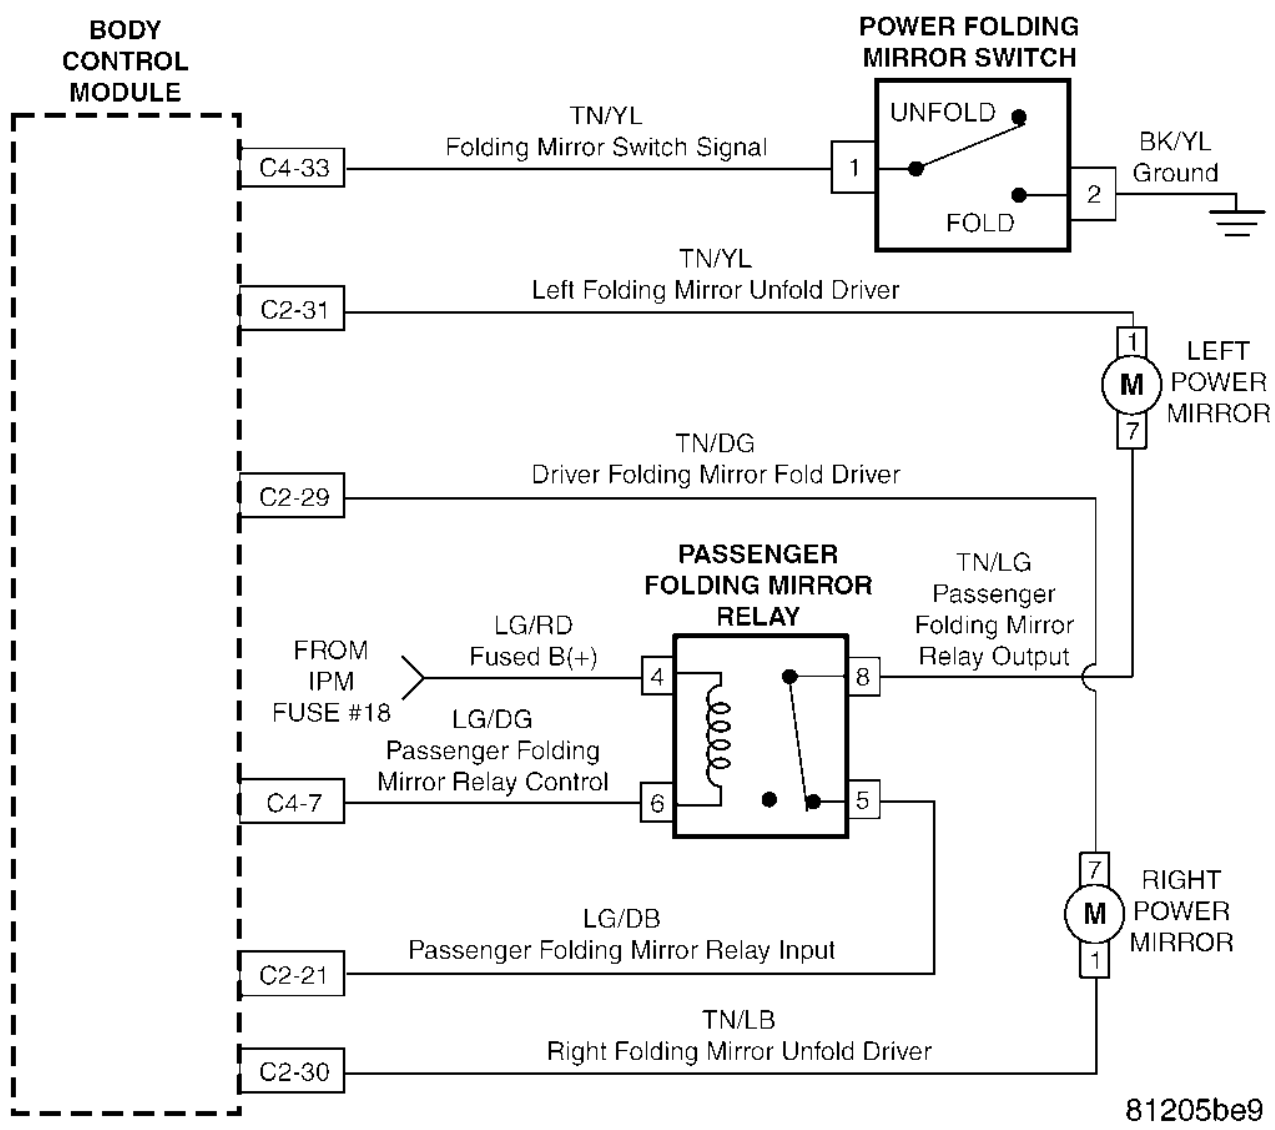


SCHEMATIC DIAGRAMS

10.16 POWER LIFTGATE SYSTEM

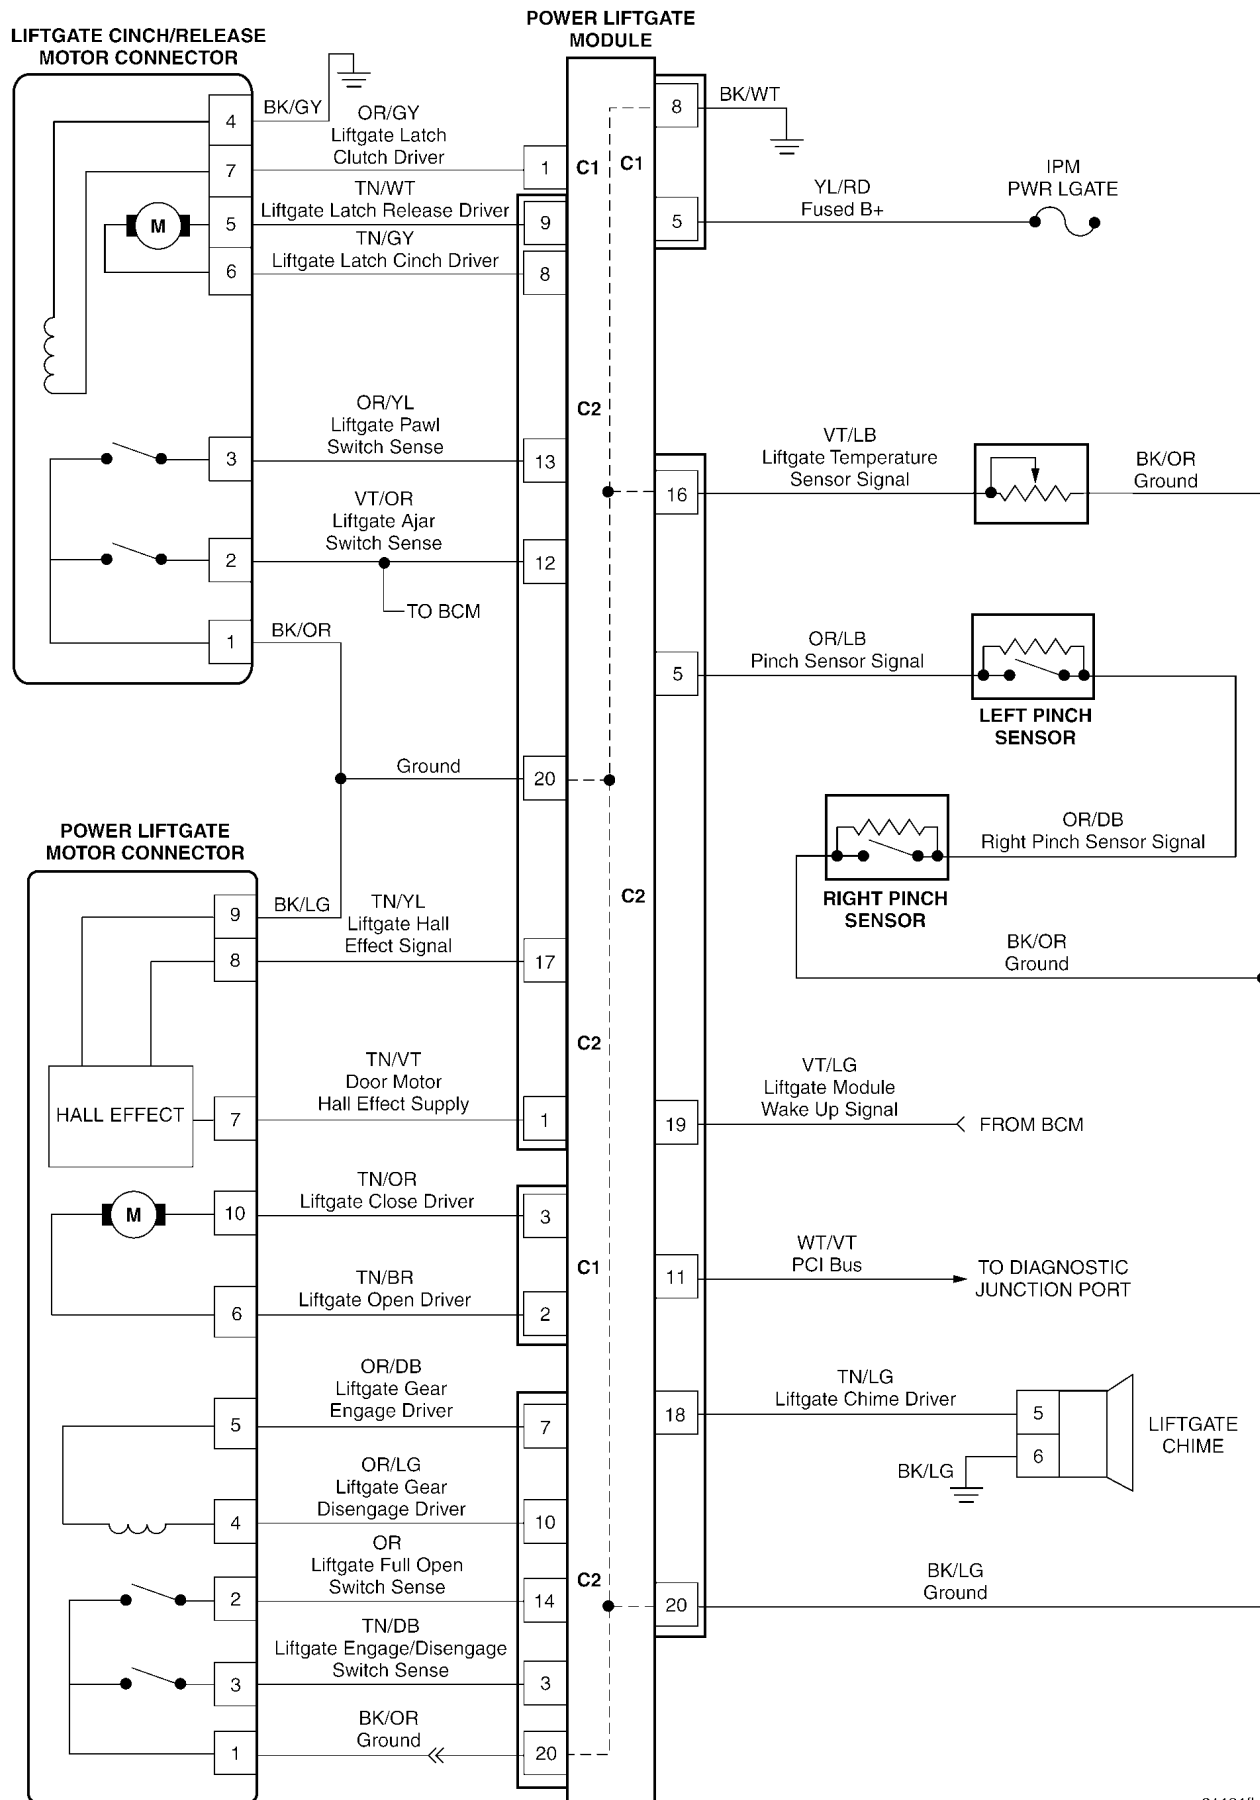

10.17 POWER SLIDING DOOR SYSTEM


10.17.1 LEFT POWER SLIDING DOOR

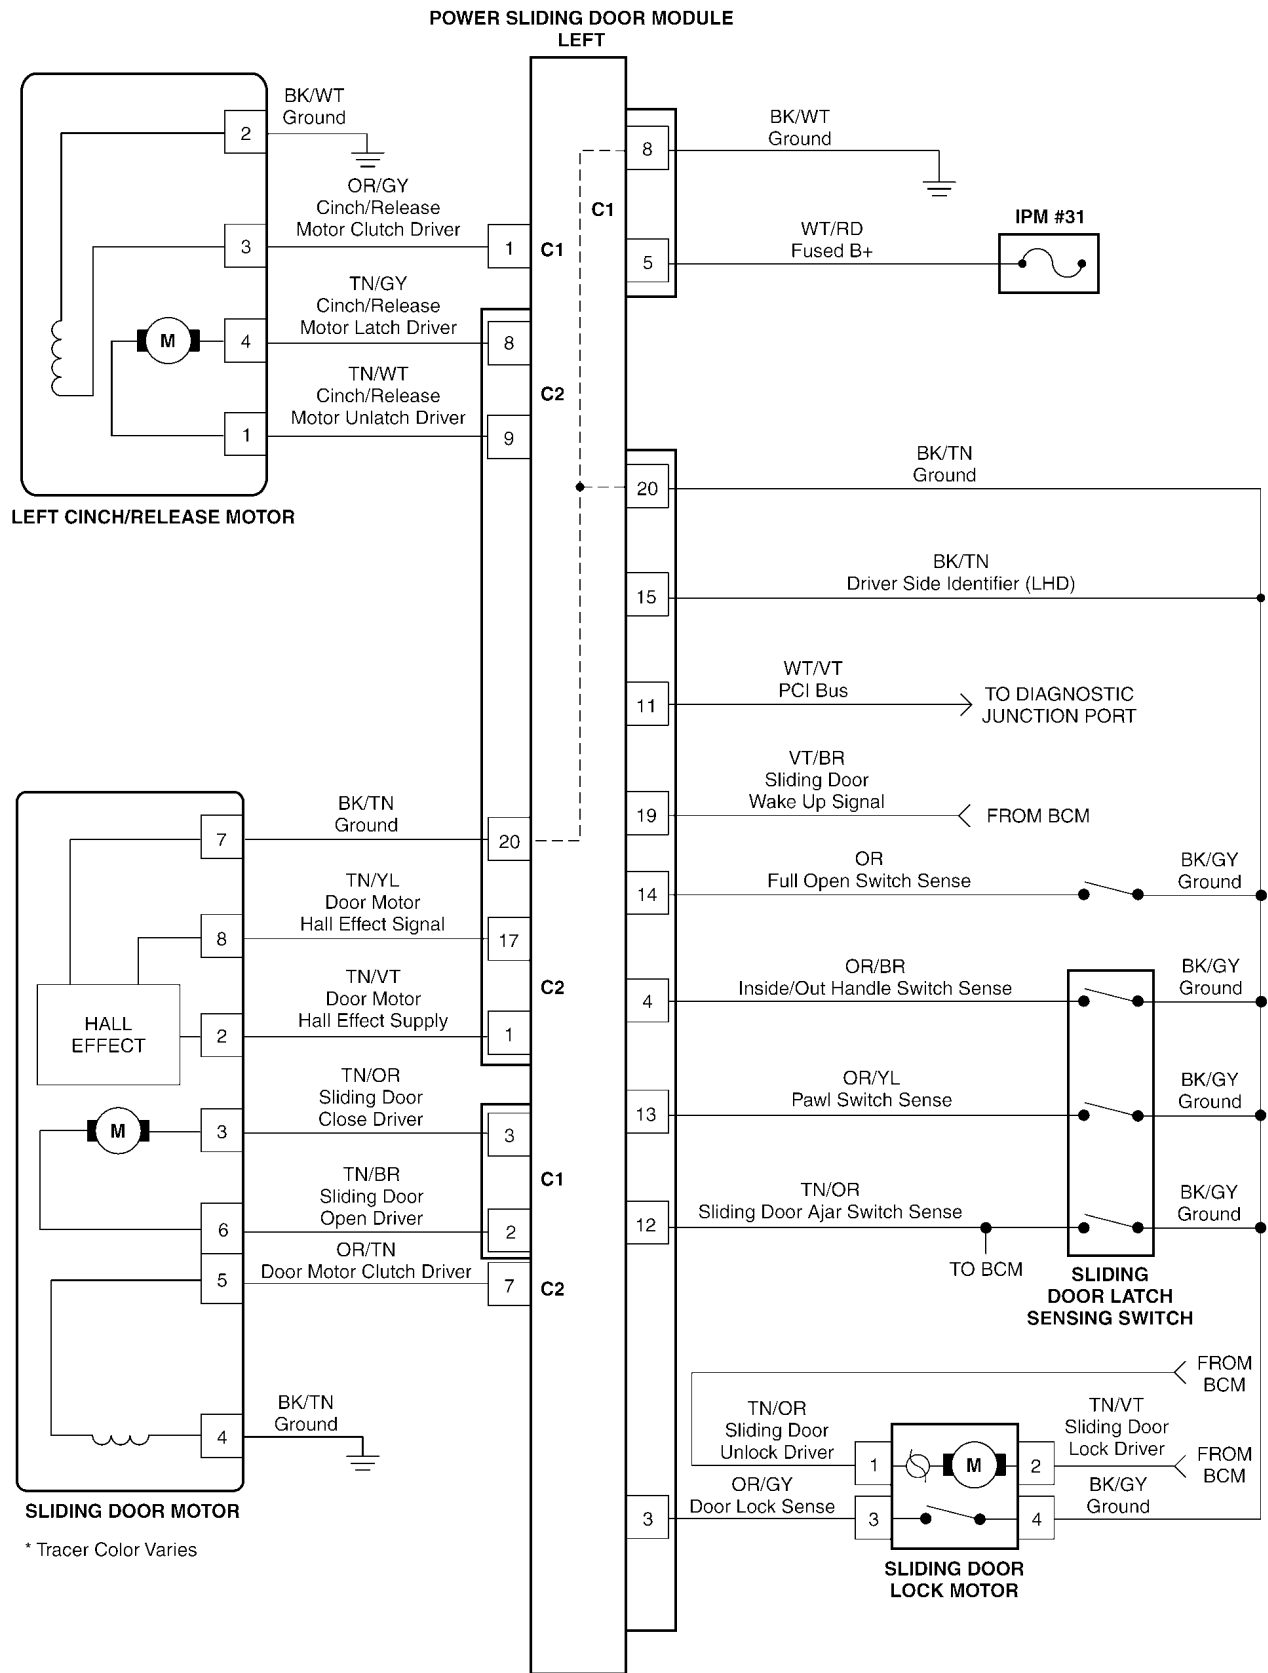


SCHEMATIC DIAGRAMS

10.17 POWER SLIDING DOOR SYSTEM (Continued)

10.17.2 RIGHT POWER SLIDING DOOR

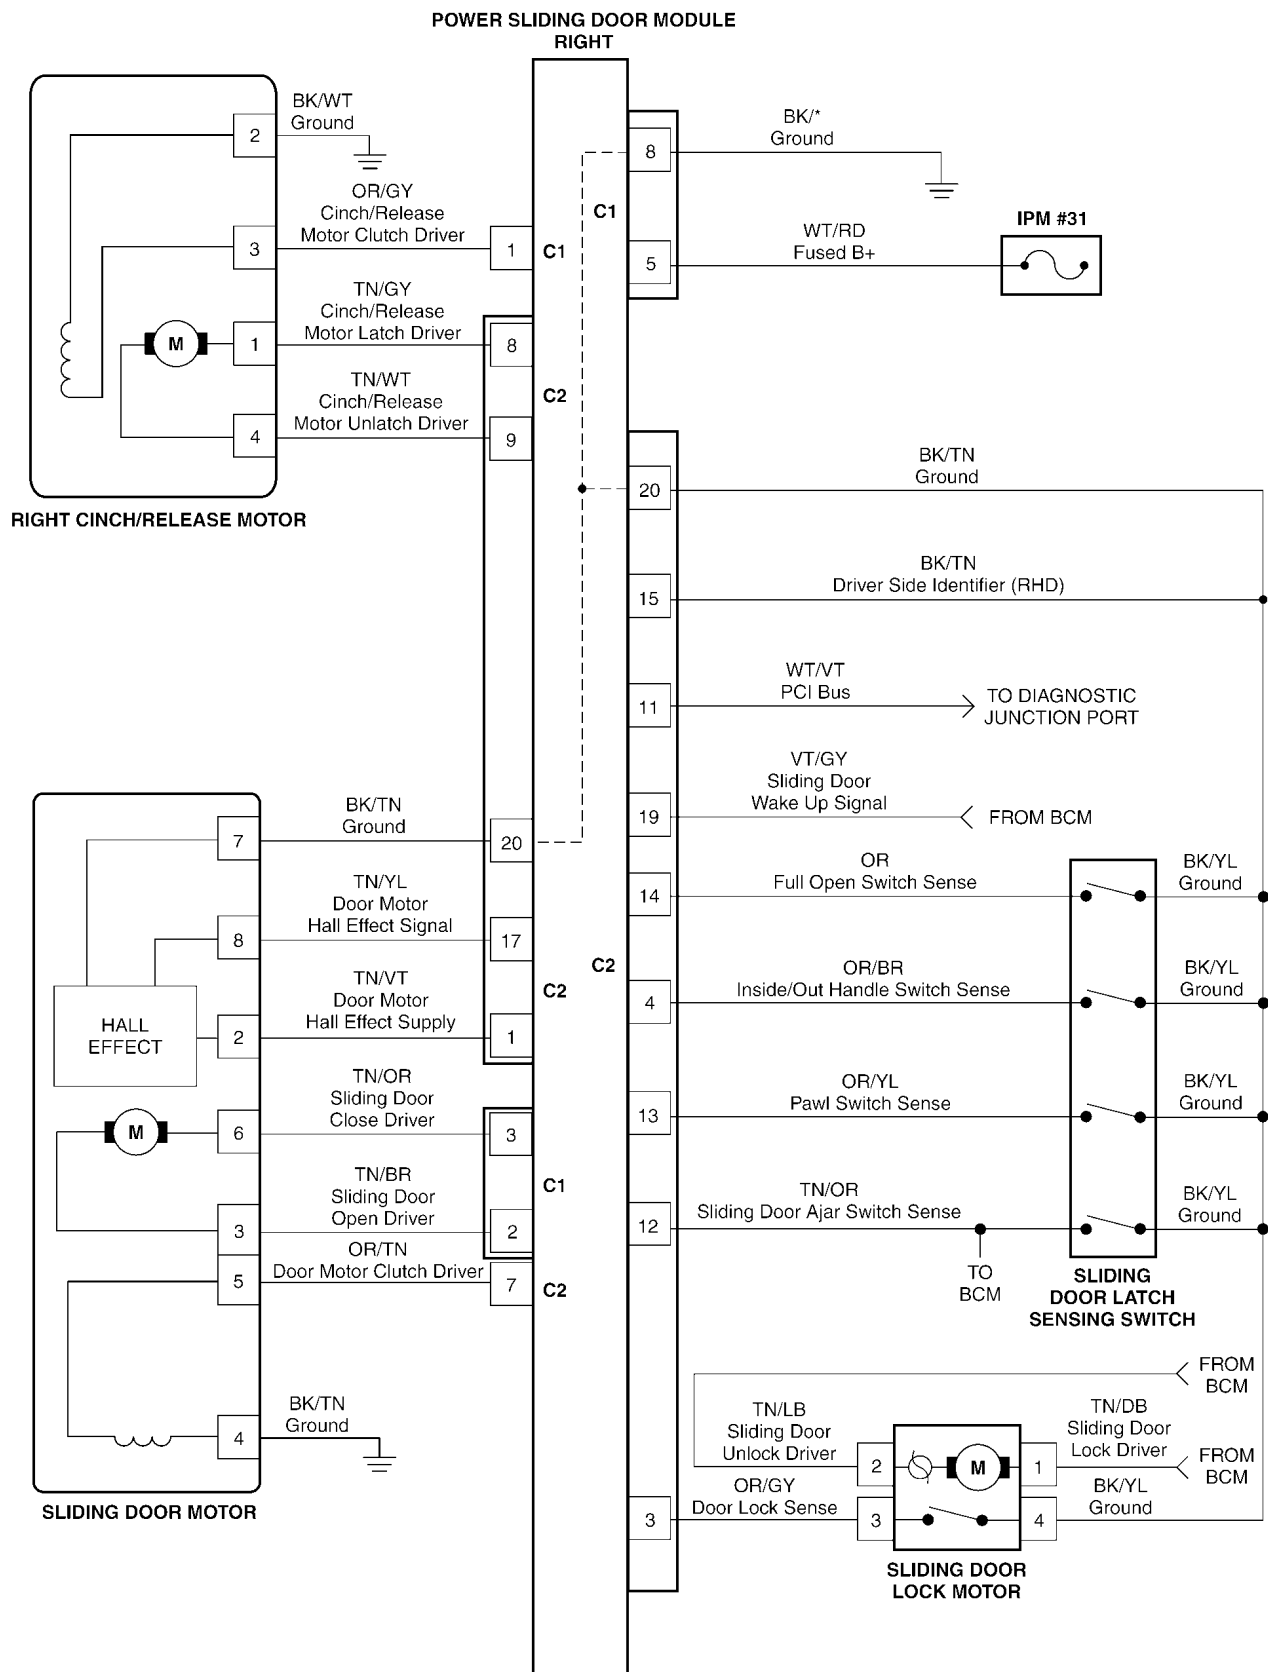


10.18 POWER SLIDING DOOR AND LIFTGATE SWITCHES

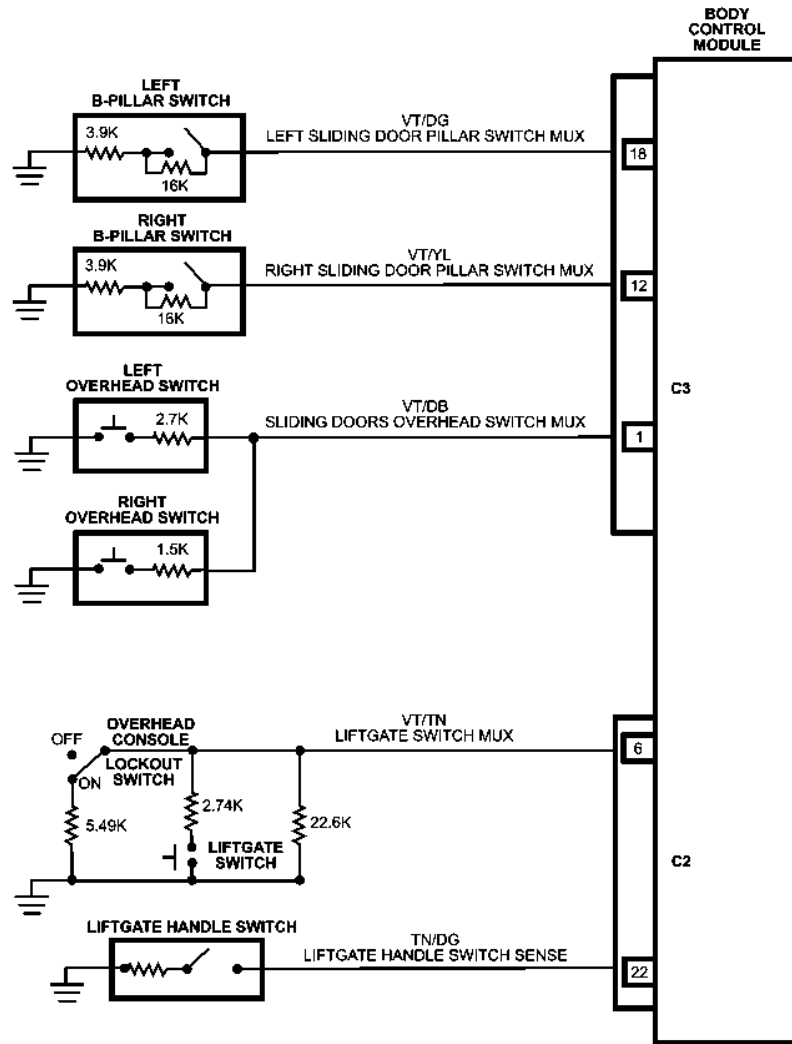

81167dce

SCHEMATIC DIAGRAMS

10.19 REAR DEFOG/HEATED MIRROR

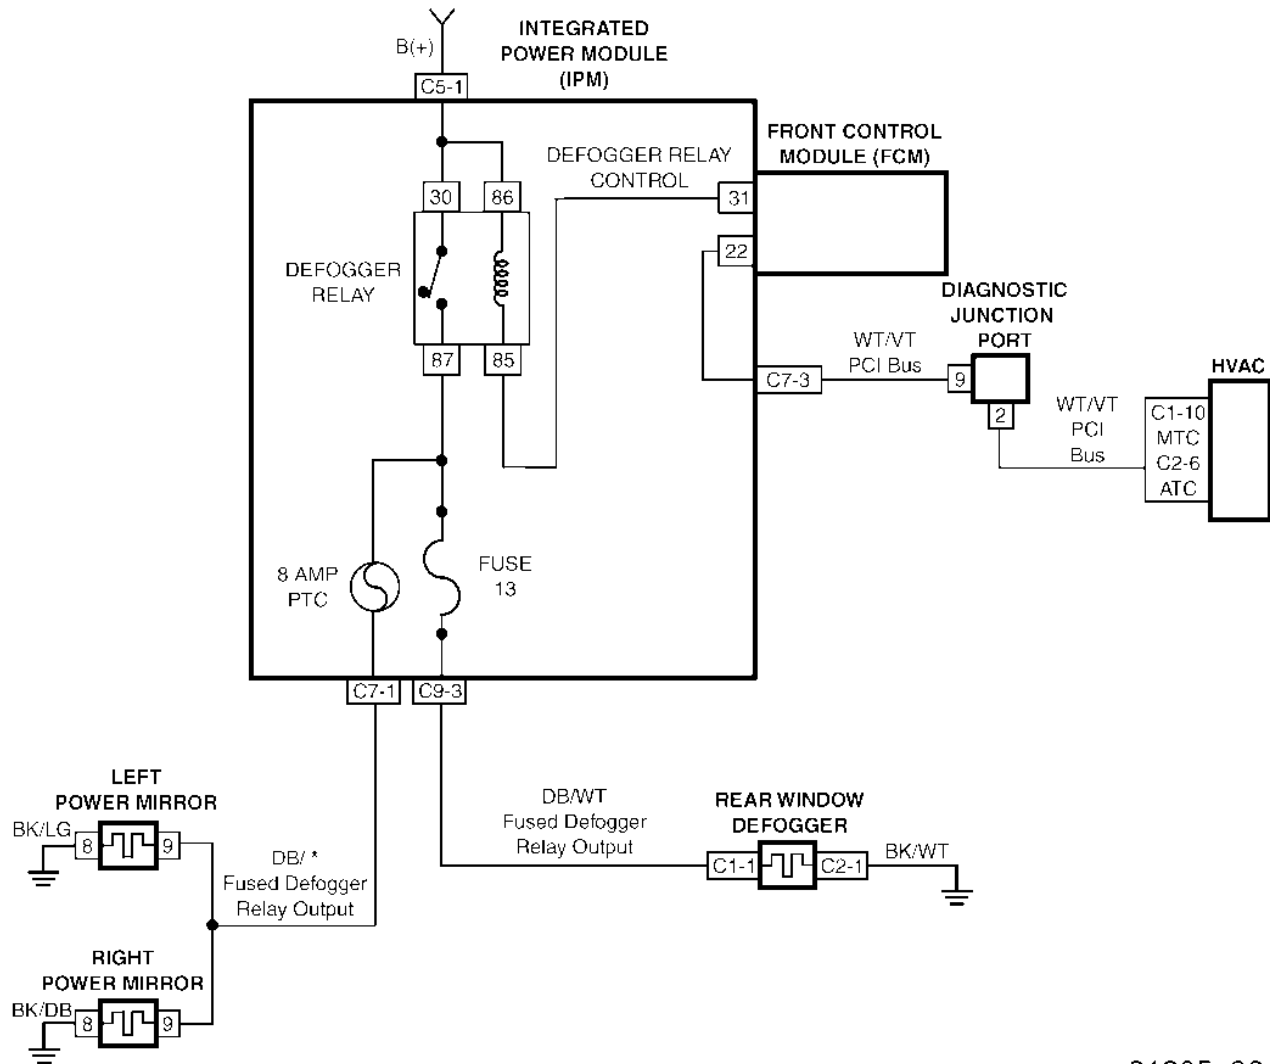




SCHEMATIC DIAGRAMS


10.20 VEHICLE THEFT SECURITY SYSTEM (Continued)

10.20.1 THATCHAM ALARM SYSTEM (EXPORT ONLY)

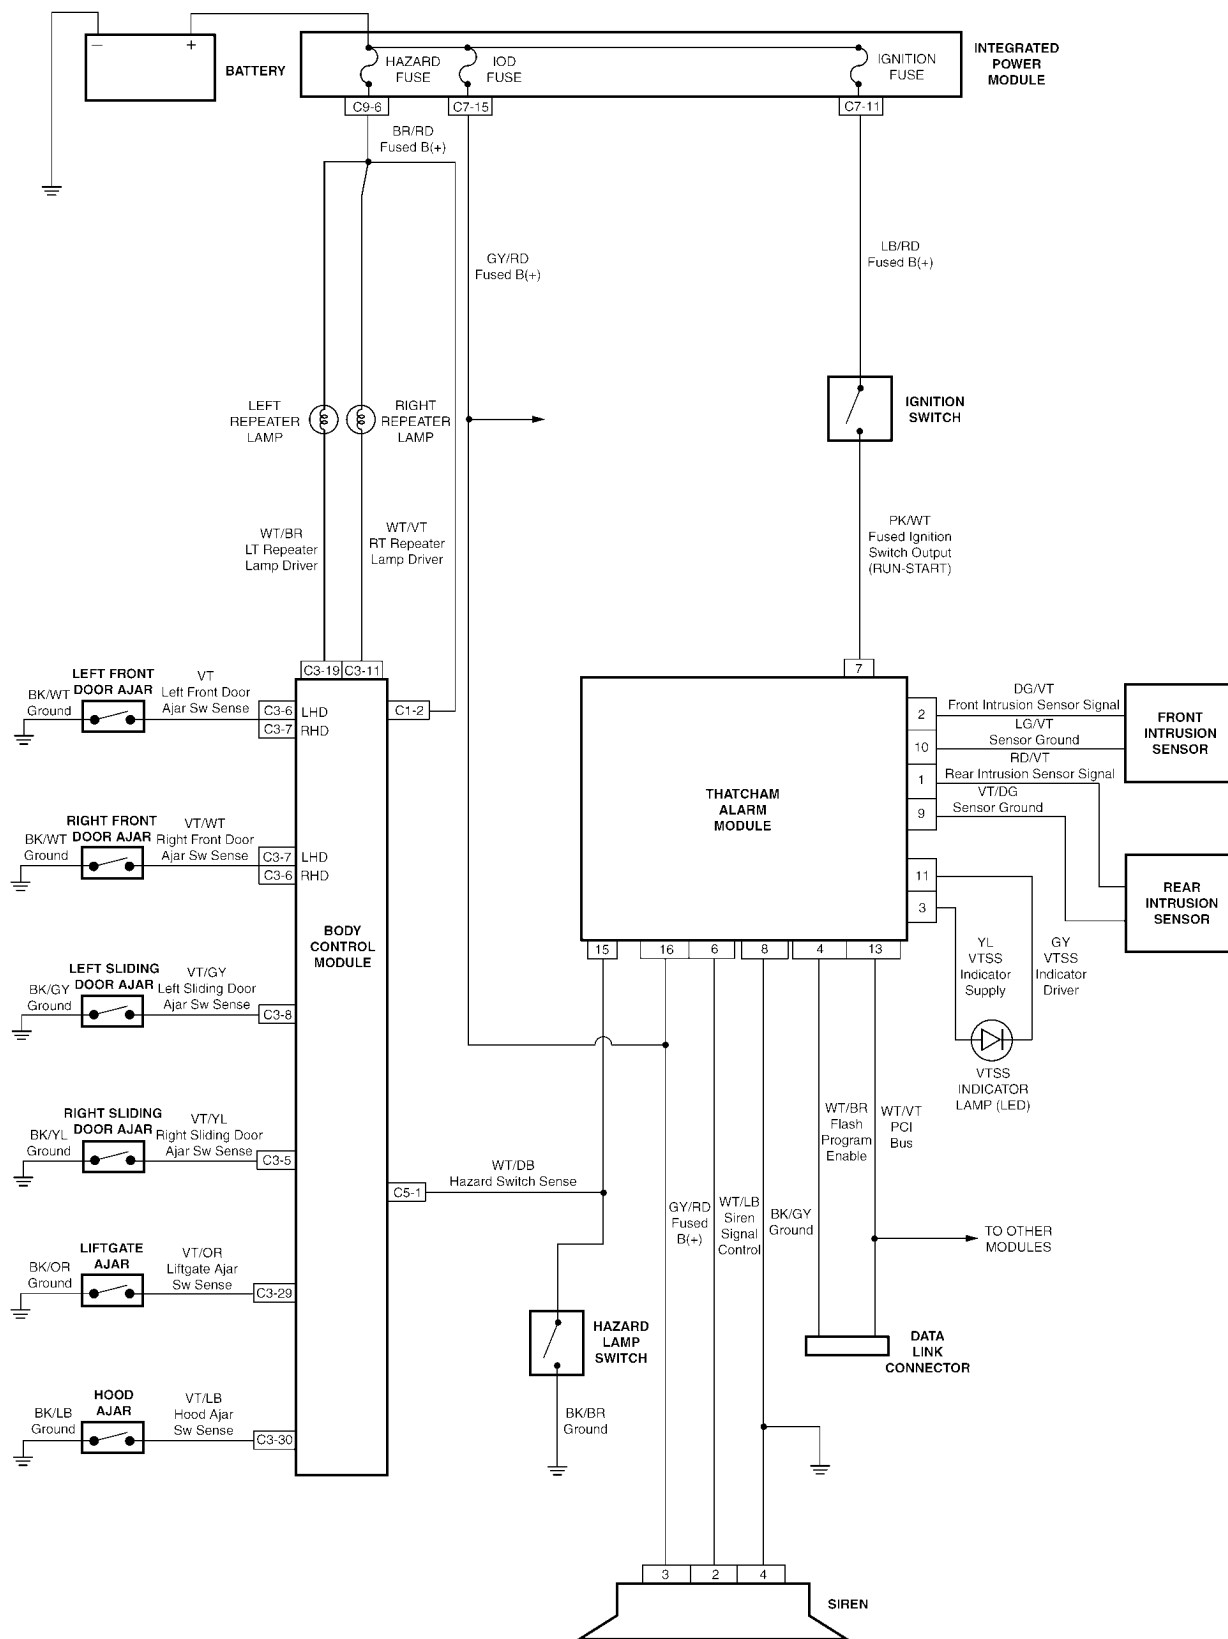

SCHEMATIC DIAGRAMS

10.21 WIPERS - FRONT AND REAR

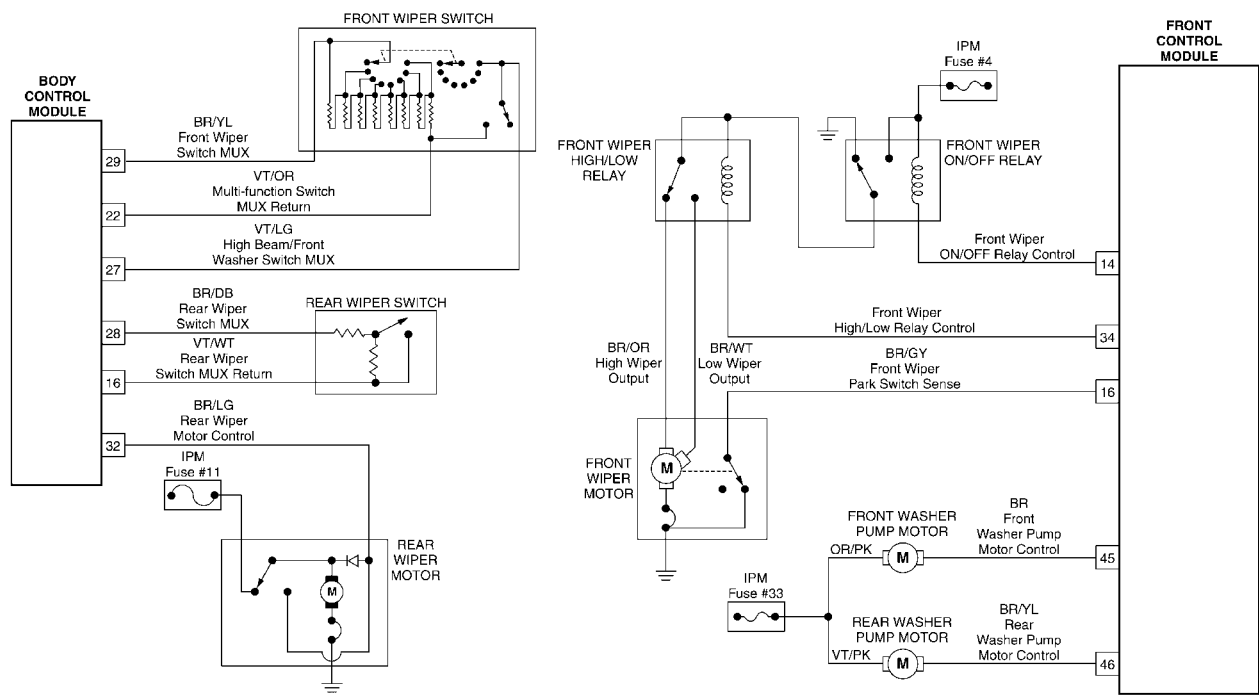

80a8a9ad

NOTES